

FIND *NEW* ROADS™


CHEVROLET



SAIL *PETROL*

OWNER'S MANUAL

Operation, Safety and Maintenance

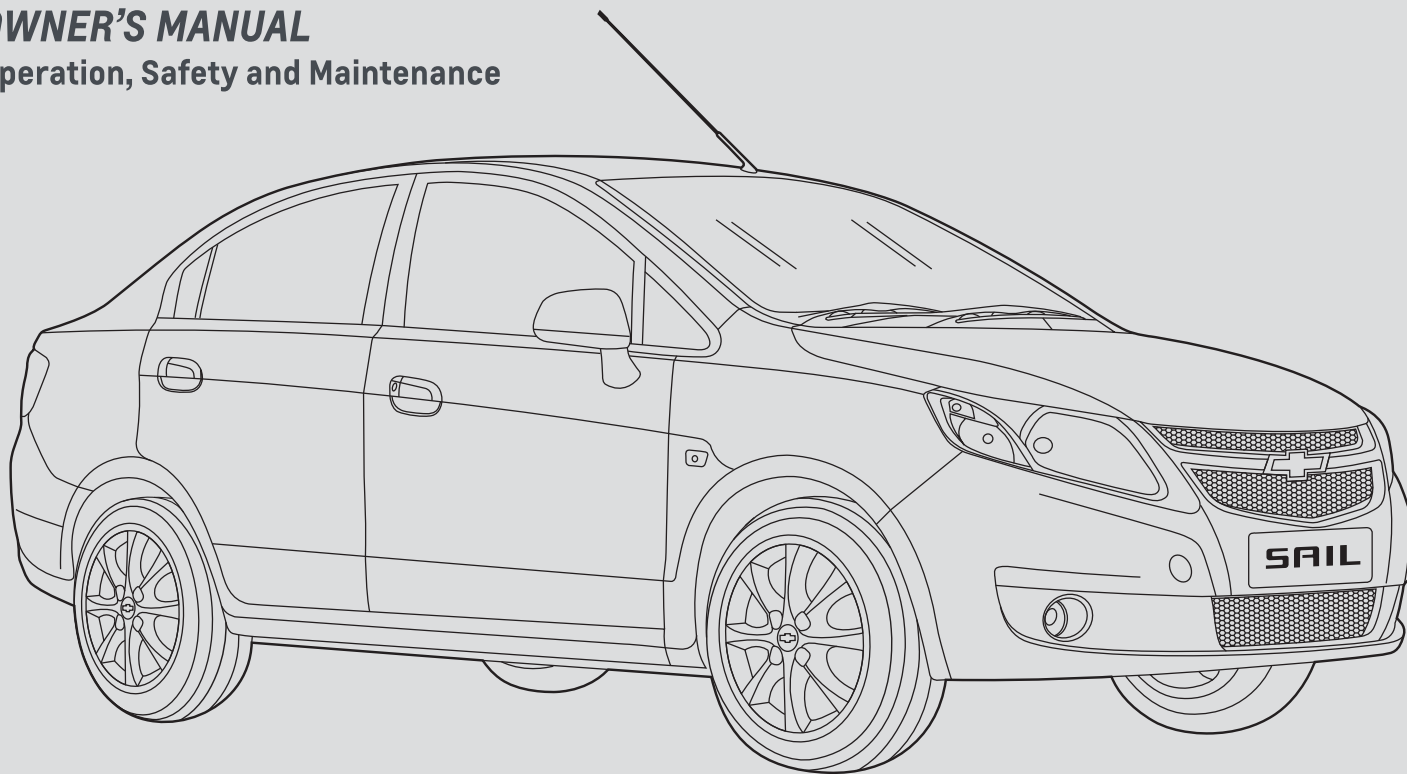

VEHICLE RECORD SHEET

Model Name		Delivery Date							Tyre Make								
V.I.N.											Tyre Location	Batch Code					
Engine No.									Key No.		Fr RH						
Registration No.									Regn. Date		Fr LH						
Transmission No.									Color, Code No.		Rr RH						
Battery Make		Battery Batchcode/SI.No.								Rr LH							
Owner's Name											Spare						
Address																	
City											Pin Code						
Selling Dealer's Name																	
Address																	
								Selling Dealers Stamp									
								Pin Code									

Dear Customer,

Welcome to the Chevrolet family. We wish to thank you for choosing Chevrolet car.

It is our constant endeavor to provide you with products that offer excellent performance through out their ownership period. Which is why, in addition to offering great cars, we have also set up an extensive, and very well equipped network of retailers and authorized service centers across the country.

Naturally, these Chevrolet retailer know everything about your car and provides you with the best service possible. In fact, every retailer is equipped with the most advanced technology, technicians specially trained by us and genuine spares. Needless to say, they are also committed to ensure your complete satisfaction.

So, please contact a Chevrolet retailer for any servicing need and make sure that only genuine spares are used for your car.

This Manual will familiarize you with the operation and maintenance of your new vehicle. It will also provide you with important safety information. Please do read it carefully and follow the recommendations. In fact, the Manual is like a permanent part of your car. And it would go a long way in ensuring a safe and trouble-free operation for your car.

Should you have any query please feel free to call our 24 hr. Helpline at 1800 3000 8080 or email us at : gmi.cac@gm.com.

Happy Motoring

CONTENTS

Foreword	2
Introduction	5
Keys, Doors and Windows.....	15
Seats and Restraints	29
Storage	45
Instruments and Controls	49
Lighting.....	67
Climate Control System	71
Driving and Operating	83
Vehicle Maintenance	97
Technical Data	145
Service and Warranty	149
Chevrolet Sales India Sales and Service Network	179

FOREWORD

Your vehicle is a designed combination of advanced technology, safety, environmental friendliness and economy.

This Owner's Manual provides you with all the necessary information to enable you to drive your vehicle safely and efficiently.

Make sure your passengers are aware of the possible risk of accident and injury which may result from improper use of the vehicle.

You must always comply with the specific laws and regulations of the country that you are in. These laws may differ from the information in this Owner's Manual.

When this Owner's Manual refers to a CHEVROLET retailer visit, we recommend your Chevrolet Service Partner.

All Chevrolet Service Partners provide first-class service at reasonable prices. Experienced mechanics trained by Chevrolet work according to specific Chevrolet instructions.

The customer literature pack should always be kept ready to hand in the vehicle.

Using this Manual

- “Introduction” contains a general instruction.
- The contents at the beginning of this Manual, and the index at the beginning of each chapter, will help you locate specific information.
- Directional data always refers to the direction of travel, such as left, right, front and back.
- The vehicle display screens may not support your specific language.
- Certain functions and configurations described in this Manual do not apply to all models, but are dependent on the specific model.
- The Manual contains the latest information available at the time of printing. General Motors India Pvt. Ltd. is responsible for revision and clarification of this Manual, and has reserved the rights to make changes without notice after printing of this Manual. Some pictures shown are purely schematic diagrams for reference only. If any picture does not match the physical object, the object itself is decisive.

Danger, Warnings and Cautions

Danger

Text marked ** Danger** provides information on risk of fatal injury. Disregarding this information may endanger life.

Warning

Text marked ** Warning** provides information on risk of accident or injury. Disregarding this information may lead to injury.

Caution

Text marked **Caution** provides information on possible damage to the vehicle. Disregarding this information may lead to vehicle damage.

Note: Text marked **Note** indicates a point to take into account when operating the vehicle. Failure to observe this may lead to incorrect operation.

⊗ : This is a safety symbol which means 'Do not', or 'Do not do this', or 'Do not let this happen'.

* **or (Option)** : The asterisk and (Option) in this Manual signify an item of equipment that is not included on all vehicles. Such items include engine options, model variations specific to one country, and optional equipment.

All information, illustrations, and specifications in this Manual are based on the latest product information available at the time of publication.

General Motors India Pvt. Ltd. reserves the right to change specifications or designs at any time without notice and without incurring obligation.

This vehicle may not comply with the standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

This Manual describes the options and trims available at the time of publication. Some of the items covered may

not apply to your vehicle. Contact your CHEVROLET retailer for information on options and trims availability.

Non-General Motors India Pvt. Ltd. genuine parts and accessories have not been examined or approved by General Motors India Pvt. Ltd. We can certify neither the suitability nor the safety of Non-General Motors India Pvt. Ltd. genuine parts and accessories and are not liable for damage caused by their use.

Warning : Tampering of wiring harness or fitment of non genuine accessories in your vehicle may lead to short circuit resulting in fire.

We wish you many hours of pleasurable driving **Chevrolet**.



 NOTES


[illegible]

INTRODUCTION

Initial Driving Information	5
Seat Adjustment	5
Adjust Front Head Restraints	6
Safety Belts	6
Rear View Mirror Adjustment	7
Instrument Panel Overview	8
Exterior Lighting	9
Horn	11
Windshield Washer/Wiper System..	11
Climate Control	12
Transmission	12
Starting the Vehicle	12
Parking	13

INITIAL DRIVING INFORMATION

Unlock Vehicle

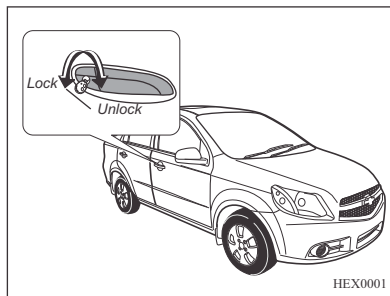

Use your key to unlock the vehicle from the driver door. Use the same key to unlock the rear compartment.


Driver door lock - Turn key clockwise to unlock and counter clockwise to lock the driver door.

Passenger door lock* - Turn key clockwise to lock and counter clockwise to unlock the passenger door. This will lock or unlock passenger door only.

Use the same key to unlock the rear compartment. Turn key clockwise to unlock the rear compartment.


SEAT ADJUSTMENT

Seat Position

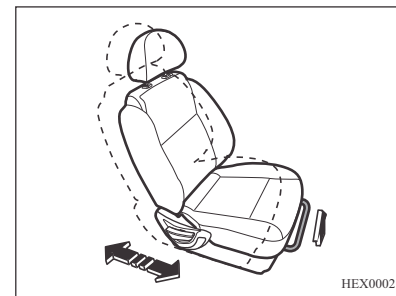

Lift the adjustment lever, slide the seat back and forth as required. Release the lever.


Seatback

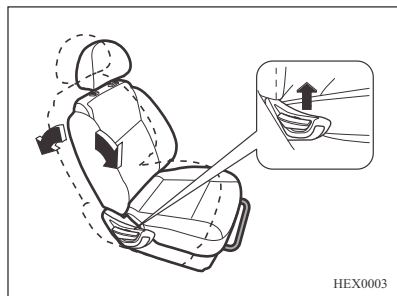

Lift the control lever, adjust the seatback to an appropriate position, and then release the control lever.

Do not lean against the seatback when making adjustments.

ADJUST FRONT HEAD RESTRAINTS

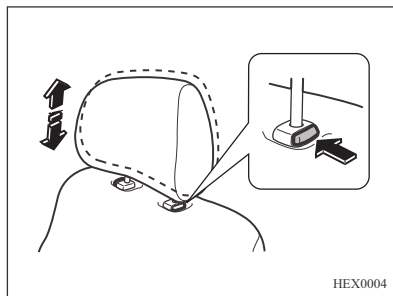

When adjusting the head restraint upwards, pull it up to the appropriate position and then fix. To pull out a head restraint completely, press the release button and take out the head restraint.

To lower a head restraint, push the release button and push the head restraint down to the desired position, and then release the button and secure.

SAFETY BELTS




Pull out the safety belt strap and insert it into the buckle. The belt strap must not be twisted and must be worn fitted closely against the body. The seatback should not be excessively reclined.

To release the safety belt, push the red button on the buckle.

REAR VIEW MIRROR ADJUSTMENT


Interior Rear View Mirror

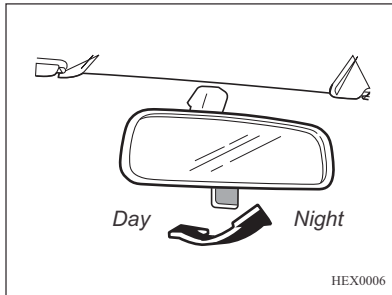

The interior rear view mirror can be adjusted manually.

Your vehicle has interior rear view mirror with day and night adjustment mode to prevent dazzling.


Exterior Rear View Mirrors

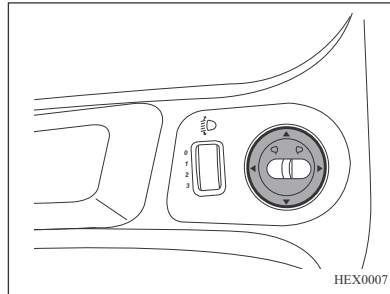

Select the corresponding exterior rear view mirror and adjust its position.

See Exterior Rear View Mirrors on page 23.


INSTRUMENT PANEL OVERVIEW

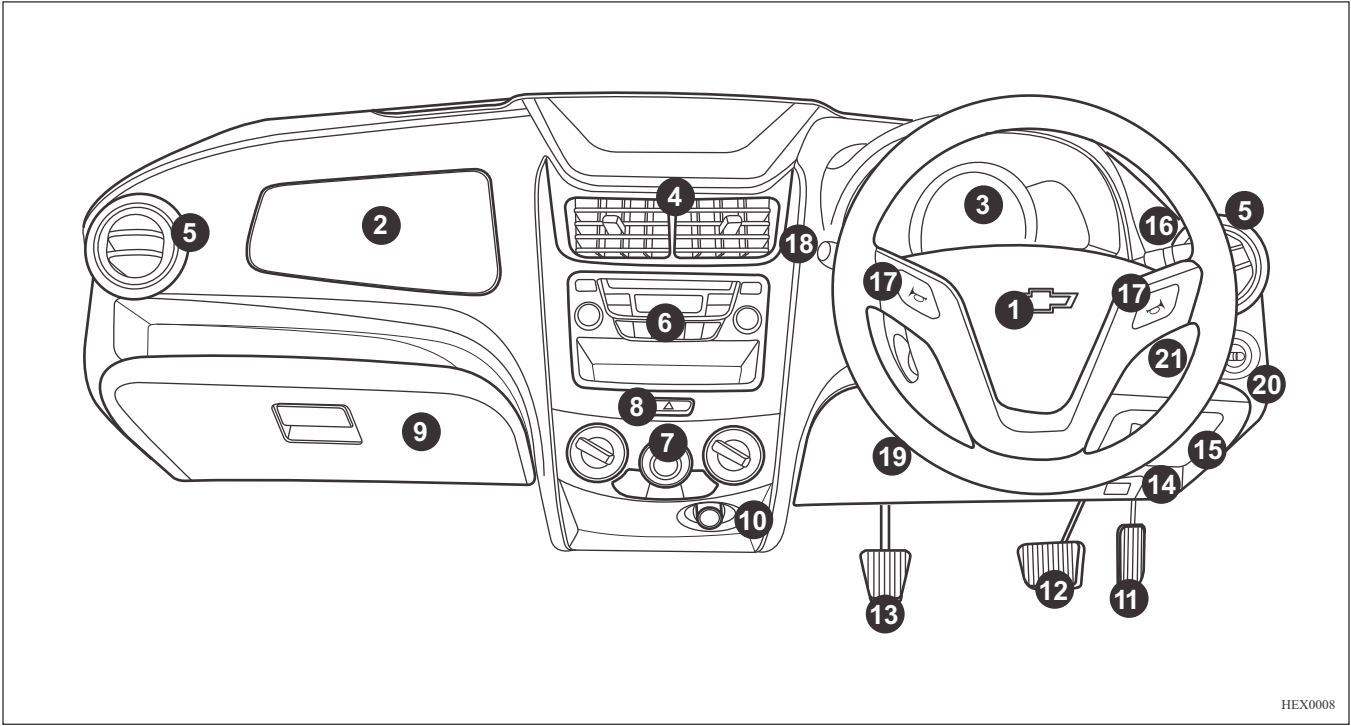

1. Driver side airbag*
2. Front passenger side airbag*
3. Instrument cluster
4. Center air vents
5. Side air vent
6. Audio system*
7. Climate control system
8. Hazard warning flashers switch
9. Glove box
10. Cigarette lighter*/Accessory power outlet
11. Accelerator pedal
12. Brake pedal
13. Clutch pedal
14. Hood release handle
15. Instrument panel storage
16. Headlight switch
17. Horn
18. Windshield wiper switch
19. Steering wheel adjustment lever
20. Power rear view mirror adjustment switch
21. Headlamp range adjustment switch

EXTERIOR LIGHTING

Headlight Switch

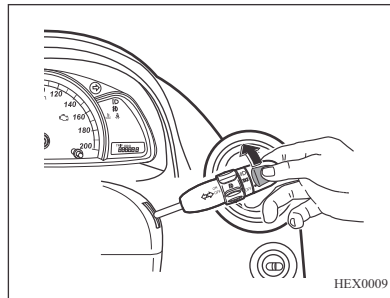


Twist the combination switch lever to

OFF = Turn all lights off

 = Parking lights

 = Headlights

Front Fog Lights*

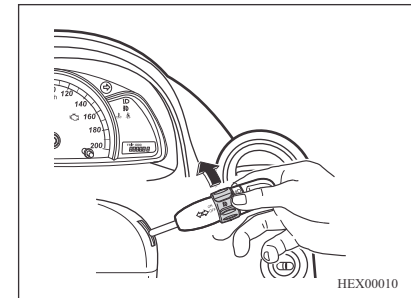


Your vehicle may be equipped with front fog lights.

While the headlights are on parking light or low beam position, turn the ring in the middle of the combination switch control lever to ON, to turn on the front fog lights.

Turn the ring to OFF position to turn off the front fog lights.


Under severe conditions (such as in a thick fog or snow), the fog lights provide extra illumination to the sides of the road ahead and improve the visibility.

Headlight Flash, High Beam and Low Beam

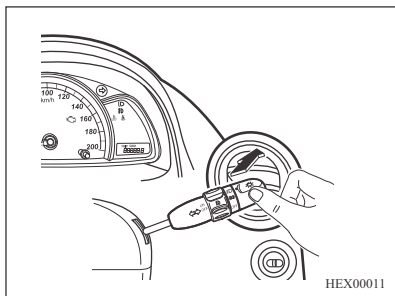


Headlight flash = Pull the control lever
High beam = Push the control lever
Low beam = Pull the control lever back from high beam position

Turn and Lane Change Signal

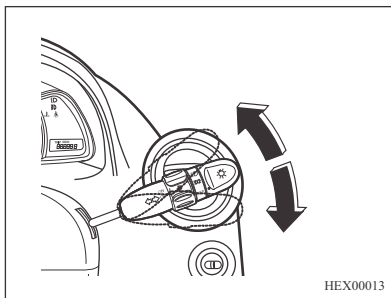


Lever up = Left indicator
Lever down = Right indicator

Hazard Warning Flashers

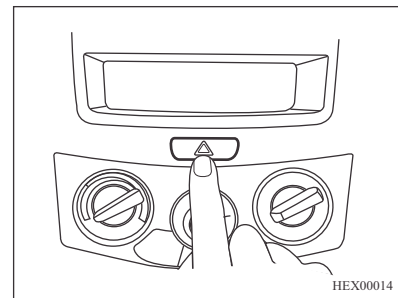


Press the  switch to turn on or turn off the hazard warning flashers.

HORN

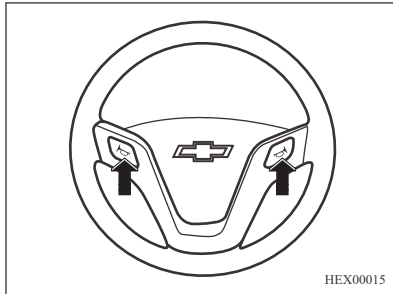

Press the  switch on the steering wheel pad to sound the horn.

WINDSHIELD WASHER / WIPER SYSTEM Windshield Wipers

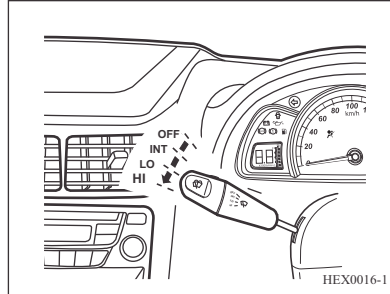


OFF : System off

INT : Intermittent operation

LO : Wiping continuously at low speed

HI : Wiping continuously at high speed


Windshield Washer System

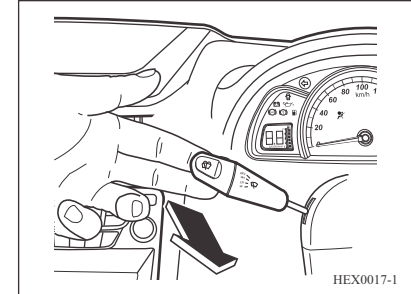

Pull the control lever towards you, as shown in the picture to wash the windshield.

CLIMATE CONTROL

Rear Window Defrost Function*

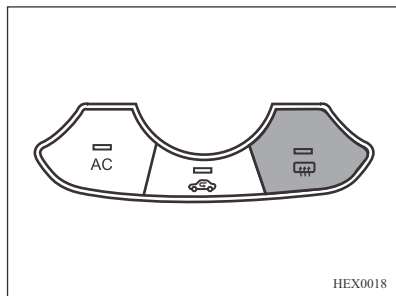


Press the  button to operate the rear window defrost function.

Indicator light on the button will illuminate.

Press the  button again, to turn off the rear window defrost function.

TRANSMISSION

Manual Transmission

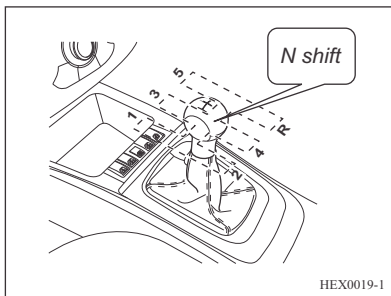


To change gears, fully depress the clutch pedal, move the gearshift lever into gear according to the gear position marked on gear knob and slowly release the clutch.

STARTING THE VEHICLE

Checking Before Starting Off

- Tire pressure and conditions.
- Engine oil level and other oil/fluid levels.
- All the windows, rear view mirrors, exterior lights and the license plate lights are working properly, free from dusts, snow or ice.
- The seats, safety belts and rear view mirrors are in the correct position.
- Check the brake function at low speed, especially when the brake is wet.

Starting Engine with the Ignition Switch

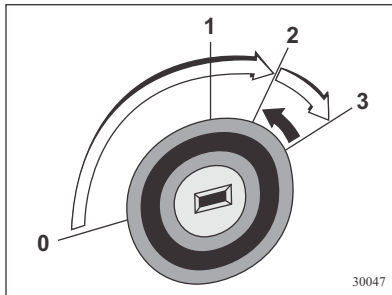

- Turn key to position 1, while turning the steering wheel slightly from left to right to release the steering wheel lock.
- Manual transmission: operate clutch.
- Do not press accelerator pedal.
- Turn key to position 3 depressing the clutch pedal and foot brake then release when engine is running.

Before restarting or to switch off the engine, turn key back to 0 or 1.

PARKING

- Do not park the vehicle on an easily flammable surface. The high temperature of the exhaust system could ignite the surface.
- Always apply parking brake without pressing release button. Apply as firmly as possible on downhill or uphill slopes. Depress the footbrake at the same time to reduce operating force.
- Turn OFF the engine and ignition switch.
- When parking the vehicle on level ground or on a slope, engage first gear before turning OFF the ignition switch. When the vehicle is parked on an uphill slope, turn the front wheels away from the curb.
- When parking the vehicle on a downhill slope, engage reverse gear before turning OFF the ignition switch. Turn the front wheels towards the curb.

- Close the windows.
- Lock the vehicle.

Note

The engine cooling fan may continue to run after the engine is shut down.




This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

KEYS, DOORS AND WINDOWS

Keys	15
Remote Keyless Entry*.....	16
Transmitter	17
Battery Replacement	17
Door Locks	18
Child Safety Locks	19
Central Locking System*	20
Automatic Locking*	20
Automatic Unlocking*	20
Doors	21
Trunk	21
Trunk Release Lever	21
Hood	21
Exterior Rear View Mirrors	23
Power Rear View Mirrors	23
Folding Mirrors	23
Interior Rear View Mirror	24
Windows	24
Power Windows*	24
Power Window Lockout Button*.....	26
Manual Windows*	26
Sun Visors	27

KEYS

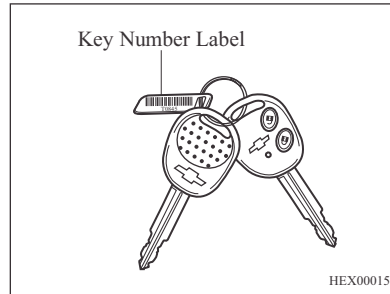

Each new vehicle comes with two keys. Please keep one key as the backup key. The key number is imprinted on the key number label. For security purpose, please keep your key number label in a safe place rather than inside your vehicle. In addition, the key number should be recorded in a safe place outside the vehicle.

Unauthorized key copies can be prevented by these precautions.

Caution

Do not leave your key inside the vehicle.

Take away the key when you leave the vehicle.

Note


A substitute key can be obtained by giving your key number to your CHEVROLET retailer if you lose your key.

Warning

Leaving children in a vehicle with the ignition key is dangerous for many reasons. Children or others could be badly injured or even killed. They could operate the power windows or other controls or even make the vehicle move.

The windows will function with the keys in the ignition and children could be seriously injured or killed if caught in the path of a closing window. Do not leave the keys in a vehicle with children.

REMOTE KEYLESS ENTRY*

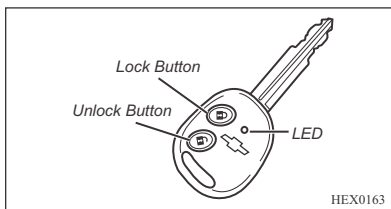

Remote Keyless Entry allows you to lock and unlock doors using the transmitter within valid operating range. The LED on the transmitter flashes to indicate an effective operation.

- **Lock Button:** Press to lock doors. The hazard warning lamps will flash once and the horn will sound.
- **Unlock Button:** Press to unlock doors. The hazard warning lamps will flash twice.

Note

If any of the door is not locked properly and Lock button is pressed, hazard warning lamps will flash thrice to indicate that door is not locked properly.

Note

The transmitter operating range depends on the environmental conditions.

Note

Lock and Unlock buttons are disabled while the key is in the ignition switch.

Note

Only one key is provided with RKE transmitter. The spare key provided is without RKE transmitter.

Warning

Do not lock the vehicle if anyone is to be left inside the vehicle.

Never leave children or pets unattended in your vehicle. The temperature inside the vehicle can increase more rapidly and reach much higher levels than the temperature outside.

This can result in serious injury or death.

Transmitter

Each transmitter must be programmed to prevent the vehicle from unlocking with other transmitters.


Only RKE transmitters programmed to this vehicle will work. If a transmitter is lost or stolen, a replacement can be purchased and programmed through your CHEVROLET retailer. When the replacement transmitter is programmed to this vehicle, all remaining transmitters must also be reprogrammed. Any lost or stolen transmitter will no longer work once the new transmitter is programmed.

Each vehicle can have up to four transmitters programmed to it.

Note

If Unlock button is pressed and door is not opened within 30 seconds, doors will be locked automatically.

Battery Replacement

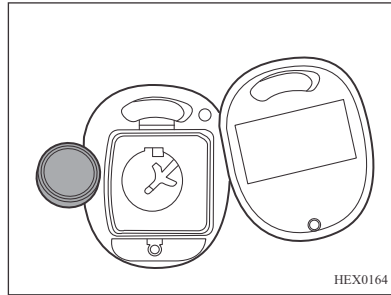

If the LED fails to illuminate or the range is noticeably diminished, it is an indication that a new battery is needed.

Note

Replace with CR1616 battery or equivalent.

1. Remove the screw from the back of the transmitter cover.
2. Open the transmitter cover.

3. Pull the transmitter out of the cover and remove the label carefully, then keep it in the clean place.
4. Remove the old battery. Prevent the circuit board from contacting other components.
5. Install the new battery. Make sure that negative (-) side faces towards the base.
6. Stick the label and put the transmitter in the cover.
7. Install the transmitter cover.
8. Check the operation of the transmitter.

Caution

Do not touch the battery surface with your fingers. Otherwise, it will shorten the life of battery.

Caution

Old lithium battery will pollute the environment.

Dispose the battery according to the local recycling regulation.

Do not dispose the battery with domestic wastes.

Caution

To ensure proper operation of the transmitter, do the following instructions:

- Prevent the transmitter dropping.
- Do not put any heavy objects on the transmitter.
- Prevent the transmitter from the water and the direct sunlight. If the transmitter contacts the water, dry it with soft cloth.

DOOR LOCKS

Caution

Do not leave children or pets alone in the vehicle.


Serious injuries could occur. The children could operate the power windows or other controls and could even make the vehicle move.

Do not leave children in the vehicle with the ignition key. This can lead to serious injury or accidents.

Caution


When leaving an unattended vehicle you must lock all the doors and take away your key.

Your vehicle could be stolen if the door is not locked.

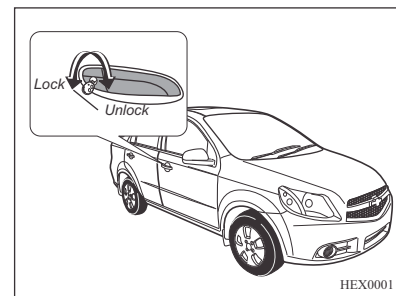

Driver door lock - Turn key clockwise to unlock and counter clockwise to lock the driver door.

Passenger door lock* - Turn key clockwise to lock and counter clockwise to unlock the passenger door. This will lock or unlock passenger door only.

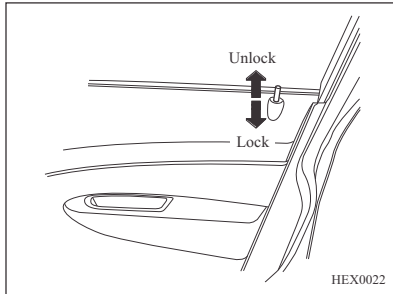


To lock the door from inside, press the door lock knob.

To unlock the door from inside, pull out the door lock knob.

Note

The driver's door lock knob cannot be pressed when the driver's door is open. This prevents the door from being locked if you accidentally leave your key in the vehicle.

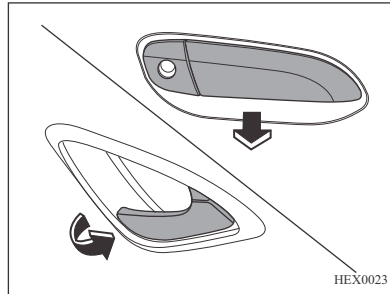


To open the door from outside or inside, pull the door handle.

Note

Apply lubricants at the door latches and hinges if there is noise when opening/closing the door or during driving.

Child Safety Locks

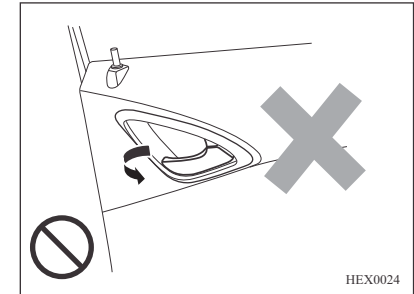


Each rear door of this vehicle is equipped with a child safety lock.

The child safety lock is intended to prevent the rear doors from being accidentally opened by passengers (especially children) pulling the door handles from inside.

Caution

When the child safety lock is set at LOCK position, do not pull the door handle from inside the vehicle. The handle could be damaged otherwise.

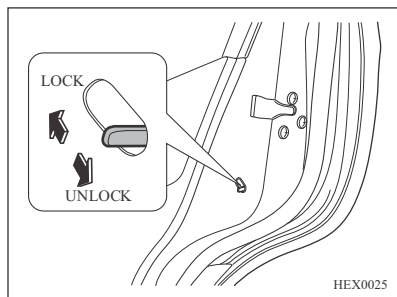

To activate a child safety lock:

1. Open the rear door you want to lock.
2. Find the child safety lock lever near the centre position on the door.
3. Slide the lever to LOCK position.

Note

Each rear door has its individual lock. The child safety locks for the rear doors must be individually, manually activated.

To open the rear door when the child safety lock is activated, unlock the door from inside by pulling up the door unlock knob and then open the door from outside.

To deactivate the child safety lock, place the control lever to UNLOCK position.

⚠ Warning

Use the child security door locks whenever children are occupying the rear seats.

CENTRAL LOCKING SYSTEM*

You can activate the central locking system from the driver's door. This system will allow you to lock or unlock all the doors at once by using your key (from outside) or the driver's door lock knob (from inside).

Automatic Locking*


If this feature is equipped, all the doors will be automatically locked once the vehicle starts moving. The trunk or the fuel filler cap cannot be locked automatically, as they are manually operated.

Automatic Unlocking*

When the ignition switch is in ON position and the doors are locked, turn the key to LOCK position and all the doors will be unlocked automatically. Depending on models, some vehicles will only unlock the doors other than the driver's door.

DOORS

Trunk

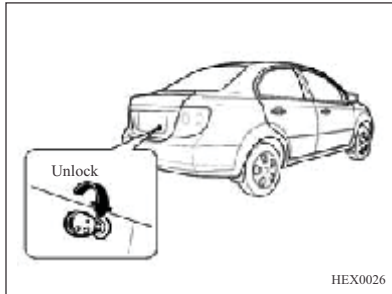

Insert the key and turn it clockwise to unlock the trunk. Lift the trunk.


The trunk will be automatically locked when the trunk is pushed down and closed.

Be sure that no-one's hands or any part of the body are within the closing area of the trunk.

Caution

When opening or closing the trunk, be sure to check it is free from obstructions.

Trunk Release Lever

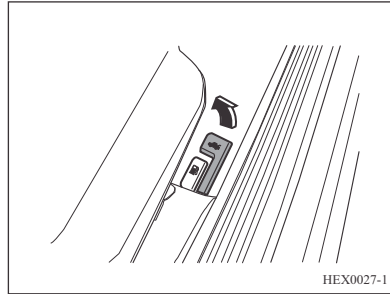


You can open the trunk by pulling the trunk release lever which is mounted on the floor to the right of the driver seat.

Warning

Exhaust gases can enter the vehicle if it is driven with the tailgate or trunk/hatch open, or with any objects that pass through the seal between the body and the trunk/hatch or tailgate. Engine exhaust contains carbon monoxide (CO) which cannot be seen or smelled. It can cause unconsciousness and even death.


See Engine Exhaust on page 95.

Hood

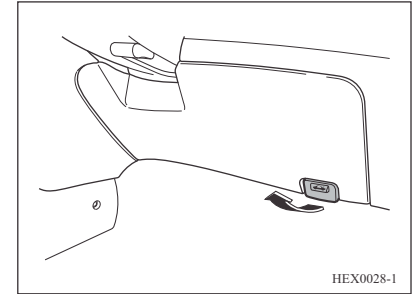


To open the hood -

1. Pull the hood release handle located in the lower right of instrument panel.

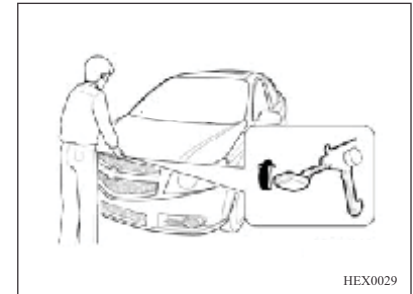

22 Keys, Doors and Windows

2. Reach under the front edge of the hood and lift the hood release handle.

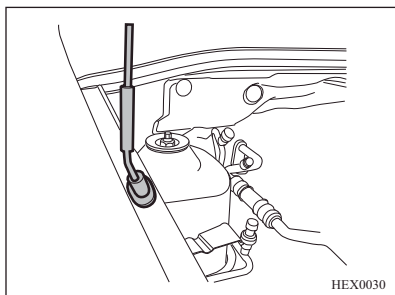

3. Release the hood support rod from the fixing clip.

Turn the hood support rod down and insert its free end firmly into the recess on the fender.

Warning

Only perform engine compartment checks when the ignition is OFF.

The cooling fan may start operating even if the ignition is OFF.




Caution

The following precautions must be observed:

- Before driving, pull and check the front edge of the hood to ensure that the hood is securely locked.
- Do not pull the hood release handle while the vehicle is in motion.
- Do not drive the vehicle with the hood open. An open hood will obstruct the driver's vision.

Driving with an open hood could lead to collisions that will damage your vehicle and other property and cause casualties.


To close the hood -

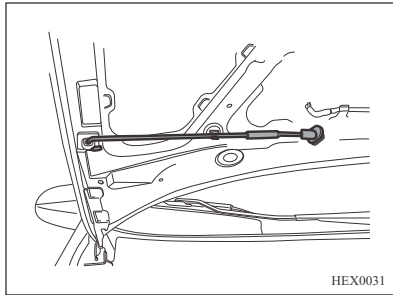

1. While holding the hood to prevent it from falling, remove the hood support rod from the recess and press it firmly into the fixing clip.
2. Be sure that no-one's hands and any part of the body are close to the engine compartment and the hood edge on the vehicle body.
3. Lower the hood, allowing it to drop from a height of about 30cm (1 foot).
4. Make sure that the hood is securely locked.

EXTERIOR REAR VIEW MIRRORS

Power Rear View Mirrors

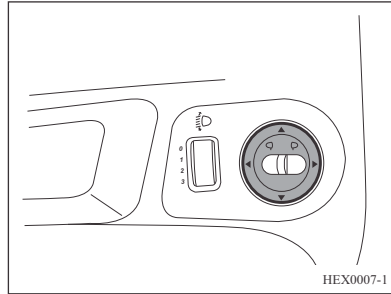

The exterior rear view mirrors can be adjusted by using the mirror switch that is located on the instrument panel to the right side of the steering wheel. The ignition switch must be at ACC or ON position for this feature to work.

1. Choose the left or right mirror by moving the switch to the left or right.
2. Adjust the selected mirror in four directions by pushing the edges of the control.

Folding Mirrors

Manually fold the outside mirrors in, to prevent damage when going through an automatic car wash or for pedestrian safety. To fold, while sitting in the vehicle, pull the mirrors towards the vehicle. Push out, to return the mirrors to their original position.


Warning

Always keep your mirrors properly adjusted, and use them while driving to increase your visibility of objects and other vehicles around you. Do not drive while either outside rearview mirror is folded back.

Caution

Do not operate mirror continuous while the engine is not running. This will discharge the battery.

INTERIOR REAR VIEW MIRROR

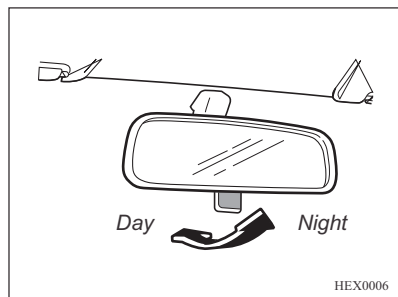

The interior rear view mirror can be manually adjusted in four directions.

Interior rear view mirror can be adjusted to day/night mode to reduce glaring from the following vehicles. Use the adjustment lever to adjust day and night mode.

Warning

Your view through the mirror may lose some clarity when it is adjusted for night vision.

Take special care with using your inside rearview mirror when it is adjusted for night vision.

Failure to ensure a clear rear view while driving may result in a collision causing damage to your vehicle or other property, and/or personal injury.

WINDOWS

Power Windows*

If the vehicle is equipped with power windows for four doors, the power window switches are located on the center console between the front seats, from left to right in following sequence:

- Left front window switch
- Left rear window switch
- Power window lockout button
- Right rear window switch
- Right front window switch

You can operate the power window switches when the ignition is ON. There is also a switch on each rear door armrest for rear seat passengers to operate the rear windows.

Some vehicles are equipped with manual windows for rear doors. For these vehicles, there are two power window switches to operate the front power windows in below sequence from left to right.

- Left front window switch
- Right front window switch

⚠ Warning

Do not operate the power window switch with no purpose.

⚠ Warning

Take care when operating the power windows. Risk of injury, particularly to children.

If there are children on the rear seat, switch on the power window lockout button for the power windows.

Keep a close watch on the windows when closing them.

Ensure that nothing becomes trapped in them as they move.


⚠ Warning

Body parts outside vehicle can be struck by passing objects. Keep all parts of body inside vehicle.

Children can operate and become entrapped in power windows.

Do not leave your keys or unattended children in your car.

Serious injury or death can occur from misuse of power windows.

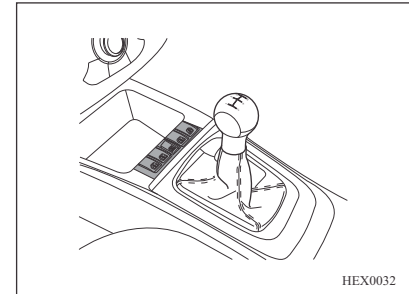

Pull the switch to raise the window. Press the switch to lower the window. Release the switch when the window reaches a desired position.

Caution


Leaning out of the vehicle can lead to injuries caused by passing objects.

Do not lean any part of your body out of the vehicle.

Note

The rear windows cannot be fully opened.

Power Window Lockout Button*

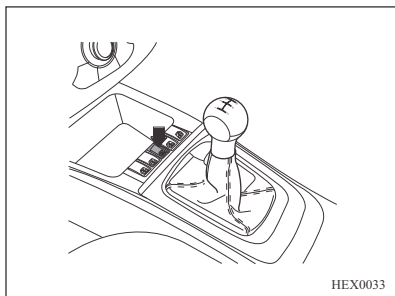


The power window lockout button can lock out the rear window switches. The rear windows can only be operated by the front switches after this button is locked.

Caution

Children could operate the power windows and become trapped by the windows, resulting in serious injuries.
Use the power window lockout when children are traveling in the rear seats.

Manual Windows*

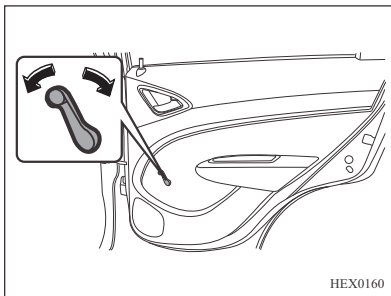

To raise or lower the windows, turn the window regulator handle on the door panel.

Be sure there is no object in the opening before closing the windows.

Caution

Leaning out of the vehicle can lead to injuries caused by passing objects.
Do not lean any part of your body out of the vehicle.

Caution

The unattended vehicle could be stolen with the windows open.
Close all the windows before leaving the vehicle.

Note


The rear windows cannot be fully opened.

Warning

Leaving children, helpless adults, or pets in a vehicle with the windows closed is dangerous.

They can be overcome by the extreme heat and suffer permanent injuries or even death from heat stroke. Never leave a child, a helpless adult, or a pet alone in a vehicle, especially with the windows closed in warm or hot weather.

SUN VISORS

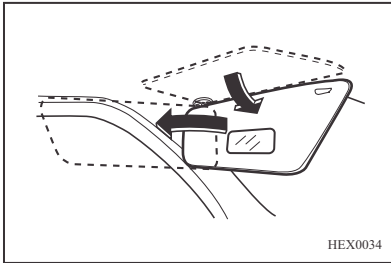

Your vehicle is equipped with sun visors to protect the driver and passengers from dazzling.

The sun visors can be folded down or swivelled to the side to prevent dazzling.

The passenger side sun visor has vanity mirror.

Warning

Do not place the sun visor in such a manner that it obscures visibility of the roadway, traffic or other objects.


[illegible]

SEATS AND RESTRAINTS

Head Restraints	29
Head Restraint Position.....	29
Front Seat Head Restraints.....	29
Front Seats	30
Seat Position	30
Seat Adjustment	30
Seatback	31
Rear Seat	32
Armrest	32
Safety Belt	32
Safety Belt Care	33
Three-Point Seat Belt	34
Seat Belt Release.....	34
Safety Belt Use During Pregnancy.....	35
Lap Belt	35
Belt Force Limiter	35
Front Seat Belt Pretensioner * ...	35
Child Restraints*.....	36
Securing a Child Restraint	37
Airbag System*	38
Correct Seating Position.....	39
Front Airbag System*	42

HEAD RESTRAINTS

Head Restraint Position

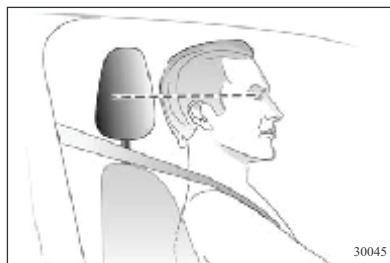

The center of the head restraint should be at eye level of the occupants. If this is not possible for extremely tall people, set to highest position, and set to lowest position for short people.

⚠ Warning


Only drive with the head restraint set to the proper position.

Removed or improperly adjusted head restraints can result in serious head and neck injuries in case of a collision.

Make sure that the head restraints are properly adjusted before driving.

Front Seat Head Restraints

Height adjustment

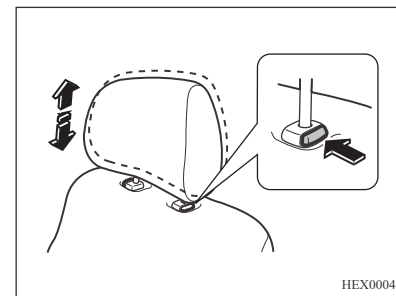

When adjusting the head restraint upwards, pull it up to the appropriate position and then secure. Press the release button to remove the head restraint out.


To lower a head restraint, press the release button and push down the head restraint to the desired position, and then release the button and secure.

FRONT SEATS

Seat Position

⚠ Warning

Seats must be properly adjusted before driving.

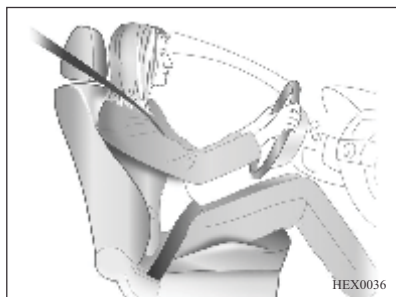

- It is advised to sit right back on the seat. Adjust the distance between the seat and the pedals properly so that your legs are slightly bent when pressing the pedals. Seats for passengers should be slid back as far as possible.
- Lean your shoulders against the seatback as much as possible.

- Adjust the seatback to ensure that the steering wheel is within easy reach with arms slightly bent.

When turning the steering wheel, keep your shoulders against the seatback. The seatback should not be angled too far back. The maximum recommended rake is around 25 degrees.

- Set the seat at a desired position where the driver has a clear view in all directions and of all display instruments.

The distance between the head and the headlining should be at least the width of one hand.

Thighs should be comfortably supported on the seat.

⚠ Danger


Do not sit nearer than 25cm (10in) to the steering wheel, to permit safe airbag deployment.

Seat Adjustment

⚠ Warning


Do not adjust the driver's seat while the vehicle is moving.

Driver could lose control of the vehicle and injury or property damage could result.

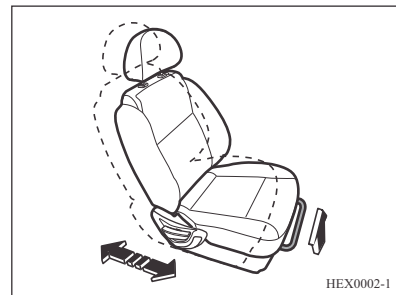

Pull the handle up and slide the seat forward or backward to an appropriate position, then release the handle. Slide the seat forward and backward to ensure it is locked in the appropriate position.

Seatback

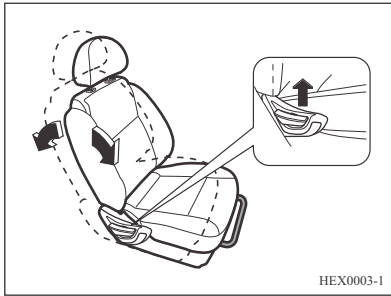

Lift the lever, adjust the seatback to an appropriate position, then release the lever.

After the adjustment, lean back against the backrest to make sure that the seatback has been locked in an appropriate position.

Do not lean against the seatback when making adjustments.

Warning

You can lose control of the vehicle if you try to adjust a driver seat while the vehicle is moving.

Adjust the driver seat only when the vehicle is not moving.

Warning

If either seatback is not locked, it could move forward in a sudden stop or crash. That could cause injury to the person sitting there. Always push and pull on the seatbacks to be sure they are locked.

Warning

Things you put on this seatback can strike and injure people in a sudden stop or turn, or in a crash. Remove or secure all items before driving.

Warning

Sitting in a reclined position when the vehicle is in motion can be dangerous. Even when buckled up, the safety belts cannot do their job.

The shoulder belt will not be against your body. Instead, it will be in front of you. In a crash, you could go into it, receiving neck or other injuries.

The lap belt could go up over your abdomen. The belt forces would be there, not at your pelvic bones. This could cause serious internal injuries.

For proper protection when the vehicle is in motion, have the seatback upright. Then sit well back in the seat and wear the safety belt properly.

REAR SEAT

Armrest



Fold armrest down by pulling the strap. The folded armrest contains a cup holder.

Note

The rear seat is of a single type and fixed.

Warning

Use caution when using the cup holders. A spilled beverage that is very hot can injure you or your passenger. Spilled liquids can damage interior trim and electrical components.

Do not place objects other than cups or cans in the cup holder. These objects can be thrown out in the event of a sudden stop or an accident, possibly injuring the passengers in the vehicle.

SAFETY BELT



Warning

Fasten your safety belt each time before driving. In case of an accident, passengers not wearing safety belts may be injured.

The safety belt is designed to be used by one passenger at a time. Check regularly all the parts of the safety belt system for damage or malfunction and replace the damaged parts.

In the event of an accident, contact your CHEVROLET retailer to replace the safety belts.

Warning

Sitting in a reclined position when your vehicle is in motion can be dangerous. Even if you buckle up, your safety belts can't do their job when the seatback is excessively reclined. In order to gain the full benefit of a safety belt, you must wear it correctly and position yourself correctly within your seat.

Warning

Wearing a safety belt improperly could cause serious injury.

Make sure the seatback is in the upright position.

Wear your safety belt closely against the body. Do not wear your shoulder belt under your arm, around your neck, over an inside shoulder or behind your back.

Warning

If a hard or breakable object is between a safety belt and an occupant, such as a ballpoint pen or glasses in a pocket, the occupant can be injured in the event of a collision.

Warning

Improper use of a safety belt can cause serious injury. Do not modify the safety belt. Do not add any device which would affect the operation of the safety belt.

Warning

Before you close the door, make sure the safety belt is out of the way. Otherwise, the belt and/or the vehicle body could be damaged.

Safety Belt Care

Keep belts clean and dry.


Warning

Do not bleach or dye safety belts. It may severely weaken them. In a crash, they might not be able to provide adequate protection. Clean safety belts only with mild soap and lukewarm water.

Warning

A crash can damage the safety belt system in the vehicle. A damaged safety belt system may not properly protect the person using it, resulting in serious injury or even death in a crash. To help make sure the safety belt systems are working properly after a crash, have them inspected and any necessary replacements made as soon as possible.

Three-Point Seat Belt

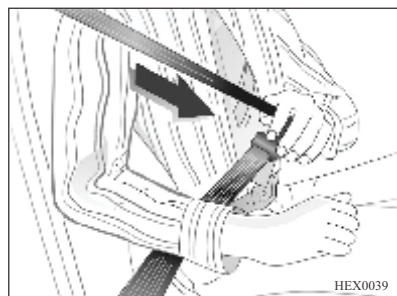


Pull the seat belt out of the retractor, guide it across the body without any twists, and then buckle the belt.

During driving, the lap belt can be tightened by pulling the shoulder section with force.

Warning

You could be seriously injured if your belt is buckled in the wrong place. Always buckle your belt into the buckle nearest to you.

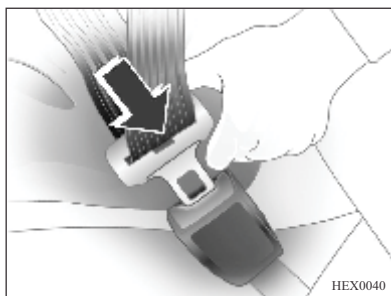


Loose or thick clothes will obstruct the position of the safety belt over the body. Do not place anything (e.g. a handbag or a mobile phone) between the safety belt and your body.

Warning

Never put the safety belt against hard objects or fragile items inside your pockets.

Seat Belt Release

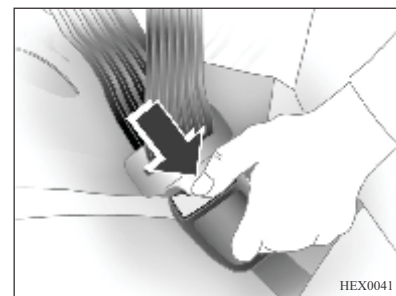


To release the safety belt, push the red button on the buckle.

The belt will retract automatically. Guide the safety belt as it retracts to prevent the latch plate from damaging interior surfaces or injuring occupants.

Caution

Folding a rear seat with the safety belts still fastened may cause damage to the seat or the safety belts. Always unbuckle the safety belts and return them to their normal stowed position before folding a rear seat.

Safety Belt Use During Pregnancy

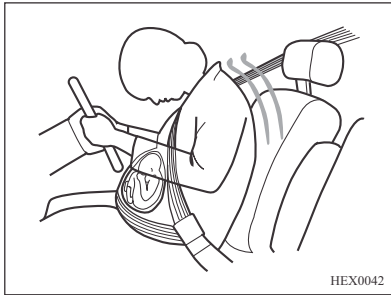

Safety belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear safety belts.

A pregnant woman should wear a lap/shoulder belt, and the lap portion should be worn as low as possible, across the pelvis to prevent pressure on the abdomen.

The best way to protect the fetus is to protect the mother. When a safety belt is worn properly, it is more likely that the

fetus will not be hurt in a crash. For pregnant women, as for anyone, the key to make safety belts effective is wearing them properly.

Lap Belt

Center rear seat lap belt

Pull the buckle along the safety belt to adjust the length of the safety belt. To use, insert the front buckle into the locking ring which is placed to the right of your body and is marked "CENTER". Take the center buckle and bring the safety belt across your body. The safety belt should not be twisted. Insert the buckle into the locking ring at the other end. Press the red button to release the safety belt.

Belt Force Limiter

Fitted to the front seat belt, the belt force limiter can reduce the pressure on the body through the controlled release of the safety belt in case of collision accident.

Front Seat Belt Pretensioner*

The vehicle has safety belt pretensioners for the front outboard occupants.

Although the safety belt pretensioners cannot be seen, they are part of the safety belt assembly. They can help tighten the safety belts during a severe frontal crash and rear impact if the threshold conditions for pretensioner activation are met. Pretensioners are not designed to activate in a minor frontal crash.

Pretensioners are designed to activate in a moderate to severe frontal and rear crash. Pretensioners work only once.

Warning

Improper operation (such as removal or installation of the seat belt or the seat belt anchor) could trigger the seat belt pretensioner. It may lead to injury.

The seat belt pretensioner which has been activated should be replaced by CHEVROLET retailer. The seat belt pretensioner should be used only once.

CHILD RESTRAINTS*

Caution

Children who are small enough should always be restrained in infant or child restraints.

Never hold a baby in your arms while riding in a vehicle. Never let a child stand or kneel on a seat or in the cargo area while the vehicle is moving.

Caution

An unsecured child restraint may be thrown out of the vehicle in a collision or sudden stop.

You or passengers could be injured. Secure the child restraint properly even if a child is not using the restraint.

Caution

Child safety restraints are available in a wide range of sizes and configurations. Due to the shape and dimensions of your vehicle's interior and seats, not all child safety restraints will fit in your vehicle.

It is your responsibility to ensure that the child safety restraint you install fits properly and can be adequately attached to the vehicle with the child safety restraint anchors. A child safety restraint that is not the correct size for the vehicle or the child, or a child safety restraint that is improperly attached to your vehicle can lead to serious personal injury to the child and other passengers in the vehicle in the event of a collision.

Caution

A child restraint can become very hot if it is left in a closed vehicle in hot weather.

Make sure the child restraint is not too hot before placing a child there.

Be sure that if children are too small to be well restrained by the safety belt system, that they are secured in an appropriate child restraint.

The child restraint suitable for ISOFIX “universal” category can be used. The child restraint is not equipped with vehicle.

Child restraints can only be used in rear seating positions.


There are no anchor brackets available for front seating positions. Accident statistics show that children are safer if they are restrained in the rear seat.

Securing a Child Restraint

To secure a child restraint:

1. Locate the anchors where the seatback meets the back of the seat cushion.

The location of each lower anchor is identified by a circular mark on the lower edge of the rear seatback.

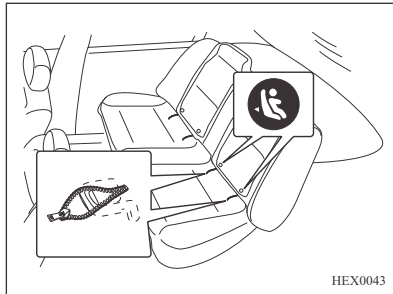

2. Clear all items off the seat. Move safety belts and safety belt buckles away from the lower anchors so they do not interfere with proper latching.
3. Place the child restraint on the seat.
4. Attach the anchor points on the


child restraint to the anchors in the vehicle. Follow the instructions that come with the restraint.

5. To attach the top strap to the top strap anchor -

Consult the manufacturer's instructions to determine when and how to tighten the top strap. The top strap anchor brackets are located at the joint between the left and right rear seatbacks on the rear compartment floor. Floor mat have a notch above itself, you can open the floor mat from the notch to use.

Warning

Children who are up against, or very close to, any airbag when it inflates can be seriously injured or killed. Never put a rear-facing child restraint in the front passenger seat. Secure a rear-facing child restraint in a rear seat. It is also better to secure a forward-facing child restraint in a rear seat.

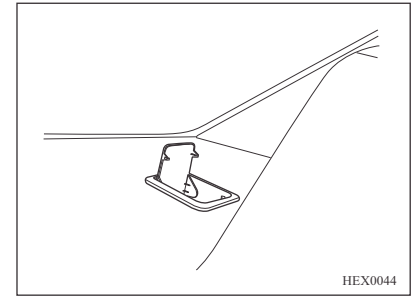

6. Push and pull the child restraint in different directions to make sure it is secure.
7. Make sure the child restraint is not too hot before placing a child there.

If you have been in a severe collision the anchoring system may have been damaged. Some parts may need to be repaired or replaced.

Have the anchoring system inspected after a collision.

AIRBAG SYSTEM*

Airbags are designed to supplement the protection provided by safety belts. Even though today's airbags are also designed to help reduce the risk of injury from the force of an inflating bag, all airbags must inflate in milliseconds. It will then deflate so quickly that people are usually unaware of their existence.

All of the airbags in the vehicle will have the word AIRBAG embossed on the trim or on an attached label near the deployment opening.

For frontal airbags, the word AIRBAG will appear on the center of the steering wheel for the driver and on the instrument panel for the outboard front passenger.

When the ignition switch is turned ON, the airbag warning light will illuminate briefly. This shows that the light bulb and airbag system are functioning properly.

See Warning Light for Airbag on page 58.

Warning

The airbag system may be triggered abruptly by improper operation.

Warning

Because airbags inflate with great force and faster than the blink of an eye, anyone who is up against, or very close to any airbag when it inflates can be seriously injured or killed. Do not sit unnecessarily close to any airbag, as you would be if sitting on the edge of the seat or leaning forward. Safety belts help keep you in position before and during a crash. Always wear a safety belt, even with airbags. The driver should sit as far back as possible while still maintaining control of the vehicle.

Warning

You can be severely injured or killed in a crash if you are not wearing your safety belt, even with airbags. Airbags are designed to work with safety belts, not replace them. Also, airbags are not designed to inflate in every crash. In some crashes safety belts are the only restraint. See When Should an Airbag Inflate? on page 42.

Wearing your safety belt during a crash helps reduce the chance of hitting things inside the vehicle or being ejected from it. Airbags are “supplemental restraints” to the safety belts. Everyone in the vehicle should wear a safety belt properly, whether or not there is an airbag for that person.

Important Note

Remember that rear-facing child seats must be installed on rear seats. Children should use rear-facing safety seats. Do not install these on front seats. If installed on front seats, deployment of the airbag may cause severe injury or even death.

Children Should Sit On Rear Seats


According to statistics on accidents, 12-year-old or younger children are safer when sitting on rear seats with proper protective devices than on front seats. Children should always sit on rear seats whenever possible.

The reason is not only that children may be injured by airbags, but research also suggests that children are safer in rear seats even if there are no front airbags.

Correct Seating Position

Adults or teenagers sitting on the driver seat or the passenger seat should also sit in a correct manner to ensure safe and effective function of airbags.

The best seating posture for adults and teenagers is as shown:

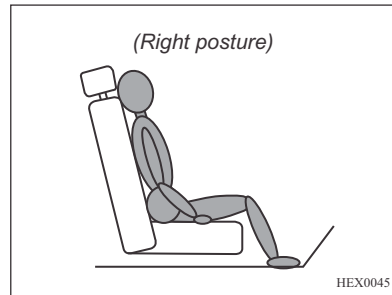

- **Always fasten safety belts.**

All passengers including the driver should always fasten safety belts so that the risk of injury during collisions can be minimized.

Airbags normally do not inflate on

a rear or side impact. In these kinds of collisions, passengers who do not wear safety belts will not be protected by protective devices, thus resulting in casualties.

Before collision, braking may cause passengers who are not wearing safety belts correctly to move forward, bringing their bodies close to or in contact with the airbag assembly. The deployment of the airbags may cause injuries or deaths.

- **Adjust your seatback to a comfortable and safe position.**

Keeping your seat away from the air bag assembly will not reduce the protective effectiveness of airbag. The farther you sit from airbag assembly, the lesser the chance of injury when the airbag inflates suddenly. But remember not to move the driver's seatback too far away to enable comfortable operation of the steering

wheel, pedals and other controls.

- **Set the seatback angled slightly back but do not lean your body forward.**

Slightly recline the seatback and lean your back against the seatback when sitting. Do not lean or otherwise move closer to the airbag assembly, i.e. the distance from the airbag should be minimum 25 cm. Do not bring any part of your body into contact with or close to the plastic decorative cover of airbag assembly (at the central part of the steering wheel or the instrument panel above the glovebox which is in front of the front passenger seat). Keep your head and body more than 25 to 30 cm away from the airbag. The farther away, the safer.

- **Do not put any articles, children or pets between yourself and the airbag.**

The airbag assemblies in your

vehicle are located at the steering wheel and in the dashboard above the glove box. Depending on vehicle models, your vehicle may not be equipped with the airbag in the dashboard above the glove box. If any object is placed on, above, or close to the plastic cover of airbag assembly, the object could be thrown onto your face and your upper body when the airbag is inflated, resulting in serious injury.

Children and pets must not sit on passenger's laps. Anything that may hurt the passenger when the airbag is being inflated should not be placed on his or her lap.

- Do not install any non-genuine accessories on the steering wheel or instrument panel since they may hinder the airbag from being inflated, interfere with operation of the system or hit the passenger and cause injuries.
- Never make any change to the

components of the airbag system. Improper operation may cause accidental inflation of the airbag and may injure the driver and front seat passenger.

- If the car has been driven into deep water, seek help from your CHEVROLET retailer.
- Dismantling of steering wheel or instrument panel can only be performed by your CHEVROLET retailer.
- The airbag is designed to be inflated only once, and once it has been inflated, it should be replaced by your CHEVROLET retailer.
- Do not stick or place anything on the steering wheel and the airbag cover. Use only a wet cloth to clean the surface of the airbag cover.
- Do not place anything on your lap or between your legs. Otherwise if the airbag inflates, the risk of injury or death will be much higher.

- If you sell the car, inform the new owner that the car is equipped with an airbag system and suggest that he/she also reads this Manual.
- There may be hazards when scrapping a car if the airbag has not been inflated. Contact your CHEVROLET retailer when your car needs scrapping.

Caution

If your car is severely damaged and the airbag is not inflated or your car is not severely damaged but the airbag is activated, this does not necessarily mean there is a fault with the airbag system. Collision sensors detect the rate of change of speed in an axial direction rather than the extent of damage.

Warning

Children, infants, mothers-to-be, the elderly, and other sick or frail people, must not sit on a front seat with an airbag system.

In addition, a child seat must not be installed on the front seat as the inflated airbag may cause injury to the face or even death of the child when an accident occurs.

The airbag is not necessarily triggered each time a collision occurs. The airbag system may not be triggered in the following accidents.

- Minor accidents when the safety belts can provide sufficient protection;
- Rear impacts or collisions;
- Diagonal collisions with another vehicle with the impact at a front corner;

- Overturning or rollover of the car;
- Hitting a lamp post or a tree at a low speed without great force.

Warning

Children who are up against, or very close to, any airbag when it inflates can be seriously injured or killed. Airbags plus lap-shoulder belts offer protection for adults and older children, but not for young children and infants. Neither the vehicle's safety belt system nor its airbag system is designed for them. Young children and infants need the protection that a child restraint system can provide. Always secure children properly in the vehicle.

Front Airbag System*

The front airbag system includes an airbag in the steering wheel and another in the dashboard on the passenger side. Depending on vehicle models, your vehicle may not be equipped with the airbag in the dashboard on the passenger side.

These airbags can be identified by the marking AIRBAG.

Where Are the Airbags?



The driver frontal airbag is in the middle of the steering wheel.



The outboard front passenger frontal airbag is in the instrument panel on the passenger side.

Warning

The best protection can be provided only when the seat is in a proper position.

No obstacles are allowed within the inflation area of airbag.

Wear the seat belt correctly so that the air bag can provide protection.

When Should an Airbag Inflate?

Frontal airbags are designed to inflate in moderate to severe frontal or near-frontal crashes to help reduce the potential for severe injuries mainly to the driver's or outboard front passenger's head and chest. However, they are only designed to inflate if the impact exceeds a predetermined deployment threshold. Deployment thresholds are used to predict how severe a crash is likely to be in time for the airbags to inflate and help restrain the occupants.

Whether the frontal airbags will or should deploy is not based on how fast your vehicle is traveling. It depends largely on what you hit, the direction of the impact, and how quickly your vehicle slows down.

Frontal airbags may inflate at different crash speeds. For example:

- If the vehicle hits a stationary object, the airbags could inflate at a different crash speed than if the vehicle hits a moving object.

- If the vehicle hits an object that deforms, the airbags could inflate at a different crash speed than if the vehicle hits an object that does not deform.
- If the vehicle hits a narrow object (like a pole), the airbags could inflate at a different crash speed than if the vehicle hits a wide object (like a wall).
- If the vehicle goes into an object at an angle, the airbags could inflate at a different crash speed than if the vehicle goes straight into the object.

Thresholds can also vary with specific vehicle design.

Frontal airbags are not intended to inflate during vehicle rollovers, rear impacts, or in many side impacts.

Always wear your safety belt, even with frontal airbags.

In any particular crash, no one can say whether an airbag should have inflated

simply because of the damage to a vehicle or because of what the repair costs were. For frontal airbags, inflation is determined by what the vehicle hits, the angle of the impact, and how quickly the vehicle slows down.

What Makes an Airbag Inflate?

In a deployment event, the sensing system sends an electrical signal triggering a release of gas from the inflator. Gas from the inflator fills the airbag causing the bag to break out of the cover and deploy. The inflator, the airbag, and related hardware are all part of the airbag module. Frontal airbag modules are located inside the steering wheel and instrument panel.

How Does an Airbag Restrain?

In moderate to severe frontal or near frontal collisions, even belted occupants can contact the steering wheel or the instrument panel. In moderate to severe side collisions, even belted occupants can contact the inside of the vehicle.

Airbags supplement the protection provided by safety belts. Frontal airbags distribute the force of the impact more evenly over the occupant's upper body, stopping the occupant more gradually.

But airbags would not help in many types of collisions, primarily because the occupant's motion is not towards those airbags. See *When Should an Airbag Inflate?* on page 42 for more information.

Airbags should never be regarded as anything more than a supplement to safety belts.

What Will You See After an Airbag Inflates?

Warning

When an airbag inflates, there may be dust in the air. This dust could cause breathing problems for people with a history of asthma or other breathing trouble. To avoid this, everyone in the vehicle should get out as soon as it is safe to do so. If you have breathing problems but cannot get out of the vehicle after an airbag inflates, then get fresh air by opening a window or a door. If you experience breathing problems following an airbag deployment, you should seek medical attention.

After the frontal airbags inflate, they quickly deflate, so quickly that some people may not even realize an airbag inflated. Some components of the airbag module may be hot for several minutes. For location of the airbags, see *Where Are the Airbags?* on page 42.

The parts of the airbag that come into contact with you may be warm, but not too hot to touch. There may be some smoke and dust coming from the vents in the deflated airbags. Airbag inflation does not prevent the driver from seeing out of the windshield or being able to steer the vehicle, nor does it prevent people from leaving the vehicle.

Replacing Airbag System Parts After a Crash

Warning

A crash can damage the airbag systems in the vehicle. A damaged airbag system may not work properly and may not protect you and your passenger(s) in a crash, resulting in serious injury or even death. To help make sure the airbag systems are working properly after a crash, have them inspected and any necessary replacements made as soon as possible.

If an airbag inflates, you will need to replace airbag system parts. See your CHEVROLET retailer for service.

Airbag System Check

The airbag system does not need regularly scheduled maintenance or replacement. Make sure the airbag warning light is working. See *Warning Light for Airbag* on page 58.

Caution


If an airbag covering is damaged, opened, or broken, the airbag may not work properly. Do not open or break the airbag coverings. If there are any opened or broken airbag covers, have the airbag covering and/or airbag module replaced. For the location of the airbags, see *Where Are the Airbags?* on page 42. See your CHEVROLET retailer for service.

STORAGE

Storage Compartment	45
Storage Compartment on Instrument Panel	45
Glove Box	45
Seatback Pockets*	46
Cup Holders	46
Seatback Hooks	47
Roof Paneling	47
Assist Grip	47
Loading Information	48

STORAGE COMPARTMENT

Storage Compartment on Instrument Panel

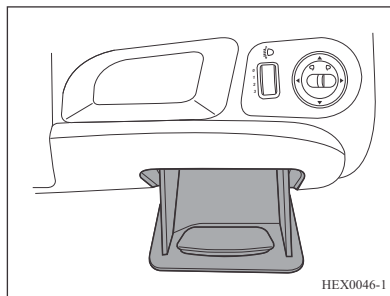


Instrument panel storage compartment is located on right side of the instrument panel.

Pull the handle to open the storage compartment.

To close the compartment, firmly push the door.

Glove Box

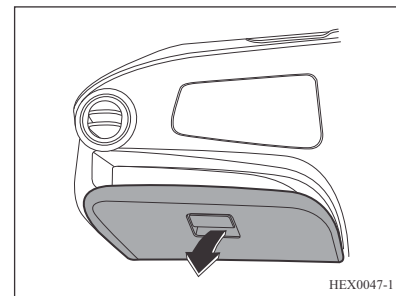

Glove box can be opened by pulling the handle.

Close the glove box with a firm push.


⚠ Warning

Keep the door of glove box closed while driving to reduce the risk of injury in the event of an accident or a sudden stop.

Seatback Pockets*


The seatback pockets are located on the backrest of the two front seats.

CUP HOLDERS

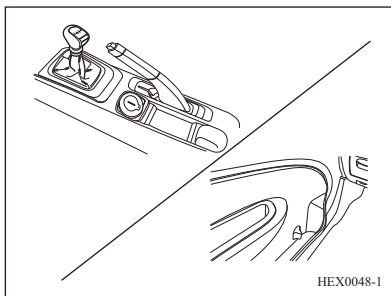

The front cup holders are located in the storage recesses on the inner panels of the front doors.

The rear cup holders are located in the rear part of the center console.

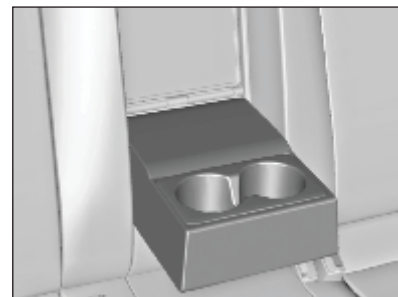


Additional cupholders are located in the rear armrest, when it is folded down.

Warning

Do not place uncovered cups of hot liquid in the cup holder while the vehicle is in motion. If the hot liquid spills, you burn yourself. Such a burn to the driver could lead to loss of control of the vehicle.

To reduce the risk of personal injury in the event of sudden stop or collision, do not place uncovered or unsecured bottles, glasses, cans, etc., in the cup holder while the vehicle is in motion.


SEATBACK HOOKS

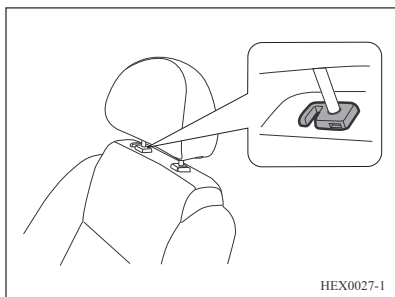

There is a hook at the joint of the backrest and head restraint for each front seat. The hooks can be used to hold shopping bags or other objects as desired.

ROOF PANELING

Assist Grip

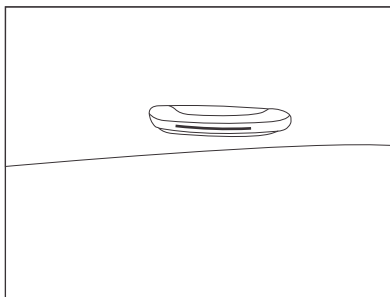

Your vehicle has assist grips above the front seat passenger's door and the rear doors.

Passengers can use the grips for assistance in entering / exiting the vehicle, or for hand-holds during the vehicle in motion.

Caution

Hanging items on your vehicle's assist grips can obstruct the driver's view.

Do not hang anything on the assist grips, unless they are equipped with a coat hook.

Obstructing the driver's view can lead to an accident resulting in personal injuries and damage to your vehicle or other property.

LOADING INFORMATION** Warning**

Do not place lighters, propane bottles or other flammable/explosive materials in the vehicle. These materials could catch fire and/or explode when exposed to high temperatures for a long time.

- Heavy objects in the rear compartment should be placed against the seatback. Ensure the seatback is securely fixed. If objects are stacked, heavy objects should be put at the bottom.
- Any loose objects in the rear compartment should be fixed to avoid sliding.
- Luggage should not protrude above the upper edge of the seatback.
- Do not place any objects on the instrument panel.
- Luggage must not impede the operation of the pedals, parking brake or gear shift. The driver's movements must not be restricted.

Do not put any loose objects in the vehicle.

- Do not drive with the trunk open.
- Driving with a roof load increases the sensitivity of the vehicle to cross-winds and has a detrimental effect on vehicle handling due to the vehicle's higher center of gravity. Distribute the load evenly and secure it properly with retaining straps. Adjust the tyre pressure and vehicle speed according to the load conditions. Check and retighten the straps frequently. Do not exceed the maximum vehicle capacity when loading the vehicle.


INSTRUMENTS AND CONTROLS

Controls	49
Horn	49
Steering Wheel Adjustment.....	50
Windshield Washer/ Wiper System	50
Cigarette Lighter*/Accessory Power Outlet	52
Ashtray*	53
Warning Lights, Gauges and Indicators.....	53
Speedometer	53
Odometer/Trip Odometer	54
Tachometer	54
Fuel Gauge	55
Control Indicator Lights	55
Instrument Cluster	56
Warning Light for Low Fuel Level	57
ABS Warning Light*	57
Warning Light for Airbag*	58

Warning Light for Brake System	59
Warning Light for Battery Charging System	60
Warning Light for Engine Oil Pressure	61
Malfunction Indicator Light	61
Door Ajar Light	62
Engine Coolant Temperature Warning Light	63
Front Fog Light Indicator*	63
Driver Seat Belt Warning Light*	63
Turn Signal/Hazard Warning Flashers	64
Headlight High Beam Indicator Light	65
Other Warning Tone Prompts* ..	65


CONTROLS

Horn

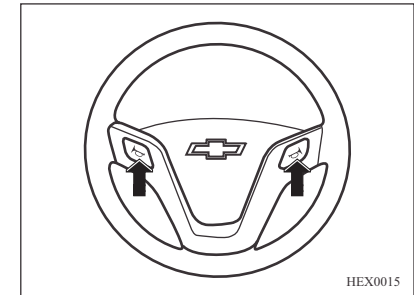

Press the  switch on the steering wheel pad to sound the horn.

Steering Wheel Adjustment

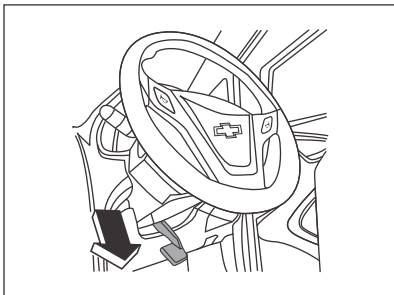

For vehicles with a tilt wheel:


1. Hold the steering wheel and pull the lever down.
2. Move the steering wheel up or down.
3. Pull the lever up to lock the steering wheel in place.

Do not adjust steering wheel unless vehicle is stationary.

Caution

If strong impact delivers to steering column axle direction when the steering wheel is adjusted or the lever is locked, it may cause damage to the parts related to steering wheel.

Windshield Washer/ Wiper System

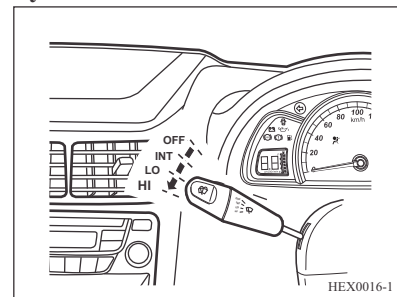

To use the windshield wipers, first turn ON the ignition switch, then push the windshield washer/wiper lever downwards.


The windshield wipers have the following 4 working positions:

OFF : System off

INT : Intermittent operation

LO : Wiping continuously at low speed

HI : Wiping continuously at high speed

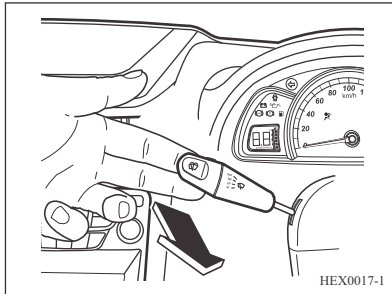

To spray washer-fluid onto the windshield:

- The ignition switch is in the ON position.
- Pull the windshield washer/wiper lever towards you.

If you pull the lever for less than 0.6 second, the following will occur:

- The washers will spray washer fluid onto windshield. (Windshield wipers will not operate.)

If you pull the lever for more than 0.6 second:

- The washers will spray washer fluid onto windshield.
- Windshield wipers operate 3 cycles or until you release the lever.

Caution

Less than clear vision for the driver can lead to an accident resulting in personal injury and damage to your vehicle or other property.

Do not operate the windshield wipers when the windshield is dry or obstructed, as with snow or ice. Using the wipers on an obstructed windshield can damage the wiper blades, wiper motor, and glass.

Check that wiper blades are not frozen to windshield before operating in cold weather. Wiper operation while blade is frozen can damage wiper motor.

Caution

Do not operate windshield washers for more than 10 seconds continuously or when the washer fluid reservoir is empty.


Otherwise the washer motor may overheat, leading to expensive repair costs.

Misting function

To operate the windshield wipers once in case of light rain or mist, lightly move the windshield wiper/washer lever towards the INT position and release it.

The lever will return automatically to its normal position when released. The wipers will operate through one cycle.

Cigarette Lighter* / Accessory Power Outlet

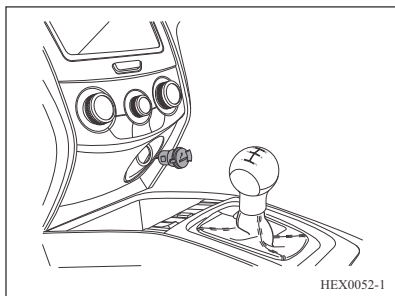

Turn the ignition switch to the ACC / ACCESSORY or ON position, and then push the cigarette lighter in all the way. When the cigarette lighter is ready to use it will automatically pop out.

Depending on vehicle model, an accessory power outlet may be equipped here on some vehicles.

Only when the ignition switch is in ACC / ACCESSORY or ON position, the accessory power outlet can be used.

The 12V accessory power outlet can be used to plug in electrical equipment, such as cell phone or an MP3 player.

Certain accessory power plugs may not be compatible with the accessory power outlet and could overload vehicle or adapter fuses. If a problem is experienced, see your CHEVROLET retailer.

When adding electrical equipment, be sure to follow the proper installation instructions included with the equipment.

Caution

Do not connect any current delivering accessories, e.g. electrical charging devices or batteries.

Do not damage the sockets by using unsuitable plugs.

Warning

If you leave any inflammable or explosive substances inside the vehicle, such as in summer, a disposable lighter inside the vehicle, it can blow up due to increased temperature in the passenger and rear compartments and cause a fire.

Make sure there is no inflammable and explosive substances left in the vehicle.

Caution

The cigarette lighter barrel can become very hot when in operation.

Do not touch it, and do not let children operate or play with the cigarette lighter.

Hot metal can cause body injuries or damages to the vehicle or other property.

Caution


Overheating the cigarette lighter can damage the heating element and the lighter itself.

Do not hold the lighter in while it is heating. This can cause the lighter to overheat.

Trying to operate malfunctioning cigarette lighter can be dangerous. If the heated cigarette lighter does not pop out, pull it out and consult a CHEVROLET retailer to have it repaired. It can cause injuries and damage to your vehicle.

Caution

The cigarette socket should only be used with the cigarette lighter. If other 12V power adapters are installed into the cigarette socket, fuse failure or a potential thermal incident may occur.

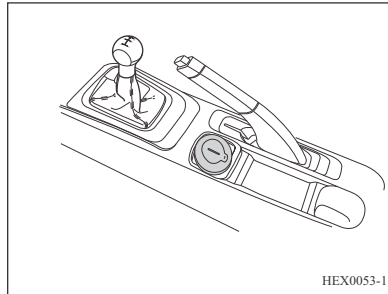Ashtray*

Located on the center console between the front seats, this can be used as a mobile ashtray container inside the car.


Just open the lid to use.

Caution

Cigarettes and other smoking materials could set them on fire.

Do not put paper or other flammable items in the ashtray.

An ashtray fire can lead to personal injury or damage to your vehicle or other property.

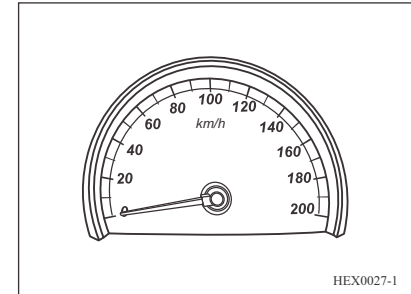
WARNING LIGHTS, GAUGES AND INDICATORS
Speedometer

The speedometer shows the vehicle's speed in kilometer per hour (km/h).

Note


In a speed limit zone, please keep to the speed limit.

Odometer/Trip Odometer

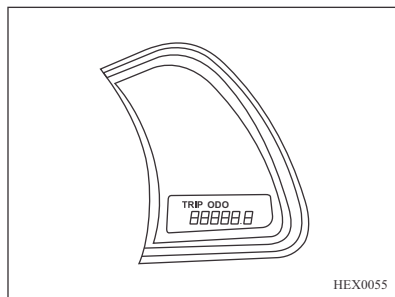

The odometer/trip odometer is located in the small display screen on the right of the instrument cluster.


The odometer shows the distance in kilometers that the vehicle has driven so far. The trip odometer shows the distance in kilometers that the vehicle has been driven since the last reset. To reset the trip odometer, press and hold the mode selection button under the speedometer until it is reset to zero. Press the mode selection button briefly to switch between odometer and trip odometer.

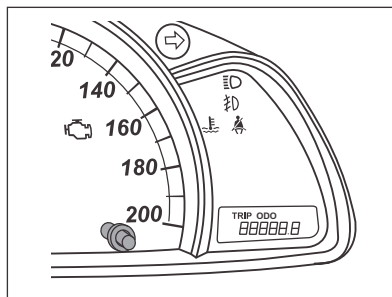

Caution


It is prohibited by law to operate the odometer illegally.

Tachometer

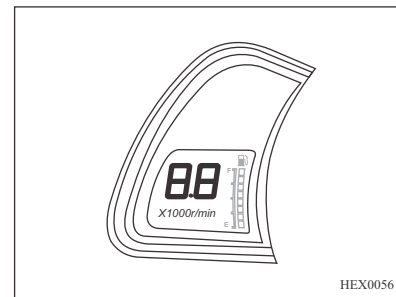

The digital tachometer displays the engine speed in revolutions per minute (rpm). Drive in a low engine speed range for each gear as much as possible.

Fuel Gauge

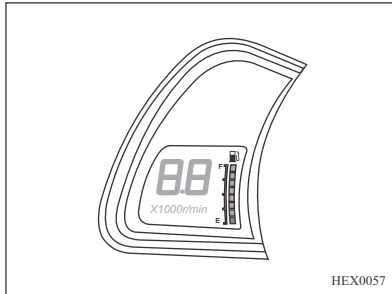

Displays the fuel level in the fuel tank. If the fuel level in the fuel tank is too low, the control indicator light will illuminate. Please refuel immediately.

Never empty the fuel tank and run the tank dry!

Because of the fuel remaining in the tank, the top-up quantity may be less than the specified tank capacity.

Movement of the fuel within the fuel tank causes the fuel gauge display to change when you brake, accelerate or turn.

Danger

Before refueling, switch off engine and any external heaters with combustion chambers. Switch off any mobile phone.

Vaporised fuel can be ignited by electromagnetic waves or electric current of mobile phone.

Fuel is flammable and explosive. No smoking. No naked flames or sparks. Follow the operating and safety instructions of the filling station when refueling.

Remove static electricity on your hands by touching something able to release static electricity when touching or opening fuel cap or refueling nozzle.

Don't do any action making static electricity like getting on and off vehicle when refueling. Vaporised fuel can be ignited by static electricity.


Control Indicator Lights

The control indicator lights described in this Manual may not appear on all models. This instruction applies to all instrument types. When the ignition switch is turned ON, as a function test, most of the control indicator lights will be illuminated for a short period.

The color of a control indicator light means:


- Red = Danger, important reminder
- Yellow = Warning, information, fault
- Green = Activation confirmed
- Blue = Activation confirmed

Instrument Cluster

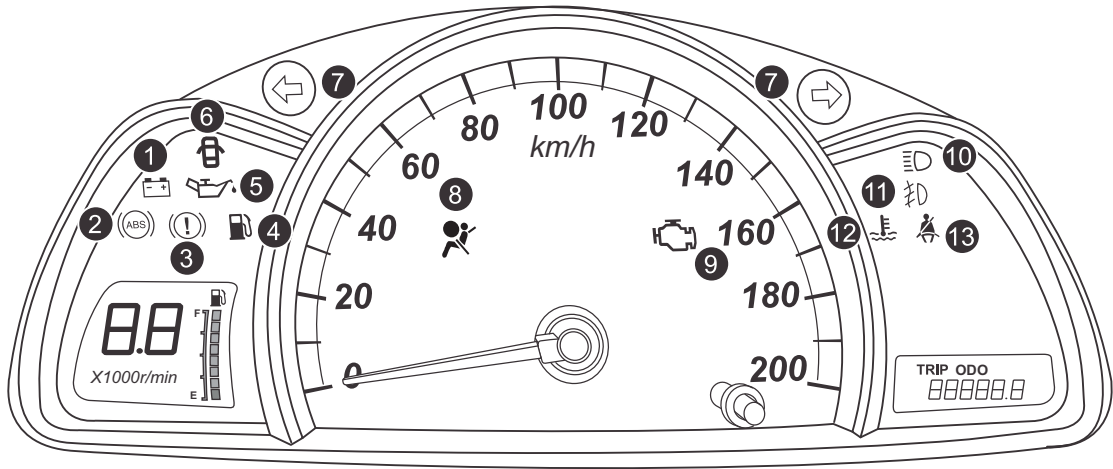

1. Warning light for battery charging system
2. ABS warning light*
3. Warning light for brake system
4. Warning light for low fuel level
5. Warning light for engine oil pressure
6. Door ajar light
7. Turn signal/hazard warning flashers
8. Warning light for airbag*
9. Malfunction indicator light
10. Headlight high beam indicator light
11. Front fog light indicator light*
12. Engine coolant temperature warning light
13. Driver seat belt warning light*

Warning Light for Low Fuel Level

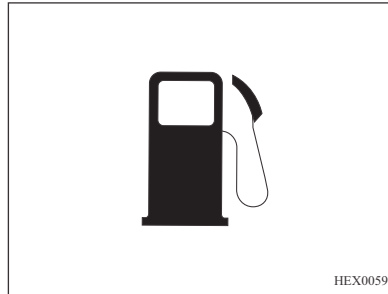

This light comes on when the fuel tank is low on fuel. When fuel is added, the light should go off. If it does not, have the vehicle serviced.


Caution

Do not let your vehicle run out of fuel. This can damage the catalytic converter.

When this warning light illuminates, please fill the fuel tank as soon as possible.

See Fuel on page 92.

ABS Warning Light*

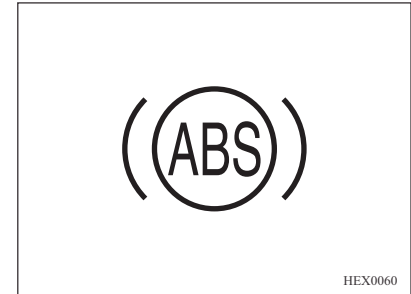

If the vehicle is equipped with ABS, when the ignition switch is turned ON, the ABS warning light will illuminate for a moment. This shows that the system is doing a self-test and the indicator light bulb is working correctly. This warning light should go off after a few seconds.

When the following situations occur with regard to the ABS warning light, please consult your CHEVROLET retailer.

- The light does not illuminate when the ignition switch is turned ON.

- The light does not go off.
- The light illuminates while driving.

Caution

When the ABS warning light illuminates, it indicates that your brakes may not work properly.

If the brakes are not kept in good working condition, this may lead to collisions resulting in personal injury and damage to your vehicle or other property.

If the ABS warning light illuminates while driving, it indicates that your ABS system may be faulty. Although your vehicle may be driven normally without the ABS function, you should consult your CHEVROLET retailer as soon as possible for a necessary repair.

Warning Light for Airbag*



When the ignition switch is turned ON, the airbag warning light will illuminate briefly. This shows that the indicator light bulb and airbag systems are functioning properly.

Caution


If the airbag warning light flashes or stays on when driving, it indicates a fault in the airbag system. The airbag system will be disabled and cannot be triggered when an accident occurs. Consult your CHEVROLET retailer for necessary repair.

If an accident occurs with the vehicle which has a faulty airbag system, it may result in personal injury or even fatalities.

When the airbag system has a fault, the warning light will indicate this as follows:

- The light does not illuminate when the ignition switch is turned ON.
- The light does not go off after illuminating briefly.
- The light flashes while driving.
- The light does not go off during driving.

Warning Light for Brake System

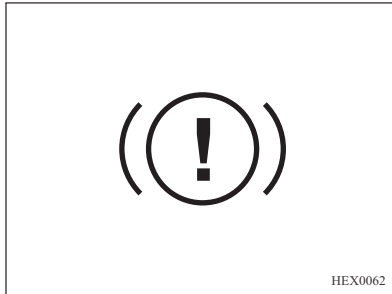

When the ignition switch is turned ON and before the engine is started, the brake system warning light will illuminate.

This indicates that the indicator light works properly and the light will go off when the engine is started.

When the parking brake is engaged, the brake system warning light will be illuminated as well. When the parking brake is released, then the indicator light will go off. Make sure that the parking brake is fully released before you drive the vehicle away.

Caution

Do not drive the vehicle while the brake system warning light is still illuminated.

This phenomenon may indicate that your brakes are not working properly.

If you drive while the brake system has a fault, this may lead to collisions resulting in personal injury and damage to your vehicle or other property.

If the parking brake is fully released and the brake system warning light still illuminates, it indicates that the brake fluid level in its fluid reservoir is too low.

To rectify this, please perform the following steps:

1. Carefully drive the vehicle away from the carriageway and stop.
2. Check the brake fluid level.

3. Add the recommended brake fluid to the MAX (maximum) mark. See Adding Brake Fluid on page 106.
4. In the following cases, drive the car at a safe speed to your CHEVROLET retailer to have the brakes checked and determine whether:
 - The brakes work properly.
 - According to your own judgment, the vehicle's brakes are safe.
5. In the following cases, tow the car to your CHEVROLET retailer to have brakes checked and repaired:
 - Leak found in the brake system.
 - The warning light for the brake system illuminates continuously.
 - The brakes work abnormally.


Caution

Do not drive the vehicle if the brake system warning light does not illuminate, when the parking brake is engaged and the ignition switch is turned ON.

Ensure that the warning light is working correctly. If the light does not illuminate when the parking brake is engaged and the ignition switch is turned ON, even if the warning light is working correctly, consult your CHEVROLET retailer to have the vehicle's brake system checked.

These situations indicate that your vehicle's brake system may have a fault.

If the vehicle's brakes are not kept in good working condition, this may lead to collisions resulting in personal injury and damage to your vehicle or other property.

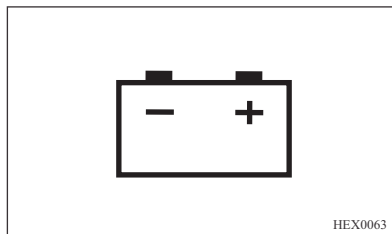Warning Light for Battery Charging System

The charging system light comes on briefly when the ignition is turned ON, but the engine is not running, as a check to show the light is working. The light turns off when the engine is started. If it does not, have the vehicle serviced by your CHEVROLET retailer. If the light stays on, or comes on while driving, there could be a problem with the electrical charging system. Have it checked by your CHEVROLET retailer. Driving while this light is on could drain the battery.

If a short distance must be driven with the light on, be sure to turn off all accessories, such as the audio system and air conditioner.

Caution

The battery charging system warning light indicates that the battery charging system may have a fault.

Do not drive while the battery charging system warning light is still lit.


Driving with a faulty battery charging system will damage the vehicle.

If the battery charging system warning light illuminates while driving:

1. Carefully drive the vehicle away from the carriageway.
2. Stop the vehicle.
3. Make sure that the drive belt is not loose or broken.
4. If the drive belt works properly, but the battery charging system warning light still illuminates continuously, it indicates that the battery charging system may be faulty.

Please consult your CHEVROLET retailer as soon as possible for repair.

Warning Light for Engine Oil Pressure

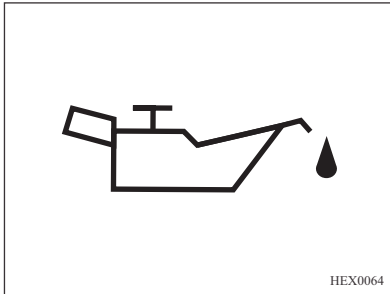

After the ignition switch is turned ON and before the engine is started, the warning light will illuminate. This shows that the indicator light bulb is working correctly.

When the engine is started, this warning light will go off.

If the engine oil pressure warning light illuminates while driving, it indicates that the engine oil pressure may have dropped to a dangerous level. Immediately stop the engine and check the oil level.


Caution

Lack of proper engine oil maintenance can damage the engine. Driving with the engine oil low can also damage the engine. The repairs would not be covered by the vehicle warranty. Check the oil level as soon as possible. Add oil if required, but if the oil level is within the operating range and the oil pressure is still low, have the vehicle serviced. Always follow the maintenance schedule for changing engine oil.

If the oil level is too low, add specified engine oil to a suitable level.

If the level is OK, consult your CHEVROLET retailer to have the engine lubrication system checked.

Malfunction Indicator Light

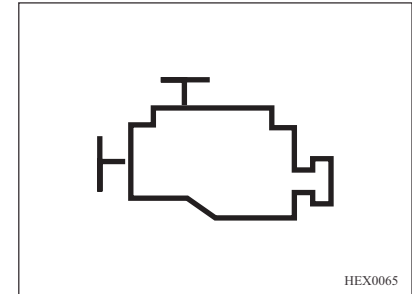

After the ignition switch is turned ON and before the engine is started, the indicator light will illuminate.

This shows that the indicator light bulb is working correctly.

When the engine is started, this warning light will go off.

Caution

Malfunction indicator light indicates that your vehicle has some fault that requires your attention. Driving while the Malfunction Indicator Light is on may damage the emission control system, affecting fuel economy and the vehicle's driveability.

Consult your CHEVROLET retailer as soon as possible for repair .

If the emission-related components or relevant subsystems have a fault, the Malfunction Indicator Light (MIL) will illuminate.

As long as the electronic control module (ECM) detects a fault, the Malfunction Indicator Light will illuminate continuously. If a serious misfire is detected, the Malfunction Indicator Light will flash continuously.

A serious misfire may damage the catalytic converter.

The electronic systems on the vehicle

will switch to an emergency operation program so that you can continue to drive the vehicle.

However, at this time you should drive to your CHEVROLET retailer as soon as possible.

If the MIL illuminates for a while then extinguishes itself, it is normal. It does not mean that the system has a fault.

Caution

Modifications made to the engine, transmission, exhaust, intake, or fuel system of the vehicle or the replacement of the original tires with other than those of the same Tire Performance Criteria (TPC) can affect the vehicle's emission controls and can cause this light to come on. Modifications to these systems could lead to costly repairs not covered by the vehicle warranty. This could also result in a failure to pass a required Emission Inspection/Maintenance test.


Door Ajar Light



HEX0066

This light comes on when a door is open or not securely latched. Before driving check that all doors are properly closed.

Engine Coolant Temperature Warning Light

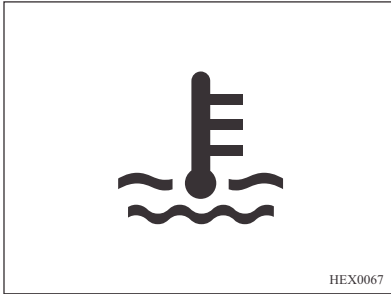


The engine coolant temperature warning light comes on briefly when the ignition is turned ON. This shows that the system is doing a self-test and the indicator light bulb is working correctly. If the system is working normally the indicator light then goes off.

If it does not, have the vehicle serviced by your CHEVROLET retailer.

This light indicates that the engine coolant has overheated.

If the light comes on and stays on while driving, the vehicle may have a problem with cooling system. Stop the vehicle and turn off the engine to avoid damage to the engine.


Front Fog Light Indicator*

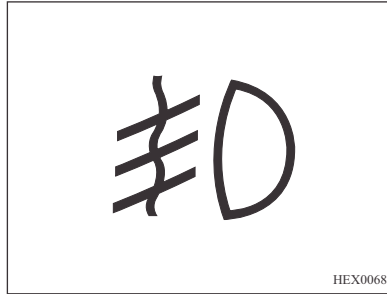

When the front fog lights are on, the indicator light illuminates.

See Front Fog Lights on page 69.

Driver Seat Belt Warning Light*

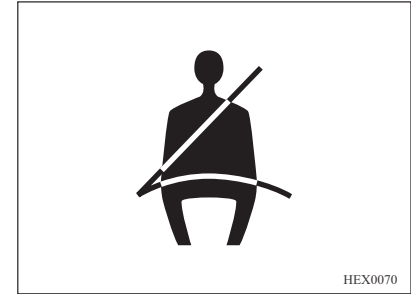


When the ignition switch is ON, the safety belt warning light will illuminate briefly. This means that the system is carrying out a self-test.

Thereafter, unless the driver has fastened the safety belt, the following will take place:

- Seatbelt warning light illuminates.
- Seatbelt warning buzzer will sound for about 6 seconds.

- If the vehicle speed exceeds 20 km/h, this light will stay on, and at the same time the warning buzzer will continue to sound for a period of time.

Turn Signal/Hazard Warning Flashers

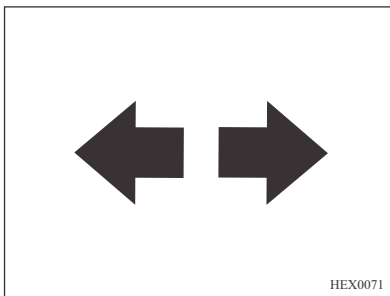

Turn signal/hazard warning flashers are used to confirm that the vehicle's external turn signal lights or hazard warning flashers are all working correctly.

If the green arrow does not flash when you activate the turn signal or press the hazard warning switch, then you should check the fuses and light bulbs, and replace them if necessary.

Caution

These indicators are essential for safe driving.


If the bulb in the turn signal light or hazard warning flasher is blown, it must be replaced immediately.

If these indicators are not kept in good working condition, this may lead to accidents resulting in personal injury and damage to your vehicle or other property.

Caution

If the flashing time is shorter than normal, it indicates that the turn signal light bulbs have blown and need to be replaced.

Headlight High Beam Indicator Light

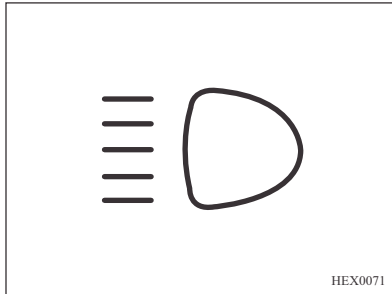

The high-beam indicator comes on when the high-beam headlamps are in use and during headlamp flash.

Other Warning Tone Prompts*

In the following circumstances the vehicle will give an alarm tone to prompt the driver:

- After the vehicle's engine has been shut off, if the key is not removed from the ignition switch before opening any door;
- After the vehicle's engine has been shut off, if the headlamps are not switched off before opening any door;
- The vehicle speed exceeds 120 km/h.

Depending on the model, some vehicles may not have some or all of the above alarm tone prompt functions.



 NOTES


This image shows a full page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page, typical of notebook paper. There are no margins, text, or other markings on the page.

LIGHTING

Exterior Lighting	67
Headlight Switch	67
High Beam	68
Headlamp Flash	68
Misted Lamp Covers	68
Hazard Warning Flashers	69
Turn and Lane Change Signal ...	69
Front Fog Lights*	69
Reverse Lights	69
Headlamp Range Adjustment.....	70
Interior Lighting	70
Reading Light	70
Rear Compartment Light*	70

EXTERIOR LIGHTING

Headlight Switch

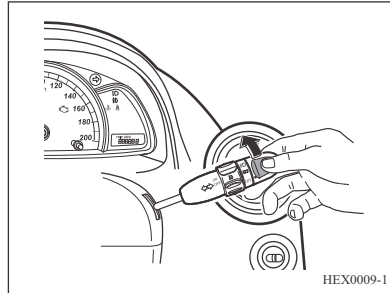

When the ignition switch is turned to LOCK or ACC/ACCESSORY position, the headlamps will be turned off automatically. Only parking lights will be on, unless turned off using headlight switch.

To turn the headlamps, tail lamps or parking lights on or off, turn the end of the combination switch lever.


The headlight switch has three positions which activate different lighting functions:

OFF = Turn all lights off.

☛ = Instrument panel lights, parking lights and license-plate lights illuminate.

☛D = Low beam headlamps and all the above lights illuminate.

High Beam

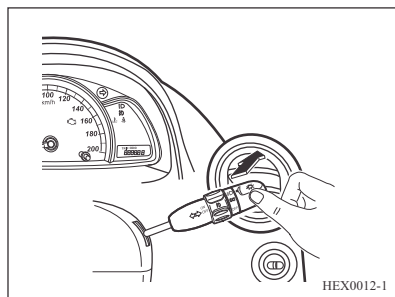

To turn on high beam headlamps:

- Ensure that the headlamps are in low beam state.
- Push the combination switch lever towards the dashboard.

When the headlamp high beam is turned on, the headlamp high beam indicator light illuminates. To switch the headlamp from high beam to low beam, pull the combination switch lever back towards you to resume the normal position.

Warning

Always switch the high-beam headlamps to low-beam when you approach on coming vehicles or when other vehicles are ahead.

High-beam headlamps can temporarily blind other drivers, which could result in a collision.

Headlamp Flash

To make the headlamps high beam flash, pull the combination switch lever towards you and release. When you release it, the lever will return to the normal position.


If you pull the combination switch lever towards you and hold, the headlamp high beam will stay on.

Headlamp flash will work irrespective of light switch position.

Misted Lamp Covers


The inside of the light housing may mist up briefly in poor, wet and cold weather conditions, in heavy rain or after washing. The mist disappears quickly by itself. To help, switch on the headlights.

Hazard Warning Flashers

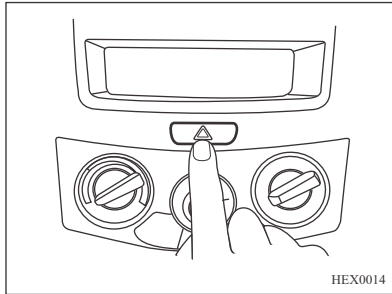

Press the  switch to turn on or turn off the hazard warning flashers.

Turn and Lane Change Signal

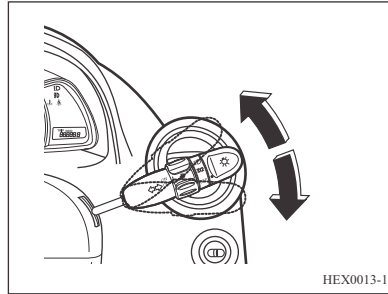


Lever up = Left indicator

Lever down = Right indicator

After turning, the turn signals will automatically reset and the lever will return to the normal position.

When you change driving lane, move the lever half way to the change direction and hold. When you release it, the lever will return to the normal position.

Front Fog Lights*

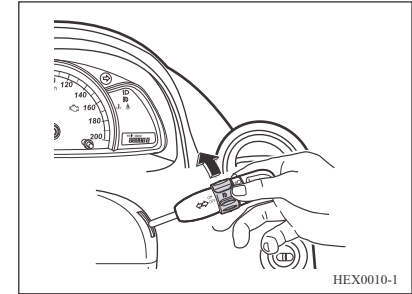


While the headlights are on parking light or low beam position, turn the ring in the middle of the combination switch lever to ON to turn on the front fog lights. Turn the ring to OFF position to turn off the front fog lights.

Reverse Lights

The reverse lights will illuminate when the ignition switch is ON and reverse gear is engaged.

Headlamp Range Adjustment

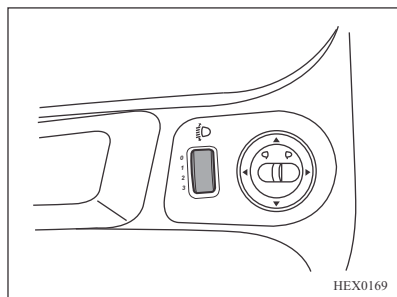

The headlamp range adjustment knob is located at the right of instrument panel.

To adapt headlamp range to the vehicle load to prevent dazzling: turn knob to required position:

0 = Driver's seat occupied

0 = Front seats occupied


1 = All seats occupied

2 = All seats occupied and load in the luggage compartment

3 = Driver's seat occupied and load in the luggage compartment

INTERIOR LIGHTING

Reading Light

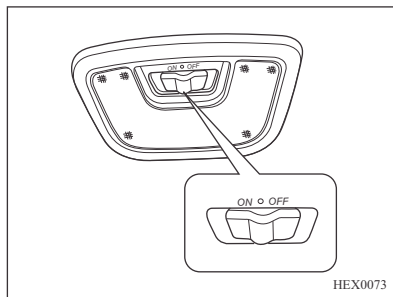

The reading light have three working positions:

ON : The light illuminates until you manually turn them off.

CENTER : The light illuminates when the door is opened, and is extinguished when the door is closed.


OFF : Even if the door is opened, the light does not illuminate.

Warning

Avoid using the courtesy light while driving in the dark.

A lit passenger compartment reduces visibility in the dark, and could cause a collision.

Rear Compartment Light*

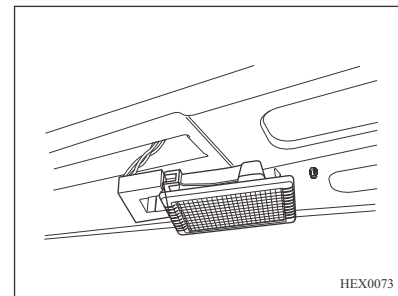

Rear compartment light comes on, when trunk is open and goes off when trunk is closed.

CLIMATE
CONTROL SYSTEM

Air Vents 72

Control Panel 73

 Temperature Control Selector 74

 Fan Control Selector 74

 Air Distribution Mode Selector.. 74

 Recirculation Mode Button 76

Air Conditioning System 77

 Air Conditioning Button 78

 Cool Air 78

 Warm Air 79

 Ventilation 79

 Rear Window Defroster Button*.80

Defrosting and Demisting 81


Maintenance 82

 Air Intake 82

 A/C Mesh Filter 82

 Air Conditioning Regular
 Operation 82

AIR VENTS

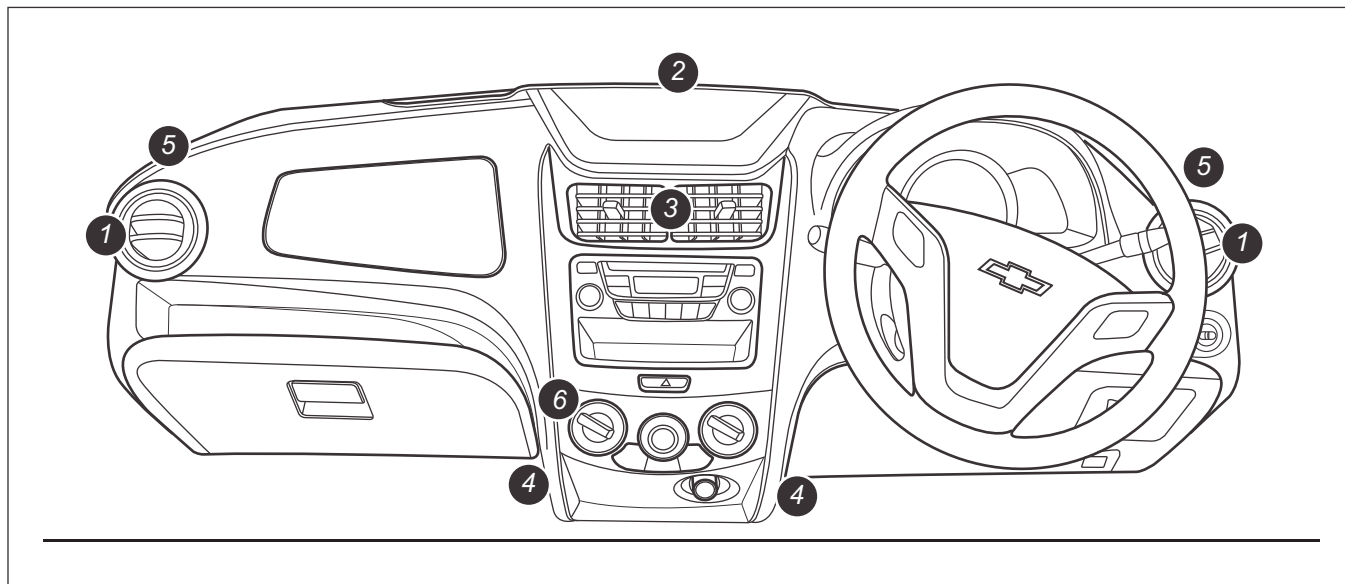

- | | |
|------------------------------|-------------------------------------|
| 1. Side air vent | 4. Floor vent |
| 2. Windshield defroster vent | 5. Front side window defroster vent |
| 3. Center air vents | 6. A/C Control panel |

Side air vent

You can direct airflow to the front passenger area or to the side windows through the two adjustable side vents.

Windshield defroster vent

The windshield defroster vents direct airflow to the windshield.

Center air vent

You can direct airflow to the front passenger area through the two adjustable center vents.

Floor vent


Floor vents direct airflow to the front footwell.

Front window defroster vents

The front window defroster vents direct airflow to the side windows, especially to the area near the exterior rear view mirrors.

⚠ Warning


Do not attach any objects to the slats of the air vents. Risk of damage and injury in case of an accident.

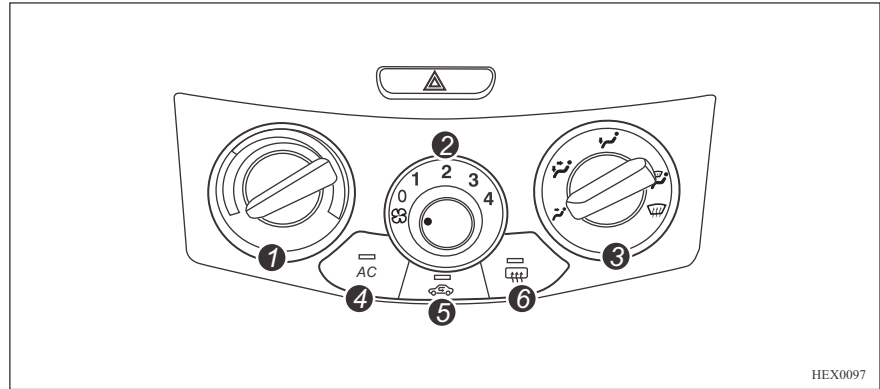CONTROL PANEL

HEX0097

- | | |
|-----------------------------------|----------------------------------|
| 1. Temperature control selector | 4. Air-conditioning (A/C) button |
| 2. Fan control selector | 5. Recirculation button |
| 3. Air distribution mode selector | 6. Rear window defroster button* |


Temperature Control Selector

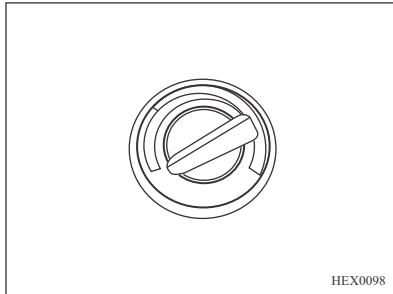

The temperature control selector controls the temperature of air flowing out of the vents.

Turn the temperature knob to the red area for warmer air or to the blue area for cooler air.


Fan Control Selector

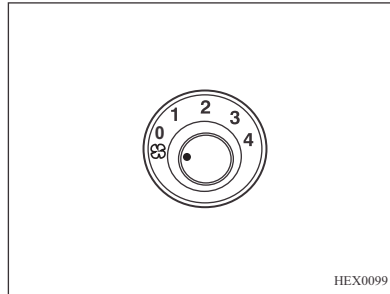

You can control the amount of airflow by turning the fan speed control knob. Turn the knob clockwise to increase fan speed, or counterclockwise to decrease fan speed.


You can set the fan speed control knob between 1 to 4, as desired.

Air Distribution Mode Selector

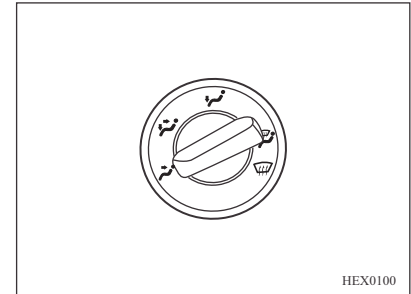


Turn the knob to the desired mode according to the desired airflow direction.


The air distribution selector can be set to one of the five positions as follows:

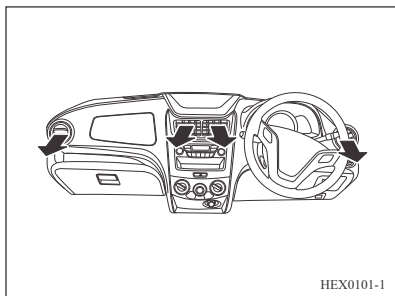Front mode (↗)

This mode directs airflow through the center vents and side vents.

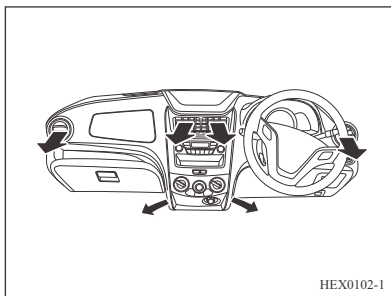
Dual mode (↔)

Directs air flow in two ways. Half of the air through the floor vents and the remaining through the center and side vents.

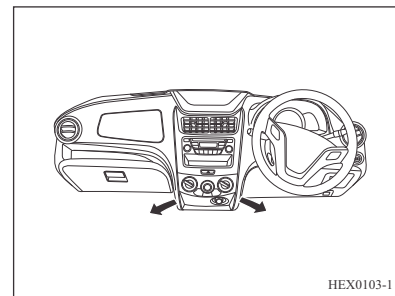Floor mode (↘)

Most of the air flows through the floor vents, with a small amount of air through the windshield and front window defroster vents as well as side vents.

Floor/defrosting mode (👤)

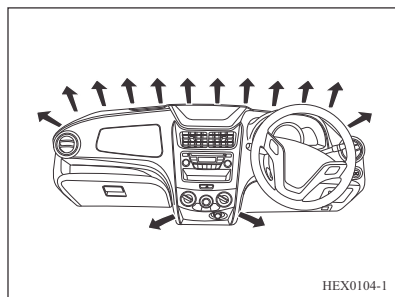


This mode directs airflow through the windshield defroster vent, front window vents, floor vents and side vents.

Note

In this mode, air conditioning system would automatically switch on the compressor and switch off the recirculation mode.

Defrosting mode (👤)

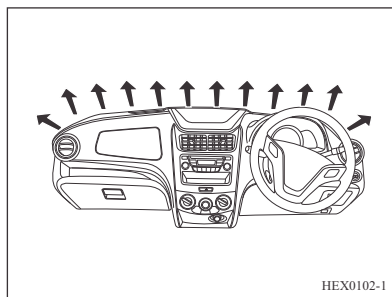


Air flows through windshield and front window defroster vents as well as side vents.

Note

In this mode, air conditioning system would automatically switch on the compressor and switch off the recirculation mode.

Recirculation Mode Button

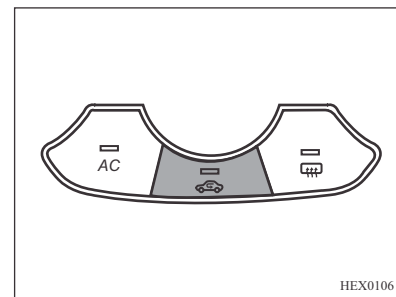

Press this button when driving in dusty conditions, to keep vehicle exhaust or smoke out, or when quick heating or cooling is desired. The indicator light on the button will illuminate and air recirculation will start.

Press the button again to switch to fresh air mode. The indicator light on the button will turn off.

⚠ Warning

Driving with recirculation mode for prolonged period of time can make you sleepy. Periodically turn to the outside air mode for fresh air.

The exchange of fresh air is reduced in air recirculation mode. In operation without cooling, the air humidity increases, so the windows may mist up. The quality of the passenger compartment air deteriorates, which may cause the vehicle occupants to feel drowsy.

AIR CONDITIONING SYSTEM

The refrigerant in the air conditioning system can cool down the air inside the vehicle, removing moisture from the air.

Even when the air conditioning system is on, your vehicle will produce warm air if the temperature control selector is set to a relatively high temperature.

Caution


You may notice a water drip from under the engine compartment sometimes after driving with air conditioning on.

This is normal because your cooling system removes moisture from the air.

Note

Because the compressor of the air-conditioning system shares the engine power, you may notice a slight drop in engine power and performance when the compressor is operating.

Air Conditioning Button

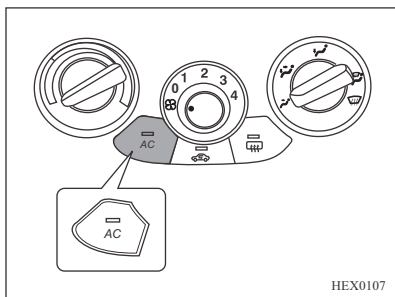

Caution

Using your air conditioning system while driving up long hills or in heavy traffic can cause the engine to overheat.

If the engine coolant temperature warning light indicates that the engine is overheating, turn the air conditioning off.

Otherwise your vehicle may be damaged.

Turning on air conditioning (A/C) system :

1. Start the engine.
2. Press the air conditioning (A/C) button. (The indicator light on the button turns on to indicate that the air conditioning is working.)
3. Adjust fan speed.

Note

The fan must be turned on for the air conditioning compressor to work.

Turning off air conditioning (A/C) system:

Press the air conditioning (A/C) button again. (The indicator light on the button turns off to indicate that the air conditioning stops working.)

The air conditioning system will turn on automatically when the vehicle is started, if it was working when the engine was shut down last time.

Cool air

Maximize cooling

For quick cooling in hot weather or after the vehicle has been exposed to direct sunlight for an extended period of time:

1. Open the windows slightly to permit hot air to escape.
2. Turn on the air conditioning (A/C). (The indicator light turns on.)
3. Press the recirculation button . (The indicator light turns on.)
4. Turn the air distribution selector to front mode (.
5. Turn the temperature control selector to the maximum position in the blue area to obtain cool air.
6. Turn the fan control selector to the maximum speed.

Normal cooling

1. Turn on the air conditioning (A/C) button. (The indicator light turns on.)

2. Press the recirculation button . (The indicator light turns on.)
3. Turn the air distribution selector to front mode () or dual mode (.
4. Turn the temperature control selector to the blue area to obtain cool air.
5. Turn the fan control selector to a desired speed.

Warm Air

Maximize heating

Use the maximum warm air mode to quickly raise the temperature in the passenger compartment. Do not use this mode for an extended period of time, or the air quality inside the vehicle will deteriorate and the windows will mist up. To remove mist from the windows, bring in fresh air by turning off the recirculation button .

To obtain maximum warm air:

1. Turn off the air conditioning (A/C). (The indicator light turns off.)

2. Press the recirculation button . (The indicator light turns on.)
3. Turn the air distribution selector to dual mode () or floor mode (.
4. Turn the temperature control selector to the maximum position in the red area to obtain warm air.
5. Turn the fan control selector to the maximum speed.

Normal heating

1. Turn off the air conditioning (A/C). (The indicator light turns off.)
2. Turn off the recirculation . (The indicator light turns off.)
3. Turn the air distribution selector to floor mode () or dual mode (.
4. Turn the temperature control selector to the red area to obtain warm air.
5. Turn the fan control selector to a desired speed.

Ventilation

Dual mode

Suitable for a weather condition that is cool and full of sunshine. The warm air flows into the floor area and the cool air from outside flows to the upper part of the vehicle.

To use this setting:

1. Turn off the recirculation button . (The indicator light turns off.)
2. Turn the air distribution selector to dual mode (.
3. Turn the temperature control selector to a desired temperature.
4. Turn the fan control selector to a desired speed.


Ventilation

To direct airflow through the center vents and side vents:

1. Turn off the air conditioning (A/C). (The indicator light turns off.)
2. Turn off the recirculation . (The indicator light turns off.)

3. Turn the air distribution selector to front mode (↗) or dual mode (↔).
4. Turn the temperature control selector to the blue area to obtain cool air.
5. Turn the fan control selector to a desired speed.

Rear Window Defroster Button*

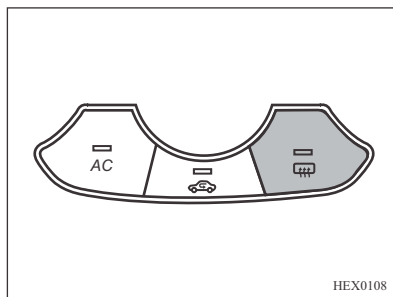

To turn on the defroster, switch ON the ignition and then press the rear window defroster button. The indicator light on the button will turn on.

The defroster will turn off approximately 12 minutes after the button is pressed.

Turn the defroster off when you are sure that your vision is clear.

Caution

Do not use the rear window defroster under the following conditions:

- Engine is not running
- Vehicle is not started
- There is a build-up of snow or ice on the rear window

Operating the rear window defroster under these conditions could drain the battery.

This can damage your vehicle, requiring the replacement of some parts.

Caution

Lack of proper maintenance can damage the defroster grid or scratch the glass.

Do not use sharp tools or abrasive window cleaners on the rear window.

Do not damage or scratch the defroster grid when cleaning the rear window or working around it.

Less than clear vision for the driver can lead to an accident resulting in personal injury and damage to your vehicle or other property.

DEFROSTING AND DEMISTING

Windshield defrosting:

1. Turn the air distribution selector to defrosting () position.
2. Turn the temperature control selector to the red area to obtain warm air.
3. Turn the fan control selector to the maximum speed to accelerate defrosting.

Then the air conditioning system will automatically control the compressor operation and air recirculation mode. (Indicated by the A/C indicator light on and recirculation indicator light off.)

4. In order to keep the windshield clean and direct warm air to the floor, turn the air distribution selector to the floor/defrosting () position.

Then the air conditioning system will automatically control the compressor operation and air recirculation mode. (Indicated by the A/C indicator light on and recirculation indicator light off.)

Caution

A temperature difference between the outside air and the windshield can make the windshield mist up and reduce your forward vision.

Do not use the floor/defrosting mode () or the defrosting () mode in extremely humid weather when the temperature control is set to blue area.

Otherwise accidents can result, leading to vehicle damage and personal injury.

MAINTENANCE

Air Intake

The air intake in front of the windshield in the engine compartment must be kept clear to allow air intake.

Remove any leaves, dirt or snow.

A/C Mesh Filter

The filter prevents dust, particles, leaves, etc. from entering vehicle through air intake.

Note

We recommend that you consult your authorized CHEVROLET retailer to clean or replace the filter.

Caution

More frequent maintenance of the A/C filter is required if the driving circumstances are dusty roads, air pollution areas, and frequent unpaved roads.

It makes the filter efficiency to be decreased.

Air Conditioning Regular Operation

In order to ensure continuously efficient performance, cooling must be operated for a few minutes once a month, irrespective of the weather and time of year. Operation with cooling is not possible when outside temperature is low.

Service

For optimal cooling performance, it is recommended to annually check the climate control system.

- Functionality and pressure test
- Heating functionality
- Leakage check
- Check of drive belts
- Cleaning of condenser and evaporator drainage
- Performance check

Caution

Use only correct refrigerant.

Warning

Climate control systems are serviced by qualified personnel only. Improper service methods may cause personal injury.

DRIVING AND OPERATING

Driving Notes	83
Vehicle Control	83
Emergency Actions	83
Starting and Operating	86
New Vehicle Running-In Period	86
Ignition Switch Positions	86
Immobilizer Operation.....	87
Start the Engine	88
Parking	88
Manual Transmission	89
Brakes	89
Anti-Lock Braking System*	90
Parking Brake	91
Fuel	92
Fuel Recommendations	92
Filling the Tank	93
Engine Exhaust	95
Catalytic Converter	96

DRIVING NOTES

Vehicle Control

Do not coast the vehicle when the engine is not running.

Otherwise many systems (e.g. brake booster, power steering) will not work. Driving in this way is dangerous to yourself and others.

Pedals

Mats must not be placed in the pedal area. This may obstruct the pedal travel.

Emergency Actions

Caution

- Do not operate starter motor for more than 10 seconds at a time.
 - If the engine does not start, wait 10 seconds before trying again.
- This will prevent starter motor damage and battery discharge.

Puncture during driving

When driving, turn on the hazard flashers if a tire is punctured. Hold the steering wheel firmly, lift your foot off the accelerator pedal, and slow the vehicle gradually. Press the brake pedal gently and drive the car into a safe area to change the tire.

Warning

Do not brake suddenly when a tire is punctured. Sudden braking may cause the vehicle to swing to one side and cause accidents.

Faults during driving

When a fault occurs while driving, turn on the hazard flashers. Park the vehicle in a safe area at the roadside.

A warning triangle should be placed behind the vehicle at a distance of 50 m during the day or 100 m at night.

A warning triangle is stored in the rear compartment at the time of vehicle delivery.

Consult your CHEVROLET retailer for inspection and repair.

Caution

Continuing to drive a vehicle with problems may cause accidents.

If the engine does not start

If the ignition switch is in the START position but the starter motor does not work, check the battery for charge, battery terminals are connected properly and concern fuse is blown out.

If the starter motor works but the engine does not start, check the oil level, the fuel filter, the fuel pump, the associated wiring, etc.

The fuel pump can be checked by listening to the sound when the ignition switch is turned ON.

Measures to be taken when the engine is over heated

While driving, if a sudden drop in power or the temperature warning light comes on, park the vehicle in a safe place and take the following measures.

- Run the engine at idle and then move the gear shift lever into neutral.
- Apply the parking brake.
- Turn off the air conditioning.
- Open the hood to ventilate the engine compartment.

⚠ Warning

If steam or coolant escapes from the engine, do not open the hood, otherwise you may be scalded by the steam or coolant.

- If the coolant level does not drop while the engine is idling, switch off the engine to let it cool down.

If the cooling fan does not work, switch off the engine to let it cool down.

- If the coolant level is too low, open the cap and fill the coolant tank with coolant very slowly.

Caution

Sudden filling of coolant into an over heated engine will damage the engine.

Caution

Do not open the coolant cap when the engine is hot else steam or coolant will escape and scald your face or body. Wait until the engine is completely cooled before opening the coolant cap.

Cover the coolant cap with a cloth, open it a little (1/2 turn) at first, and do not open it completely until the pressure inside has been released.

- After taking temporary measures, seek assistance from your CHEVROLET retailer for inspection and necessary repairs.

In case of fire

A fire might be caused by unauthorized changes to the electrical and fuel system or by accidents. Keep a fire extinguisher inside your vehicle.

No fire extinguisher is provided at the time of vehicle delivery.

 Warning

The fire will soon spread to other parts of the car as the vehicle contains many combustible materials such as various oils, fibers, and plastics.

All passengers should immediately exit the vehicle and reach to a safe area.

Do not change the electrical or fuel systems without authorization, or a fire might be caused.

Use in the snow

- Slow down when turning a corner, driving uphill or crossing a bridge.
- Do not park the car on a hard verge or it may obstruct the snow clearing work.
- Keep a safe distance from other cars; avoid unnecessary braking.

- Frequent cleaning of the snow surrounding the vehicle can protect the exhaust pipe from being blocked.


STARTING AND OPERATING

New Vehicle Running-In Period

Use the following precautions for the first few hundred kilometers to improve the performance and economy of your vehicle and add to its long life:

- Avoid full-throttle starts.
- Allow the engine to warm up before driving.
- Do not race the engine.
- Avoid hard stops except in emergencies. This will allow your brakes to break-in properly.
- Avoid quick starts, sudden accelerations, and prolonged high-speed driving in order to avoid damage to the engine and to conserve fuel.
- Avoid full-throttle acceleration in low gear.
- Do not tow any other vehicle.

Ignition Switch Positions

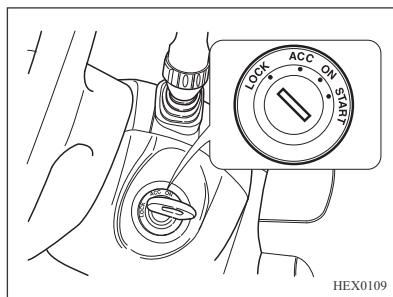

Located to the right side of steering column, the ignition switch has the following positions: LOCK, ACC, ON, and START.

• LOCK

To lock the steering wheel, remove the key and turn the steering wheel clockwise until it is locked.

In order to operate the key while unlocking the steering wheel, turn the steering wheel from left to right gently and then turn the key to the ACC position.

• ACC/ACCESSORY

Turning the ignition key to the position ACC/ACCESSORY will turn off the engine without locking the steering wheel. To turn the ignition key from the position ACC/ACCESSORY to LOCK, gently press the key and turn it to the position LOCK.

When the ignition key is in the position ACC/ACCESSORY, some electrical accessories such as the audio system and cigarette lighter can be used.

Caution

Do not leave the key in the ACC/ACCESSORY position for a long time.

Otherwise it will discharge the battery.

- **ON**

Start ignition system and electrical accessories.

Caution
When the engine is not running, do not leave the key in the ON position for a long time. Otherwise it will discharge the battery.

- **START**

Start the engine. Then release the key and it will automatically return to the ON position.

Make sure that the engine is not running before turning the ignition key to the START position.

Caution
When driving, do not turn the key to the OFF position. Otherwise the driver will lose control over the car and the brake booster will not function properly, which will lead to vehicle damage and injury.

Caution
Do not operate the key through the steering wheel. Otherwise the steering wheel may turn suddenly, causing the driver to lose control over the vehicle and lead to vehicle damage and injury.

Immobilizer Operation

The immobilizer system provides an additional theft deterrent to your vehicle in which it is installed and prevents it from being started by unauthorised persons. The valid key for a vehicle equipped with immobilizer system is an ignition key with integrated transponder, which is electronically coded. The transponder is placed invisibly in the ignition key.

Only valid ignition keys can be used to start the engine.

Invalid keys may only open the doors.

The engine is automatically immobilized after the key is turned to LOCK and has been removed from the ignition switch.

Start the Engine

Before starting the engine:

- Make sure there are no obstacles around the vehicle.
- Make sure that all windows and lights are clean and transparent.
- Check the tire condition, inflation pressure and look for foreign objects.
- Adjust the head restraint to the appropriate position.
- Adjust the interior rear view mirror and exterior rear view mirrors.
- Fasten the safety belt correctly and make sure that all passengers fasten their belts.
- When the key is turned to the ON position, check that the warning lights and indicators on the instrument panel work.
- Check maintenance items recorded in this Manual regularly (for example when the vehicle is being refueled).

Caution

Do not keep the starter motor running for more than 10 seconds.
If the engine does not start, please wait for 10 seconds and try again.
This can prevent damages to the starter motor and battery discharge.

Caution

- Do not idle the engine at high rpm for more than 3 minutes.
Excessive temperature can damage the exhaust system / catalytic converter.


Parking

- Do not park the car on a flammable base.
- When using the parking brake, do not press the release button. Apply the parking brake firmly when the vehicle is parked on an upward or a downward slope, and meanwhile depress the foot brake to reduce the force applied.
- Turn off the engine and ignition switch. Turn the steering wheel clockwise until the steering wheel is locked.

For vehicles equipped with manual transmission:

1. When the car is parked on level ground, place the shift lever in the neutral position.
2. When the car is parked on a downward slope, place the shift lever in the reverse position.
3. When the car is parked on an upward slope, put the shift lever into first gear.

MANUAL TRANSMISSION

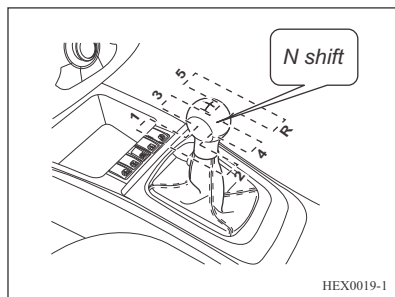

To change gears, fully depress the clutch pedal, move the gearshift lever into gear, and slowly release the clutch pedal.

If the gear does not engage, set the lever in neutral, release the clutch pedal and depress again; then repeat gear selection.

Do not grind the clutch unnecessarily. When operating, depress the clutch pedal completely. Do not use the pedal as a footrest.

Caution

It is inadvisable to drive with hand resting on the shift lever.

Caution

Shifting to R (Reverse) while the vehicle is moving forward could damage the transmission. The repairs would not be covered by the vehicle warranty. Shift to R (Reverse) only after the vehicle is stopped.

BRAKES

The braking system is designed to brake the vehicle under any conditions.

There are disc brakes for the front wheels and drum brakes for rear wheels. A dual-circuit brake system is used.

If one brake circuit is ineffective, the other circuit can still be used to stop the vehicle but the braking distance will increase and depressing the brake pedal will also require a greater force.

Caution

If one of the brake circuit fails, depressing the brake pedal will be difficult and the braking distance will also increase. Contact your CHEVROLET retailer to check and repair the braking system.

An increase in brake pedal travel indicates that the brakes may need repair. Consult your CHEVROLET retailer.

Caution

Do not put your foot on brake pedal during driving. Otherwise the wear on the brake components will be accelerated.

Also the brakes will overheat so that the braking distance is increased and safety is reduced.

Caution

The brake may temporarily lose function after the car has driven through water or has been washed, or when the brake is overused while the car is driving down a long steep slope. This may be due to the brakes are wet or overheated.

If the brakes temporarily lose its function because of overheating:

Shift to a lower gear when driving downhill.

Take the following steps if the brakes temporarily lose function due to wet components:

1. Check whether there is any vehicle following.
2. Maintain a safe speed, make sure that there is enough space behind and to both sides of your vehicle.
3. Depress the brake carefully until performance returns to normal.

Anti-lock Braking System*

Your vehicle may be equipped with this function.

The Anti-lock Braking System is an advanced electronic brake system which helps to prevent slip and skidding. This system can help to bypass obstacles when braking suddenly and provide maximum braking force on slippery roads.

The ABS warning light will light momentarily when the ignition switch is turned ON. If the ABS warning light stays on or lights during driving, it indicates a problem with the ABS.

Consult your CHEVROLET retailer for necessary repair. See ABS Warning Light on page 57.

The ABS system will monitor the speed of each wheel during the braking process. If one wheel has a tendency to lock up, the system will control the front and rear wheel brakes separately. The brake pedal will usually vibrate slightly with some noise when ABS is working.

Caution

ABS will not change the time needed for braking, neither it will necessarily shorten the braking distance. Even if ABS is equipped, an adequate braking distance should be maintained.

Faults

Warning

If there is a fault in the ABS, the wheels may be liable to lock due to braking that is heavier than normal. The advantages of ABS are no longer available. During hard braking, the vehicle can no longer be steered and may swerve.

Have the cause of the fault remedied by a CHEVROLET retailer.


Using ABS

Do not pump the brakes. Just hold the brake pedal down firmly and let ABS work. You might hear the ABS pump or motor operating and feel the brake pedal pulsate, but this is normal.

Braking in Emergencies

ABS allows the driver to steer and brake at the same time. In many emergencies, steering can help more than even the very best braking.

Parking Brake

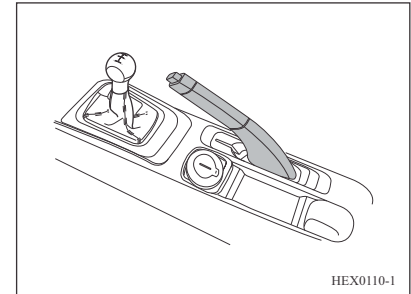

The parking brake acts on the rear wheels.

The parking brake lever is positioned between the front seats.

When using the parking brake, stop the vehicle, depress the brake pedal and pull the parking brake lever.

To release the parking brake, depress the brake pedal, and

1. Pull the parking brake lever slightly.
2. Push the button at the end of the brake lever.
3. Lower the brake lever while pressing the button.

Warning

If the parking brake is not set properly, the vehicle may move suddenly. See your CHEVROLET retailer if an adjustment is required.

Caution

Do not drive with the parking brake on.

This can cause your rear brakes to overheat or wear out prematurely. You may have to replace them, and you could damage other parts of your vehicle.

Caution

Do not park or operate your vehicle over combustible materials.

They could touch hot exhaust parts under your vehicle and ignite.

FUEL

Fuel Recommendations

Only use unleaded petrol 91 or higher octane rating fuel. The use of low octane petrol may reduce the engine power and torque, while increasing fuel consumption.

Caution

The use of incorrect grade of fuel or filling in the fuel tank with incorrect fuel will cause serious damage to the engine and catalytic converter.

Make sure you use the correct fuel that is compatible with your vehicle.

For safety purposes, the fuel tank, pumps and piping must be suitably grounded. Static electricity can ignite fuel vapours. You may be burned and the vehicle will be damaged.

Caution

The usage of low octane fuel can result in uncontrolled combustion and engine damage. The vehicle is designed to exclude the use of methanol fuel which will corrode the metal parts in the fuel system and damage plastic and rubber parts. Therefore damage caused by using methanol fuel is not covered by the warranty.

Fuel with excessive levels of manganese and iron may result in blockage of the three-way catalytic converter, failure of spark plugs and other problems.

⚠ Danger

Before adding fuel, switch off the engine and any external combustion heating device.

Turn off cell phones. When adding fuel, observe the operation and safety instructions of the fuel station.

⚠ Danger

Fuel is a flammable and explosive material.

No smoking. No open flames or sparks.

If you can smell fuel in your vehicle, have the cause of this remedied immediately by a CHEVROLET retailer.

Do not use methanol

Fuel containing methanol must not be used in this vehicle. This type of fuel will degrade the vehicle performance and damage the parts in fuel system.

Caution


The use of methanol will result in damage to the fuel system.

Therefore damage caused by using methanol fuel is not within the scope of warranty.

Driving in other countries

When driving your vehicle in other countries:


- Comply with all the registration and insurance regulations.
- Make sure that correct fuel is available.

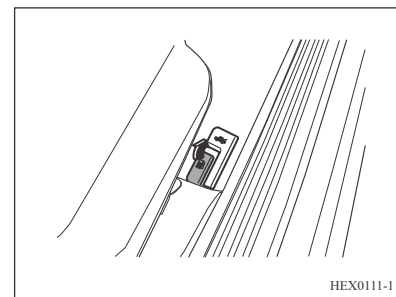Filling the Tank

1. Switch off the engine.
2. Pull the release lever for the fuel filler cap, which is mounted on the floor on right side of the driver seat.

Note

If the fuel filler door does not open in cold weather, tap the door lightly. Then try to open it again.

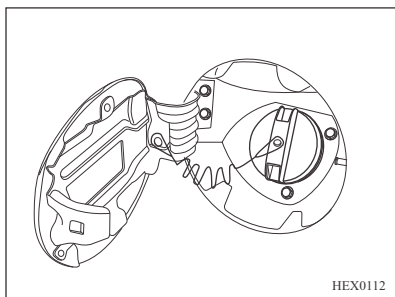

3. Turn the fuel filler cap counter-clockwise. If there is a hissing sound, wait until it stops before unscrewing the cap. The fuel filler door is in the left rear quarter panel.
4. Open the cap. The cap is tethered to the vehicle.

Danger

If you can smell fuel in your vehicle, have the cause of this remedied immediately by a CHEVROLET retailer.

Caution

Fuel vapor is highly flammable. Make sure that fuel is kept away from sparks, flames and other hot materials

Switch off the engine.

Ignition of fuel vapor will result in serious burns to people and damage to your vehicle.

5. After refueling, replace cap. Turn it clockwise until you hear several clicks.
6. Push the fuel filler door closed until it latches.

Caution

Avoid fuel splashes on the painted surface of vehicle.

In case of splashes on the vehicle, rinse the parts with clean cold water immediately.

Otherwise the fuel will damage the paint.

Danger

Before refueling, switch off engine and any external heaters with combustion chambers. Switch off any mobile phone.

Vaporised fuel can be ignited by electromagnetic waves or electric current of mobile phone.

Fuel is flammable and explosive. No smoking. No naked flames or sparks. Follow the operating and safety instructions of the filling station when refueling.

Remove static electricity on your hands by touching something able to release static electricity when touching or opening fuel cap or refueling nozzle.

Caution

Wipe off any overflowing fuel immediately.

ENGINE EXHAUST

Danger

Engine exhaust gases contain poisonous carbon monoxide, which is colourless and odourless and could be fatal if inhaled.

If exhaust gases enter the interior of the vehicle, open the windows. Have the cause of the fault rectified by a CHEVROLET retailer.

Avoid driving with an open load compartment, otherwise exhaust gases could enter the vehicle.

Warning

Engine exhaust contains carbon monoxide (CO) which cannot be seen or smelled. Exposure to CO can cause unconsciousness and even death.

Exhaust may enter the vehicle if:

- The vehicle idles in areas with poor ventilation (parking garages, tunnels, deep snow that may block underbody airflow or tail pipes).
- The exhaust smells or sounds strange or different.
- The exhaust system leaks due to corrosion or damage.
- The vehicle exhaust system has been modified, damaged or improperly repaired.

(Continued)

Warning (Continued)

- There are holes or openings in the vehicle body from damage or aftermarket modifications that are not completely sealed.

If unusual fumes are detected or if it is suspected that exhaust is coming into the vehicle:

- Drive it only with the windows completely down.
- Have the vehicle repaired immediately.

Never park the vehicle with the engine running in an enclosed area such as a garage or a building that has no fresh air ventilation.

Catalytic Converter

The catalytic converter reduces the amount of harmful substances in the exhaust gas.

Caution

The usage of fuel other than those mentioned on pages Fuel Recommendations on page 92, could damage the catalytic converter or electronic components.

Unburnt petrol will overheat and damage the catalytic converter. Therefore avoid excessive use of the starter, running the fuel tank dry and starting the engine by pushing or towing.

In the event of misfiring, uneven engine running, a reduction in engine performance or other unusual problems, have the cause of the fault rectified by a CHEVROLET retailer as soon as possible.

In an emergency, driving can be continued for a short period, keeping vehicle speed and engine speed low.

Caution

Don't touch the catalytic converter during engine operating and it can be possible to touch the catalytic converter after cooling down the catalytic converter because the catalytic converter is very hot so the skin (i.e. hand or body) can be burned: cooling down condition-cool down over two hours under ambient temperature after engine stop.

VEHICLE MAINTENANCE

General Information	98	Drive Belt	110	Dome Light	121
Accessories and Modifications	98	Battery	110	Rear Cargo Area Light*	121
Vehicle Storage	98	Cleaning Battery Terminals	110	Bulb Specifications	122
Radio Frequency Identification		Battery Maintenance	111	Wheels and Tires	123
(RFID) Tag*	99	Brake Pedal	112	Maintenance	123
Driver's Checklist	99	Checking the Brake Pedal		Integrated Tread Wear	
Exterior	99	Free Play	112	Indicator	124
Interior	99	Parking Brake	112	Tire Rotation	125
Engine Compartment Overview ..	100	Checking the Parking Brake		Winter Tires	125
Engine Oil	101	Travel	112	Spare Wheel, Jack and Tools ...	126
Check the Engine Oil Level	101	Fuses	113	Jump Starting the Engine	129
Replace Engine Oil and		Fuse Blocks	114	Towing the Vehicle	132
Oil Filter	103	Passenger Compartment		Emergency Towing	133
Coolant	104	Fuse Block	115	Front Towing Hook	134
Brake Fluid	105	Engine Compartment		Towing Hook for Shipping	135
Adding Brake Fluid	106	Fuse Block	116	Rocking Your Vehicle	135
Transmission Fluid	107	Bulb Replacement	117	Vehicle Maintenance	136
Check the Transmission Fluid		Headlights	117	Cleaners	136
for Leakage	107	Parking Lights	118	Interior Maintenance and	
Power Steering Fluid	107	Front Turn Signal Lights	118	Cleaning	137
Check the Power Steering Fluid		Front Fog Lights*	119	Maintenance of Safety Belts	138
Level	107	Side Turn Signal Lights	119	Glass Surface	138
Adding Power Steering Fluid ..	107	Reverse Lights, Tail Lights,		Exterior Maintenance and	
Windshield Washer Fluid	108	Stoplights, Rear Turn		Cleaning	139
Windshield Wipers	109	Signal Lights	119	Preventing Corrosion	140
Replacing Wiper Blades	109	Central High-Mounted		Service and Maintenance	141
Air Filter	110	Stoplight	120	General Information	141
Cleaning the Air Filter	110	License-Plate Light	121	Scheduled Maintenance	142

GENERAL INFORMATION

Accessories and Modifications

We recommend to use genuine parts and accessories and factory approved parts specific for your vehicle type. We cannot assess or guarantee reliability of other products - even if they have a regulatory or otherwise granted approval.

Do not make any modifications to the electrical system e.g. changes of electronic control units (chip turning).

Caution
Never modify your vehicle. It may affect the performance, durability and safety of the vehicle and the warranty may not cover any problems caused by the modification.

Vehicle Storage

Storage for a long period of time

If the vehicle is to be stored for several months:

- Wash and wax the vehicle.
- Have the wax in the engine compartment and underbody checked.
- Clean and preserve rubber seals.
- Change engine oil.
- Drain washer fluid reservoir.
- Check coolant anti-freeze and corrosion protection.
- Adjust tire pressure to the value specified for full load.
- Park the vehicle in a dry, well ventilated place. For manual transmission, engage first or reverse gear. Prevent the vehicle from rolling.
- Do not apply the parking brake.

- Open the hood, close all doors and lock the vehicle.
- Disconnect the clamp from the negative terminal of the vehicle battery.
- Close the hood.

Putting back into operation

When the vehicle is to be put back into operation:

- Connect the clamp to the negative terminal of the vehicle battery. Activate the electronics of the power windows.
- Check tire pressure.
- Fill up the washer fluid reservoir.
- Check the engine oil level.
- Check the coolant level.
- Fit the number plate if necessary.

Radio Frequency Identification (RFID) Tag *

This vehicle is equipped with Radio Frequency Identification (RFID) tag*, which can be used for Electronic Toll Collection (ETC) or any other applications as decided by the Regulatory authority from time to time. The RFID tag is located on inside the windshield. Data for necessary applications will be added by the agency authorized by the Regulatory authority, from time to time. Take proper care during washing or cleaning of windshield so as to avoid any damage to the RFID tag. In case of any damage or malfunction of RFID tag, or in case of windshield replacement, contact your CHEVROLET retailer or agency authorized by the Regulatory authority for the installation of new RFID tag.

Caution

Do not place any sticker or other metallic components over the RFID tag neither from inside nor from outside of the windshield. Avoid exposure to chemicals or liquid solvents. This will impair the function of RFID tag. The RFID tag is tamperproof and will not function once removed from windshield.

DRIVER'S CHECKLIST

Regularly check the interior, exterior and engine compartment of the vehicle to ensure safety and reliability.

Exterior

Tires

- Inflate the tires correctly. See Wheels and Tires on page 123.
- The tire walls and treads must be free from cracks.
- The tread pattern must not contain any foreign bodies.

Lights

- Check the parking lights, headlights, tail lights, turn signals, brake lights, reverse lights and fog lights (if equipped) are working properly.

Oil and fluid

- Check the fluid level of all reservoirs under the hood is correct.

Windshield wipers

- Check the conditions of wiper arms and blades (including the rear wipers, if equipped).

Interior

Turning

- Check whether the steering wheel is too loose (free play).

Parking brake

- Ensure the parking brake lever has the correct travel.

Instrument panel

- Check whether all the instruments, controls and warning lights on the instrument panel work properly.

Rear view mirrors


- Ensure all three rear view mirrors are clean and in good condition.
- Check all the rear view mirrors can be adjusted.

Controls

- Check the travel of the brake pedal and clutch pedal is correct.

ENGINE COMPARTMENT OVERVIEW

1.2L Petrol Engine (LC5)

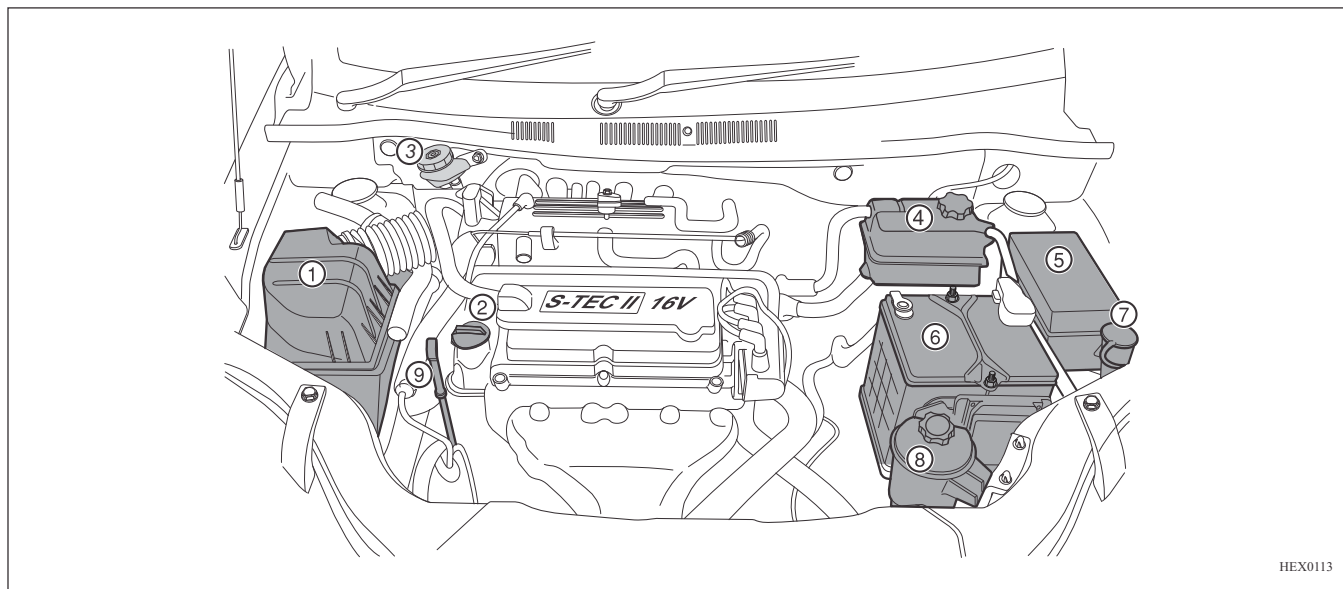

1. Air filter

2. Engine oil filler cap

3. Brake fluid reservoir

4. Coolant reservoir

5. Fuse and relay block

6. Battery

7. Windshield washer fluid reservoir

8. Power steering fluid reservoir

9. Engine oil dipstick

ENGINE OIL

Engine oil must be kept at correct levels to ensure proper lubrication of the engine.


It is normal for an engine to consume some oil.

Check the oil level at regular intervals, such as when refueling.

If the engine oil pressure light  on the instrument panel comes on, it means you should check the oil level immediately.

Check the Engine Oil Level

1. Park the vehicle on level ground.
2. Stop the engine and wait a few minutes for the oil to drain back into the oil pan. If the engine is cold, it will take longer for the oil to drain back into the oil pan.
3. Remove the dipstick and wipe it clean.
4. Reinsert the dipstick completely.
5. Remove the dipstick again.

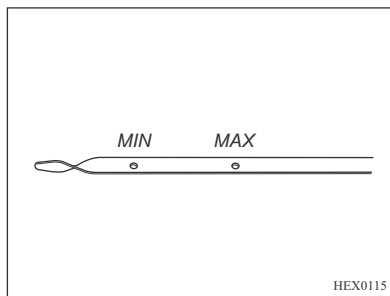

6. Check the oil level on the dipstick. Make sure the oil is not contaminated.
7. Check the oil level by using the oil dipstick. The level should be between the MIN and MAX limits.
8. Add engine oil of the same grade as recommended, if the level is below the lower limit. Bring the level up to but not above the upper limit.

The engine oil filler cap is located on the cylinder head cover. See the Engine Compartment Overview on page 100.

Warning

Engine oil is irritant and, if ingested, can cause illness or death.

Keep out of reach of children.

Avoid repeated or prolonged contact with skin.

Wash exposed areas with soap and water or hand cleaner.


Caution

Overfilling the engine with oil may affect the operation of engine.

The upper limit mark on the dipstick must not be exceeded.

Overfilling may damage the vehicle, because:

- The engine oil consumption will be increased.
- Overflow onto spark plug.
- Excessive carbon accumulation on the engine.

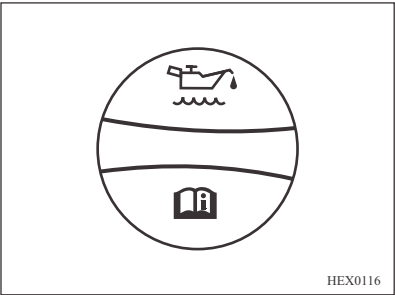


Choosing the Right Oil Quality

Caution

Use of unauthorized or low quality engine oil could damage the engine.

Be sure the engine oil you use has the API SM GF4 rating.

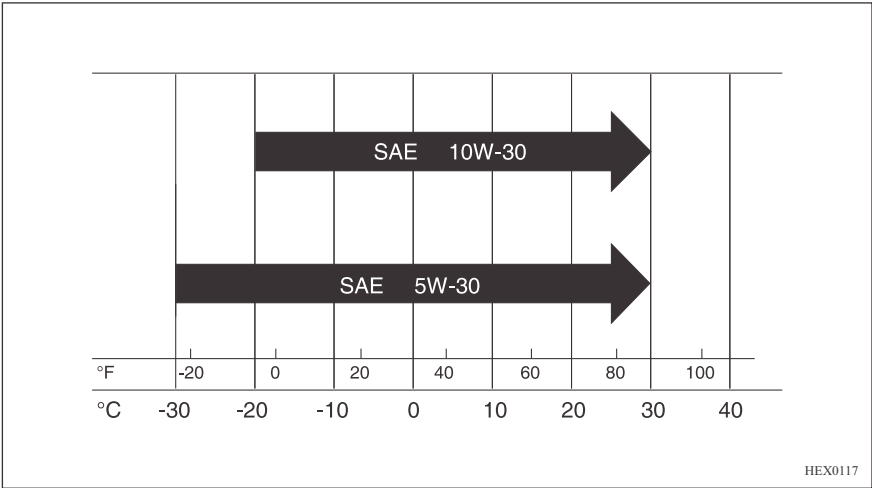

Choosing the Right Oil Viscosity

SAE 5W-30 is the recommended engine oil for your vehicle.

When choosing an oil, consider the range of temperature your vehicle will be operated in before the next oil change. Then, select the recommended oil viscosity from the chart.

Do not switch to a different viscosity in the event of brief temperature change.

Caution

Using engine oils of a viscosity other than recommended could result in engine damage and repair not covered under warranty.

Engine Oil Additives/Engine Oil Flushes

Do not add anything to the oil. The use of engine oil additives could cause engine damage not covered by the vehicle warranty. Engine oil system flushes are not recommended and could cause engine damage not covered by the vehicle warranty.

Replace Engine Oil and Oil Filter

Caution

This job requires special skills, tools and equipment.

Be sure you are competent for this job before attempting to complete it.

If you are not confident, you must have the work done by your CHEVROLET retailer.

Otherwise, you could be injured or your vehicle could be damaged.

Engine oil loses its ability to lubricate when contaminated. Make sure you change your engine oil according to the maintenance schedule.

Make sure you replace the engine oil filter each time you change the engine oil.

Under severe conditions, you must change the oil and filter more frequently than is recommended in the standard maintenance schedule.

Severe conditions include, but are not limited to:

- Frequent cold starting.
- Frequent driving in stop and go traffic.
- Frequent short trips.
- Frequent driving when the outside temperature remains below freezing.
- Prolonged idling.
- Frequent low-speed driving.
- Driving in dusty areas.

Caution

Use of unauthorized or low quality engine oil or chemical engine treatments (additives) can damage the engine and void your vehicle warranty.

Warning

Engine oil and its containers can be hazardous to your health.

Avoid repeated or prolonged contact with engine oil.

Clean your skin and nails with soap and water, or hand cleaner after handling engine oil. Also keep this and other toxic materials out of the reach of children.

Engine oil can irritate the skin and can cause illness and even death if swallowed.

Caution

Do not dispose of used engine oil and filter with your household waste.

See your local, authorized waste management facility.

Used engine oil and filter contain harmful elements that may be unhealthy to you and threat to the environment.

COOLANT

Your vehicle cooling system is filled with ethylene glycol based long life coolant.

In the correct mixture, this coolant provides the cooling and heating system with excellent protection against corrosion and freezing.

When the engine is cool, the coolant level should be between the MIN and MAX mark on the coolant reservoir. The level of coolant rises as the engine warms and drops back as the engine cools.


Caution

Plain water or the wrong mixture can damage the cooling system.

Do not use plain water, alcohol or methanol antifreeze in coolant system.

Use only General Motors India Pvt. Ltd. recommended coolant available with your CHEVROLET retailer.

The engine may overheat or even catch fire.

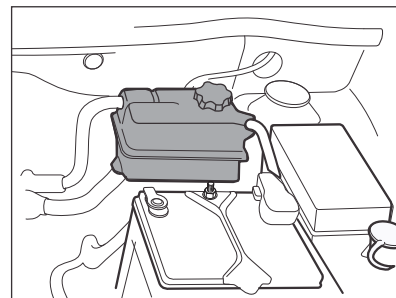

If the coolant level falls below the MIN mark, refill the reservoir with General Motors India Pvt. Ltd. recommended coolant available with your CHEVROLET retailer, but only when the engine is cool.

In order to protect your vehicle in extremely cold weather, use GMI approved coolant.

Caution

In cold weather, water can freeze and crack the engine, radiator, heater core and other parts. Use the recommended coolant and the proper coolant mixture.

⚠ Warning

Scalding hot coolant and steam could be blown out under pressure, which could cause serious injury.
Never remove the coolant reservoir cap when the engine and radiator are hot.

Caution

It is not needed to add coolant more frequently than the recommended interval. If you are adding coolant often, this may be a sign that your engine needs maintenance.
Contact your CHEVROLET retailer for a check of the cooling system.

⚠ Warning

You can be burned if you spill coolant on hot engine parts. Coolant contains ethylene glycol and it will burn if the engine parts are hot enough. Do not spill coolant on a hot engine.

Caution

Coolant can be hazardous material.
Avoid repeated or prolonged contact with coolant.
Clean your skin and nails with soap and water after coming in contact with coolant.
Keep coolant out of reach of children.
Coolant can irritate the skin and can cause illness or death if swallowed.

Caution

If an improper coolant mixture or extra inhibitors and/or additives is used, the engine could overheat and be badly damaged. The repair cost would not be covered by the vehicle warranty. Too much water in the mixture can freeze and crack the engine, radiator, heater core, and other parts.

BRAKE FLUID


The brake fluid can absorb moisture. Too much water in the fluid will reduce the efficiency of the brake system. Corrosion in the hydraulic system can be prevented by changing the fluid in accordance with the instructions in this Manual.

Use only recommended brake fluid. Keep reservoir filled to the proper level. Do not allow the level to fall below MIN mark or to raise beyond the MAX mark.

A low fluid level in the brake fluid reservoir can be either an indication of a leak in the brake system or a normal indication caused by usual brake pad/lining wear. Consult your CHEVROLET retailer to determine if the system needs repair and add fluid after work is done on your hydraulic brake system if it is required.

If the brake fluid level is low, the brake system warning light (ⓘ) will come on. See Warning Light for Brake System on page 59.

Adding Brake Fluid

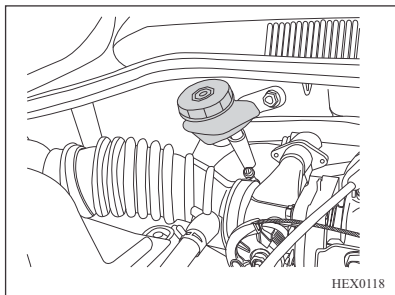

1. Thoroughly wipe and clean the area around the filler cap.

Caution

Make sure the area near the filler cap of brake reservoir is thoroughly cleaned before removing the cap.

Contaminated brake fluid can affect performance and lead to costly repairs.

2. Remove the cap.
3. Add enough recommended brake fluid to bring the level up to the MAX mark. Be careful not to spill brake fluid on the painted surfaces of the vehicle. If you do, wash it off with cold water immediately.

Caution

Brake fluid can catch fire if spilt on the engine.

Wipe off the top of the reservoir.

If the engine catches fire, it could cause personal injuries and damage to your vehicle and other property.

4. Refit the cap.

Caution

Do not dispose of used brake fluid with your household waste.

Use your local, authorized waste management facility.

Used brake fluid and their containers are hazardous. They can damage your health and the environment.

Caution

The brake fluid is irritative to skin and eyes.

Do not let brake fluid touch your skin or eyes. If you do get it in your eyes or on your skin, wash the affected area thoroughly with soap and water or hand cleaner.

TRANSMISSION FLUID

Check the Transmission Fluid for Leakage

This job requires special skills and equipment. In order to prevent personal injury or vehicle damage, we suggest you to have this work done at your CHEVROLET retailer.

Note

Use of the incorrect fluid may damage the vehicle. Always use the fluid listed in Fluid Chart on page 148.

POWER STEERING FLUID

Check the Power Steering Fluid Level

Check the power steering fluid level regularly.

The power steering fluid reservoir is located next to the battery.

Caution


Do not operate vehicle without the required amount of power steering fluid.

Doing so can damage power steering system of your vehicle, leading to costly repairs.

1. Switch off the engine.
2. Check the fluid level in the reservoir. The level should be between the MIN and MAX marks.

If the fluid is below the MIN mark, fluid should be added according to the instructions in this Manual.

Adding Power Steering Fluid

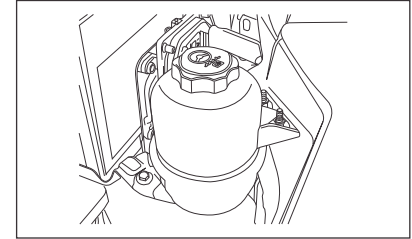

1. Wipe and clean the cap and top surface.
2. Remove the cap.
3. Add power steering fluid. The fluid level should be kept between the MIN and MAX marks.
4. Refit the cap.


Warning

An overflow of the fluid may cause the fluid to burn or discolor paintwork.

Do not overfill the reservoir.

An engine fire can cause personal injuries and damage your vehicle and other property.

WINDSHIELD WASHER FLUID

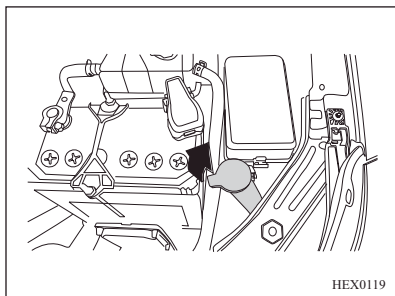

Before you drive, make sure the windshield washer fluid reservoir is at the appropriate level and filled with the correct solution.

In cold weather, do not fill the windshield washer fluid reservoir more than three quarters full.

Washer fluid can freeze to expand in cold temperature. Filling the reservoir too much does not allow enough expansion room to prevent possible damage to the reservoir.

Caution

When adding windshield washer fluid:

It is recommended to use special ready-to-use washer fluid. If concentrated washer fluid is to be used, please add water to dilute the fluid according to instructions of the manufacturer.

Do not use plain water. The minerals or foreign substances in plain water can clog the pipes of the windshield washer.

If the air temperature is likely to fall below freezing, use windshield washer fluid which has sufficient anti-freeze properties.

Caution

Do not put water or radiator antifreeze in the windshield washer reservoir.

Water can make the solution freeze. A frozen solution could damage the windshield washer system.

The radiator antifreeze can damage your washer system and paint.

WINDSHIELD WIPERS

Keeping the windshield wipers working properly is necessary to ensure clear vision and safe driving.

Check the conditions of wiper blades regularly. Replace any wiper blade that is hard, vibrating, cracked or smeared with dirt.

The effectiveness of wipers will be reduced by foreign substances on the windshield and wiper blades. If the wiper blades are not wiping properly, clean the windshield glass and the blades with a good quality mild detergent and rinse thoroughly with water. Repeat the above procedures if necessary.

Stains of silicone resin on the glass cannot be removed. Therefore, do not apply window polisher containing silicone resin to the windshield glass.

Otherwise stripes will appear on the glass and the driver's vision will be affected.


Do not use solvents, gasoline, kerosene or paint thinners to wash the wipers. These substances are corrosive and could damage the wipers and painted surfaces.

Caution

Do not run the wiper blades on dry/dusty glass, always spray water from windshield nozzle before switching on wipers.

The effectiveness of wipers will be reduced by foreign substances on the windshield and wiper blades such as tree leaves, dust, sand, bird droppings etc. Clean the glass to remove foreign substances before using wipers.

Replacing Wiper Blades

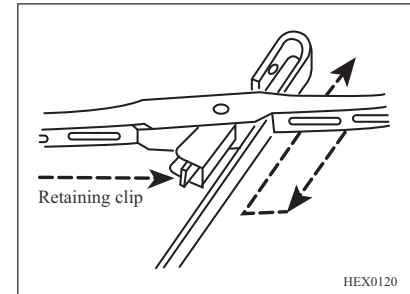

1. Press and hold the blade retaining clip.
2. Remove the wiper blade from the wiper arm.
3. Fit a new wiper blade onto the wiper arm.

AIR FILTER

Inspect and replace the filter regularly according to the maintenance schedule in this Manual.

Caution

The engine needs clean air to operate properly.

Do not operate your vehicle without the air cleaner element installed.

Driving without the air cleaner element properly installed can damage your engine.

Cleaning the Air Filter

If the air filter is too dirty, clean it by following steps:

1. Shake the filter to release loose dust and dirt.
2. Clean the inside of the housing.
3. Cover the housing with a damp cloth while cleaning the filter.
4. Clean the filter by blowing compressed air through it in the opposite direction to normal air flow.

DRIVE BELT

In order for the alternator, power steering pump and air conditioning compressor to function properly, the drive belt should be in good condition and should be adjusted properly.

Replace the drive belt if it is worn, cracked, or frayed.

Caution

The engine could be started unexpectedly if the key is left in the ignition.

Do not leave the key in the ignition while checking the drive belt.

Moving engine parts can cause serious injuries while the engine is running.

BATTERY

Your vehicle is equipped with a battery that requires no periodic maintenance.

Caution

Batteries contain acid that can burn you badly, cause explosions and damage painted surfaces.

Do not let battery fluid touch your skin or clothing.

Keep the battery away from flames, sparks and smoking materials.

Cleaning Battery Terminals

1. Turn off the ignition and remove the key.
2. Use a wrench to loosen and remove the battery cable clamps from the terminals. Always disconnect the battery negative (-) terminal first.
3. Use a wire brush or a terminal cleaning tool to clean the terminals.

- 4. Check the battery terminals for white or bluish powder which is a sign of corrosion.
- 5. Remove any corrosion with a solution of baking soda and water. The solution will bubble and turn brown.
- 6. When the bubbling stops, wash the solution off with plain water and dry the battery with a cloth or paper towel.
- 7. Reconnect and tighten the positive (+) terminal, then the negative (-) terminal. Always reconnect the negative terminal (-) last.
- 8. Coat the terminals with petroleum jelly to prevent corrosion.

Note

Always reconnect the positive (+) terminal first; always disconnect the negative (-) terminal first.

Caution
When reconnecting the cable to the battery, be careful to ensure the clamps are fully seated, and then tighten the retaining bolts so the clamps will not vibrate loose. Attach the red cable to the positive (+) battery terminal and the black cable to the negative (-) battery terminal. Connecting the battery cables to the wrong terminals can result in injury and damage to the vehicle and other property.

Caution
Batteries contain toxic materials. Used batteries are detrimental to health and environment Batteries do not belong in household waste. They must be disposed off at an appropriate recycling collection point.

Battery Maintenance

To extend the life of your vehicle battery, do the following:

- Keep the battery mounted securely.
- Keep the top of the battery clean and dry.
- Keep the terminals and connections clean, tight and coated with petroleum jelly.
- Immediately rinse off any spilt electrolyte using a solution of water and baking soda.
- If the vehicle is not going to be driven for an extended period of time, disconnect the cable from the negative (-) terminal of the battery.
- Charge the disconnected battery every six weeks.

Note

Remove battery from vehicle while charging & refilling.

⚠ Warning

Keep smoking materials away from the battery to avoid flames or sparks when the battery is checked because the explosive gas could be occurred.

If the battery explodes, it can be result in damages of your vehicle and serious injury or death.


Avoid skin contact with battery acid because it can damage by contained highly corrosive and toxic sulfuric acid.

If you accidentally get it on your skin, flush the place with water and get medical help immediately.

Keep batteries out of the reach of children because it contains sulfuric acid and gas.

Do not allow battery acid to contact your skin, eyes, clothing or paint.

Do not open and tilt the battery.

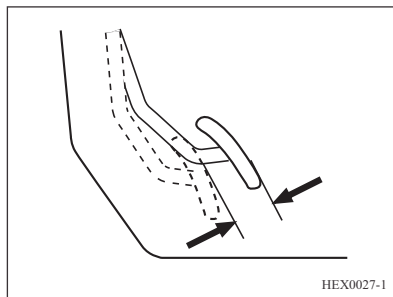BRAKE PEDAL**Checking the Brake Pedal Free Play****Brake pedal free play: 1-8 mm**

1. Switch off the engine.
2. Press the brake pedal several times to eliminate the vacuum in the brake system.
3. Press the brake pedal by hand and measure the distance the pedal moves until there is a slight resistance.
4. If the brake pedal free play differs from the specification in this Manual, consult your CHEVROLET retailer to adjust the brakes.


PARKING BRAKE**Checking the Parking Brake Travel****Parking brake travel:**

The parking brake lever travel must be 6 notches, with a force of approximately 150-170 N.

Check the parking brake travel by the following steps:

1. Switch off the engine.
2. Apply the parking brake and count the notch clicks. If the number of clicks or the force you feel you are applying differs from the above specification, consult your CHEVROLET retailer to adjust the parking brake.

FUSES

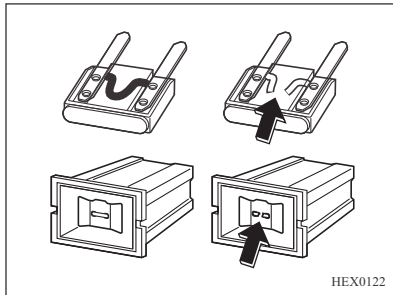

Replacing a fuse:

1. Open the fuse block cover.
2. Identify a defective fuse by its melted wire.
3. Use the fuse extractor to remove the blown fuse. The fuse extractor is located in the engine compartment fuse block.

Caution

Do not use a tool that can conduct electricity when removing a blown fuse. Only use a fuse extractor.

Using a conductor such as metal can cause a short circuit, damage the electrical system or start a fire. Serious injury could occur.

4. Identify the reason for the fuse blowing and solve the problem.
5. Replace the fuse with a new one of the correct rating. See the layout of fuse blocks later in this section.

Caution


Using a fuse substitute or a fuse of the wrong type or rating can damage the electrical system or even start a fire.

Be sure to use fuses of the correct size and rating. Otherwise personal injuries and damage to your vehicle and other property could be caused.

Fuse Blocks


Passenger compartment fuse block

- The passenger compartment fuse block is located behind the storage box on the right side of the instrument panel, and is visible after removal of the storage box.

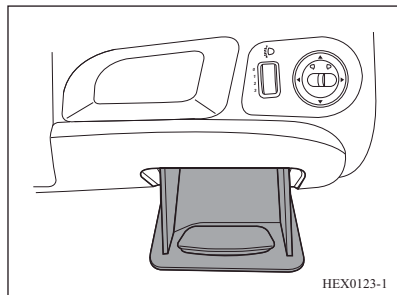

Engine compartment fuse block


- The engine compartment fuse block is located next to the coolant reservoir.

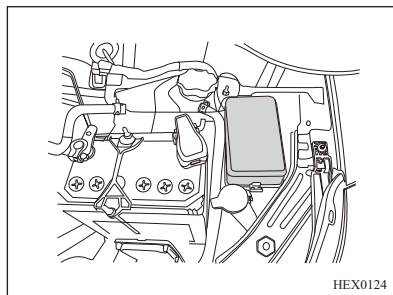


Caution

Spilling liquid on any electrical component on the vehicle may damage it. Always keep the covers on any electrical component.

Passenger Compartment Fuse Block

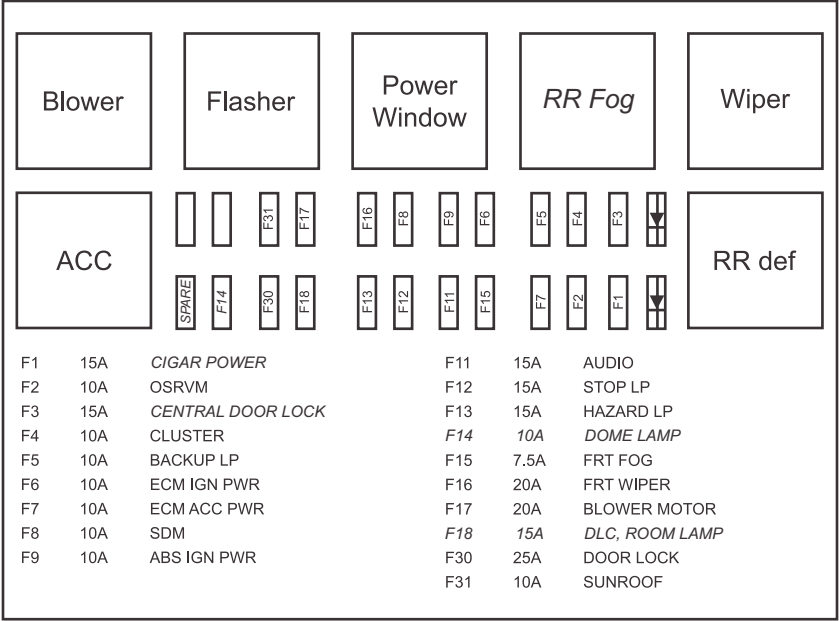

Engine Compartment Fuse Block

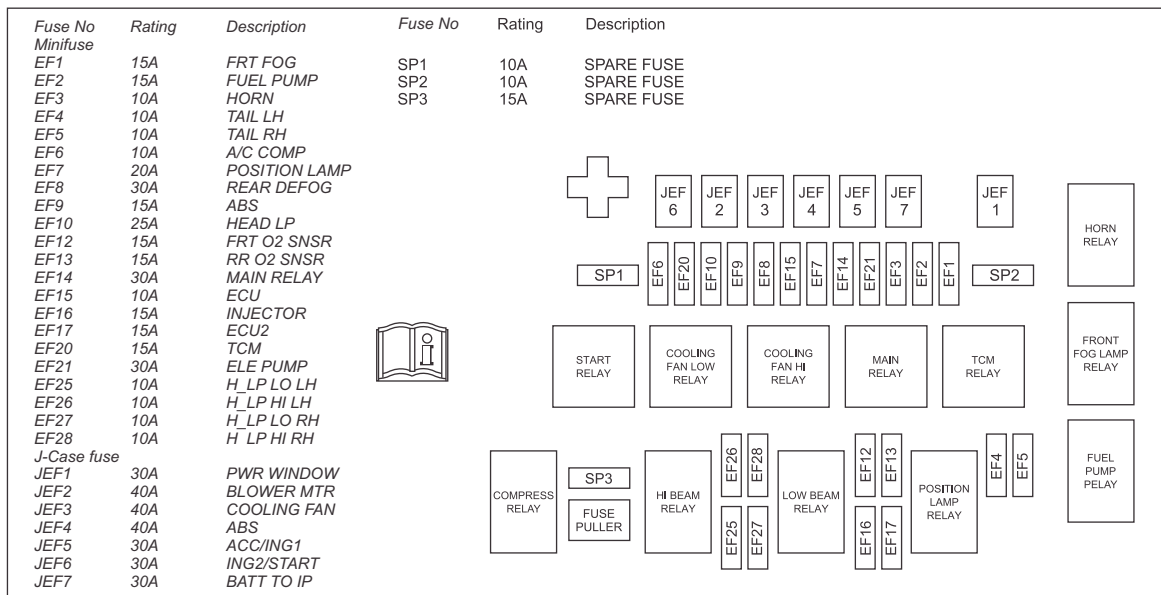

BULB REPLACEMENT


Caution

Halogen bulbs contain pressurized gas. Always handle halogen bulbs with care and dispose off them properly.

- Wear eye protection during handling of bulb.
- Protect the bulb to avoid abrasion and scratches.
- When the bulb is illuminated and not in a sealed installation, protect it from contact with liquids.
- Only illuminate the bulb when it is installed in a lamp.
- Replace any headlight that is cracked or damaged.
- Do not touch the glass shell of replaced bulb with your fingers or hands.
- Keep the bulbs away from children.
- Dispose off used bulbs with care. Otherwise the bulbs can explode.

Headlights

Bulb replacement

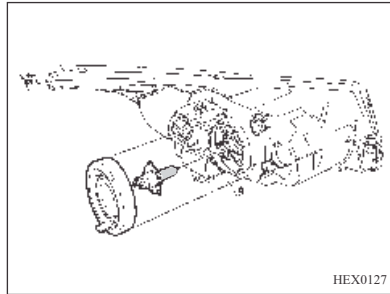

1. Open the hood.
2. Disconnect the wiring harness connector from behind the bulb.
3. Turn and remove the upper end of the windshield washer reservoir. (Only for the bulb on the left-hand side.)
4. Remove the headlight cap.
5. Release the spring that retains the bulb.
6. Remove the bulb.

7. Install a replacement bulb of the same rating.

See Bulb Specifications on page 122.

8. Reinstall the bulb retaining spring.
9. Refit the headlight cap.
10. Turn and reinstall the upper end of the windshield washer reservoir (Only for the bulb on the left-hand side.)
11. Connect the wiring harness connector.


Caution

Clean halogen bulbs with alcohol or mineral spirits and a non-woven cloth. Be sure not to touch the bulbs with your bare hands.

Fingerprints on a halogen bulb can drastically shorten the bulb's effective life.

Parking Lights

Bulb replacement

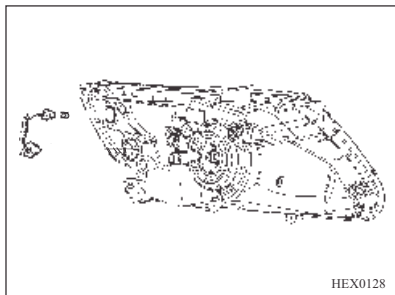


1. Open the hood.
2. Remove the wheel arch panel, and then remove the front bumper.
3. Remove the headlight assembly.
4. Turn the front parking light bulb socket counterclockwise.
5. Pull the parking light bulb socket out of the light housing.
6. Pull the bulb straight out of the socket.

7. Install a new bulb into the socket. See Bulb Specifications on page 122.
8. Turn the bulb socket clockwise to refit inside the light housing.
9. Reinstall the headlight assembly.

As removal of other parts is required (such as the front bumper and wheel house panel), it is recommended to have the bulb replaced at your CHEVROLET retailer.

Front Turn Signal Lights

Bulb replacement

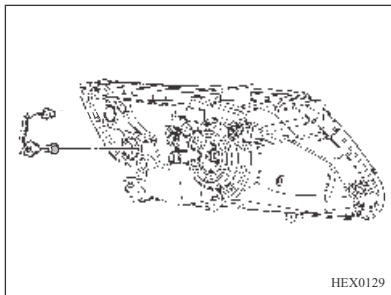

1. Open the hood.
2. Remove the wheel arch panel, and then remove the front bumper.
3. Remove the headlight assembly.
4. Turn the front turn signal light bulb socket counterclockwise.
5. Pull the front turn signal light bulb socket out of the light housing.
6. Pull the bulb straight out of the socket.
7. Install a new bulb into the socket. See Bulb Specifications on page 122.
8. Turn the bulb socket clockwise to refit inside the light housing.
9. Reinstall the headlight assembly.

As removal of other parts is required (such as the front bumper and wheel house panel), it is recommended to have the bulb replaced at your CHEVROLET retailer.

Front Fog Lights*

Caution

This service requires special equipment.

If you are not confident you can complete it safely, you must have this job done by your CHEVROLET retailer.


Otherwise personal injuries or damage to your vehicle could be caused.

Warning

The same rating of the bulb to be used during replacement and any usage of higher wattage bulbs can cause thermal issues such as melting of lamp housing and its surrounding parts. Warranty would be void if higher wattage bulbs are being used.

Side Turn Signal Lights


Bulb replacement

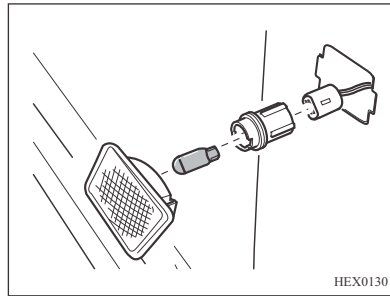


1. Remove the wheel arch panel.
2. Turn the bulb socket counter clockwise to remove it. (Both the bulb and the socket are connected to the vehicle wiring harness.)
3. Pull the bulb straight out of the socket.
4. Install a replacement bulb of the same rating.
5. Insert the socket into the lamp and turn it clockwise.
6. Refit the wheel arch panel.

Reverse Lights, Tail Lights, Stoplights and Rear Turn Signal Lights

Bulb replacement

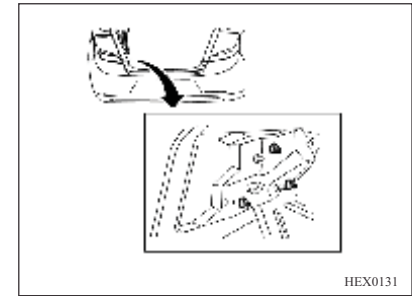


1. Open the trunk and remove the trunk trim panel next to the lights.
2. Remove the three nuts and the light assembly.
3. Turn the bulb socket counter clockwise to remove it.

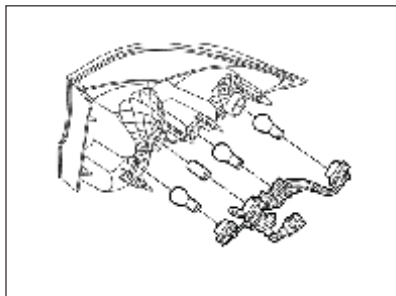

4. Push in and turn the bulb counter-clockwise to remove it from the socket.
5. Install a replacement bulb of the same rating. See Bulb Specifications on page 122.
6. Refit the socket in the light housing. Turn the socket clockwise to secure it.
7. Reinstall the light assembly and tighten one nut and two screws.

Central High-Mounted Stoplight

Bulb replacement

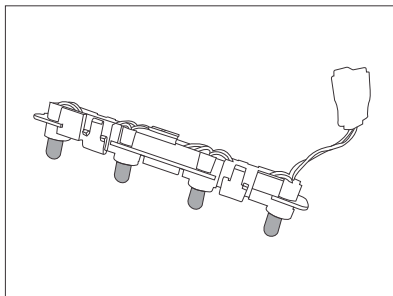


1. Open the trunk.
2. Disconnect the wiring harness connector.
3. Press the lock behind the holder and pull out the socket backwards.
4. Pull the bulb straight out of the socket.
5. Install a new bulb. See Bulb Specifications on page 122.
6. Reinstall the bulb socket into light assembly to secure it.

7. Connect the wiring harness connector.

License-Plate Light


Bulb replacement

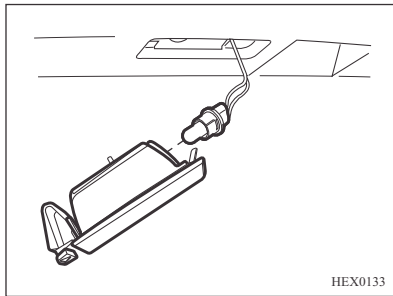

1. Remove the license-plate light assembly directly with your hands.
2. Turn the bulb socket counterclockwise to remove it from the housing.
3. Pull the bulb out of the socket.
4. Replace the bulb. See Bulb Specifications on page 122.
5. Turn the bulb socket clockwise to refit inside the light housing.
6. Reinstall the license-plate light assembly.

Dome Light


Bulb replacement

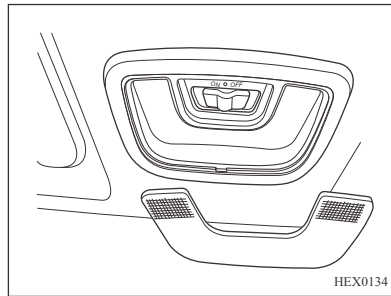

1. Use the flat edge of a screwdriver to pry the lens away from the headliner.
2. Remove the bulb.
3. Replace the bulb. See Bulb Specifications on page 122.
4. Reinstall the lens.

Rear Cargo Area Light*

Bulb replacement


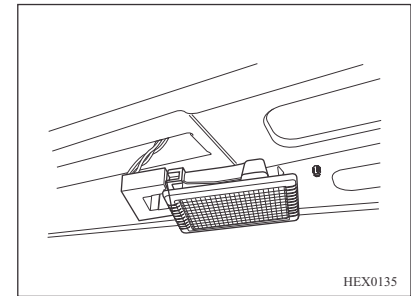


1. Use the flat edge of a screwdriver to pry the light assembly from the housing.
2. Replace the bulb. See Bulb Specifications on page 122.
3. Reinstall the light assembly.

Bulb Specifications

Bulb			Power rating x Quantity	Note
Front	1	Headlights (high/low)	60/55W x 2	H4 60/55W
	2	Parking lights	5W x 2	W5W
	3	Turn signal lights	21W x 2	WY21W
	4	Fog lights*	35W x 2	H8 35W
	5	Side turn signal lights	5W x 2	WY5W
Rear	6	Tail lights/Stop lights	21/5W x 2	P21/5W
	7	Tail lights	5W x 2	R5W
	8	Reverse lights	21W x 2	P21W
	9	Turn signal lights	21W x 2	PY21W
	10	License-plate lights	5W x 2	W5W
	11	High-mounted stop lights	5W x 4	W5W
Interior	12	Dome light	10W x 1	12V10W
	13	Rear cargo area light*	10W x 1	12V10W

Bulb specifications in some models can be different from the above table. See the wattage printed on the bulb before replacing burnt bulbs.

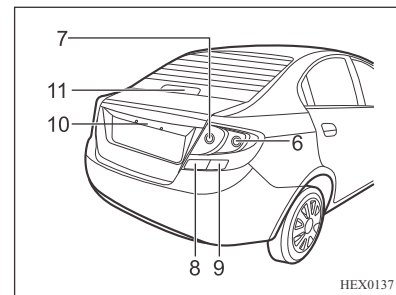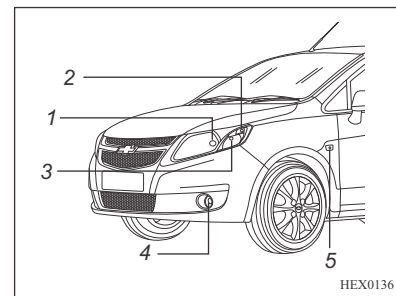

Warning

The same rating of the bulb to be used during replacement and any usage of higher wattage bulbs can cause thermal issues such as melting of lamp housing and its surrounding parts. Warranty would be void if higher wattage bulbs are being used.

WHEELS AND TIRES

The original tires are suitable for your vehicle, delivering optimum riding comfort, tread life and performance.

Caution

Using non-recommended tires and /or wheels can cause a collision.

Before attempting to change your original tires or wheels, consult your CHEVROLET retailer.

Otherwise personal injury and damage to your vehicle and other property could be caused.


Maintenance

Caution

Do not overload the vehicle.

Always maintain proper tire pressures.

Tire pressures must be checked when the tires are cold (at ambient temperature).

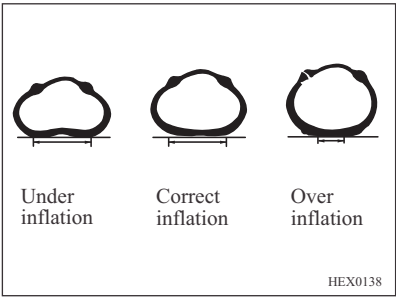

The tire pressure should comply with the specifications in this Manual to ensure optimal ride comfort, safety and performance. The tire pressure label is

on the driver's door frame.

Use a calibrated tire pressure gauge to check the tire pressure when the tires are cold. Tighten the valve caps after checking.

Caution

Tire pressure should be checked when the tires are cold.

The readings will not be correct when the tires are warm. Tires become warm after driving for 1.6 km and will not cool down within 3 hours.

Check the tire pressure each time when you are refueling or at least once a month. Incorrect tire pressure will :

- Accelerate tire wear.
- Affect the vehicle's driveability and safe operation.
- Affect ride comfort.
- Reduce fuel economy.

If the tire pressure is too low, the tires can become overheated, causing internal damage and tread separation or even a flat tire at a high speed. Even if the tire pressure is adjusted later on, the tires might have already been damaged by low pressure driving.

Maintenance of tires and wheels

Driving over sharp objects can damage the tires and wheels. If driving over a sharp object is unavoidable, drive over it slowly, and at a right angle if possible.

When parking, avoid bringing your tires into contact with the curb.

Check the tires regularly for

- External damage.
- Foreign objects.
- Punctures.
- Cuts.
- Cracks.
- Side wall bumps.

Check the wheels for damage.

Tire defects including the above defects can cause you to lose control while driving and lead to personal injuries.

If your tires or wheels have been damaged or abnormal wear is detected, consult your CHEVROLET retailer. Your vehicle is equipped with radial tires. General Motors suggests you to use a tire of the same size, pattern, tread wear, temperature and speed rating for replacement.

Caution

Using a tire of a size different from the original tires can cause interference between the tire and vehicle parts, resulting in damage to the tire and vehicle.


Integrated Tread Wear Indicator

Regularly check the tread groove depth by the integrated tread wear indicator. The position of tread wear indicator is indicated by a mark on the tire wall.

Caution

Do not drive with a worn or damaged tire.

A worn or damaged tire can make you lose control of the vehicle and cause a collision, resulting in personal injuries or damage to your vehicle or other property.

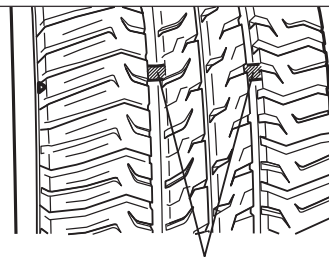


Tread wear indicators (TWI)

HEX0139

The tire must be replaced when the tread wear indicator appears. It will appear between the tread grooves when the tire has 1.6 mm or less of tread left.

Note

Always dispose of worn tires according to the local environmental regulations.

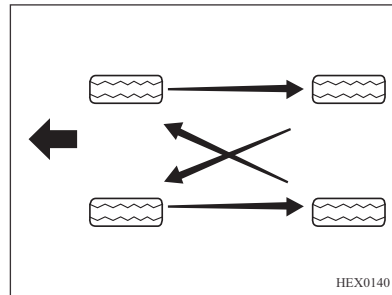Tire Rotation

Front tires and rear tires have different working conditions, and therefore they wear out at different rates.

Normally, the front tires will wear faster than rear tires. To make your tires last longer and to avoid uneven tread wear:

1. Have the tires rotated according to the maintenance schedule in the Manual.
2. Maintain a proper tire pressure.
3. Inspect the tightness of wheel nuts.

Caution

Always use the recommended wheels and recommended wheel nuts.

Otherwise you could lose control of the vehicle and cause a collision, resulting in personal injury or damage to your vehicle or other property.

Winter Tires

If you decide to use winter tires:


- Use them on all four wheels.
- Never exceed the top speed specified by the tire manufacturer.
- Always maintain the specified tire pressure.

Do not use your spare wheel on other vehicles. Do not mix your spare tire or wheel with the wheels or tires of other vehicles; they are not compatible. Keep your spare tire together with its wheel.

Caution

Do not use tire chains on your spare wheel. They are not suitable for your spare wheel.

Using tire chains can damage your vehicle and the chains.

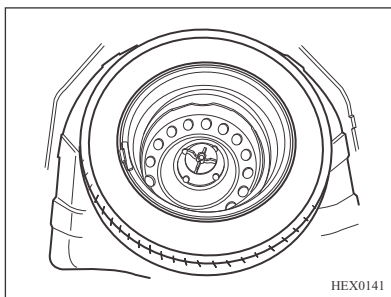Spare Wheel, Jack and Tools

The spare wheel, jack and tools are stored under the carpet in the rear compartment.

The spare wheel is secured by retaining nuts.

Spare wheel

The spare wheel has a steel rim. Using a spare tire smaller than other tires can affect driving performance. Please note the precautions on the spare tire labeling where applicable. Replace the defective tire as soon as possible.


Changing a wheel

Observe the following instructions when changing a wheel:


- Never position yourself below a vehicle when it is supported by a jack.
- Never let the engine continue to run or start the engine while changing a wheel.
- Only use the jack when changing a wheel.

Changing a wheel:


1. Park the vehicle on a level and solid surface, if possible.
2. Turn on the hazard warning flashers and apply the parking brake.
3. Place the gear shift in the first or reverse gear.
4. Place the warning triangle at an appropriate position behind the vehicle.
5. Use wood blocks or stones to block the wheel diagonally opposite the tire to be changed.

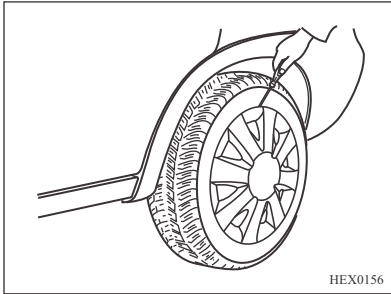


6. Use a screwdriver to remove the wheel cover (if equipped).

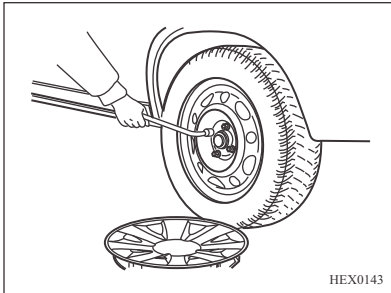


7. Use the wheel wrench to loosen the wheel nuts by a half to one turn each. Do not loosen them completely.

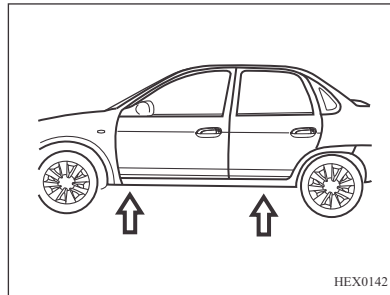


8. Insert the jack into the position indicated by the arrows (where there is a half circle notch).

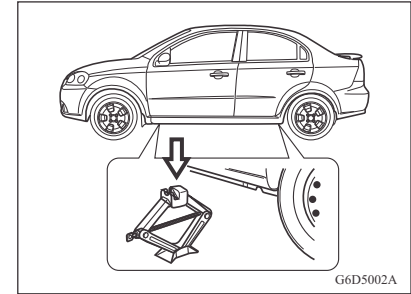

9. The jack should be placed at a jacking point nearest to the tire you want to change. The jack lift head (indicated by the arrow) should be placed around the vertical lugs and inserted into the notch of the lugs.

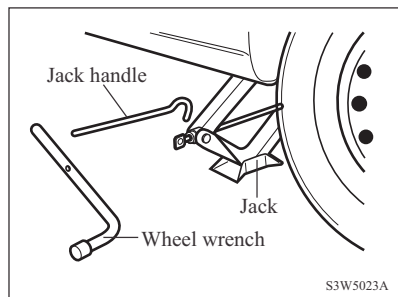


10. When rotating the jack handle, make sure the jack base is in contact with ground and directly under the notch on the lugs.
11. Slowly rotate the jack handle to raise the vehicle.
12. Completely loosen the wheel nuts.
13. Change the wheel.
14. Reinstall the wheel nuts and tighten slightly.
15. Lower the vehicle.

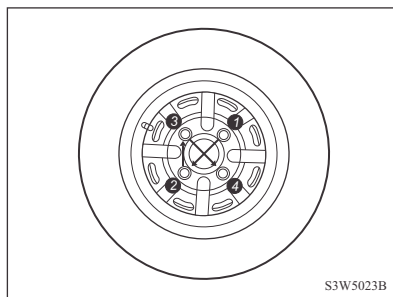


16. Tighten the wheel nuts to 130 Nm, in a diagonal pattern.
17. Store the flat tire in the rear compartment together with the tools and jack that are properly packaged.
18. Have the tire fixed as soon as you can. Reinstall it on the vehicle after balancing.


Tool packing steps

1. Place the wheel wrench and jack handle into the specified position.
2. Put the jack into the tool bag, facing upward.
3. Bundle up the tool bag tightly.
4. Store the tool bag in the spare wheel compartment. Place it in front-rear direction.
5. Store the tow hook in a cover provided on rear carpet.

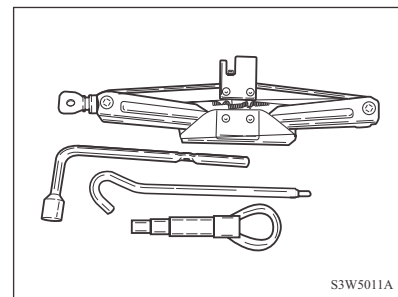

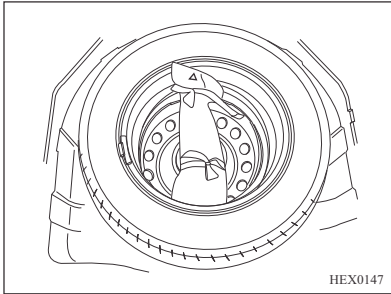

After the tool bag is packed, place the warning triangle properly according to the picture. Warning triangle is provided at the time of vehicle delivery.

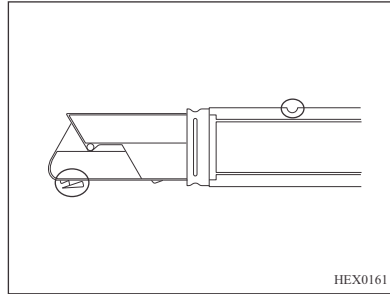

JUMP STARTING THE ENGINE

Caution

Do not try to start your vehicle by pushing or pulling it.

Otherwise it could cause damage to the catalytic converter and transmission, and result in personal injury.

You can start vehicle that has a discharged battery by transferring electrical power to it from a battery in another vehicle.

Caution

Batteries entail a risk of explosion. You may be burned by the acid in batteries and a short circuit can lead to personal injury and vehicle damage.

Keep batteries away from flames or sparks.

Do not lean over the battery while jump starting.

Do not let the cable terminals touch each other.

Wear eye protection when working near any battery.

Do not let battery fluid touch eyes, skin, fabrics or painted surface.

Make sure the battery providing the jump start has the same voltage as the battery receiving the jump.

Caution (continued)

Do not disconnect the discharged battery from the vehicle.

Failure to observe the above warnings or the instructions below could result in battery explosion, acid burning or short circuit.

The electric systems of both vehicles could be damaged and serious injuries could occur.

Preparation before jump starting

1. Apply the parking brake firmly.
2. Shift the transmission into neutral.
3. Turn off all electrical accessories.

Caution

Turn off the audio system before jump starting. Otherwise it could be damaged.

Caution

When connecting the cable, make sure it is not near any engine parts that will move.

Otherwise, you could be injured or your vehicle could be damaged.

Connecting the jumper cables

While jump starting, connect the jumper cables in the following sequence:

1. Connect one end of the first jumper cable to the positive terminal on the charged battery.
(There is a "+" mark on the battery housing or the terminal.)
2. Clip the other end of the jumper cable onto the positive terminal on the discharged battery. (There is a "+" mark on the battery terminal.)
3. Connect one end of the second jumper cable to the negative terminal on the charged battery.

(There is a "-" mark on the battery housing or the terminal.)

Caution

Do not connect the negative terminal when finally connecting to the vehicle you want to charge.

In final connection, attach the clip to the steel frame bolted to the engine block.

The final connection point should be as far away from the battery as possible.

If you connect the jumper cable to the negative terminal on the dead battery, it can cause arcs or even battery explosion.

Serious personal injury or vehicle damage can result.

4. Turn off the electrical devices on the vehicle as possible (e.g. lights, blower, audio system), start and run

the discharged vehicle for 20 minutes. This can recharge the battery.

5. During jump starting, the engine on the vehicle providing the jump starting can be allowed to run.

Caution

Attempts to start the engine of the vehicle with the discharged battery should be made at intervals of about one minute and should not last longer than 15 seconds each.


After the vehicle with discharged battery starts:

1. Take care to disconnect the grounding terminal (-).

Disconnect from the vehicle with discharged battery first. Keep the engine running on the vehicle with discharged battery.

2. Disconnect the negative cable from the vehicle providing the jump start.
3. Disconnect the positive cable from the two batteries. Store the jumper cables where the spare wheel is stored.
4. Turn off the electrical devices on the vehicle as possible (e.g. lights, blowers, audio system), and drive the discharged vehicle for 20 minutes. This can recharge the battery.
5. If discharging reoccurs, consult your CHEVROLET retailer.

TOWING THE VEHICLE

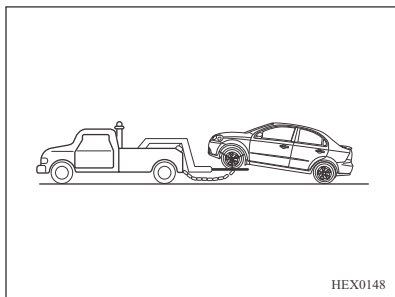

If vehicle towing is needed, contact your CHEVROLET retailer or a professional towing service.

Caution


Never let passengers ride in a vehicle that is being towed.

Do not tow faster than safe speeds or road speed limits.

Never tow a vehicle by any components that are damaged and not fully secured on the vehicle.

Failure to observe the above warnings could result in injuries.

Towing your vehicle with a wheel lift

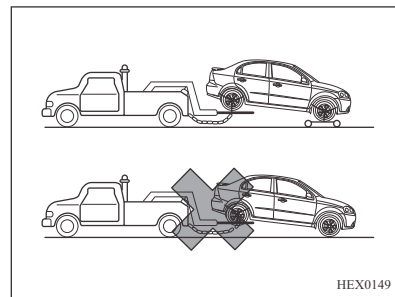


1. Turn on the hazard warning flashers.
2. Turn the ignition key to the ACC/ACCESSORY position.
3. Shift the transmission into Neutral.
4. Release the parking brake.

Caution

If your vehicle must be towed from the rear, use a towing dolly under the front wheels.

Do not have your vehicle towed from the rear with the front wheels touching the ground.

Otherwise, the transmission could be badly damaged.

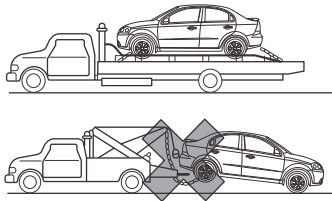

HEX0150


5. Tow your vehicle with the front wheels off the ground.

Caution

Do not tow with a sling-type equipment.

Only use wheel-lift or vehicle carrier equipment.


Emergency Towing

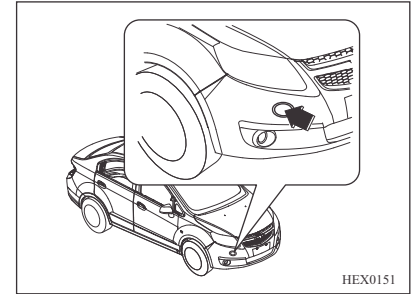

HEX0151

If towing service is not available in an emergency, the vehicle may be towed temporarily by securing a cable to the front hook under the vehicle. When the front hook is used in towing, you can only use a tow rope, not a rigid towing bar.

Front Towing Hook

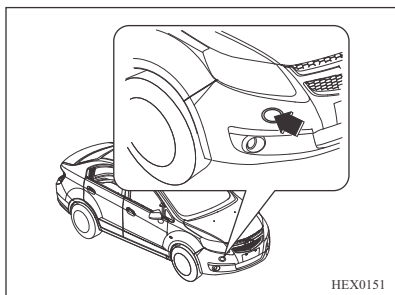

There is a round cover at the right hand side of the front bumper. A fixing hole for hook installation can be found after you open the cover by pressing it on the driver side, as indicated by the arrow in above diagram. The hook is stored in the tool bag in the rear compartment.

Install the hook on the fixing hole, turn it clockwise to tighten firmly. Tow the vehicle after ensuring that the hook is securely attached. While towing, a driver must be in the vehicle to steer it and operate the brakes. After towing, remove the hook and close it with the cover. Insert the cover into the hole by pushing it towards the driver side, and then press the passenger side to firmly close it.

Caution

When towing the vehicle with a tow rope, the vehicle can be damaged.

To reduce damage:

Use the towing hook only if no other towing equipment is available.

Only tow the vehicle from the front.

Keep the tow rope clear of the bumper.

Pull on the tow rope to make sure it is securely fixed to the towing hooks at both ends.

Drive off slowly and avoid sharp turns.

Caution


When towing with a tow rope, you could lose control of the towed vehicle.

Only tow at a low speed for a short distance.

Do not tow the vehicle if the wheels, transmission, axles, steering or brakes are damaged.

Do not remove the key from the ignition switch, otherwise the steering will lock, making the vehicle undrivable.

Towing Hook for Shipping

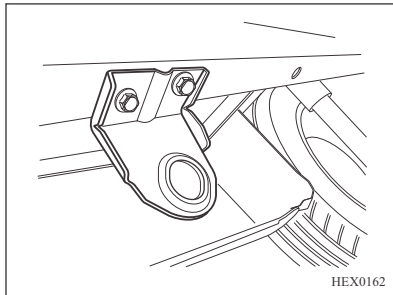

The towing hook for shipping is located below the left part of the rear bumper on the vehicle body floor, and is used when this vehicle is shipped.

Caution

Do not use this towing hook to tow other vehicle, otherwise your vehicle will be damaged.

In order to keep its optimum performance, it is not recommended to use this vehicle to tow other vehicles.

ROCKING YOUR VEHICLE

Take the following steps to free your vehicle when it is stuck in snow, mud or other soft surfaces.

1. Turn the steering wheel all the way to the left and then all the way to the right, to clear the area around the front wheels.
2. Shift the transmission back and forth between reverse and a forward gear.
3. Spin the wheels as little as possible.
4. Release the accelerator pedal while you shift.
5. Press the accelerator pedal lightly when in gear.

If the vehicle is not freed after several attempts, the vehicle needs to be towed out. Contact CHEVROLET retailer to seek assistance.

Caution

If your vehicle gets stuck in sand, mud or snow, you will need to rock your vehicle out.

Before rocking the vehicle, check that there are no physical objects or people around the vehicle.

The vehicle could move forward or back suddenly. The people around it could be injured and objects could be damaged.

Caution

The following warnings must be observed to prevent damage to the transmission and other parts:

Do not press the accelerator pedal while shifting or before the transmission is shifted into forward or reverse gear.

Do not let the engine run at too high speed and avoid spinning the wheels.

VEHICLE MAINTENANCE**Cleaners**

Always comply with the recommendations of manufacturer when using cleaners or other chemicals for the interior or exterior of the vehicle.

Caution

Some cleaners are toxic, corrosive or flammable.

Improper use is very dangerous and could result in personal injury or vehicle damage.

Do not use hazardous cleaners when cleaning the interior or exterior of the vehicle. For instance:

- Acetone.
- Paint thinners.
- Enamel reducer.
- Nail polish remover.

Do not use the following cleaners when cleaning the interior and exterior of the vehicle, unless otherwise specified in the stain removal instructions for fabric cleaning:

- Laundry soap.
- Bleach.
- Reducer.

Do not use the following materials for cleaning:

- Carbon tetrachloride.
- Gasoline.
- Benzene.
- Naphtha.

Caution

Avoid prolonged exposure to vapors of cleaners and other chemicals.

These vapors are hazardous and harmful to health, especially in restricted and poorly ventilated spaces.

Open the doors for proper ventilation when using cleaners or other chemicals for interior of the vehicle.

Caution

Do not let color-fading fabrics come into contact with the vehicle interior trims, unless both materials are completely dry.

In order to prevent potential permanent discoloration of light coloured interior trims, do not let color-fading fabrics come into contact with the seat cover, unless both materials are completely dry.

The following is a short list of colour-fading fabrics:

- Casual wear
- Dyed denim
- Corduroy
- Leather

- Suede
- Newspaper
- Decorative paper

Interior Maintenance and Cleaning

Caution

Always use proper cleaning methods and materials to clean the interior trims.

Otherwise water stains, water marks and permanent stains could result, especially during first time cleaning.

These materials can cause permanent damage to the vehicle.

Always use proper cleaning methods and materials to clean the interior and exterior of the vehicle.

Use a vacuum cleaner or a soft brush to remove the dust and dirt accumulated on the fabrics inside the vehicle.

Use a clean, wet cloth to clean the vinyl plastic and leather trims regularly.

Use proper cleaners to clean the dusts, blemishes or stains on the trims.

Maintenance of Safety Belts

Caution

The safety belts must be kept in good working order to maintain their normal function.

Keep the safety belts clean and dry. Prevent the safety belts from being contaminated by polishes, oil or chemicals, especially battery electrolytic solution, bleach and dye.

These contaminants can reduce the strength of the safety belt materials.

Perform regular inspection on all parts of the safety belts. Immediately replace any damaged safety belts or parts thereof.

Safety belts stretched in an accident and the associated parts must be replaced, even if the damage is not obvious or invisible. The safety belts used for replacement must be new.

It is recommended by General Motors to replace the whole safety belt

assembly after a collision. The safety belts may not have to be replaced if your CHEVROLET retailer finds that the safety belts are not damaged and work properly.

Glass Surface

Caution

Abrasive cleaners can scratch the glass and damage the rear window defroster grid.

Do not use abrasive cleaners on the rear window glass.

Otherwise the driver's vision will be affected.

Keeping the window glass clean can help to reduce dazzling and improve vision.

Caution

Stickers can affect the rear window defroster.

Do not put stickers on the inside of the rear window.

Otherwise the driver's vision will be affected.

Cleaning the outside of the windshield

Wax or other substances on the windshield and on wiper blades can cause blade vibration during operation. Also these foreign substances will not help to keep the windshield clean.

Use non-abrasive cleaners to clean the outside of the windshield.

Water cannot form drops on the windshield when it is clean.

Exterior Maintenance and Cleaning

Washing the vehicle

The best way to maintain the surface paint is to wash the vehicle frequently and keep it clean.

- Park the vehicle in a place shielded from direct sunlight.
- Wash the vehicle with specified mild soap liquid and cold or warm water.
- The liquid soap and cleaners on the surface must be washed off.

Caution

Do not wash the vehicle with a domestic washing up agent.
A domestic washing up agent can wash off the paint wax.

Caution

Avoid too high pressure when washing the vehicle.
The vehicle interior can be damaged if water penetrates in the vehicle.

The vehicles of General Motors are designed for operation under normal and natural conditions.

Caution

The antenna can be damaged by automatic vehicle washers.
Turn off the sound system and retract the antenna.
Remove the antenna rod or roof antenna.

Polishing and waxing

Regular polishing can remove the residual materials on the vehicle surface. High-quality automotive wax should be used after polishing for best protection.

Protecting the exterior polished metal parts

Regularly clean the polished metal trim parts. Usually, water cleaning will be sufficient.

Caution

Do not clean or polish the aluminum trim parts by using an automotive or chrome polish, steam or alkaline soap liquid.
These materials are abrasive and can damage the trim parts and wheels.

Do not forget to wax the polished metal parts when waxing the vehicle.

Cleaning the aluminum wheels and wheel trim covers

In order to maintain the original appearance of the wheels and wheel trim covers, do not let dirt or brake dust accumulate on them.

Caution
Do not use an abrasive cleaner or brush to clean the aluminum wheels or wheel trim covers.

Clean the wheels / wheel trim covers regularly. Do not use abrasive cleaners or brushes that can damage the surface paint.

Preventing Corrosion

The vehicles of General Motors are designed to have corrosion-resistant properties. Most parts are designed with special materials and protective paint to help maintain a good appearance, strength and reliability.

Although some parts in the engine compartment and underneath the vehicle may become rusty on surface, the reliability or functionality of these parts will not be affected.

Metal sheet damage

If the vehicle body needs to be repaired or replaced, make sure that the workshop uses proper anticorrosive materials to restore the corrosion-resistance properties.

Sediment of foreign substances

The following substances can damage the paint surface:

- Calcium chloride and other salts.

- De-icers.
- Bitumen and asphalt.
- Tree sap.
- Bird excrement.
- Industrial dust.

Wash detrimental materials off the vehicle promptly. If the residual materials cannot be removed by soap liquid, special cleaners can be used.

Caution
Only use safe cleaners that are not detrimental to the painted surface. Other cleaners can permanently damage the paint.

Surface paint damage

Repair scrapes, cracks or deep scratches as soon as possible.

Exposed metal corrodes easily. Minor cracks and scratches can be repaired by using fast-drying products.

Large-area repairs can be performed at a body and paint workshop.

Underbody maintenance

Corrosive materials can collect on the underbody of your vehicle. Failure to remove these materials can accelerate corrosion and rust.

Regularly wash the underbody with plain water. Take care to clean the parts where dirt can accumulate easily. Loosen the dirt in enclosed areas before washing.

When necessary, have this service provided by your CHEVROLET retailer.

Caution

When you wash the engine compartment, fuel, lubricants and oil sediment can be flushed into the environment.

Only wash the engine at your CHEVROLET retailer or another place where the oil separation equipments are provided.

Dispose of used engine oil, brake fluid, transmission fluid, antifreeze, batteries and tires at a waste disposal facility specified by the local laws, or have them disposed of by the sellers who have supplied these materials and have a legal obligation to dispose of them properly.

Do not mix these materials with the household waste or discharge them into the drains.

These hazardous materials can permanently damage the environment if not disposed of properly.

**SERVICE AND
MAINTENANCE
General Information**

Service Information

In order to ensure economical and safe vehicle operation and to maintain the value of your vehicle, it is of vital importance that all maintenance work is carried out at the proper intervals as specified.

Confirmations

Confirmation of service is recorded in the Service and Warranty Booklet.

The date and mileage is completed with the stamp and signature of the servicing CHEVROLET retailer.

Make sure that the Service and Warranty Booklet is completed correctly as continuous proof of service is essential if any warranty or goodwill claims are to be met, and is also a benefit when selling the vehicle.

142 Vehicle Maintenance

Scheduled Maintenance

Service Schedules

Maintenance service and record retention are the owner's responsibility. You should retain evidence that proper maintenance has been performed on your vehicle in accordance with the scheduled maintenance service chart.

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL	Kilometers or time in months, whichever comes first													
		6 months/7500	1 Year/15000	1.5 Years/22500	2 Years/30000	2.5 Years/37500	3 Years/45000	3.5 Years/52500	4 Years/60000	4.5 Years/67500	5 Years/75000	5.5 Years/82500	6 Years/90000	6.5 Years/97500	7 Years/105000

ENGINE CONTROL SYSTEM

Drive Belt (Alternator, Power Steering and A/C Compressor)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine Oil and Engine Oil Filter (1) (3)	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I
Cooling System and Hose Connections	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine Coolant (3)	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R
Fuel Filter	I	I	I	R	I	I	I	R	I	I	I	I	R	I	I
Fuel Line and Connections	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Air Cleaner Element (2)	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I
Spark Plugs	I	I	I	R	I	I	I	R	I	I	I	I	R	I	I
Spark Plug Wires	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
EVAP Canister, Vapor Lines & Solenoid Valve Filter			I			I			I				I		
PCV System			I			I			I				I		

Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

- (1) If a vehicle is operated under severe conditions: short distance driving, extensive idling or driving in dusty conditions, change engine oil and the filter every 7,500 kms or 6 months, whichever comes first.
- (2) Inspect the air cleaner element every 7,500 kms or 6 months if vehicle is driven under dusty driving conditions. If necessary correct, clean or replace.
- (3) Refer to "Fluid Chart" on page 148.

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL	Kilometers or time in months, whichever comes first													
		6 months/7500	1 Year/15000	1.5 Years/22500	2 Years/30000	2.5 Years/37500	3 Years/45000	3.5 Years/52500	4 Years/60000	4.5 Years/67500	5 Years/75000	5.5 Years/82500	6 Years/90000	6.5 Years/97500	7 Years/105000

CHASSIS AND BODY

Exhaust Pipe & Mountings	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Fluid (3) (4)	I	I	I	R	I	I	I	I	R	I	I	I	R	I	I
Front Brake Pads & Discs (5)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Rear Brake Drum & Linings (5)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Parking Brake	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Line & Connections (Including Booster)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Manual Transaxle Fluid : Leak Check (3)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Clutch Pedal Height Adjustment				I					I				I		
Chassis & Underbody Bolts & Nuts Tight / Secure	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

(3) Refer to "Fluid Chart" on page 148.

(4) Change the brake fluid every 20,000 kms or 2 years (whichever is earlier) if the vehicle is mainly driven under severe conditions:

- Driving in hilly or mountainous terrain, or
- Towing a trailer frequently.

(5) More frequent maintenance is required if under severe condition: frequent low-speed operation in stop-and go traffic or driving in dusty conditions.

144 Vehicle Maintenance

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL	Kilometers or time in months, whichever comes first													
		6 months/7500	1 Year/15000	1.5 Years/22500	2 Years/30000	2.5 Years/37500	3 Years/45000	3.5 Years/52500	4 Years/60000	4.5 Years/67500	5 Years/75000	5.5 Years/82500	6 Years/90000	6.5 Years/97500	7 Years/105000

CHASSIS AND BODY

Tire Condition and Inflation Pressure	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Wheel Alignment (6)	As and when required or as suggested by CHEVROLET retailer														
Wheel Balancing (6)	As and when required or as suggested by CHEVROLET retailer														
Steering Wheel & Linkage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Power Steering Fluid & Lines (3)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Drive Shaft Boots	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Safety Belts, Buckles & Anchorages	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Lubricate Locks, Hinges & hood Latch	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
A/C Mesh Filter	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

Chart Symbols:

I - Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

L- Lubricate

(3) Refer to "Fluid Chart" on page 148.


(6) If necessary, rotate and balance wheels.

TECHNICAL DATA

Vehicle Identification	145
Vehicle Data	146
Capacities and Specifications	148

VEHICLE IDENTIFICATION


Vehicle Identification Number (VIN)

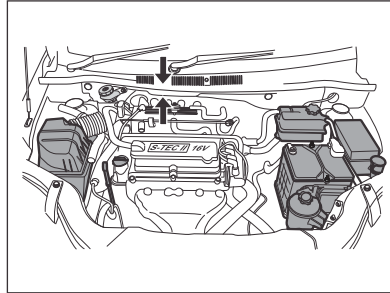

This number is the legal identifier for your vehicle.

The vehicle identification number is engraved on the top of the bulkhead.

VIN Plate Location

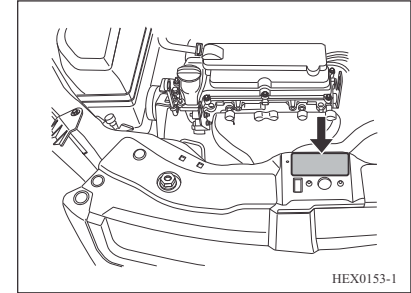

HEX0153-1

The vehicle identification number (VIN) plate is attached to the top of the front end upper panel.

VEHICLE DATA**Engine**

Engine identifier code	10CXD
Type	4-cylinder/in line, Positive ignition
Bore x Stroke, mm	69.5 x 79.0
Number of cylinders	4
Piston displacement, cc	1199
Compression ratio	9.8 : 1
Engine Power kW @ rpm	63.2 @ 6000
Torque Nm @ rpm	113 @ 5000
Octane rating RON	91
Battery rating (V-Ah)	12-45

Brakes

Service brake	Hydraulic, vacuum assisted, diagonal circuit with auto slack adjuster
Auto slack adjuster	Rear brakes
ABS	Optional
Front brakes	Disc
Rear brakes	Drum

Gear Box

Drive system	Front wheel drive
No. of gears	5 forward 1 reverse
Gear ratios	
1st	3.727
2nd	2.050
3rd	1.323
4th	0.974
5th	0.780
Reverse	3.454
Front axle ratio	4.267

Suspension

Font suspension type	McPherson strut
Rear suspension type	Twist axle

Shock Absorber

Front	Twin tube strut type (gas)
Rear	Twin tube shock absorbers type (gas)

Chassis

Type	Monocoque
------	-----------

Steering

Type	Hydraulic power assisted
------	--------------------------

Vehicle Dimensions

Overall length [mm]	4249
Overall width [mm]	1690
Overall height [mm]	1503
Wheel base [mm]	2465
Front wheel track [mm]	1462
Rear wheel track [mm]	1457
Ground clearance [mm]	174

Vehicle Weight

Kerb weight [kg]	1065
Gross vehicle weight [kg]	1450

Wheel & Tires

Wheel rim size	14 x 5.5J (alloy)
	14 x 5.5J (steel)
Tire size & type	175/70 R14 84T & Radial, tubeless

CAPACITIES AND SPECIFICATIONS

Fluid Chart

Item	Classification	Capacity
Engine Oil	SAE 5W-30 API S M GF4	3.75 L
Transmission Oil	75W-90	1.8 L
Engine Coolant	Ethylene Glycol based long life coolant	6.4 L
Brake Fluid	DOT 4	0.48 L
Power Steering Fluid	Dexron VI	1.0 L

Fuel Tank

Petrol, nominal capacity	42 L
--------------------------	------

Tire Pressures



TIRE AND SEATING INFORMATION

OCCUPANTS	TOTAL 5	FRONT 2	REAR 3
-----------	---------	---------	--------

TIRE	SIZE	COLD TIRE PRESSURE
FRONT	175/70 R14 84T	235 kPa, 34 psi
REAR	175/70 R14 84T	235 kPa, 34 psi
SPARE	175/70 R14 84T	235 kPa, 34 psi



**SERVICE AND
WARRANTY**

Standard Limited Warranty
Coverage 150

Predelivery Inspection and
Vehicle Delivery 157

Owner's Statement of
Acceptance 159

Chevrolet Service 161

Maintenance Record Sheet 167

Battery 169

Separate Corrosion Protection
Service 170

Body Inspection Record 171

Emission Warranty 173

Annexure - I 177

Annexure - II 178

STANDARD LIMITED WARRANTY COVERAGE

1. SCOPE

General Motors India Private Limited, a private limited company incorporated under the companies Act 1956 and having its Registered office at Chandrapura Industrial Estate, Halol, District Panchmahals, Gujarat - 389351 and Works at A-16, MIDC Talegaon Industrial Area (Phase-II), Near Floriculture Park, Talegaon Navlakh Umbhre Village Road, Tehsil-Maval, Pune - 410507, Maharashtra ("General Motors India") warrants that your new Chevrolet Sail ("vehicle") is free from defect in material or workmanship, subject to your compliance with the following terms and conditions mentioned hereunder and other vehicle maintenance norms as mentioned elsewhere in this service booklet.

Only an authorized CHEVROLET retailer as mentioned in this booklet will make the necessary repairs, using new, re-conditioned or re-manufactured parts with a view to correcting any defect covered by this warranty.

2. WHAT IS COVERED

Time and distance limits for New Vehicle Warranty coverage.

Warranty Type	Warranty Limits	Other Warranties
A : General	Three (3) years or 1,00,000 kms (whichever is earlier) from the date of delivery by a CHEVROLET retailer or the date of first registration of the motor vehicle, whichever occurs first.	These parts are covered by other warranties : 1. Battery (one (1) year) (covered by the battery manufacturer**) 2. Tyres (one (1) year) (covered by the tyre manufacturer**) 3. Audio/Radio/Acc. (one (1) year) (covered by the Audio/Radio/Acc. manufacturer**) See Clause 5.
B : Rust Through*	Three (3) years from the date of delivery of the motor vehicle or from the date of first registration of the motor vehicle, whichever occurs first.	The warranty covers exterior body metal except : 1. Items not covered by warranty listed in Clause 3 2. Exhaust pipe and fuel system rust

* A hole through a body panel caused by rust / corrosion from inside to outside.

** Service / warranty shall be provided by the concerned equipment manufacturer.

- The obligation under this New Vehicle Warranty is limited to the repair of the new motor vehicle at no charge by the CHEVROLET authorized retailer. For parts replaced during such repair the same warranty applies until the end of the New Vehicle Warranty period as stipulated herein. All warranty claims expire at the end of the warranty period as specified under Clause 2.
- Liability of **General Motors India Pvt. Ltd.** under this New Vehicle Warranty is limited to the value of the service, repairs/ replacement of parts found to be defective within the warranty period. Beyond servicing and/or repairing defective parts in the vehicle, **General Motors India Pvt. Ltd.** does not undertake to replace the vehicle / or reimburse the purchaser by payment of any money in respect of the vehicle purchased by them.
- Under the terms of New Vehicle Warranty, installation, free service will be provided only within the municipal limits of the cities/towns where **General Motors India Pvt. Ltd.** has its service network, *as elaborated elsewhere in this Owner's Manual*. This list of authorized retailers is subject to change/modification without prior notice. Service outside the municipal limits specified above will be provided after charging the actual to and fro traveling and incidental expenses, as prevailing from time to time.
- Necessary care and caution is taken in manufacturing of the vehicle, however, **General Motors India Pvt. Ltd.** shall not be liable for any loss or damage caused to any article, property, death or disability caused to any human life arising out of fire, electric fault, short circuit, accidental handling or negligent use of the vehicle. The maximum liability in monetary terms shall be restricted to the value of the defective parts and / or value of services rendered only. Furthermore, the New Vehicle Warranty, in no case, shall extend to the payment of any monetary consideration whatsoever, of the replacement or return of the vehicle as a whole.
- The decision of **General Motors India Pvt. Ltd.** will be final and binding on all matters arising out of this New Vehicle Warranty.
- The owner should preserve the original Invoice for necessary verification and produce the same, as and when required.
- The optimum performance of the vehicle is under standard test conditions.

This New Vehicle Warranty is issued at Talegaon, District Pune, Maharashtra and competent courts shall have exclusive jurisdiction over matters by or following from time to time.

3. WARRANTY LIMITATIONS

The warranty will cease to exist in following conditions:

- a. Failure to have the required periodic inspection and required service performed as per the Periodic Maintenance Schedule.
- b. Improper or wrong maintenance and in deviation with guidelines mentioned in this service booklet.
- c. Any modification, alterations made to the vehicle such as including but not restricted to adding lights, changing engine specifications to increase horsepower, or using wide tyres, and or any other modification in the vehicle that may likely to have an effect on the performance of the vehicle. (e.g. Defects caused by the installation of non homologated wheels and tyres are not covered by the warranty.)
- d. Failure to use genuine parts / fluids (oil, coolant, brake fluid) and/or other accessories / consumables recommended or approved by General Motors India Pvt. Ltd.
- e. Use of the vehicle for purposes or in a manner other than the one mentioned in the Owner's Manual. Exceeding specified capacities such as loading weight, passenger, speed, use as a commercial vehicle and rpm limitations.
- f. Damage caused by driving the vehicle under severe conditions such as un-pliable or water-logged roads, in races or rallies.
- g. Damage caused by natural disasters including but not restricted to earthquakes, storms, floods, fire and accidents. The owners are recommended to keep their vehicle insurance valid at all times.
- h. Damage caused by smoke, chemicals, bird-droppings, salt, stone chipping, scratches, iron dust or any other extraneous circumstances like external mechanical or chemical influences (regarding paint or body damage, specially stone throw, air-borne rust, industrial fall out), damage to catalytic converter due to use of wrong/bad quality fuel acting on the vehicle.
- i. Damage caused by normal wear (for instance brake-pad, etc.) or exposure to the elements such as discoloring or deformation of any interior, plastic, chrome or painted part or surface.
- j. Sensory complaint by the owner against symptoms such as noise, vibration or oil stains which do not effect performance.

- k. Damage which should have been detected during normal usage but became serious when left unattended to and/or the owner of the vehicle having failed to claim and having rectified a defect which was already apparent during vehicle delivery, immediately after delivery or a defect which becomes apparent at a later date immediately after it became apparent.
- l. Failure of the owner to adhere to the requirements outlined in Clause 4.
- m. Fuel system damage caused by water or other foreign matter in the fuel system.
- n. Damage caused by the installation of non genuine accessories or equipment after the vehicle has been purchased from the CHEVROLET retailer such as radio, car telephone, CD radio set, or cargo carrier and / or other activities of a similar nature.
- o. Damage caused by running vehicle on adulterated fuel/lubricants or fuel/lubricants other than those specified by General Motors India Pvt. Ltd.

WHAT IS NOT COVERED

- Adjustments, cleaning, inspection, or required periodic maintenance.
- Parts designated as requiring periodic replacement.
- Warranty repair not performed by a CHEVROLET retailer.
- Charges or fees for telephone, tow, transportation charges of the vehicle to the nearest CHEVROLET retailer, rental car, and so forth; compensation for inconvenience or commercial losses; all other consequential costs relating to the owner being unable to use the vehicle.
- Any accident, damage, loss or destruction due to negligent, careless use of vehicle.
- Damage to the engine while driving in water logged conditions or entry of water in to the engine.
- Consumptive parts and oil/grease and other fluids. (See the following tables of consumptive parts and oil/grease and other fluids.)

154 Service and Warranty

Consumptive Parts	Oil/Grease and other fluids
Spark plug	Engine oil
Drive belts	Transmission oil
Air cleaner element	Power steering fluid
Fuel filter	Brake fluid
Oil filter	Coolant
Clutch disc, clutch parts	Grease
Brush holders	Washer fluid
Brake shoe and pads	Battery fluid
Brake discs	Gasoline
Brake drums	Diesel
Wiper blades	Air conditioner refrigerant
Light bulbs	Other lubricants, etc.
Motor brushes	
Hoses	
Fuses, etc.	

No warranty repair shall be made if it is found that the vehicle identification number like chassis / engine number, odometer or the warranty & service booklet, have been tampered with. This list is neither exclusive nor exhaustive and the decision of General Motors India Pvt. Ltd. shall be final and binding.

4. WHAT THE OWNER MUST DO

In order to keep this warranty valid you must:

- a. Use your vehicle as instructed in the Owner's Manual.
- b. Have your vehicle inspected according to this schedule.

The cost of the service is borne by the owner. If the services are not performed within the specified time limits, the general and the rust through warranty as referred to under Clause 2 above, shall be rendered null and void and shall not be reinstated by a subsequent service.

- c. Keep the warranty & service booklet (Owner's Manual) and all receipts in a safe place to present to the CHEVROLET retailer at regular maintenance visits and when repair work is required.

5. PARTS COVERED BY OTHER WARRANTY CONDITION

- a. Battery : The coverage period is 1 year from the date of new vehicle registration regardless of the distance traveled.
- b. Tyres : This warranty is covered by the tyre manufacturer. The coverage period is one year. Please check with your CHEVROLET retailer for details.
- c. Audio/Radio/Acc. : This warranty is covered by the audio/radio/Acc. manufacturer. The coverage period is one year. Please check with your CHEVROLET retailer for details.

6. MAKING THE WARRANTY EFFECTIVE

The warranty goes into effect after CHEVROLET authorized retailer fills in the appropriate information about your vehicle and places the retailer's official seal and signature in the warranty & service booklet (Owner's Manual).

7. REQUIREMENTS FOR WARRANTY WORK

To have warranty work carried out, present the warranty & service booklet (Owner's Manual) to the authorized CHEVROLET retailer as mentioned in this booklet. If the warranty & service booklet is lost or incomplete, work to be carried out with respect to the standard warranty shall be refused.

8. CHANGE OF OWNERSHIP

If the vehicle is sold during the warranty period, please deliver the warranty & service booklet (Owner's Manual) to the new owner.

The new owner will need to complete the change of address or subsequent ownership notification card located elsewhere in this booklet in order for the coverage to be transferred.

9. EXPENSES ASSOCIATED WITH WARRANTY WORK

The expenses of repair work and parts of your CHEVROLET vehicle will be covered by CHEVROLET standard limited warranty in accordance with the WARRANTY & SERVICE BOOKLET (OWNER'S MANUAL). Other expenses that are not covered by the CHEVROLET Standard Limited Warranty must be covered by the owner.

10. General Motors India Private Limited is launching the Chevrolet Sail in different cities in a phased manner. The CHEVROLET retailer responsible for delivering your Sail is qualified to provide all Sail related services within the city where he is located. As other CHEVROLET retailers become operational to handle the Sail, they will also be able to provide similar Sail related services. IN ORDER FOR THE WARRANTY ON YOUR VEHICLE TO APPLY, IT IS IMPERATIVE THAT YOUR SAIL BE SERVICED, HANDLED AND ATTENDED TO ONLY BY CHEVROLET RETAILER AS SET FORTH IN THIS BOOKLET.
11. The following requisite document should be presented to the CHEVROLET retailer at the time of making a claim under New Vehicle Warranty:
 - Original invoice issued by CHEVROLET retailer.
 - Warranty and service booklet / maintenance record.
 - Any other document deemed to be necessary by CHEVROLET retailer and/or General Motors India Pvt. Ltd.

**PREDELIVERY INSPECTION AND VEHICLE
DELIVERY**

Before delivering the vehicle we carried out a thorough predelivery inspection in order to ensure that your Chevrolet vehicle is in a fault-free condition. Accompanying this appropriately filled out service booklet (Owner's Manual) are the tool kit and your vehicle documents.

You have been informed of the service intervals and necessary service checks, including under extreme operating conditions and in particular with regard to oil changing of petrol engines.

City, date :

CHEVROLET Retailer's / ASO's Stamp and Signature

OWNER'S STATEMENT OF ACCEPTANCE

I hereby certify that the vehicle has been delivered in an orderly and proper operating condition, including Keys, **Service booklet (Owner's Manual) and tool kit. I have read and understood the terms and conditions pertaining to the New Vehicle Warranty and agree to abide by the same.**

I have been informed of the service intervals and necessary service checks, including under extreme operating conditions.

Date of delivery :

City, date :

Name and signature of customer :

This sheet must be detached prior to vehicle delivery and placed with the vehicle file **after it has been signed** by the customer.



Dear Customer,

We are confident that you and your family would be enjoying the safe and comfortable drive of the Chevrolet Sail.

We would like to undertake a thorough check-up of the vehicle at 1000 kms or 30 days, whichever occurs earlier. This will also allow us to re-emphasize the salient features of the Sail to you.

In the unlikely event of an emergency assistance, please call your nearest CHEVROLET retailer as mentioned in this booklet or please feel free to call our 24 hr. helpline at 1800 3000 8080.

1000 kms / 30 days reassurance check-up (whichever is earlier)

VIN no. _____

PDI no. _____

Date of service _____

Date of delivery _____

Retailer code _____

Customer's name _____

Customer's tel. no. _____

I confirm that the vehicle has been inspected and delivered to my satisfaction.

Retailer's Signature

Customer's Signature

1000 kms Reassurance check-up	
General Status review Check closing efforts of doors, keyless entry system & other functions	Parking brake lamp/indicator High beam/Turn signal Hazard indicator & all other telltale lamp Cigarette lighter/rear defogger Check lighting system
Under hood Visually check routing, leaks & damage — Check fluid levels — Engine oil level — Brake oil level — Coolant level — M/T oil Windscreen washer level & add washer fluid	Horn/Radio/Outside Mirrors High/Low beam/Hazard signal Turn signal/Flash to pass signal Front/Rear fog lamps/Tail lamps Stop lamp/Reversing lamp/Trunk lamp
Underbody, wheels Visually check routing, leaks & damage Check tyre pressure	Dynamic Evaluation Steering function/noise/abnormal drag Clutch & gear shifting function/ noise Accelerating & braking function/ noise Check tyres Any other abnormal noise
Electrical Checks Malfunction indicator lamp Charging lamp Oil pressure lamp	

CHEVROLET Inspection

2nd Service Check 1 year / 15000 kms whichever occurs earlier

VIN _____

Regn. No. _____

Delivery date _____

Date of service _____

kms _____

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour free & Parts are chargeable
(Retain with job card)

CHEVROLET Inspection

1st Service Check 6 months / 7500 kms whichever occurs earlier

VIN _____

Regn. No. _____

Delivery date _____

Date of service _____

kms _____

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour free & Parts are chargeable
(Retain with job card)

164 Service and Warranty

Delivering Retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

Servicing Retailer's / ASO stamp & date

Delivering Retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

Servicing Retailer's / ASO stamp & date

CHEVROLET Inspection

4th Service Check 2 years / 30000 kms whichever occurs earlier

VIN _____

Regn. No. _____

Delivery date _____

Date of service _____

kms _____

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour & Parts are chargeable
(Retain with job card)

CHEVROLET Inspection

3rd Service Check 1.5 years / 22500 kms whichever occurs earlier

VIN _____

Regn. No. _____

Delivery date _____

Date of service _____

kms _____

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour & Parts are chargeable
(Retain with job card)

166 Service and Warranty

Delivering Retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

Servicing Retailer's / ASO stamp & date

Delivering Retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

Servicing Retailer's / ASO stamp & date

MAINTENANCE RECORD SHEET

(Repair category - Free Service/Paid Service/Running Repair/Accident Repair)

[illegible]

MAINTENANCE RECORD SHEET

(Repair category - Free Service/Paid Service/Running Repair/Accident Repair)

[illegible]

BATTERY

Battery type : _____

Battery make : _____

Battery batch code/ Sl. No. : _____

Important Instructions

- The battery must be fitted firmly in the cradle.
- Connecting cables and connectors must be fastened securely on to the battery.
- Connections must be made in the right polarity.
- Terminals must be kept coated with petroleum jelly/vaseline. DO NOT USE GREASE.
- Battery top & vent plugs must always be kept clean & dry.
- Electrolyte level must always be maintained in line with the bottom of the vent hole. In case of any drop in electrolyte level, add pure distilled water. NEVER ADD ACID.
- Battery is warranted for a period of one year only.
- Liability under this warranty is limited to defects arising out of faulty material or workmanship developing under proper use and NOT when the battery is merely discharged.

- Defects arising out of faulty vehicle electrical systems, negligent maintenance, incorrect charging or improper filling of the battery by unauthorized dealers/auto electricians are not covered by warranty.
- Consequent liabilities are not covered by this warranty policy.
- Get battery checked every 3 months.

CHEVROLET retailer's
Stamp

**SEPARATE
CORROSION PROTECTION
SERVICE**

Body/ Underbody Corrosion Protection Service

General Motors India Pvt. Ltd. provides a three (3) years or 1,00,000 kms (whichever is earlier) warranty vehicle that no rust-through of the body/underbody will occur, provided that the directives from General Motors India Pvt. Ltd. concerning the treatment, maintenance, and care of the vehicle (Owner's Manual) and especially the inspection and checks prescribed in the service booklet have been carried out.

Furthermore, the body paintwork and the corrosion protection must be visually inspected for damage as part of the regular annual inspection or 15,000 kms service. The customer is informed of any damage detected and measures to rectify this damage. Any damage discovered is also indicated in the following corrosion protection diagram.


Confirmation of the inspection is indicated by a stamp and dated signature, accompanied by indication of the vehicle mileage on the following verification documents.

Make use of this possibility in order to avoid problems during warranty claims regarding rust- through of the body / underbody.

The rust through warranty is not applicable if areas damaged by any reason remain unattended and become the cause of corrosion.

All repairs when required should be carried out promptly and by the CHEVROLET retailer.

BODY INSPECTION RECORD

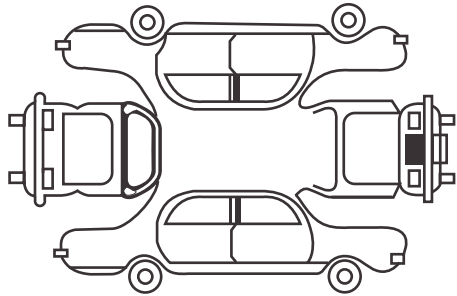
Vehicle identification number											
Registration number											
Name / address of owner											
											
Use the following symbols to indicate damage. ● Chipping ▲ Scratch ↑ Antirust re-treatment necessary ✕ Dent / Bumpy ■ Other damage											
In order to maintain the General Motors India Pvt. Ltd. rust-through warranty, the vehicle must be subjected to an inspection by CHEVROLET retailer once a year. Any resulting work is subject to a charge. Check-up 1 year after initial registration. Check-up date Odometer reading Damage found <table><tr><td>1. Outer body</td><td>Yes</td><td>No</td></tr><tr><td>2. Under body</td><td>Yes</td><td>No</td></tr><tr><td>3. Engine compartment</td><td>Yes</td><td>No</td></tr></table> Retailer stamp / signature Damage repaired Remarks :			1. Outer body	Yes	No	2. Under body	Yes	No	3. Engine compartment	Yes	No
1. Outer body	Yes	No									
2. Under body	Yes	No									
3. Engine compartment	Yes	No									
Yes No											

BODY INSPECTION RECORD

Vehicle identification number _____

Registration number _____

Name / address of owner _____

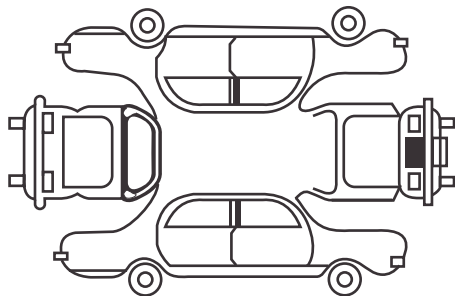

Use the following symbols to indicate damage.

- | | |
|-----------------------------------|----------------|
| ● Chipping | × Dent / Bumpy |
| ▲ Scratch | ■ Other damage |
| ↑ Antirust re-treatment necessary | |

In order to maintain the General Motors India Pvt. Ltd. rust-through warranty, the vehicle must be subjected to an inspection by CHEVROLET retailer once a year. Any resulting work is subject to a charge.

Check-up 2 year after initial registration.

Check-up date _____

Odometer reading _____

Damage found	1. Outer body	Yes ☐	No ☐
	2. Under body	Yes ☐	No ☐
	3. Engine compartment	Yes ☐	No ☐

Retailer
stamp / signature _____

Damage repaired Yes ☐ No ☐

Remarks : _____

EMISSION WARRANTY

(Applicable in NCR Delhi, Chennai, Kolkata and Mumbai)

Subject to other terms of the warranty policy and the conditions and obligations laid down hereunder, General Motors India Pvt. Ltd., certifies that the components liable to affect the emission of the gaseous pollutants in the vehicle in the normal use despite the use to which it may be subjected, comply with the provisions of Rule 115 (2) of the Central Motor Vehicle Rules, 1989, and further warrants that if on examination by a service center duly authorized by the General Motors India Pvt. Ltd., the vehicle is discovered to be failing to meet the emission standard as specified in the said rule, our authorized service center shall take such corrective measures as may be necessary and shall at its sole discretion either repair or replace free of charge such components of emission control system as are specified in Annexure II hereof.

The definitions of various terms used in Emission warranty proposal are given in Annexure –I. These definitions shall

be in line with the definition of the existing product Warranty definition.

Conditions :

1. This warranty will be in addition to and will run concurrently and parallel to the product warranty and will apply only in respect to components as mentioned in Annexure-II.
2. The period of the vehicle's warranty shall commence from the date of the vehicle sale.
 - 2.1 Warranty period - **1,00,000 kms or 3 years** whichever occurs earlier, from date of the vehicle sale.
- 3 The warranty claim will be accepted only after examination carried out by CHEVROLET retailers leading to a firm conclusion that none of the original settings/specifications have been tampered with and that the components (s) as mentioned in Annexure –II has/have a manufacturing defect, and/or, that the vehicle is unable to meet the In-use emission standards.
4. The methods of examination to determine the warrantable condition of the components will be at sole discretion of General Motors India Pvt. Ltd. and or its retailers and results of such examination will be final and binding. If, on examination, the warrantable condition is not established, General Motors India Pvt. Ltd. will have the right to charge full, or part, of the cost of such examination and resulting repairs/rectification
5. In case of acceptance of the warranty under Emission Warranty, General Motors India Pvt. Ltd. will replace, at retailers, free of charge, the components which are covered as mentioned in Annexure-II, but the consumables as mentioned in OM shall be charged as per actual applicable rates.
6. In case of a vehicle in which the components covered under Emission Warranty or the associated parts, are not independently

replaceable, on account of their being integral parts of a complete assembly, will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.

7. Any consequential repairs or replacement of parts which may be found necessary to establish compliance to In-use emission standards, in addition to the replacement of the components covered under Emission Warranty, will not be made free of cost unless such parts are also found to be in a warrantable condition within the scope and limit of the product Warranty (Chevrolet Sail-3 years / 1,00,000 kms, whichever is earlier). The consumables and labour shall be charged per actual during such repairs or replacement of parts.
8. All the parts removed for replacement under warranty will be the property of General Motors India Pvt. Ltd.

9. General Motors India Pvt. Ltd. will not be responsible for the cost of transportation of the vehicle to the nearest retailer or any loss due to non-availability of the vehicle during the period of a warranty claim and examination by CHEVROLET retailers.
10. General Motors India Pvt. Ltd. will not be responsible for any fines, penalties that may be charged by Statutory or Regulatory authorities on account of failure of the vehicle to comply with the in-use emission standards on the vehicle not meeting any such given legal/regulatory requirement, during inspection by such authorities.
11. Emission Warranty will be applicable irrespective of the change of ownership of the vehicle provided all the conditions as laid down in this document are met from the date of original sale of the vehicle.

This Emission Warranty will be applicable only if the customer :

- (i) Observes all the important instructions and any other precautions listed in the OM for use of the vehicle.
- (ii) Under all circumstances uses lubricants and fuel as recommended by General Motors India Pvt. Ltd.
- (iii) Regularly obtains and carries out maintenance at CHEVROLET retailers as per the list in this booklet only, in accordance with General Motors India Pvt. Ltd. guidelines and enters the details in the Service Booklet.
- (iv) Immediately approaches the nearest Authorized Service Center as per the list in this booklet upon discovery of failure to comply with the In-use emission standard in spite of having maintained and used the vehicle in accordance with the instructions in the OM and having

carried out such repairs and adjustments as may be required with a view to establish such compliance.

- (v) Produces the 'Pollution Under Control (PUC)' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate, or pursuant upon being directed by an officer as referred to in sub – rule (2) of Rule 116 of the Central Motor Vehicles Rules.
- (vi) Produces the service booklet (Owner's Manual) and all relevant bills for verification of details.
- (vii) Produces receipts covering maintenance of the vehicle as specified in the OM from the date of original purchase of the vehicle.
- (viii) Produces valid certificate of insurance & RTO registration.

Conditions under which warranty is NOT applicable:

1. Non production/availability of a valid 'Pollution under Control' certificates as described in customer obligation (V).
2. In case the vehicle is not serviced by CHEVROLET retailers as per the list in this booklet as per the service schedule described in the maintenance chart given in the Owner's Manual.
3. A vehicle, which has been subjected to abnormal use, abuses, neglect and improper maintenance or has met with an accident.
4. Use of such replacement parts, which are not specified and approved by General Motors India Pvt. Ltd.
5. If the vehicle or parts thereof, have been altered, tampered with or modified or replaced in an unauthorized manner.

6. A vehicle on which the odometer is not functioning or the odometer has been changed or the reading of which has been changed / tampered with so that the actual mileage cannot be readily determined.
7. A vehicle, which has been used, for competitions, races, rallies or for the purpose of establishing records.
8. Examination by CHEVROLET retailers as per the list in this booklet of the vehicle shows that any of the conditions stipulated in the OM with regard to use and maintenance have been violated.
9. A vehicle, which has been run on adulterated fuel or lubricant or fuels lubricants other than those, specified by General Motors India Pvt. Ltd.

Scope and Limits:

1. This emission warranty is in addition to the product warranty for the vehicle as per the scope and

176 Service and Warranty

limit described in the OM and all conditions described therein will apply, in addition to those exclusively stipulated in this warranty.

2. The emission warranty covers only compliance with the emission standard as specified in sub rule (2) of Rule 115 of CMVR. It does not cover any other performance of these parts or routine test and consequent maintenance or adjustments to establish compliance to the in-use emission standard as applicable to the state, in which the vehicle is registered and is in use.

ANNEXURE-I

Definitions:

1. **Vehicle** : The Motor Vehicle approved for sale within India under the provisions of Central Motor Vehicle Rules, 1989 or any subsequent amendment or substitution thereof.
2. **Owner's Manual (OM)** : A document given to the customer at the time of sale of the vehicle giving guidelines on use and maintenance of the vehicle including the terms and conditions of Warranty.
3. **Maintenance** : Maintenance as per the schedule provided in the Owner's Manual by General Motors India Pvt. Ltd. including inspection, verification check, adjustment and replacement, if necessary.
4. **Service Booklet** : The scheduled service record book in Owner's Manual, which is required to be filled by CHEVROLET retailer at the time of service.
5. **Abnormal Use** : The situations when the vehicle is put to use other than that intended by General Motors India Pvt. Ltd. such as racing, overloading or use of adulterated fuel or fuel not recommended by General Motors India Pvt. Ltd.
6. **Manufacturing Defect** : Means deficiency or deviation from normal production tolerance in design, material, or workmanship in a device or system which affects any parameter, performance, or component belonging to emission control system.
7. **Product Warranty** : The manufacturer warranty as provided by General Motors India Pvt. Ltd., which covers failure of various parts and systems as per the Owner's Manual 3 years/1,00,000 kms, whichever is earlier.
8. **Emission Warranty** : Warranty for emission performance of the vehicle as determined by sub-rule (2) of rule no 115 of the Central Motor Vehicles Rules, 1989.
9. **Authorized Service Centers** : Any service facilities authorized by General Motors India Pvt. Ltd. to perform warranty repairs. This shall include all of CHEVROLET retailers that are recognised for service of subject vehicles or any other service center duly authorized by General Motors India Pvt. Ltd.
10. **Warrantable Condition** : Warrantable condition means any condition of a vehicle, which triggers the responsibility of General Motors India Pvt. Ltd. to take corrective action within the framework of emission Warranty. This however shall not include any statutory or regulatory fines or penalties.
11. **Warranted Parts** : Those components, listed as per Annexure-II.

ANNEXURE-II

List of Components Covered under Emission Warranty

S. No.	Part name
1	Catalytic Converter***
2	Exhaust Manifold Gasket
3	Electronic Control Module
4	Idle Air Control Motor
5	Manifold Absolute Pressure Sensor
6	Throttle Position Sensor
7	Air Temperature Sensor
8	Oxygen Sensors
9	Coolant Temperature Sensor
10	Injectors
11	Knock Sensor
12	Exhaust Gas Re-circulation Valve
13	Fuel Pump

*** Catalytic Converter is covered only for emission related failures as provided under the warranty statement. Replacements if any shall not be applicable for breakage and noise problems.

Note : All the above mentioned parts are covered only if the car fails to meet the prescribed Emission norms. Any other performance problems shall be treated as not relevant to the Emission warranty.

SERVICE NETWORK

CHEVROLET SALES INDIA SALES AND SERVICE NETWORK

North Zone	180
West Zone	186
South Zone	191
East Zone	197
International	200

★ Indicates Retailer (Sales and Service)

○ Indicates Chevrolet Authorized Service Center

Authorized Service Center (ASC) are authorized to carry out Periodic Maintenance (Free/Paid, Minor Running Repair) Only.

The list of authorized Retailers / ASC are mentioned herein as of August, 2013. For any change in authorized Retailers /ASC, please visit www.chevrolet.co.in.

NORTH ZONE

STATE - DELHI

★ **Auto Vikas Sales & Service Pvt. Ltd.**

Showroom 1 :

26/3-4, Najafgarh Road Industrial Area,
Moti Nagar, New Delhi - 110015
Tel. : 011 - 49050505

Workshop 1:

12-A, Shivaji Marg, Najafgarh Road,
New Delhi - 110015
Tel. : 011 - 42070707, 42070788
Fax : 011 - 25451004, 42070735

Showroom & Workshop 2 :

J-10, Rajapuri, Palam, Matiala Road,
Opp. Sector-5, Dwaraka, New Delhi - 110 075
Tel. : 011 - 45595959, 45595909
Fax : 011 - 45595979

Showroom 3 :

Majesty Mall, Plot No. 2, Road No. 43,
Guru Harkishan Marg, Pitampura, Delhi - 110 034
Tel. : 011 - 42787878
Fax : 011 - 42787877

Workshop 3 :

G-14, Udyog Nagar, Rohtak Road, Peeragarhi,
Delhi-110041
Tel. : 011 - 42010101
Fax : 011 - 42010132

Workshop 4 :

B-239, Okhla Industrial Area Phase-1,
New Delhi - 110 020
Tel. : 011 - 49808080
Fax : 011 - 49808031

Workshop 5 :

62, Rama Road, New Delhi - 110015
Tel. : 011 - 43210707, 43210703
Fax : 011 - 43210709

★ **Arya Automobiles**

Showroom :

Plot No. 193, Metro Pillar No. 543,
Main Rohtak Road, Mundka, New Delhi - 110041
Tel. : 011 - 8743030301 / 302
Fax : 011 - 28342887

Workshop :

KH-82/21/2 & 22/2, Phirni Road,
Udyog Nagar Industrial Area,
Near Mundka Metro Pillar No.547,
New Delhi - 110 041
Tel. : 011 - 28342884

★ **Go Auto Pvt. Ltd.**

Showroom :

A 231, Okhla Industrial Area, Phase-1,
New Delhi - 110020
Tel. : 011 - 41855500, 9015444555

Workshop :

B-25, Okhla Industrial Area, Phase-1,
New Delhi - 110020
Tel. : 011 - 41955500, 9015777888

★ **Globus Motocorp Pvt. Ltd.**

Showroom :

ZB-43 & 44/487, Zulphe Bengal, Main GT Road,
Dilshad Garden, Delhi - 110095
Tel. : 011 - 43355555

Workshop :

B-31, Jhilmil Industrial Area, Behind Jhilmil Metro
Station, New Delhi - 110095
Tel. : 011 - 43388888

★ **Metro Motors Pvt. Ltd.**

Showroom & Workshop :

Bawa Potteries Industrial Complex,
Aruna Asaf Ali Marg, Vasant Kunj - 110 070
Tel. : 011 - 41761717, 46156666

Showroom 2 :

A-2/6, Safdarganj Enclave,
Africa Avenue, New Delhi - 110 029
Tel. : 011 - 46146666 / 75

★ **Triumph Motors**

Showroom :

A-9/3 Wazirpur Industrial Area, Near Richi Rich,
New Delhi - 110052
Tel. : 011 - 47444666
Fax : 011 - 42475584

Workshop :

C-13, Plot No. 65, SMA Industrial Area, GTK Road,
Opp. Jahangir Puri, Azadpur, New Delhi - 110 033
Tel. : 011 - 47444777

STATE - HARYANA

AMBALA

★ **Obero Motors Pvt. Ltd.**

Showroom :

Ramgarh, Near Central Jail Bridge, Chandigarh Road,
Baldev Nagar, Ambala City - 134 003
Tel. : 0171 - 2543010
Fax : 0171 - 2543510

Workshop :

Barwala, Naraingarh Road, Ambala City - 134 003
Tel.: 0171 - 2678013

BHIWANI

★ **Shailesh Automobiles**

Showroom & Workshop :

Rohtak Road, Bhiwani - 127021
Tel. : 01664 - 204006/008

DADRI

★ **Shailesh Automobiles**

Showroom & Workshop :

Near Loharu Chowk, Bhiwani Road, Dadri - 127 306
Tel. : 9253660069/70

FARIDABAD

★ **Regent Automobiles Ltd.**

Showroom :

14/3, Mathura Road, Faridabad - 121 003, Haryana
Tel. : 0129 - 4088530 / 31
Fax : 0129 - 2252304

Workshop 1 :

14/5, Main Mathura Road, Faridabad - 121 003
Tel. : 0129 - 2252151 - 55, 4261200

Workshop 2 :

Plot No.57, Sector-27C, Opp. Crown Interiorz Mall,
13/1, Mathura Road, Faridabad - 121 003
Tel.: 0129 - 2577777

GURGAON

★ **Bhanu Motors Pvt. Ltd.**

Showroom :

Shop No. 4, Omaxe Wedding Mall, Main Sohna Road,
Near Subhash Chowk, Gurgaon - 122001
Tel. : 0124 - 4757777

Workshop:

Plot No. 541, Sector-37, Part-II, Gurgaon - 122001
Tel. : 0124 - 4598888

★ **Gentech Toolings Pvt. Ltd.**

Showroom & Workshop :

Plot No. 66, IDC, Opp. Sector - 14
Mehrauli - Gurgaon Road, Gurgaon - 122 001
Tel. : 0124 - 4638751 - 54, 4368787
Fax : 0124 - 4638700

○ **Orix Auto Infrastructure Services Ltd.**

Workshop :

7B, Sector - 18, Maruti Industrial Area,
Gurgaon - 122 015
Tel. : 0124 - 3014700 / 701 / 719
Fax : 0124 - 3014702

★ **YAMUNA NAGAR**

Obero Motors

Showroom & Workshop :

Aggarsain Chowk, Near Gupta Palace,
Jagadhri - 135 003
Tel. : 01732 - 212030, 212010

KURUKSHETRA

★ **VPS Speciality Papers**

Showroom & Workshop :

Plot No.145 & 146, Industrial Area, Sector 2,
Kurukshetra - 136 118
Telefax : 01744 - 231050

HISSAR

★ **Ashwani Automotors**

Showroom & Workshop :

9 km Stone, OP Jindal Marg, Hissar - 125 044
Tel. : 01662 - 220710 / 11 / 12

JHAJJAR

★ **Shailesh Automobiles**

Showroom & Workshop :

Tehsil Road Jhajjar, Haryana - 124 001
Tel. : 9253660066 / 9254171300

JIND

★ **Lekh Raj Motors Pvt. Ltd**

Showroom & Workshop:

Safidon Road, opp. Brahmin Dharamsala, Jind.
Tel. : 9992900082

KAITHAL

★ **Lekh Raj Motors Pvt. Ltd.**

Showroom & Workshop :

Ambala Road, Kaithal, Haryana - 136027
Tel. : 0174 - 6226827

KARNAL

★ **Aryaman Automobiles**

Showroom & Workshop :

117/6, K.M. Milestone, Near Hotel New
World, G. T. Road, Karnal - 132 001
Tel. : 0184 - 2220011, 2220325
TeleFax : 0184 - 2220025

PANIPAT

★ **Aryaman Motors**

Showroom & Workshop :

Plot No 64, Sector -25, Huda Industrial Area Phase 1,
Panipat - 132103
Tel. : 0180 - 2666222 / 2666800

ROHTAK

★ **Badhwar Automobiles Pvt. Ltd.**

Showroom & Workshop :

Sonepat Road, Rohtak - 124 001
Telefax : 01262 - 256666

REWARI

★ **Vardhman Automobiles Pvt. Ltd.**

Showroom & Workshop :

Opp. Gurudwara, Jhajhar Road, Rewari - 123 401
Tel. : 01274 - 250440 / 251188
Fax : 01274 - 255966

SONIPAT

★ **Malwa Motors Sales Pvt. Ltd.**

Showroom & Workshop :

NH-1, 31 Km Stone, G.T. Road, Kundli,
Sonipat - 131 001, Haryana
Tel. : 0130 - 2219384 - 85, 2370386, 2371386
Fax : 0130 - 2219384

SIRSA

★ **Padam Motors Pvt. Ltd.**

Showroom & Workshop :

Hisar Road, Opp Traffic Police Post, Sirsa - 125055
Tel. : 01666 - 244445
Fax : 01666 - 244442

STATE - HIMACHAL PRADESH

MANDI

★ **Ram Hari Motors Pvt. Ltd.**

Showroom & Workshop :

Rani Ki Bain, Gutar, Mandi - 175 021
Tel. : 01905 - 225692
Fax : 01905 - 221691

MANALI

★ **Ram Hari Motors Pvt. Ltd.**

Showroom & Workshop :

Rotang Road, Village Vishisht Vihall, PO Vashisht,
Tehsil - Manali, Distt - Kullu, Manali - 175131
Tel. : 01902 - 254001

SIMLA

★ **Rajvir Motors**

Showroom & Workshop :

Bypass Road, Parasdass Garden, Simla - 171 001
Tel. : 0177 - 2674284 - 6
Fax : 0177 - 2674287

SOLAN

★ **Rajvir Motors**

Showroom & Workshop :

Kalka Shimla Road, Near Mehta Market,
Kumarhatti, Solan, Himachal Pradesh - 173 229
Telefax : 01792 - 266338

UNA

★ **Bhagat Ram Motorways Pvt. Ltd.**

Showroom & Workshop :

Una Nagal Road, Rakkar Colony, Una - 174 303
Tel. : 01975 - 238799
Fax : 01975 - 238699

182 Service Network

STATE - PUNJAB

- ★ **AMRITSAR**
S V Motors
Showroom :
Near Amritsar Gate, GT Road, Amritsar - 143001
Tel. : 0183 - 2700102
Fax : 0183 - 2700101
- Workshop :**
Main GT Road, Opp. ITBP Office, Amritsar - 143001
Tel. : 0183 - 2700201
- ★ **BATALA**
Kashmir Automobiles Pvt. Ltd. (Platinum Chevrolet)
Showroom & Workshop :
Opp. Cambridge International School, Saidmubarak,
Amritsar Road, Batala - 143505
Tel.: 01871 - 241024
- ★ **BHATINDA**
Padam Cars Pvt. Ltd.
Showroom & Workshop :
Goniana Road, 8th Mile Stone, NH-10,
Bhatinda - 151 005
Tel. : 0164 - 27601111 / 9216350205
Telefax : 0164 - 2760153
- ★ **CHANDIGARH**
RSA Motors Pvt. Ltd.
Showroom:
Plot No.5, Industrial Area, Phase-I,
Chandigarh - 160 002
Tel. : 0172 - 5033333, 9914110606
Fax. : 0172 - 5033338
- Work Shop:**
Plot No. 2, Industrial Area, Phase-I,
Chandigarh - 160 002
Tel. : 0172 - 5039999, 5041233, 9814106962
Fax. : 0172 - 5039939
- ★ **Padam Motors Pvt. Ltd.**
Showroom:
182/2, Industrial Area, Phase 1, Chandigarh - 160002
Tel. : 0172 - 5212900

Workshop :
185, Industrial Area, Phase 1, Chandigarh -160002
Tel. : 0172 - 5212999

- ★ **HOSHIARPUR**
Bedi Automobiles
Showroom & Workshop :
Piplawala, Jalandhar Road, Hoshiarpur - 146 022
Tel. : 01882 - 329696
Fax : 01882 - 253763
- ★ **JALANDHAR**
Aakriti World
Showroom :
Ground Floor, Vasal Tower, Police Lines,
Opp. President Hotel, Jalandhar - 144001
Telefax : 0181 - 5003333

Workshop :
1746 Ladowali Road, Near BSF Chowk,
Jalandhar - 144001
Tel. : 0181 - 5057777

- ★ **LUDHIANA**
Padam Cars Pvt. Ltd.
Showroom & Workshop :
Khasra No. 279/3, G.T. Road,
Dhandari Kalan, Ludhiana
Tel. : 0161 - 2510014
Telefax : 0161 - 2510015
- ★ **Omni Wheels Pvt. Ltd.**
Showroom & Workshop :
Plot No 73, New Kuldeep Nagar,
Basti Jodhewal Chowk, Ludhiana - 141 007
Tel. : 0161 - 5055900
Fax : 0161 - 5055911

- ★ **ROPAR**
Padam Cars Pvt. Ltd.
Showroom & Workshop :
Chandigarh Road, Nangal Chowk, Ropar - 140 001
Telefax : 01881 - 500099

- ★ **MOGA**
Padam Cars Pvt. Ltd.
Showroom & Workshop :
Near Majestic Resorts, Ferozepur Road,
Moga - 142 001
Tel. : 01636 - 225755

- ★ **NAWASHAHAR**
Aakriti World
Showroom & Workshop :
Chandigarh Road, Nawashahar, Punjab - 144 514
Tel. : 01823 - 285656
Telefax : 01823 - 285858

- ★ **PATIALA**
Padam Cars Pvt. Ltd.
Showroom & Workshop :
Main Patiala - Rajpura Road,
Opp. Caspa Resort, Bahadurgarh, Patiala - 147 001
Tel. : 0175 - 2663813 - 14, 9217100905 - 9
Fax : 0175 - 2663828

- ★ **PATHANKOT**
Kashmir Automobiles Pvt. Ltd.
Showroom & Workshop :
Simbel Chowk, Dalhousie Road, Pathankot - 145 001
Tel. : 0186 - 2257022 - 24

- ★ **SANGRUR**
Padam Cars Pvt. Ltd.
Showroom & Workshop :
College Road, Opp. Kamal Palace, Sangrur - 148001
Tel. : 9216350134, 9216911461

STATE - RAJASTHAN

- ★ **AJMER**
Rajdeep Autowheels [P] LTD.
Showroom :
12-15, ASC Road, Vaishali Nagar, Ajmer - 305001
Tel. : 0145 - 2628989 / 2625116

Workshop :
Khasara No-319 Kankarda Bhunaboy, NH-8,
Jaipur Road, Ajmer - 305001
Tel. : 0145 - 2788192 / 93 / 2788222 / 23

- ★ **ALWAR**
Triumph Motors
Showroom & Workshop :
Old Delhi Road, Near Jhankar Hotel, Alwar - 301 001
Telefax : 0144 - 3047571 - 78

- ★ **BIKANER**
Sunchri Cars
Showroom & Workshop :
 Plot No. 15, Transport Nagar,
 NH-15, Ganganagar Road, Bikaner - 334 001
 Tel. : 8003399060 / 66 / 69
- ★ **BANSWARA**
Atharva Motors Pvt. Ltd.
Workshop :
 Janamed, Udaipur Road, Banswara - 327001
 Tel. : 02962 - 250227
- ★ **CHITTORGARH**
Atharva Motors Pvt. Ltd.
Showroom :
 Plot No. 86, Kabir Colony, Bhilwara Road,
 Chittorgarh - 312001
 Tel. : 01472 - 247598
 Fax : 01472 - 247598
- Workshop :**
 Near Saint Paul's School, Opp. Rajasthan State
 Seed Corp., Nimbhera Road, Chittorgarh - 312001
 Tel. : 01472 - 240598
- ★ **CHOMU**
Triumph Motors
Showroom & Workshop :
 Near Radha Soami Bagh, Jaipur Road,
 Chomu - 303702
 Tel. : 0142 - 3304000
- ★ **JAIPUR**
Triumph Motors
Showroom 1 :
 Corporate Tower, A-1, Jawahar Lal Marg,
 Jaipur - 302015
 Tel. : 0141 - 4057575
 Fax : 0141 - 4057500
- Showroom 2 :**
 C7D, Sawai Jai Singh Highway,
 Bani Park, Jaipur - 302016
 Tel. : 0141 - 4122222
 Fax : 0141 - 4122233

- Workshop 1 :**
 G-109A, Sitapura Industrial Area, Jaipur - 302 004
 Tel. : 0141 - 5122333, 5113636, 5143737,
 5122797, 5122798, 5143636, 4090409
 Fax : 0141 - 5122552
- Workshop 2 :**
 E-12B, Vishwakarma Ind. Area, Road No. 01,
 Jaipur - 302013
 Tel. : 0141 - 4255555
- Workshop 3 :**
 E1 - 2295, Ramchandrapura Industrial Area,
 Sitapura Ext, Jaipur - 302022
 Tel. : 0141 - 4090409
- ★ **Baid Motors**
Showroom :
 1 A, & 28A, Karoli Bagh, Near Gujar Ki Thadi,
 Near Gopal Pura Bye Pass, Jaipur - 302019
 Tel. : 0141 - 2299992
- Workshop :**
 29-32, Sushilpura, Shyam Nagar,
 Ajmer Road, Jaipur - 302018
 Tel. : 0141 - 3535300, 2812865
- Workshop 2 :**
 Baid Garden, Near Heera Pura Power Station,
 Ajmer Road, Jaipur - 302016
 Tel. : 09829973356
- ★ **JHUNJUNU**
Triumph Motors
Showroom :
 Road No. 3 Near Perusingh Circle,
 Jhunjunu - 333 001
 Tel. : 9001094446
- ★ **JODHPUR**
Atharva Motors Pvt. Ltd.
Showroom :
 27/27A, Light Industrial Area,
 Near Shastri Circle, ITI Road, Jodhpur - 342 003
 Tel. : 0291 - 3048491

- Workshop :**
 E-711, Mia Bsn, IInd Phase,
 Behind Krishna Dharam Kanta, Jodhpur - 342 005
 Tel. : 0291 - 3048217 - 22
 Fax : 0291 - 3048223
- ★ **KOTA**
Triumph Motors
Showroom & Workshop :
 E - 137C, Road No. 5,
 Indraprastha Industrial Area, Kota
 Tel. : 0744 - 2372333, 2372666
- ★ **PALI**
Atharva Motors Pvt. Ltd.
Showroom & Workshop :
 Opp. Krishi Mandi, Jodhpur Road, Pali - 306401
 Tel. : 9414060104
- ★ **SIKAR**
Triumph Motors
Showroom & Workshop :
 Near Circuit House, NH-11, Jaipur Sikar Road,
 Sikar - 332001
 Tel. : 01572 - 245971
- ★ **SRI GANGANAGAR**
Sunchri Cars
Showroom & Workshop :
 6th Km Stone, Surat Garh Road, NH-15,
 Sri Ganganagar
 Tel. : 8003399070 / 71
- ★ **UDAIPUR**
Atharva Motors Pvt. Ltd.
Showroom & Workshop :
 A-83, Mewar Industrial Area, Madri, NH-8,
 Ahmedabad Bye Pass, Udaipur - 313 002
 Tel. : 0294 - 3002730, 3002769
 Fax : 0294 - 2490108

STATE - UTTAR PRADESH

- ★ **ALLAHABAD**
Eldee Motors
Showroom :
 Eldee Enclave, 2, S.P. Marg, Civil Lines,
 Allahabad-211 001
 Tel. : 0532 - 2560743, 44

184 Service Network

	Workshop : Kanodia Mill Compound 1, Luker Ganj, Allahabad - 211 001 Tel. : 0532 - 2616368	
★	AGRA Kalyan Auto Sales Showroom & Workshop : Opp. Bhagwati Dhaba, Near New Sabji Mandi, Sikandra, Agra - 282 007 Tel. : 0562 - 2640460 / 62 / 63 Fax : 0562 - 2640461	
★	BAREILLY VAT Motors Pvt. Ltd. Showroom & Workshop : 4.5 KM, Rampur Road, CB Ganj, Bareilly - 243 001 Tel. : 0581 - 2560741 Fax : 0581 - 2560731	
★	FAIZABAD Megha Auto (I) Pvt. Ltd. Showroom & Workshop : Lucknow Bypass Road, Sahadatganj, Faizabad - 224 001 Tel. : 09839099210	
★	GORAKHPUR United Motors Showroom : Kasia By-pass Road, Near Dr. Riyaz Ortho Hospital, Mohaddipur, Gorakhpur -273001 Tel.: 0551-2201667 Fax.: 0551-2338299	
	Workshop : Saryu Nahar Colony, Singharia, Gorakhpur-Deoria Road, Gorakhpur - 273008 Tel.: 0551-2270231	
★	GHAZIABAD Shiva Motors Showroom & Workshop : 28/3/5, Site - IV, Industrial Area, Sahibabad, Ghaziabad Tel.: 0120 - 3008600 / 605 / 631 / 632 / 635 / 636 Fax: 0120 - 3008643 / 45 / 48 / 49 / 50	
	Workshop 2 : 58/3, Site 04, Sahibabad, Ghaziabad - 200300 Tel. : 0120 - 4558765	
★	JHANSI Sri Venkateshwar Autocare Pvt. Ltd. Showroom & Workshop : Jhansi Kanpur Road, Goramachhiya, Jhansi - 284001 Tel. : 0510 - 2371144, 6450158	
★	KANPUR Cross Road Auto Pvt. Ltd. Showroom : 40, Government Industrial Estate, Opp. Sindhi Colony, Fazal Ganj, Kanpur - 208 012 Tel.: 0512 - 2221276 / 2220043	
	Workshop 1 : C-15A, Panki Industrial Area, Site-1, Kanpur - 208012 Tel.: 0512 - 2691293, 2691377	
	Workshop 2 : 122/236, A-1 & C-1, Fazalganj, Near Sangam Talkies, Kanpur - 208012 Tel.: 8009461111	
★	Romi Motors Pvt. Ltd. Showroom : 14/63, Civil Lines, Kanpur - 208 001 Tel.: 0512 - 3224703	
	Workshop : 120/192 (4), Lajpat Nagar, Near Mariampur Crossing, Kanpur - 208 012 Tel. : 0512 - 3224701 / 3224702	
★	LUCKNOW Megha Auto (I) Pvt. Ltd. Showroom & Workshop : 10/CP/5, Ring Road, Vikasnagar, Opp. Jagrani Hospital, Lucknow - 226 020 Tel. : 0522 - 4057999 / 4007977 / 2330180	
	Workshop 2: Mishipur Depot, Near Sanatan Cold Storage, Kursi Road, Lucknow - 226 026 Tel. : 0522 - 2890631	
★	MATHURA Kalyan Auto Sales Showroom : NH-2, Agra-Matura Road, Mathura Tel. : 9927000967	
★	MEERUT Vardajyoti Automobiles Pvt. Ltd. Showroom & Workshop : Madhuban Cinema Bldg., Madhuban Colony, Baghpath Road, Meerut - 250 002 Tel. : 0121 - 2404005 - 08 Fax : 0121 - 2404009	
★	MORADABAD Sigma Motors Pvt. Ltd. Showroom & Workshop : Near Radhakrishna Mandir, Delhi Road, Moradabad - 244001 Tel. : 0591-2550100-05, 7351007701-05, 7351003805	
★	MIRZAPUR Saraswati Industries Showroom & Workshop : Pili Kothi, Station Road, Mirzapur - 231001 Tel. : 05442 - 223923	
★	NOIDA Shiva Motors Showroom : G-24, Sector 11, Noida - 210301 Tel. : 0120 - 3359807 / 813	
	Workshop : C-80/81A, Sector - 8, Noida Tel. : 0120 - 3359807 / 813	
★	SAHARANPUR DPM Autosales Showroom & Workshop : Ambala Road, Near Badi Nahar, Saharanpur Tel. : 0135 - 2640877	
★	SHAHJAHANPUR VAT Motors Pvt. Ltd., Showroom & Workshop : Axis Chevrolet, 4.5 Km, Bareilly Road, Mauzampur, Shahjahanpur - 242001 Tel. : 8795030111	

★ **VARANASI**
Eldee Motors
Showroom & Workshop :
 38/46 E, Rehman Nivas, Mehmoorganj, Varanasi
 Tel. : 0542 - 3293429, 9305218380, 9336002532

STATE - UTTARAKHAND

★ **DEHRADUN**
DPM Autosales
Showroom & Workshop :
 Mohabewala Industrial Area,
 Saharanpur Road, Dehradun
 Tel. : 0135 - 2642051 / 52 / 53
 Fax : 0135 - 2642054

★ **HALDWANI**
Analysis Motors
Showroom :
 Rampur Road, Near Sushila Tewari Hospital,
 Haldwani - 263139, Distt. Nainital
 Tel.: 9258071041, 9258071009

Workshop :
 7.5km Stone, Gora Padav, Bareilly Road,
 Haldwani-263641
 Tel. : 05946 - 232050

★ **RUDRAPUR**
Analysis Motors
Showroom :
 Near Axis Bank, Nanital Road, Rudrapur - 263 153
 Tel. : 9258071011

Workshop:
 Industrial Area Kiccha Bypass Road,
 B-27, Rudrapur - 263153
 Tel.: 05944 - 243836

STATE - JAMMU & KASHMIR

★ **JAMMU**
K. C. Motors
Showroom & Workshop :
 NH-1, Bypass Road, Jammu - 180 004
 Tel. : 0191 - 2465769 / 59, 2460829
 Fax : 0191 - 2476660

★ **RS PURA**
K. C. Motors
Showroom & Workshop :
 Bagha Marh, RS Pura, Jammu
 Tel. : 01923 - 252809
 Fax : 01923 - 252809

★ **SRINAGAR**
K. C. Motors
Showroom & Workshop :
 By Pass Road, Hyderpora, Srinagar - 190 014
 Tel. : 0194 - 2443188

WEST ZONE

STATE - GOA

- ★ **VASCO-DA-GAMA**
Subrai Motors Pvt. Ltd.
Showroom & Workshop :
 F L Gomes Road, Vasco-Da-Gama, Goa - 403 802
 Tel. : 0832 - 2517421 / 22
 Fax : 0832 - 2513924

STATE - GUJARAT

- ★ **AHMEDABAD**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 Near JCB Service Station, S.G. Highway,
 Sarkhej, Ahmedabad - 380 015
 Tel. : 079 - 2474346, 39835544, 39835501
 Fax : 079 - 39835588

Showroom 2 :
 A/8,9,10,11,12,13 & 14, Radhe Shopping Mall,
 Khokhra, Maninagar, Ahmedabad
 Tel. : 079 - 32941862 / 32440235

Showroom 3 :
 Vedas Ground Floor, Opp SBI Saijpur Branch,
 NH 8 Naroda, Patia Cross Road, Ahmedabad - 382325
 Tel. : 079 - 22820106

Workshop 2 :
 Opp. Amraivadi Post Office, Near Hatkeswar Circle,
 Maninagar, Ahmedabad - 380 026
 Tel. : 079 - 30486501 / 02 / 03

- ★ **ANAND**
Shree Gopinathji Agencies
Workshop :
 Survey No. 570 - A/2, Near Indira Statue,
 Lambhavel Road, Anand - 388 001
 Tel. : 02692 - 247979 / 247878

- ★ **BHARUCH**
Shree Gopinathji Agencies
Showroom & Workshop :
 Beside K.U & Company Petrol Pump,
 NH-8, Village Vadadala, Bharuch - 392 015
 Tel. : 02642 - 654245, 291303, 654845
 Telefax : 02642 - 231584

- ★ **BHAVNAGAR**
V Raj Motors
Showroom & Workshop :
 Plot No. 150, Near Press Quarter,
 Opp. Maruti Showroom, Bhavnagar-Rajkot Road,
 Chitra, Bhavnagar - 364 003
 Tel. : 0218 - 2444590, 2444445

- ★ **BHUJ**
Cargo Motors
Showroom & Workshop :
 Plot No. 10, Survey No. 29/1,
 Bhuj - Mirzapur Road, Bhuj - 370001
 Tel. : 02832 - 654191 / 654192

- ★ **GANDHIDHAM**
Cargo Motors
Showroom & Workshop :
 NH-8A, Kandla Port Road, Gandhidham - 370 201
 Tel. : 02833 - 654370, 653317, 9825611692

- ★ **GODHRA**
Shree Gopinathji Agencies
Showroom & Workshop :
 Moonlight Cinema Compound, Vavdi,
 Godhra - 389 001
 Tel. : 02672 - 645828, 265270, 265271

- ★ **GANDHI NAGAR**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 Near Nigam Petrol Pump, Rajshree Cinema Road,
 Sector-21, Gandhinagar - 382 010
 Tel. : 0232 - 30516107

- ★ **HIMMATNAGAR**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 Near Motipura Circle, Opp. S.T. Workshop,
 Shamlaji Highway, Himmatnagar - 383 001
 Tel. : 02772 - 229525, 229524, 308000, 308001

- ★ **JAM NAGAR**
Gallops Motors Pvt. Ltd.
Showroom :
 Jamnagar - Rajkot Highway, Hapa,
 Opp. Tata IB Motors, Jamnagar
 Tel. : 0288 - 3216060

Workshop :
 Jamnagar to Rajkot Highway, 8 - Happa,
 Jamnagar - 320 120
 Tel. : 0288 - 3921194 - 98

- ★ **MEHSANA**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 Opp. Wide Angle, Nagalpur Highway,
 Mehsana - 384 002
 Tel. : 02762 - 241010, 302401 / 02 / 06
 Fax : 02762 - 245151

- ★ **NAVSARI**
Monarch Motors
Showroom & Workshop :
 Mahalaxmi Estate, Near Bhana Petrol Pump,
 Near Grid Char Rasta, N.H. No. 8, Navsari - 396424
 Tel. : 02637 - 265788 / 265599

- ★ **PALANPUR**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 Survey No. 525/1, Palanpur - Delhi Highway,
 Near Palanpur - Deesa Char Rasta, Palanpur - 385001

- ★ **RAJKOT**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 Survey No. 219/220, Opp. Parin furniture,
 Next to Jay Ganesh, AT & PO,
 Kotharia Gondal Highway, Rajkot - 360 003
 Tel. : 0281 - 3205151, 2370006 / 8 / 9 / 10,
 3983400, 3983407

Showroom 2 :
 Ground Floor, Fortune Square, Jalaram Street,
 Near Kotecha Circle, Kotecha, Rajkot - 360001
 Tel. : 9909992033

- ★ **SURAT**
Empire Cars Pvt. Ltd.
Showroom & Workshop :
 Plot No. 3, Near Rangoli Hotel, Rundh,
 Dumas Road, Surat - 395007
 Tel. : 0261 - 6713300 / 33
- ★ **Monarch Cars Pvt. Ltd.**
Showroom:
 Umiya Nagar Society,
 Near Shree Choshath Joganiyo Mata Mandir,
 Udhna Magdalla Road, Surat-394210
 Tel.: 0261-2720481, 2720482, 09825274707
- Workshop :**
 Next To Sameeti School, Patel Nagar Circle,
 Udhna Gam, Surat - 394210
 Tel.: 0261-3091001
- ★ **Nanavati Motors**
Showroom:
 Orchid Tower, Opp Intercity Township,
 Puna Kumbharia road, Surat-395010
 Tel.: 9879114447
- Workshop :**
 Opp. SBI Bank, Puna Patiya,
 Puna Kumbharia Road, Surat-395010
 Tel. : 0261-6456449/429/430
 Fax : 0261-2647771
- ★ **SURENDRA NAGAR**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 Plot No. 267, GIDC Vadhan, Opp. Market Yards,
 Near Rekha Bearings, Surendra Nagar
 Tel. : 02752 - 321542 - 43
- ★ **VAPI**
Desai Automobiles
Showroom & Workshop :
 At & Po : Balitha, Near Woodland Hotel,
 National Highway No. 8,
 Taluka Pardi, Vapi, Valsad - 395 015
 Tel. : 0260 - 6531783, 2400250 - 51
 Fax : 0260 - 2426525

- ★ **VADODARA**
Shri Gopinathji Agencies
Showroom & Workshop :
 Opp. Gujarat Elec. Board Sub Station,
 (Near Prakuti Resort), Chhani, Baroda - 390002
 Tel. : 0265 - 2761105 / 06
- Showroom & Workshop 2 :**
 R. S. No. 7, Opp. Atladra Railway Station,
 Atladra, Vadodara - 390 012
 Tel. : 0265 - 2681050, 1060, 0187, 1010, 1020
 Fax : 0265 - 2681050, 2354984
- Showroom & Workshop 3 :**
 3/A, Sahajanand Industrial Estate,
 Munjimahuda, Akota, Vadodara - 390 020
 Tel. : 0265 - 2681010, 2681020, 2359898, 2334109
 Fax : 0265 - 2681050, 2681060

STATE - MADHYA PRADESH

- ★ **BHOPAL**
Super Cars Ltd.
Showroom & Workshop :
 Plot No. 21 Sector G, Govindpura Industrial Area,
 J.K. Road, Bhopal - 462 021
 Tel. : 0755 - 4028400, 4228201
 Fax : 0755 - 4228203
- ★ **Varenayam Motors**
Showroom & Workshop :
 189, Angoori Bagh, Jinsi Road, Bhopal - 462008
 Tel. : 0755 - 2575288 / 299 / 300
 Fax : 0755 - 2579918
- ★ **CHHINDWARA**
Sunshine Motors
Showroom & Workshop :
 College Road, Lalbagh, Chhindwara - 480001
 Tel. : 0716 - 244125, 244129, 244193 / 194
 Fax : 0716 - 244126
- ★ **GWALIOR**
Sumedha Vehicles Pvt. Ltd.
Showroom & Workshop :
 Opp. Jhansi Road Police Station,
 Jhansi Road, Gwalior - 474 009
 Tel. : 0751 - 2422067, 4015789, 3291856
 Fax : 0751 - 2348024
- ★ **INDORE**
Super Cars Ltd.
Showroom :
 Saket Tower - 3A, Ratlam Kothi,
 Near Geeta Bhavan Square, AB Road, Indore - 452 001
 Tel. : 0731 - 4700053, 54
 Telefax : 0731 - 4700052
- Workshop :**
 49, United Compound, lasudiya Mori,
 Dewas Naka, Indore
 Tel. : 0731 - 470055, 56, 57
 Fax : 0731 - 470054
- ★ **Chhabra Autolink Pvt. Ltd.**
Showroom :
 Plot no.-10 Vishnupuri Main, Near Medisquare
 Hospital, Indore - 452010
 Tel : 0731-4267800
- Workshop :**
 Plot no.- 11/11,11/12, Survey no.- 26, Gram Palada,
 Khandwa Road, Indore - 452010
 Tel : 0731 - 6656000
- ★ **JABALPUR**
Oriental Motors
Showroom & Workshop :
 497, Karmeta, Near Padwar Kala,
 Katangee Bye Pass Road, Jabalpur - 482 003
 Tel. : 0761 - 3250007, 3260002, 3250003, 3290001
 Fax : 0761 - 4027011
- ★ **KHANDWA**
Bedi Motors
Showroom & Workshop :
 Gram Rehmapur, Indore Road, Khandwa - 450 001
 Tel. : 0733-2244075
- ★ **RATLAM**
Super Cars Ltd.
Showroom & Workshop :
 Jaora Road, Near RTO Office, Ratlam - 457 001
 Tel. : 07412 - 260040
- ★ **SATNA**
Oriental Motors
Showroom :
 Virat Nagar Colony, Pateri, Panna Road, Satna - 485 001
 Tel. : 07672 - 229495

188 Service Network

Workshop :

27, Industrial Area Near Union Floor, Rewa Road,
Satna - 485001

Tel. : 7672 -252763

STATE - MAHARASHTRA

AHMEDNAGAR

★ **Saideep Cars Pvt. Ltd.**

Showroom & Workshop :

Survey No. 55/1B/2/1, Nagar Manmad Road,
Ahmednagar - 414 111

Tel. : 0241 - 2779225 - 7

Fax : 0241 - 2779228

AKOLA

★ **Star Motors**

Showroom & Workshop :

9/1, Geeta Nagar Near, Alankar Petrol Pump,
Akola - 444 005

Tel. : 07242800087 / 7350008428

AMRAVATI

★ **Star Motors**

Showroom & Workshop :

Plot No. 8, Navathe Square Bandnera Road, Amravati
Tel. : 0721 - 2510199, 9921008861, 7350008426

AURANGABAD

★ **Soham Motors Pvt. Ltd.**

Showroom & Workshop :

Plot No. 2 & 3, N-2, Mukundwadi, Airport Road,
Aurangabad - 431 003

Tel. : 0240 - 6603769, 6503769

Workshop 2 :

Plot No. 28 & 29, MIDC Chikalathana, Aurangabad
Tel. : 0240 - 2489411, 2474342 - 6

BARAMATI

★ **Mota Automotive Pvt. Ltd.**

Showroom & Workshop :

41 / 1 / B / 17, Nira Road, Kasba, Tehsil - Baramati,
Dist - Pune - 413102

Tel. : 02112 - 222212, 220212

CHANDRAPUR

★ **ND Cars Pvt. Ltd.**

Showroom :

Nagpur Road Padoli, Chandrapur - 442 406

Workshop :

Plot No. E12, Behind Telephone Exchange MIDC,
Chandrapur - 422 406

DHULE

★ **Jitendra Wheels Pvt. Ltd.**

Showroom & Workshop :

P-62, Behind Hotel Manas, MIDC Avdhan,
Dhule - 424 001

Tel. : 02562 - 281222 / 232

JALGAON

★ **Soham Motors Pvt. Ltd.**

Showroom & Workshop :

93/1, MIDC, RL Square Aurangabad Road,
Jalgaon - 425003

Tel. : 0257-2211151, 2270085

KOLHAPUR

★ **Unique Automobiles**

Showroom & Workshop :

122/1, Pulachi Shirol, Opp. Sangli Phata,
Kolhapur - 416 122

Tel. : 0230 - 2461518 - 19

Fax : 0230 - 2461520

Showroom 2 :

Ayodhya Park, Opp. Sangam Talkies,
Kavala Naka, Kolhapur - 416 001

Tel. : 0231 - 2535315, 2535425

Fax : 0231 - 2535615

MUMBAI

★ **Ashtavinayak Auto Pvt. Ltd.**

Showroom :

D Mall, Off Veera Desai Road, Andheri (West),
Mumbai - 400 053

Tel. : 022 - 66488888

Fax : 022 - 66488880

Workshop :

Ram Mandir Road, Somani Gram,
Next to Central Warehouse Corporation,
Oshiwara, Goregaon (West), Mumbai - 400 051
Tel. : 022 - 26765555

★ **AVK Automart Pvt. Ltd.**

Workshop :

Fida Hussain Industrial Estate,
Near Samrat Hotel, Pandurang Wadi Road,
Mira Road (West), Mumbai - 401 104

Tel. : 022 - 28453178, 28455507, 28453564

★ **Nikhil Automobiles Pvt. Ltd.**

Showroom & Workshop 1 :

A 70, TTC Industry Area, Thane Belapur Road,
Kharghar, Near ICI Color Company,

Khoparkaine West, Navi Mumbai - 400 709

Tel. : 022 - 27780801, 40708888

Fax : 022 - 40708899, 27780805

Showroom 2 :

264-265, Vaswani Chambers, Opp. Old Passport
Office, Pravhadevi, Mumbai - 400 025

Tel. : 022 - 43459444, 24221711-12

Fax : 022 - 24222713

Workshop 2 :

C/o Bharat Tiles & Marbles Ltd.,
Jaibhimnagar, Dharukhana Road, Reay Road (East),
Near Sujala Hotel, Mumbai - 400 010

Tel. : 022 - 64560303, 23774514 / 15 / 16

Fax : 022 - 23774505

Workshop 3 :

Plot No. D - 238 - A, TTC Industrial Area,
MIDC Shiravane, Nerul, Navi Mumbai - 400 706

Tel. : 022 - 43448800

Workshop 4 :

RC 27 F - O/W/P23, Brick Bunder Sewri,
Haybunder Road, Kala Chowki, Mumbai - 400033

Tel. : 022 - 64560303

★ **JMD VFM Cars India Pvt. Ltd.**

Showroom :

471 A - 1st Floor KK Square, Adjoining Solitaire
Corporate Park, Near P&G Plaza Andheri (East),
Mumbai - 400099

Tel. : 022-28565900/02/03

Workshop :

Plot No. 48-A, Khairani Road, Opp. Gundecha
Chambers off, Sakivihar Road, Sakinaka Andheri
(East), Mumbai - 400072

Tel. : 022-28565900/01/02

○ **MULTIPLASTICS**

ORIX Auto

Workshop :

Plot No.94, Marol Co-op.Industrial Estate, Andheri (E)
Tel. : 022 - 4962444, 4965818

★ **NASIK**

Jitendra Wheels Pvt. Ltd.

Showroom & Workshop :

B-88, Arihant Plaza, MIDC, Ambad, Next to Hotel Taj,
Mumbai - Agra Highway, Nasik - 422 010
Tel. : 0253 - 2384432 / 632 / 832, 6636666, 6637777
Fax : 0253 - 2384532

★ **NAGPUR**

Star Motors

Showroom & Workshop :

44 / 4, Wahajara, Kamptee Road,
NH - 7, Nagpur - 440 026
Tel. : 0712 - 6507836/37, 6507916, 6461503 / 04
Fax : 0712 - 2632429

Showroom 2 :

885/0, Opp New Mehta Petrol Pump,
Old Bhandara Road, Nagpur
Tel. : 0712 - 2053584 / 2053583

★ **Tajshree Motors Pvt. Ltd.**

Showroom :

Plot No. 1 Hindustan Colony, Wardha Road,
Nagpur - 440 002
Tel. : 0712 - 2250242 / 2250243 / 2250244

Workshop :

Plot No. 679, Ghat Road,
Near Cotton Market Square, Nagpur - 440 018
Tel. : 0712 - 2734466 / 2734467

★ **NANDED**

Bafna Automotives

Showroom & Workshop :

Gut No. 235, Pimpalgaon (Mahadeo),
Nanded - Akola Road, Nanded - 431 607
Tel. : 02462 - 274069 / 652099, 311102

★ **PUNE**

Platinum Chevrolet

Showroom & Workshop 1 :

Sr No 45/1/B/A, Shankarseth Road, Gutkewadi,
Pune - 411037
Tel. : 020 - 26440029

Showroom & Workshop 2 :

Survey No 5/4, Najhate Nagar, kalewadi Main Road,
Thergaon, Pune - 411033
Tel. : 020 - 66326600, 66326632, 66326666

★ **Singh Cycle & Motor Co.**

Showroom 1 :

S. No. 38/4, Krishna Complex, Hadapsar Bypass Road,
Near Radisson Hotel, Kharadi, Pune - 411 014
Tel. : 020 - 32419385 / 32319526

Showroom 2 :

ICC Trade Centre, Showroom No. 4, Survey No. 403
A/2, Senapati Bapat Road, Pune - 411016
Tel. : 020 - 25666941 / 2 / 3 / 4

Workshop :

Reality Warehousing Pvt. Ltd., Gate No. 1337 / 1,
Pune Nagar, Wagholi, Pune - 412 307
Tel. : 020 - 46609999

★ **SATARA**

Unique Automobiles

Showroom & Workshop :

41, Mutha Colony, Sadar Bazar, Satara - 416 002
Tel. : 09623225299

★ **SOLAPUR**

Gandhi Wheels

Showroom :

163/1, Railway Lines, Solapur - 413 001
Telefax : 0217 - 2629400

Workshop :

Vale, Pune Road, Solapur - 413 001
Tel. : 0217 - 2500800

★ **SANGLI**

Unique Automobiles

Showroom :

442-3, Kulkarni Complex, 100 feet road,
South Sivaji Nagar, Sangli - 416 416
Tel. : 0233 - 2326544
Fax : 0233 - 2326594

Workshop :

Kulkarni Complex, 100 Feet Road,
Near MSEB Sub-Station, Sangli - 416 416
Tel. : 0233 - 2326544
Fax : 0233 - 2326594

★ **YAVATMAL**

SARAS MOTORS

Pobaru Marketing & Agencies Pvt. Ltd.

Showroom :

Shop No. 5,6,7,8 Udhog Bhavan,
Dharwaha Road, Yavatmal - 445 001
Tel. : 07232 - 255991
Fax : 07232 - 255992

Workshop :

Block No. B-16 MIDC (Lohara), Yavatmal - 445001
Tel. : 07798883816
Fax : 07232 - 255992

★ **THANE**

SC Auto Corporation

Showroom:

Modi House, Opp. to LIC Building, Naupada,
Eastern Express Highway, Thane (West),
Thane - 400 602
Tel. : 022 - 67610000
Fax : 022 - 67610209

Workshop :

Pioneer Estate Corporation, 133-134,
Pokhran Road No.2, Opp. Oswal Park,
Thane (West) - 400601
Tel. : 022 - 66040000
Fax : 022 - 66040102

★ **Angel Auto World Pvt. Ltd.**

Showroom & Workshop :

Grishma garden, Gokhivare, Vasai East, Thane,
Mumbai (Vasai) - 401208
Tel :0250-6453030 /6061777

★ **Nikhil Automobiles Pvt. Ltd.**

Showroom & Workshop :

Survey No.6, Hissa No.6, Manpada Gaon,
Kalyan Shill Road, Dombivali (East) - 421204.
Tel. : 0251-3048888/3048899

STATE - CHATTISGARH

★ **BILASPUR**
Vardhaman Motors
Showroom & Workshop :
Near Uslapur Railway Crossing, Mungeli Road,
Sakri, Bilaspur
Tel. : 07752 - 217934 / 217935

★ **RAIPUR**
Vardhaman Motors
Showroom & Workshop :
9/1, Mahoba Bazar, GE Road, NH-6,
Kumhari Dist. - Durg, Raipur - 492 001
Tel. : 7489177999, 7883221999

Showroom 2 :
Ashoka Millenium, Ring Road,
Raipur - 492 0011
Tel. : 7714030104, 7712410008

SOUTH ZONE

STATE - ANDAMAN & NICOBAR

- ★ **PORTBLAIR**
Group Engineers
Showroom :
 Prem Nagar Junction, (SY No 1394/1),
 Haddo Post Port Blair - 744102
 Tel. : 03192 - 230301, 242901
- Workshop :**
 Opp Womens Working Hostel, Dollygunj,
 Port Blair, Junglighat Post, Portblair - 744103
 Tel. : 03192 - 253044 / 253011

STATE - ANDHRA PRADESH

- ★ **ANANTPUR**
Dheeraj Motors
Showroom & Workshop :
 Survey No. 239/2C & 241/1C, Kakkapali Gram
 Panchayat, Opp. Sakshi News Paper Office,
 Anantapur - 515 001
- ★ **BHIMAVARAM**
Orange Auto Pvt. Ltd.
Showroom & Workshop :
 Door No. 2-25, # 6, Near Bharath petroleum bunk,
 Undi Road, Bhimavaram - 534 202
 Tel. : 9052781234 / 905224678
- ★ **CHITTOOR**
M.G. Brothers Automobiles (P) Limited
Showroom & Workshop :
 NH 4, Near Iruvaram Check Post, Chittoor - 517 001
 Tel.: 92470 00003, 9247000027
- ★ **GUNTUR**
Fusion Motors
Showroom & Workshop :
 Plot No. 296 & 297, Opp. Sarvani Diesel Enginnering,
 Autonagar Main Road, Autonagar, Guntur - 522001
 Tel. : 0863 - 6454545

- ★ **HYDERABAD**
Kun Automobiles (P) Ltd.
Showroom & Workshop 1 :
 Plot No. 74, Snehapuri Colony, Near Andhra Bank,
 Nagole Main Road, Nagole, Hyderabad - 500 035
 Tel. : 040 - 24220013, 44886666, 44886767/700/701
 Fax : 040 - 24220313

Showroom 2 :
 House No. 1-3-1045, Viceroy Hotel Lane,
 Kawadiguda Road, Hyderabad - 500 080
 Tel. : 040 - 27532385 - 89
 Fax : 040 - 27532384

Showroom 3 :
 Plot No.3 & 4, Ravi Colony, Main Road,
 Kondapur, Hyderabad - 500084
 Tel. : 040 - 45469999 / 89 / 79 / 69
 Fax : 040 - 45469959

Workshop 2 :
 1-8-670, Azamabad, RTC 'X' Road, Hyderabad-500020
 Tel. : 040 - 27668678 / 27668761
 Fax : 040 - 27668632

Workshop 3 :
 Plot No. 21, Mini Industrial Estate,
 Hafeezpet Road, Kondapur, Hyderabad - 500049
 Tel. : 040 - 31906677

Workshop 4 :
 Plot No.37, Survey No.45,Vignan Junior College
 Road, Kundapur, Hyderabad - 500081
 Tel. : 040 - 31906699

- ★ **Orange Auto Pvt. Ltd.**
Showroom 1 :
 6-3-249/3, Abhinandan Towers, Road No. 1,
 Banjara Hills, Hyderabad - 500 034
 Tel. : 040 - 66515555
 Fax : 040 - 66469999

Workshop 1 :
 B-45/46, Industrial Estate, Near Andhra Bank
 Sanatnagar, Hyderabad - 500 018
 Tel. : 040 - 66265555 / 66269999

Showroom & Workshop 2 :
 16-2-705/1/1, Malakpet, Opp. Srukrupa Market,
 Hyderabad - 500 036
 Tel. : 040 - 66815555
 Fax : 040 - 66179999

Showroom & Workshop 3 :
 A2, Balanagar Techno Craft Industrial Estate,
 Balanagar, Hyderabad - 500 037
 Tel. : 040 - 23721111
 Fax : 040 - 23729999

- ★ **KARIMNAGAR**
Kun Automobiles (P) Ltd.
Showroom & Workshop :
 M.No.8-6-128, Kothi Rampur, Hyderabad Highway
 Road, Karim Nagar - 505 001
 Tel. : 0878 - 2276633 / 9885520022
 Fax : 0878 - 2276633

- ★ **KHAMMAM**
Fusion Motors
Showroom & Workshop :
 Plot No. 11, Sri Sri Circle, Opp. Reliance Petrol Bunk,
 Rotary Nagar, Bypass Road, Khammam - 507 002
 Tel.: 9247623666, 8096991122

- ★ **KURNOOL**
Dheeraj Motors
Showroom :
 Survey No. 133/1a & 131/1, NH-7,
 Near Eenadu Press Office, Kurnool - 518 004
 Tel. : 08518 - 253777
 Fax : 08518 - 251777

Workshop :
 NH-7 Road, Near APS 2nd Battalion,
 Ballary Chowrasta, Kurnool - 518 004
 Tel. : 8518 - 253777

- ★ **NELLORE**
M.G. Brothers Automobiles (P) Limited
Showroom:
 26-2-1777, Near Ayyappa Temple, Vedayapalem Area,
 Nellore-524004
 Tel.: 9247000000

192 Service Network

★ **RAJAHMUNDRY**
Orange Auto Pvt. Ltd.
Showroom & Workshop :
 D. No. 82-10-2, Venkateswara Nagar,
 Near Lalacheruvu, Near ONGC Complex, NH-5 Road,
 Rajahmundry - 533 103
 Tel. : 0883 - 6575555 / 6580888

★ **TIRUPATHI**
M.G. Brothers Automobiles (P) Limited
Showroom:
 11-46/A, Renigunta Road, Tirupathi - 517501
 Tel.: 9299999970

Workshop :
 Plot No: 254, Auto Nagar,
 Near Vinayaka Temple, Renigunta Road,
 Tirupathi - 517506
 Tel.: 9247000024

★ **VISHAKHAPATNAM**
Orange Auto Pvt. Ltd.
Showroom & Workshop :
 D. No.38-22-87, Varun Avenue, NH-5, Murali Nagar,
 NH. Birla Junction, Vishakhapatnam - 530 075
 Tel.: 0891 - 2572222, 9052402345

Showroom 2 :
 D. No. 4-46-12, G. K. Mansiom, Pedawaltier,
 Vishakhapatnam - 530 017
 Tel.: 0891 - 2572222, 4444
 Fax: 0891 - 6645555

★ **VIJAYWADA**
Fusion Motors
Showroom :
 Fusion Towers, 36-12-2, Opposite to Siddhartha
 Public School, Moghul Rajapuram,
 Vijayawada - 520 010
 Tel. : 0866 - 6645555 / 9603123666
 Fax : 0866 - 6645592

Workshop :
 Opposite to Fusion Towers, 36-12-2,
 Near Siddhartha Public School, Moghul Rajapuram,
 Vijayawada - 520 010
 Tel. : 0866 - 6645593 / 94, 9603123777

★ **WARANGAL**
Kun Automobiles (P) Ltd.
Showroom :
 Door No. 15-2-4-1-1 & 15-2-4,
 Mulugu Cross, Warangal - 506 007
 Tel. : 0870 - 2421955
 Fax : 0870 - 2421955

Workshop :
 H. No. 23-6-132, Hunter Road,
 Opp. Citizens Club, Warangal
 Tel. : 0870 - 2523377 / 88 / 99
 Fax : 0870 - 2523399

STATE - KARNATAKA

★ **BANGALORE**
Frontline Automobiles
Workshop :
 # 36/2 - A, Pattangere Main Road,
 Next to R.R. Nagar RTO, Mysore Road,
 Bangalore - 560 059
 Tel. : 080 - 28604682 / 28605550

★ **Kropex India Ltd.**
Showroom & Workshop :
 49/1, Singasandara, Hosur Main Road,
 Bangalore - 560 068
 Tel. : 080 - 43574357
 Fax : 080 - 43574353

Showroom 2 :
 #7/1, Binnamangala, 100 Feet Road, 1st Stage,
 Indira Nagar, Bangalore, Karnataka - 560 038
 Tel. : 080 - 42019013
 Fax : 080 - 42019216

★ **Trident Automobiles Pvt. Ltd.**
Showroom & Workshop :
 SY. No. 18/1B, (Old No 18/1C), Nayanda Halli Grama,
 Kengeri Hobli, Bangalore - 560038
 Tel. : 080 - 67149191/292, 67149001

Showroom & Workshop 2 :
 No. 122/1, C. Shankar Reddy Layout, Kalyana Nagar,
 Outer Ring Road, Bangalore - 560 043
 Tel. : 080 - 43430300, 43430500
 Fax : 080 - 43430308, 43430517

Showroom 3 :
 14, Langford Avenue, Langford Road,
 Bangalore - 560 025
 Tel. : 080 - 4330300

Showroom 4 :
 No. 300 A - 70, 36th Cross, 10th Main,
 5th Block, Jay Nagar, Bangalore - 560 041
 Tel. : 080 - 42542999

Showroom 5 :
 # 95/3, Doddanekundi Village, Karthik Nagar,
 Marathahalli, Bangalore - 560037
 Tel. : 080-30651404

Workshop 3 :
 No. 558/1, 60 ft Road, 9th Cross, HAL 2nd Stage,
 Old Airport Road, Behind Leela Palace,
 Kodihalli, Indiranagar, Bangalore - 560008
 Tel. : 080 - 49155858

★ **K.H.T. Chevrolet (A Division Of Morzaria Real
 Tech Private Limited)**
Showroom :
 No: 725, West of Cord Road, Rajajinagar,
 1st Stage, Mahalakshmi Layout, Bangalore - 560 086
 Tel. : 080 - 49363636

Workshop :
 No. 305, 5th Main Road, 2nd Cross, 4th Phase,
 Peenya Industrial Area, Bangalore - 560 058
 Tel. : 080 - 49353637

★ **BELGAUM**
Bellad Enterprises Pvt. Ltd.
Showroom & Workshop :
 Shri Krishna Weaving Mill Compound,
 Vengual Road, Vijaya Nagar, Belgaum - 591 108
 Tel. : 0831 - 2449556 / 557, 6514911
 Fax : 0831 - 2472209

★ **BELLARY**
Bellad Enterprises Pvt. Ltd.
Showroom & Workshop :
 Near Bellary Rolling Mills, Anantpur Road,
 Bellary - 583 101
 Tel. : 08392 - 261234 / 5
 Fax : 08392 - 261235

- ★ **DAVANGERE**
Modi Motors
Showroom & Workshop :
 #869/1-2, PB Road, Opposite Sai International Hotel,
 Davangere - 577006
 Tel. : 08192 - 233896
- ★ **GULBARGA**
VKG Motor World
Showroom & Workshop :
 Plot - 1&2, Survey No. 116/2, Behind Mahendrakar
 Complex, Kapnoor Humnabad Road, Gulbarga - 585104
 Tel. : 08472 - 224555
 Fax : 08472 - 258019
- ★ **HUBLI**
Bellad Enterprises Pvt. Ltd.
Showroom & Workshop :
 Opp. NGEF, Rayapura, Dharwad,
 P. B. Road, Hubli-580025
 Tel. : 0836 - 2218338 / 39
 Telefax : 0836 - 2218337
- ★ **MANGALORE**
Frontline Automobiles
Showroom & Workshop :
 NH-17, Kullur, Mangalore - 575 013
 Tel. : 0824 - 2453091, 2453162, 2453092
 Telefax : 0824 - 2459391
- ★ **MYSORE**
Trident Automobiles Pvt. Ltd.
Showroom & Workshop :
 No. 201 / 1 & 2, Hunsur Road, Inkal Village,
 Mysore -570017
 Tel. : 0821 - 4240500 - 16
 Fax : 0821 - 4241899
- ★ **SHIMOGA**
Frontline Automobiles
Showroom & Workshop :
 Shankar Mutth Road, Shimoga - 577 201
 Tel. : 08182 - 229099
 Fax : 08182 - 229098

- ★ **UDUPI**
Frontline Automobiles
Showroom :
 Shekinah Manor, D. No. 10-47-A1,
 Near Laxmi Venkatesh Temple, NH-17,
 Ambagilu, Puttur, Santhekatte Post, Udupi - 576 105
 Tel. : 0820 - 2581999
 Fax : 0820 - 2583801
- Workshop :**
 NH-17, Behind IOCL Fuel Station,
 Katapady, Udupi - 574 105

STATE - KERALA

- ★ **ALLEPPEY**
Geeyam Motors Pvt. Ltd.
Showroom :
 Koorayil Annex, Opp. Bhattathiripurayidom,
 Near MCH Junction, Alappuzha, Alleppey - 688 001
 Tel. : 0477 - 2238501
- ★ **CALICUT**
German Motors
Showroom & Workshop :
 118-A, Chungam Junction, West Hill, Calicut - 673005
 Tel. : 0495 - 2383680 / 81, 2383770 / 71
 Fax : 0495 - 3041100, 2381909
- ★ **COCHIN**
Geeyam Motors Pvt. Ltd.
Showroom & Workshop :
 11/336, NH-47 Bye Pass, Nettor P.O.,
 Ernakulam, Cochin - 682 304
 Tel. : 0484 - 2703245 - 49, 3097100, 3097101
 Fax : 0484 - 2703244
- Showroom 2 :**
 33/2440B, Geetanjali Junction, NH Bypass
 Chakkaparambu, Cochin - 682 032
 Tel. : 0484 - 2343146
- ★ **CHALAKKUDY**
Geeyam Motors Pvt. Ltd.
Showroom :
 IX/461A, B, Panampilly College, NH-47, Potta,
 Chalakkudy - 680722
 Tel. : 0480 - 2705125, 2705123

- ★ **KANJRAPALLI**
Geeyam Motors Pvt. Ltd.
Showroom :
 Near A K J M School, K K Road, Kanjirappally
 (Kottayam Dt.)
 Tel. : 0482 - 8201616
- ★ **KANNUR**
German Motors
Showroom & Workshop :
 BP6-14A, Valapattanam, Kannur - 670 010
 Tel. : 0497 - 2774466 - 67, 3057200
 Fax : 0497 - 27744666, 3057200
- ★ **KASARGOD**
German Motors
Showroom & Workshop :
 15/89B, Citizen Nagar, Chengala, Kasargod - 671123
 Tel. : 04994 - 302200 - 10
 Fax : 04994 - 302211
- ★ **KAYAKULAM**
Geeyam Motors Pvt. Ltd.
Showroom & Workshop :
 NH-47, Near MSM College, Kayakulam - 690 502
 Telefax : 0479 - 2446650
- ★ **KODANGULUR**
Geeyam Motors Pvt. Ltd.
Showroom :
 XII/ 121-122, Opp. Medicare Hospital,
 Kottapuram PO, TKS Puram, Kodungalur - 680 667
 Tel. : 0480 - 2803561 / 62
- ★ **KOTAYYAM**
Geeyam Motors Pvt. Ltd.
Showroom & Workshop :
 Karithas Junction, Thellakom P.O., Kotayyam-686016
 Tel. : 0481 - 2792203
 Fax : 0481 - 2792383
- ★ **KOLLAM**
Deedi Motors
Showroom :
 Post Office Junction, Pallimukku, Kollam - 691 010
 Tel. : 0474 - 3257777 / 2725959
 Fax : 0474 - 2725900

194 Service Network

Workshop :

Cantonment, North Nagar, Pullikada, Kollam - 691001
Tel. : 0474 - 2750010 / 11

★ KOTTAKKAL

German Motors
Showroom & Workshop :
260A, Palathara, Cherusola P.O., Kottakkal,
Malappuram
Tel. : 0494 - 2611666

★ MUVATTUPUZHA Geeyam Motors Pvt. Ltd.

Showroom :
Mackar Plaza, EEC Market Road, PNB Junction,
Muvattupuzha - 686 673
Tel. : 0485 - 606600, 2835272 / 73
Fax : 0485 - 2832554

Workshop :

902/903, Opp. Mackar Plaza, EEC Market Road,
PNB Junction, Muvattupuzha - 686 673
Tel. : 0485 - 2835272 / 73
Fax : 0485 - 2832554

★ MUTTUM

Geeyem Motors
Showroom & Workshop :
SY NO: 70/15, 71/10, Thai Kkattukara P.O, N H Road,
Distt. Aluva, Muttum, Cochín - 683106
Tel. : 0484 - 2632193 / 94 / 95 / 96 / 97

★ PERINTHALMANNA

German Motors
Showroom & Workshop :
AP-IV 664E, Opp. ITC, Tirurkad,
Perinthalmanna - 679 531
Tel. : 04933 - 325060, 237000, 239878
Telefax : 04933 - 2737000

★ PALAKKAD

Geeyam Motors
Showroom & Workshop :
Door No. 8/1198, NH Bypass Road,
Chandra Nagar, Palakkad - 678 007
Tel. : 0491 - 2504133
Fax : 0491 - 2504143

★ PATHANAMTHITTA

Deedi Motors Pvt. Ltd.
Showroom & Workshop :
Kumbazhethu Buildings, Churulicode P.O.,
Kozhencherry Road, Pathanamthitta - 689 645
Tel. : 0468 - 2272079, 2272080
Fax : 0468 - 2272078

★ THIRUVALLA

Deedi Motors Pvt. Ltd.
Showroom :
No. 54/2, Kurusumootil Buildings,
M C Road, Mazhuvangad, Thiruvalla - 689 101
Tel. : 0469 - 2740800

★ THRISSUR

Geeyem Motors Pvt. Ltd.
Showroom :
14/3-A1, Guruvayoor Road Puzhakkal,
Ayyanthole P.O., Thrissur - 680 003
Tel. : 0487 - 2388945 - 46, 2388851 - 52
Fax : 0487 - 2388851

Workshop :

Near Boating Station, Puzhakkal Post Office,
Thrissur - 680553
Tel. : 0487 - 2225100, 2225101

★ TRIVENDRUM

Deedi Motors Pvt. Ltd.
Showroom / Workshop :
Erumalathopu, N.H. Bye Pass Road, Venpalvattom,
Anayara P.O., Trivendrum - 695 029
Tel. : 0471 - 2556006, 3257777, 2558599, 2558499
Fax : 0471 - 2551020

★ WAYNAD

German Motors
Showroom / Workshop :
Muttill - Post, North Kalpetta, Waynad - 673 122
Tel. : 04936 - 304200 / 202414
Fax : 04936 - 304201

STATE - PONDICHERY

★ PONDICHERY

Aakash Auto Pvt. Ltd.
Showroom :
No. 1, Sounderrajan, 100 ft. Road, Sounder Rajan
Nagar, Mudaliarpett, Pondicherry - 605 004
Tel. : 0413 - 2204400
Fax : 0413 - 2204033

Workshop :

No. 23, 9th Cross, Metupallyam,
Industrial Estate, Pondicherry - 605 009
Tel. : 0413 - 2279900

STATE - TAMIL NADU

★ CHENNAI

Sundaram Motors
Showroom & Workshop :
180, Anna salai Road, Chennai - 600 006
Tel. : 044 - 28579203 / 28 / 32
Fax : 044 - 28579210

Workshop 2:

116/4 Mahalakshmi Nagar Extention,
Numbal Village Thirverkadu Post, Chennai - 600077
Tel. : 044 - 26493020/21

★ KLN Motors Agencies Pvt. Ltd.

Showroom 1 :
Old No. 861, New No. 232, Poonamallee High Road,
Kilpauk, Chennai - 600 010
Tel. : 044 - 23452937 / 38
Telefax : 044 - 23452936

Workshop 1 :

Shop No. 50, SIDCO Industrial Area,
Ambattur, Chennai - 600 058
Tel. : 044 - 23452930 - 32

Showroom & Workshop 2 :

No. 8-NP, Developed Plot, Guindy Industrial Estate,
Ekkattuthangal, Near Kasi Theatre, Chennai - 600097
Tel. : 044 - 23458941 / 42

- ★ **CUDDALORE**
Aakash Auto Pvt. Ltd.
Showroom & Workshop:
 RS No.155/11, Vadalur Main Road, Periamedu,
 Karaikadu Village, Cuddalore Taluk,
 Cuddalore - 607005
 Tel.: 04142-297997, 7373299933, 7373599933
- ★ **COIMBATORE**
Anamallais Agencies (P) Ltd.
Showroom :
 252, Mettupalayam Road, Coimbatore - 641 043
 Tel. : 0422 - 2435555 / 2432999
 Fax : 0422 - 2446151
- Workshop :**
 249A, Mettupalayam Bye Pass Road,
 Coimbatore - 641043
 Tel. : 0422 - 2433444
- ★ **Pressana Automobile**
Showroom :
 No. 1987, Trichy Main Road, LCT Complex,
 Coimbatore - 641005
 Tel. : 0422 - 4041111
- Workshop :**
 505/1, Sowaripalayam Main Road,
 Ramanathapuram, Coimbatore - 641045
 Tel. : 0422 - 4051111
- ★ **ERODE**
Pressana Automobile
Showroom & Workshop :
 No.1, ChinnaKadu Thottam,
 Veerampalayam, Dhindal P.O., Erode - 638 012
 Tel. : 0424 - 2276046 / 47
 Fax : 0424 - 2276048
- ★ **HOSUR**
Thriive Cars
Showroom :
 2, Rajappa Mudaliar Building,
 NH-7, Krishnagiri, Bangalore Bypass Road, Hosur
 Tel. : 04344 - 644588
- Workshop :**
 2/2, 1E, Balaji Nagar, Rayakottai Road,
 Opp. to LUK India, Hosur - 635109
 Tel. : 04344 - 291033

- ★ **KARUR**
Pressana Automobile
Showroom & Workshop :
 No.3, Salem Bypass Road, Kulathupalayam,
 Karur - 635 006
 Tel. : 04324 - 222301
 Fax : 04324 - 222302
- ★ **MADURAI**
A.R.A.S. Motors (P) Ltd.
Showroom :
 35/1, Dindigul National Highway,
 Near A. R. C. Parcel Service, Villangudi,
 Madurai - 625018
 Tel. : 0452 - 2669617, 3091917
 Fax : 0452 - 2669618
- Workshop :**
 Plot No. 64 & 68, Thiruvavayanallur Post,
 National Highway No. 7, Opp Aroky Milk
 Processing Unit, Nagari, Madurai - 625 221
 Tel. : 0452 - 2463612 / 13 / 14
- ★ **NAGERCOIL**
A.R.A.S. Motors (P) Ltd.
Showroom & Workshop:
 2/86, Tirunelveli Main road,
 Ozhuginasery, Nagercoil - 629 001
 Tel. : 04652 - 644664 (Showroom)
 04652 - 272443 (Workshop)
- ★ **NAMAKAL**
Thriive Cars
Showroom :
 5/58, Salem Main Road, Namakal
 Tel. : 04286 - 275603
- Workshop :**
 276/85, Tiruchengode Main Road,
 Opp. Old Lakshmi Kalyana Mandapam,
 Namakkak - 637 001
- ★ **PUDUKOTTAI**
Jayaraj Karz
Showroom & Workshop :
 5915/1, Khalif Nagar, Thirumayam Road,
 Pudukottai - 622 001
 Tel. : 04322 - 262223

- ★ **PERAMBALUR**
Jayaraj Karz
Showroom & Workshop :
 No. 36, Trichy to Chennai Highway, Eraiyur,
 Veppanthattai, Perambalur, Tamilnadu - 621 133
 Tel. : 9244222728
- ★ **SALEM**
Thrive Cars
Showroom & Workshop :
 1116, Salem Chennai Highway Road,
 Near Holy Cross, Hr. Sec. School,
 Ammapet, Salem - 636 014
 Tel. : 0427 - 2242603
 Fax : 0427 - 2242604
- ★ **TRICHY**
Jayaraj Karz
Showroom & Workshop :
 Madurai Main Road, Panjapur, Trichy - 620 012
 Tel. : 0431 - 2906420 / 6541207
 Fax : 0431 - 2202187
- ★ **THIRUNELVELLI**
A.R.A.S. Motors (P) Ltd.
Showroom & Workshop :
 1183/3, National Highway Jothipuram,
 Konganthanparai, Thirunelveli - 627 007
 Tel. : 0462 - 2551070, 3269638
 Fax : 0462 - 2554111
- ★ **TIRUPUR**
Anamallais Agencies Pvt. Ltd.
Showroom :
 ERP Layout, Thottipalayam Village,
 Chikkanaicken Arts, College Road,
 Tirupur - 641 602
 Tel. : 0421 - 2234555
- Workshop :**
 No. 17/1, Angeripalayam Road,
 Teachers Colony, 1st Street,
 Thottipalayam Village, Tirupur - 641 602
 Tel. : 9994433164
- ★ **THANJAVUR**
Jayaraj Karz
Showroom & Workshop :
 Pudukottai Bye - Pass Road, Thanjavur
 Tel. : 04362 - 226452

196 Service Network

★ VELLORE
Sayar Cars
Showroom & Workshop :
S.F.No. 3004, New By Pass Road,
Near Collectorate, Vellore - 632004
Tel.: 0416 - 2222017

EAST ZONE

STATE - ARUNACHHAL PRADESH

- ★ **ITANAGAR**
Sango Motors
Showroom & Workshop :
 NH-52A, Near Shiv Mandir, 6 Km
 Between Nahalagun, Dist. Papumpare
 Itanagar, Arunachal Pradesh - 791 110
 Tel. : 0360 - 2001166 / 67, 2033153

STATE - ASSAM

- ★ **BONGAIGAON**
Raj N Dibyani Automobiles
Showroom & Workshop :
 Near Lower Assam Hospital, Chapaguri Road,
 North Bongaigaon, Bongaigaon
 Tel.: 03664 - 231890, 230545
- ★ **DIBRUGARH**
Pashupati Traders
Showroom & Workshop :
 P. N. Road, Chiring Chapori, Dibrugarh - 786 001
 Tel. : 0373 - 2323281
 Telefax : 0373 - 2323296
- ★ **GUWAHATI**
Srishti Automobiles Pvt. Ltd.
Showroom :
 Opp. Pantaloons, G S Road, Rukminigaon,
 Guwahati, Assam - 781 022
 Tel. : 0361 - 2223666
 Fax : 0361 - 2223888
- Workshop :**
 Radha Nagar, VIP Road, Six mile, Guwahati,
 Assam - 781 022
- ★ **SHIBSAGAR**
Pashupati Traders
Showroom & Workshop :
 KPM Chariali, Shivasagar, Shivasagar - 785 640
 Tel. : 03772 - 220082 / 88

- ★ **SILCHAR**
Smart Motors Pvt. Ltd.
Showroom & Workshop :
 NH-54, Ramnagar, Silchar - 788 008
 Tel. : 03842 - 268701, 9207042806

- ★ **NAGAON**
LB Motor (A Unit of Borah & Sons Pvt. Ltd)
Showroom & Workshop:
 AT Road, Dimarguri, Nagaon - 782003
 Tel.: 03672- 253157

- ★ **TEZPUR**
GNB Motors
Showroom :
 P.O. Nikamul, Beside Udyanpath,
 Tezpur - 784001
 Tel. : 03712 - 255999

Workshop :
 P.O. Nikamul, Udyanpath,
 Tezpur - 784001
 Tel. : 03712 - 255998

- ★ **TINSUKIA**
Dhansri Motors
Showroom & Workshop :
 Opposite New Tinsukia Railway Junction,
 A.T. Road, Hijuguri, Tinsukia - 786125.
 Tel. : 0374 - 2311397

STATE - BIHAR

- ★ **MUZAFARPUR**
Pandey Motors Pvt. Ltd.
Showroom & Workshop :
 Mithila Body Builders, NH-18,
 Bhagwanpur, Muzafarpur - 842 001
 Tel. : 0621 - 2252762

- ★ **PATNA**
Pandey Motors Pvt. Ltd.
Showroom 1 :
 Pandey Plaza, Exhibition Road, Patna - 800 001
 Tel. : 0612 - 2205195, 3955491
 Fax : 0612 - 2205196

Showroom 2 :
 Kankarbagh, Bhootnath Road, Patna - 800 020
 Tel. : 0612 - 3958708, 3297110

Workshop :
 Bhootnath Road, Sahadurpur, PS Agamkuan,
 Patna - 800 020
 Tel. : 0612 - 2341151

- ★ **GAYA**
Brijnandan Automobile Pvt. Ltd.
Showroom & Workshop :
 727 Old 1026 / New No. NH - 83,
 Near BMP - 3, Gaya - 823004
 Tel. : 0631 - 2200131

- ★ **PURNEA**
Hare Krishna Motors Pvt. Ltd.
Showroom & Workshop :
 Damka Chowk, NH - 31, Gulabghagh, Purnea - 854326
 Tel. : 9234323211

STATE - JHARKHAND

- ★ **BOKARO**
Power Motors
Showroom & Workshop :
 N-1, City Centre, Sector - 4,
 Bokaro Steel City, Bokaro - 827004
 Tel. : 0654 2- 233555 / 232977
 Fax : 06542 - 232988

- ★ **DHANBAD**
Black Diamond Techo Pvt. Ltd.
Showroom :
 Plot No. 2324, Near Vishal Mega Mart,
 Saraidhela, Dhanbad - 828 127
 Tel. : 0326 - 2224886, 2224892

Workshop :
 Tilakraidih, NH-33, P.O. K G Ashram,
 Near Govindpur, Dhanbad - 828 109
 Tel. : 0326 - 24010630

- ★ **HAZARIBAGH**
Laxmi Auto
Showroom :
 NH-33, Ranchi-Patna Road, Hazaribagh - 825 301
 Tel. : 06546 - 222928 / 222929

Workshop :
 NH-100, Nawabganj, Hazaribagh - 825 301
 Tel. : 06546 - 222928 / 222929

198 Service Network

★ **JAMSHEDPUR**
Narbheram Motors Pvt. Ltd.
Showroom & Workshop :
 M-4, Phase-VI, Adityapur Industrial Area,
 P.O. Gamaria, Jamshedpur - 832 108
 Tel. : 0657 - 3293612, 3297763, 3290649, 6510531
 Telefax : 0657 - 2200532

★ **RANCHI**
Rahul Automobiles Pvt. Ltd.
Showroom 1 :
 Piska More, Ratu Road, Ranchi - 834 005
 Tel. : 0651 - 2510251 / 52

Showroom 2 :
 Line Tank Road, MR Tower, Ranchi - 834 001
 Tel. : 0651 - 3298436
 Fax : 0651 - 2510252

Workshop :
 Ratu Road, Near Kamre Ashram, Ranchi - 834 005
 Tel. : 0651 - 2511558 / 564, 3241206

STATE - ORISSA

○ **ANGUL**
PMG
Workshop :
 Kulad Nalco Nagar, Angul - 759 145
 Tel. : 06764 - 220404

○ **BEHRAMPUR**
SHCL
Workshop :
 Padmoshree Cinema Hall, Lakshmi Bazar,
 First Gate, Behrampur - 760 006
 Tel. : 0680 - 2270611
 Fax : 0680 - 2270911

★ **BALASORE**
Venus Auto Works Pvt. Ltd.
Showroom & Workshop:
 NH - 5, Remuna Golai, Janaganj,
 Near Bhattar Mill, Balasore - 756 019
 Tel. : 06782 - 244013, 244014

★ **BHUBANESHWAR**
Venus Auto Works Pvt. Ltd.
Showroom & Workshop :
 A/62, Nayapalli, NH-5, Bhubaneshwar - 751 012
 Tel. : 0674 - 2565393 (Showroom)
 0674 - 2564440 (Workshop)
 Telefax : 0674 - 2564858

★ **Super Sales Automobiles Pvt. Ltd.**
Showroom & Workshop :
 Plot No. 644/2148, NH-5, Pahal,
 Bhubneswar, Dist - khurda - 752 101
 Tel. : 0674 - 2463913, 2463914, 6543010 / 11

CUTTACK
 ★ **Super Sales Automobiles Pvt. Ltd.**
Showroom :
 Rudrapur, NH - 5, Pratap Nagri, Cuttack - 753 011
 Tel. : 0671 - 2686878
 Fax : 0671 - 2686889

★ **SAMBALPUR**
Bharat Motors
Showroom & Workshop :
 9, Industrial Estate, New Central School,
 Bariapali, Sambalpur - 768 002
 Tel. : 0663 - 2402736, 2405286
 Fax : 0663 - 2585894

★ **ROURKELA**
Balaram Motors
Showroom & Workshop :
 Opposite Pahadi Kanta, Vedvyash, Rourkela - 769 041

STATE - WEST BENGAL

★ **ASANSOL**
Shailla Autotech
Showroom & Workshop :
 NH-2, Chanda More, Asansol - 713 339
 Telefax : 0341 - 2343704 / 705

★ **HOWRAH**
Priti Motor Udyog (P) Ltd.
Showroom :
 NH-6, Bombay Howrah Highway, Howrah

★ **KOLKATA**
OSL Autotech Pvt. Ltd.
Showroom :
 2/1A, Sarat Bose Road, Lansdowne Towers,
 Kolkata - 700 020
 Tel. : 033 - 66270400

Workshop :
 49 E, Topsia Road South, Kolkata - 700 046
 Tel. : 033 - 66270500

★ **Speed Autotech**
Showroom :
 "The Meridian", Kazi Nazrul Islam Sarani,
 (VIP Road), Kolkata - 700 059
 Tel. : 033 - 25007915 - 9
 Fax : 033 - 40150824

Workshop 1 :
 241/2B, APC Road, Opp. Khanna Cinema,
 Kolkata - 700 004
 Tel. : 033 - 25551370 / 72 / 73 / 74, 25552509

Workshop 2 :
 108 F, Nilgunge Road, Agarpara, Kolkata - 700058
 Tel. : 033 - 25552509

★ **Dulichand Motors Pvt. Ltd.**
Showroom :
 "Shrachi Towers", 686 Anandapur,
 E.M. Bypass, Near Ruby Hospital, Kolkatta - 700 107
 Tel. : 033 - 24431801 - 02, 40141616
 Fax : 033 - 40141624

Workshop :
 5/51, Jagatipota, Ahalya Nagar,
 Opp. Jagatipota Kisan Market, Kolkatta - 700 099
 Tel. : 033 - 40161718, 24264224, 24264214

★ **Devansh Auto Sales Pvt. Ltd.**
Workshop :
 49, DC Dey Road, Lane Beside Silver Sprin,
 E M By-Pass Road, Kolkata - 700015
 Tel. : 033 - 23296666

○ **Longia Motors Pvt. Ltd.**
Workshop 1 :
 15/1D, Sahanagar Road, (Near Rashbehari Avenue
 Crossing), Kolkatta - 700 026
 Tel. : 033 - 66270100 / 119
 Fax : 033 - 66270121

Workshop 2 :

Budge Budge Trunk Road, Rampur, P.O. : Gobindopur,
P.S. : Maheshtala, Kolkata - 700 141
Tel. : 033 - 66270222/223/205
Fax : 033 - 66270208

SILIGURI

★ **Kaysons Automotive Pvt. Ltd.**

Showroom & Workshop :
Illrd Mile, Checkpost,
Opp. New Eastern Bypass Road,
Sevoke Road, Siliguri - 734 401
Tel. : 0353 - 2544533 - 35, 2777723
Fax : 0353 - 2544456

STATE - MANIPUR**IMPHAL**

★ **Rajpri Enterprise**
Showroom & Workshop :
Chigmeirong Mamang Leikai,
Imphal East, Imphal - 795 001
Tel. : 0385 - 2421183

STATE - NAGALAND**DIMAPUR**

★ **Urban Station**
Showroom & Workshop :
NSC Petrol Pump, NH-39, 6th Mile, Kohima Road,
Dimapur, Nagaland - 797 112
Tel. : 03862 - 240994, 240992

STATE - TRIPURA**AGARTALA**

★ **Sri Krishna Automobiles**
Showroom & Workshop :
Plot No. 4612 & 4615, Shanihani,
Airport Road, Agartala, Tripura West - 799 001
Tel. : 0381 - 2342566

STATE - MEGHALAYA**SHILLONG**

★ **DH Royal Cars**
Showroom & Workshop :
Parkview, Fire Brigade,
Shillong - 793 014
Tel. : 0364 - 2520481, 2520477

STATE - SIKKIM**GANGTOK**

★ **GEN X Motors**

Showroom :

5th Mile, Jhordhara, Tadong, Gangtok - 737 102
Tel. : 03592 - 202515
Fax : 03592 - 203171

Workshop :

C/o Garima Enterprise, P.S. Road, Gangtok - 737 101
Tel. : 03592 - 202515

STATE - MIZORAM**AIZAWL**

★ **Highland**

Showroom & Workshop :

A-L Road, Zemabawk, Aizawl - 796017
Tel. : 0389 - 2351916

INTERNATIONAL

★ **SRI LANKA**
Mag City Motor Company Pvt. Ltd.
Showroom & Workshop :
No. 320A, Darley Road,
Colombo - 10, Sri Lanka
Tel. : 0094777410407

★ **BHUTAN**
Global Trade
Showroom :
Lkahilham, Changgankha,
Thimphu, Bhutan

Workshop :
Post Box No. 1037, Olarongcchu,
Thimphu, Bhutann