

FIAT FIAT

FIAT

FIAT

FIAT

FIAT

FIAT

FIAT



Owner handbook

Dear Customer,

We would like to congratulate and thank you for choosing a Fiat.

We have written this handbook to help you get to know all the features of your car and use it in the best possible way. This car is intended for daily use as well as for specific uses. Please take your time to familiarise with all the dynamic features of your car. Here you will find information, advice and important warnings regarding the use of your car and how to achieve the best performance from the technical features of your Fiat.

You are advised to read it right through before taking to the road for the first time, to become familiar with the controls and above all with those concerning brakes, steering and transmission; at the same time, you can understand the car behaviour on different road surfaces.

This document also provides a description of special features and tips, as well as essential information for the safe driving, care and maintenance of your Fiat over time.

In the enclosed Warranty Booklet you will also find a description of the Dealer Services that the Manufacturer offers to its customers, the Warranty Certificate and details of the terms and conditions for the maintenance of the vehicle.

We are confident that these will bring you closer to your new car and make you appreciate the assistance provided by the Stellantis team.

Enjoy reading. Happy driving!

ATTENTION

This Owner Handbook describes all Fiat 600 versions. Options, equipment dedicated to specific markets or versions are not explicitly indicated in the text: as a consequence, you should only consider the information which is related to the trim level, motor and version that you have purchased. Any content introduced throughout the production of the model, outside the specific request of options at the time of purchase, will be identified with the wording (where provided).

The data contained in this publication should be understood as intended to guide you in the correct use of the car. Stellantis Europe S.p.A. aims at a constant improvement of the vehicles produced. For this reason it reserves the right to make changes to the model described for technical and/or commercial reasons.

For further information, contact a Fiat Dealership.

IMPORTANT: PLEASE READ

REFUELING



Petrol engines: only refuel with unleaded petrol with octane number (RON) not less than 95 in compliance with the European specification EN228. Do not use petrol containing methanol or ethanol E85. Using these mixtures may cause starting and driving issues, as well as damage to fundamental components of the fuel feed system. For further details on the use of the correct fuel see the "Refuelling the car" chapter in the "Starting and driving" section.

STARTING THE ENGINE



Versions with automatic transmission: apply the electric parking brake, move the PRND command to select the gear P (Park) or N (Neutral), press the brake pedal, then turn the ignition device to 1 or press the ignition device button.

Electric versions: with the PRND command in position P, when the ignition device is brought to the position 1 or the START STOP ENGINE button is pushed, an acoustic warning is emitted and the message "READY" appears on the instrument panel display to indicate that the electric traction system of the vehicle has started. The vehicle is now ready to go.

PARKING ON FLAMMABLE MATERIAL



When operating, the catalytic converter becomes quite hot. Therefore, do not park your vehicle on grass, dry leaves, pine needles or other flammable materials: risk of fire.

RESPECT FOR THE ENVIRONMENT



The vehicle is equipped with a system that allows continuous monitoring of the components linked to emissions to ensure better respect for the environment.

ELECTRICAL ACCESSORIES



If, after buying the car, you decide to add electrical accessories (with the risk of gradually draining the conventional battery), contact a Fiat Dealership. They can calculate the overall electrical requirement and check that the car's electric system can support the required load.

SCHEDULED SERVICING



Correct maintenance helps to preserve the vehicle's performance and safety features, respect for the environment and low operating costs over time.

"CYBERSECURITY" DEVICES

The car is equipped with security devices developed according to the technological standards currently applied in the automotive industry to protect the onboard electronic systems from hacking attempts. The purpose of these security devices is to minimize the risk of cyber-attacks or the installation of viruses or malware which could compromise the performance of the car and/or allow stealing of personal data of the buyers and/or users and/or unauthorized dissemination of said information.

The car's purchaser must not remove, modify or tamper with these anti-hacking security devices. The Manufacturer will therefore not be liable for negative consequences and/or damage to the vehicle and/or to the buyer and/or to third parties deriving from the removal, modification or alteration of the security devices performed by the car's purchaser and/or user.

USE OF THE OWNER HANDBOOK

OPERATING INSTRUCTIONS

Each time an instruction is given that concerns direction (left/right or forward/backward), it is written to be read from the perspective of an occupant in the driver's seat. If a direction is written from a different perspective, it will be specified as such in the text as appropriate.

The figures in the Owner Handbook are provided by way of example only: this might imply that some details of the image do not correspond to the actual arrangement of your car. In addition, the Handbook has been conceived considering vehicles with steering wheel on the left side; it is therefore possible that on vehicles with steering wheel on the right side, the position or construction of some controls is not exactly mirror-like with respect to the figure.

To identify the chapter with the information needed you can consult the index at the end of this Owner Handbook.

The sections can be rapidly identified with dedicated graphic tabs, at the side of each odd page. A few pages further there is a key for getting to know the section order and the relevant symbols in the tabs. There is in any case a textual indication of the current section at the side of each even page.

WARNINGS AND CAUTIONS

While reading this Owner Handbook you will find a series of **WARNINGS** to prevent procedures that could damage your car. There are also **CAUTIONS** that must be carefully followed to prevent incorrect use of the components of the car, which could cause accidents or injuries.

Therefore, all **WARNINGS** and **CAUTIONS** must always be carefully followed.

WARNINGS and **CAUTIONS** are recalled in the text with the following symbols:



personal safety;



car safety;



environmental protection.

NOTE These symbols, when necessary, are indicated besides the title or at the end of the line and are followed by a number. That number recalls the corresponding warning at the end of the relevant section.

WARNING If a "conventional battery" is mentioned in the text, this indicates the 12V lead service battery located in the engine compartment. "Auxiliary battery" mentioned in the text means the 48V lithium-ion traction battery of the Hybrid system, which is located under front left seat. "High-voltage battery" in the text means the high-voltage lithium traction battery of the Full Electric traction system. The term "supplementary battery" instead means a lead battery outside the car used for jump starting.

SYMBOLS

Some car components have coloured labels whose symbols indicate precautions to be observed when using this component. See below for a brief description of each symbol summarising the contents herein. Always pay attention to all the warnings shown here.



READ THE OWNER
HANDBOOK



PROTECT YOUR
EYES



IT CAN START
AUTOMATICALLY
ALSO WITH ENGINE
OFF



DO NOT OPEN THE
CAP WHEN THE
ENGINE IS HOT



DO NOT OPEN:
HIGH PRESSURE
GAS



BURSTING



MOVING PARTS
KEEP PARTS OF
YOUR BODY AND
CLOTHES AWAY



CORROSIVE LIQUID



HIGH VOLTAGE

CHANGES/ALTERATIONS TO THE CAR

WARNING

Any change or alteration of the car might seriously affect its safety and road grip, thus causing accidents, in which the occupants could even be fatally injured.

ACCESSORIES PURCHASED BY THE OWNER

If after buying the car, you decide to install electrical accessories that require a permanent electrical supply (e.g. radio, satellite anti-theft system, etc.) or accessories that in any case burden the electrical supply, contact a Fiat Dealership, whose personnel will check whether the electrical system of the car is able to withstand the load required, or whether it needs to be integrated with a more powerful conventional battery.

WARNING Take care when fitting additional spoilers, alloy wheel rims or non-standard wheel hubs: they could reduce the ventilation of the brakes and affect efficiency under sharp, repeated braking or on long descents.

Make sure that nothing obstructs the pedal stroke (mats, etc.).

INSTALLING ELECTRICAL/ELECTRONIC DEVICES

Electrical and electronic devices installed after buying the car in the context of after-sales service must carry the following label



The Manufacturer authorises the installation of transceivers provided that installation is carried out at a specialised centre, in a workmanlike fashion and in compliance with manufacturer's specifications.

WARNING Traffic police may not allow the car on the road if devices have been installed which modify the features of the car. This may also cause invalidation of warranty in relation to faults caused by the change either directly or indirectly related to it.

The Manufacturer all not be liable for damage caused by the installation of accessories either not supplied or recommended by the Manufacturer and/or not installed in compliance with the provided instructions.

RADIO TRANSMITTERS AND MOBILE PHONES

Radio transmitter equipment (car mobile phones, CB radios, amateur radio etc.) cannot be used inside the car unless a separate aerial is mounted on the roof.

Transmission and reception of these devices may be affected by the shielding effect of the car body. As far as the use of EC-approved mobile phones is concerned (GSM, GPRS, UMTS, LTE), follow the usage instructions provided by the mobile phone Manufacturer.

WARNING The use of these devices inside the passenger compartment (without an external aerial) may cause the electrical systems to malfunction. This could compromise the safety of the car in addition to constituting a potential hazard for passengers' health.

WARNING If mobile phones/laptops/smartphones/tablets are inside the car and/or close to the electronic key, a reduced performance of the Passive Entry/START STOP ENGINE button system may occur.

KNOWING YOUR CAR



KNOWING THE INSTRUMENT PANEL



SAFETY



STARTING AND DRIVING



IN CASE OF EMERGENCY



SERVICING AND MAINTENANCE



TECHNICAL SPECIFICATIONS



MULTIMEDIA



CONTENTS



KNOWING YOUR CAR

In-depth knowledge of your new car starts here.

The handbook you are reading will tell you how things are done, and how it works in a simple, direct way.

ELECTRIC VERSION OPERATING PRINCIPLE	12
HYBRID VERSION OPERATING PRINCIPLE	16
KEYS LOCKS	20
IGNITION DEVICE	27
VEHICLE SECURITY	28
DOORS	29
SEATS	32
HEAD RESTRAINTS	36
STEERING WHEEL	37
MIRRORS	38
EXTERIOR LIGHTING	40
INTERIOR LIGHTING	45
WIPER CONTROL STALK	46
CLIMATE CONTROL SYSTEMS	48
WINDOWS	58
BONNET	60
LOAD COMPARTMENT	61
INTERIOR FITTINGS	64
ROOF RACK SYSTEM	68
ENGINE EXHAUST	69



ELECTRIC VERSION OPERATING PRINCIPLE

(where provided)

The propulsion system of the Full Electric Fiat 600 is completely powered by the energy contained in the high-voltage lithium-ion rechargeable battery of the car. Unlike conventional or hybrid cars, there is no internal combustion engine in this car.

The Fiat 600 uses the electrical energy stored in the high-voltage battery and not fuel. This battery provides the energy needed to start moving and therefore needs to be recharged before use. If the high-voltage battery is completely flat the car will not start.

This car also has a conventional battery (12V) of the same type as those used by cars with internal combustion engines. If the conventional battery is completely flat the car will not start.

The conventional battery supplies power to the conventional electrical system: lights, windscreen wipers, restraint systems (airbags and pretensioners), sound system, etc.

The high-voltage battery supplies power to the electric motor and supplies the high-voltage auxiliary devices (heaters, electric climate compressor, etc.). The electronic


converter that powers the 12V system for general car operation is also powered by the high-voltage battery and also recharges the conventional battery.

The battery is charged by connecting the charging socket of the car to the mains power supply using the charging cable.

The high-voltage battery is also partially recharged while driving during deceleration or braking. During this steps, the battery is recharged by regeneration via the electric motor. This is an efficient way of recharging as the kinetic energy of the car is used and converted into electric charging energy. Electric cars have specific characteristics of use, which is useful to know, in order to achieve optimal performance.

FUNCTIONAL DIAGRAM OF THE CAR

(where provided)

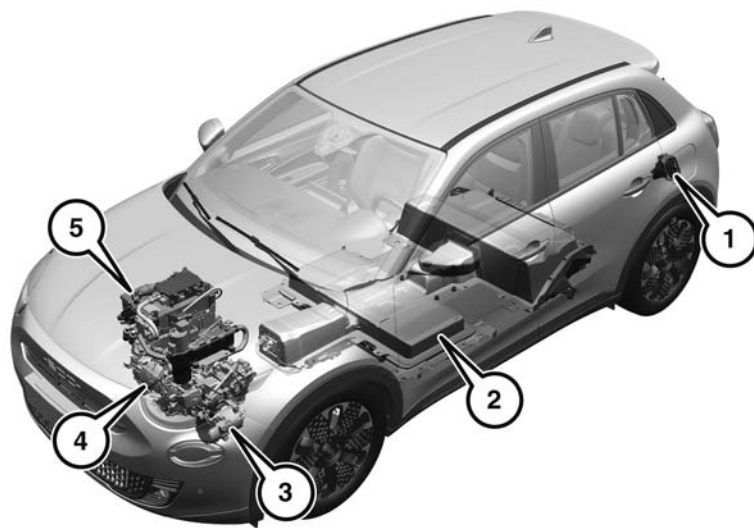

F6S0100

1. Charging port 2. High-voltage battery 3. High-voltage electrical compressor 4. Traction electric motor 5. Voltage converter



HIGH-VOLTAGE BATTERY

The high-voltage battery is located at the bottom of the vehicle in a central area and is maintenance-free.

The high-voltage battery is lithium-ion. Lithium-ion batteries provide the following benefits:

- ❑ are much lighter than other types of chargeable batteries of the same size;
- ❑ keep the charge longer;
- ❑ have no memory, i.e. it is not necessary to discharge them completely before recharging, as is the case with other types of batteries;
- ❑ can be recharged and discharged, charging times vary depending on home or public charging mode and power.

The high-voltage battery is equipped with conditioning systems that ensure that it operates under the best temperature conditions appropriate to its operation.

The traction battery's range varies depending on the type of driving, the route, the use of thermal comfort equipment and the ageing of its components.

NOTE The traction battery ageing depends on several factors, such as climatic conditions and the distance travelled.

 1) 2) 3) 4) 5) 6) 7) 8)

 1) 2) 3)

 1) 2)

HIGH-VOLTAGE BATTERY DISPOSAL

The high-voltage battery is designed to last for the lifetime of the car. If it is necessary to replace the battery, please contact a Fiat Dealership for information on disposal.

NOTE The car is provided with a high-voltage lithium-ion battery. Inappropriate disposal of this type of battery carries a risk of serious burns, electric shock and damage to the environment. In accordance with national and international battery regulations, the Manufacturer guarantees an adequate collection of this component in cooperation with qualified operators for the proper handling of the batteries to be disposed of.

GENERAL INFORMATION

The car is also equipped with a battery management system designed to:

- ❑ ensure safe operation
- ❑ optimise driving range
- ❑ optimise the working life of the high-voltage battery

If the temperature of the high-voltage battery is below -10°C, or above 40°C, some car functions may change or turn off as battery performance decreases outside this temperature range.

OPERATING MODE

As with a car with automatic transmission, you must get used to not using your left foot to activate the clutch pedal which is not present. While driving, when you lift your foot off the accelerator pedal or when you press the brake pedal during deceleration, the motor generates electric current which is used to brake the car and recharge the high-voltage battery.

 9) 10)

"TURTLE" MODE

If the  lamp is lit on the instrument panel display, the state of charge of the high-voltage battery is critical, the engine power gradually decreases and the range is limited. Put the vehicle on charge. If, after the charging the warning lamp remains lit, contact a Fiat Dealership.



WARNING

1) *The propulsion system of the electric car is connected by the high-voltage battery and when the system is active the components are then powered at high-voltage. Observe the warning messages on the labels on the car when accessing the motor compartment. Any intervention or modification on the high-voltage electrical system of the car (components, cables, connectors, high-voltage battery) is*

strictly forbidden due to the risks it may imply for your safety. In this case, contact a Fiat Dealership. Tampering with the high-voltage system can lead to serious burns or electrical discharges with even fatal consequences.

2) Do not resell, give away or modify the high-voltage battery. The high-voltage battery must only be used on the vehicle on which it is supplied. If used outside the vehicle or modified, accidents such as electric shock, heat or smoke generation, explosion or electrolyte leakage may occur. If the vehicle is scrapped without removing the high-voltage battery, contact with high-voltage components, cables and connectors could cause very dangerous electric shock. If the high-voltage battery is not disposed of properly, it may cause electric shock, resulting in serious injury or death.

3) The mains power supply and the high-voltage battery are potentially dangerous: they can cause injury, burns and risk of electrocution. Always take great care.

4) Never touch or tamper with the cables and components of the high-voltage battery in any way: do not allow the high-voltage battery components to come into contact with bracelets, necklaces or any metal objects worn.

5) Do not open, modify or remove the high-voltage battery cover: any gases released may be harmful and flammable: avoid inhaling the gases.

6) Damage to the vehicle or the high-voltage battery may cause harmful gases to escape, which could cause a fire. In the event of a fire, move away from the vehicle, wear a reflective vest (if required by the regulations in force), position

yourself in a safe place, and immediately contact the rescuers, police or fire brigade informing them that this is a vehicle with a high voltage system.

7) The electrolyte inside the battery is a polluting and flammable material. If the high-voltage battery is not disposed of properly, it may cause fire and pollute the environment.

8) Live parts of the car are marked with safety warning labels. The high-voltage battery bears a label indicating this danger.

9) In case of bad weather and flooded roads: Do not drive on a flooded street if the water level exceeds the lower part of the wheel rims.

10) Due to the quiet operation of your electric car, always set the PRND command to P and engage the electric parking brake and stop the motor before leaving the car. **DANGER OF SERIOUS INJURY.**



IMPORTANT

1) The high-voltage battery may only be disconnected by qualified personnel at a Fiat Dealership.

2) If, as a result of a violent impact or accident, the car has hit the bottom (underbody), have the battery and the high-voltage system checked by qualified technicians.

3) To preserve the mileage of your vehicle and the durability of your traction battery, the Manufacturer recommends that you; do not fully charge the battery of your electric vehicle daily (charge the traction battery below 80% as often as possible);

do not completely discharge the battery; do not store the vehicle for a long period of non-use (more than 12 hours) when the traction battery has a low or high charge level. Prefer a charge level between 20 and 40%; limit the use of fast charging; do not expose the vehicle to temperatures below -30°C and above $+60^{\circ}\text{C}$ for more than 24 hours; avoid charging the vehicle at negative temperatures (except if the vehicle ran more than 20 minutes) or above $+30^{\circ}\text{C}$; do not use the vehicle's high-voltage battery as a generator of energy; do not use a generator to recharge your vehicle's high-voltage battery.



IMPORTANT

1) Do not dispose of the battery yourself. If the car is scrapped, it must be taken to a Fiat Dealership to have the high-voltage battery removed and disposed of properly by the Fiat Dealership personnel who have the technical skills to operate in complete safety.

2) Live parts of the car are marked with safety warning labels. The high-voltage battery bears a label indicating this danger.



HYBRID VERSION OPERATING PRINCIPLE

(where provided)

HYBRID SYSTEM EQUIPMENT

 11) 12) 13) 14) 15)

The 600 Hybrid version is powered by an hybrid system that uses:

□ **an electric motor ("e-machine")**

integrated in the automatic transmission, mechanically connected to the heat engine and powered by an auxiliary lithium ion battery (48V)

□ **a BS (Belt Starter)**, activated by the auxiliary services belt, which makes it possible to start the heat engine with the car stationary or when driving at a low speed. In some phases, such as during "electric driving", it replaces the starter motor of the heat engine. In the latter case, when the car is stopped with automatic engine shutdown, the engine will be restarted by the BS (Belt Starter) device.

□ **an auxiliary 48V lithium ion battery** that has the function of storing energy for the car.

The Hybrid system makes it possible to improve performance (prompter response during transient stages), while

reducing fuel consumption and CO2 emissions.

NOTE The Hybrid system does not operate continuously, but is activated based on the state of the car, the state of charge of the auxiliary lithium ion battery (48V), the driving conditions (acceleration/deceleration/braking, engine starting) and on the conditions of the road surface (e.g. downhill road). The 48 V Li-ion (Lithium-ion) auxiliary battery stores the electrical energy needed to propel the vehicle. The traction battery is automatically charged to ensure that the charge level is always around 50% of the maximum level, in order to fully exploit the hybrid functionality and, at the same time, always have some capacity available for the energy recovery operation. It is located under the front left seat. The traction battery's range varies depending on the type of driving, the route and the ageing of its components.

The Hybrid system provides a power boost to the internal combustion engine during vehicle start-up when more traction torque is required, or at times of higher fuel consumption and emissions. In certain driving conditions, the Hybrid system control module regulates the energy flows based on

the charge level of the auxiliary lithium ion battery (48V).

NOTE The vehicle always starts with the petrol engine to ensure the efficiency of the catalytic converter and the availability of the brake assist.

The driving in all-electric is possible for parking manoeuvring, for 20 mph (30 km/h) speed zones in city, on urban and country roads with smooth driving and on motorways in slight deceleration or downhill. The electric motor is integrated into the automatic gearbox.

With the PRND command in P ("Park") and N ("Neutral"), an increase in noise from the engine compartment may be heard as the auxiliary battery (48V) charging phase begins: this is normal and not a fault.

Energy recovery

Maximise the vehicle's inertia by releasing the accelerator pedal so that the vehicle slows down by itself (e.g. when driving downhill or approaching a traffic light).

When the accelerator pedal is released, provided that the slider on the power indicator in the instrument panel is still moving in the CHARGE zone, energy recovery is optimal.

Energy recovery makes it possible to make efficient use of the "passive"

phases of driving (deceleration). The recovered energy is used to recharge the traction battery and is then used for all-electric driving or further acceleration.

When the traction battery is almost full, the energy recovery is gradually reduced.

DC/DC converter

To permit the conversion of the current originating from the 48V system into current that can be used by the 12V system, DC/DC is used: when driving the car, the DC/DC acts as a converter, making it possible to power and charge the 12V battery. The connecting cable allows the 12V and 48V system to be interfaced and to power the 12V system through the 48V auxiliary battery, the DC/DC converter and the BS (Belt Starter) device.



WARNING

11) *Improper use, or inappropriate interventions on the system components, can cause serious electric damage and cause serious accidents that can even result in death if the provided instructions are not observed. Always contact a Fiat Dealership.*

12) *In case of an accident, the system components could have suffered damage that cannot be seen. Do not touch or*

tamper with damaged components of the battery system: be careful to avoid short circuits. Contact a Fiat Dealership immediately.

13) *Do not make any changes to the components of the battery system: always contact a Fiat Dealership.*


14) *Do not puncture, crush, shake or deform the battery system.*

15) *The lithium ion auxiliary battery (48V) is located under the front left seat: therefore avoid getting the battery system wet with any type of liquid and do not park the vehicle over sources of external heat.*



FUNCTIONAL DIAGRAM OF THE CAR

(where provided)

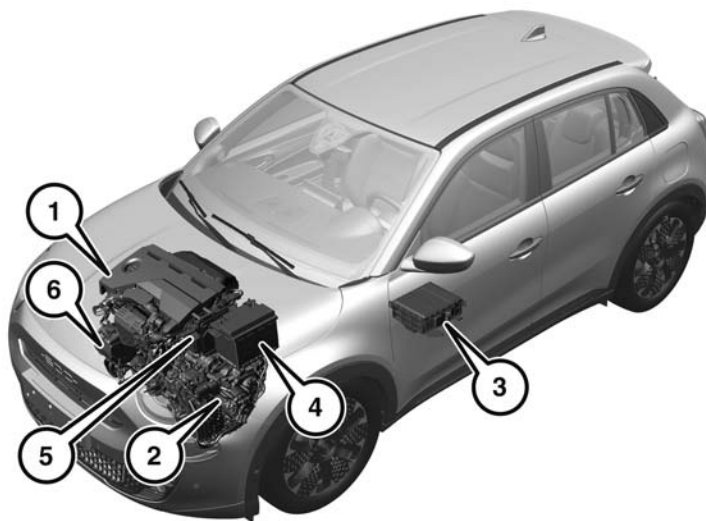

2

F6S0204

1. Petrol engine 2. Electric motor / 6-speed electric dual-clutch automatic gearbox 3. 48 V traction battery 4. 12 V accessory battery 5. DC/DC converter 6. Belt starter

AUXILIARY BATTERY

(Hybrid version)



The car is equipped with a sealed 48V auxiliary lithium-ion battery with the function of energy storage for the car.

The main functions performed by the auxiliary lithium-ion battery are to store the electric energy developed while braking and to supply it to the system when the electric motor starts to function.

The auxiliary lithium ion battery is partially charged during driving by recovering the kinetic energy of the car when slowing down and braking.

The auxiliary lithium ion battery recharges automatically to ensure that the charge level is always below 100%, in order to take full advantage of the hybrid functionality and, at the same time, always have a certain capacity useful for the energy recovery operation.

The battery does not require any type of maintenance. Its state of charge can be seen on the instrument panel display (see what is described in chapter Digital instrument panel 7") in the section "Knowing the instrument panel").

To ensure that the lithium ion battery is maintained properly over time, the vehicle must not be exposed

to temperatures below -10°C and above +40°C for extended periods of time, as some vehicle functions may change or become deactivated as the battery performance decreases outside this temperature range. The battery is equipped with conditioning systems that ensure that it operates under optimal temperature conditions appropriate to its operation.

The components of the hybrid system in the vehicle (DC/DC, inverter, 48V auxiliary lithium ion battery, control module of the electrified dual clutch automatic transmission) are cooled by the engine coolant (for more information refer to the "Checking levels" paragraph in the "Servicing and maintenance" section).

WARNING In case of a 48V lithium ion battery failure, contact a Fiat Dealership.

WARNING The battery has a limited service life. Its ability to conserve the charge decreases with time and use. The amount of decrease in battery capacity varies based on the external conditions (e.g. ambient temperature, etc...) and conditions of use, such as the driving style, for example. This is a natural characteristic of the lithium ion batteries and must not be considered

an index of malfunction. In addition, although the distance that can be travelled in electrical mode decreases as the capacity of the lithium ion battery decreases, the performance of the car is not affected.

GENERAL SAFETY INFORMATION

Improper use, or inappropriate work performed on the components of the system with incorrectly isolated equipment, could cause short circuits and cause accidents due to the passage of high currents and/or the high resulting temperatures. Have all repair/maintenance work carried out only at a Fiat Dealership.

If the battery system is used in an inappropriate manner, if it is damaged/overheats/tampered with or exposed to adverse environmental conditions (e.g. very high or very low temperatures), the battery could be damaged and release flammable electrolyte emissions. In these cases, have the 48 Volt battery replaced, and have the work performed only at a Fiat Dealership.

Vehicle in storage for more than 1 month

Always park the vehicle in a place with temperatures between -10°C and +30°C (parking in a place with



extreme temperature can damage the traction battery). Carry out the charging procedure for the traction battery (48V) via the accessory battery (12V) and the DC/DC converter.



WARNING

16) The electrolyte inside the battery is a polluting and flammable material. If the auxiliary battery is not disposed of properly, it may cause fire and pollute the environment.



IMPORTANT

4) If, as a result of a violent impact or accident, the car has hit the bottom (underbody), have the battery checked by qualified technicians.



IMPORTANT

3) Do not dispose of the battery yourself. If the car is scrapped, it must be taken to a Fiat Dealership to have the auxiliary battery removed and disposed of properly by the Fiat Dealership personnel who have the technical skills to operate in complete safety.

4) Live parts of the vehicle are marked with safety warning labels. The 48V lithium battery bears a label indicating this danger.

KEYS LOCKS

KEYS



Replacement keys

The key number is specified on a detachable tag.

The key number must be quoted when ordering replacement keys as it is a component of the immobiliser system.

The code number of the adapter for the locking wheel nuts is specified on a card. It must be quoted when ordering a replacement adapter.

Key with foldaway key section



3

JJ000559

Press button in fig. 3 to extend. To fold the key, first press the button and then fold.

RADIO REMOTE CONTROL



4

JJ000003

: unlocks the doors

: locks the doors

: long press unlocks and opens the tailgate

Enables operation of the following functions via the use of the remote control buttons:

- ☐ central locking system
- ☐ anti-theft locking system
- ☐ anti-theft alarm system
- ☐ tailgate unlocking
- ☐ power windows
- ☐ mirrors folding
- ☐ vehicle locator lighting

The remote control has a range of up to 50 m, but may also be much less due to external influences. The hazard warning flashers confirm operation.

Handle with care, protect from moisture and high temperatures and avoid unnecessary operation.

Fault

If the central locking system cannot be operated with the radio remote control, the cause may be one of the following:

- ❑ Fault in radio remote control.
- ❑ The battery voltage is too low.
- ❑ Overload of the central locking system by operating at frequent intervals, the power supply is interrupted for a short time.
- ❑ Interference from higher-power radio waves from other sources.

ELECTRONIC KEY SYSTEM

(where provided)



5

JJ000005

Enables a keyless operation of the following functions:

- ❑ central locking system
- ❑ ignition switching on and starting the engine

The electronic key simply needs to be on the driver's person.

For reasons of security, the electronic key may be equipped with a motion sensor. If so, starting of the vehicle is not possible when the electronic key has not been moved for a certain time. When trying to start the vehicle, a corresponding message appears in the instrument panel display. Move the electronic key and try to start the vehicle again.

Additionally, the electronic key includes the functionality of the radio remote control

Handle with care, protect from moisture and high temperatures and avoid unnecessary operation.

Fault

If the central locking cannot be operated or the engine cannot be started, the cause may be one of the following:

- ❑ Fault in electronic key.
- ❑ Electronic key is out of reception range.
- ❑ The battery voltage is too low.

- ❑ Overload of the central locking system by operating at frequent intervals, the power supply is interrupted for a short time.
 - ❑ Interference from higher-power radio waves from other sources.
- To rectify the cause of the fault, change the position of the electronic key.

REPLACING BATTERY IN RADIO REMOTE CONTROL/ELECTRONIC KEY



Replace the battery as soon as the system no longer operates properly or the range is reduced.

In the event of a discharged battery,  illuminates and a warning message is displayed in the instrument panel display.




6

JJ000005_2




Batteries do not belong in household waste. They must be disposed of at an appropriate recycling collection point.

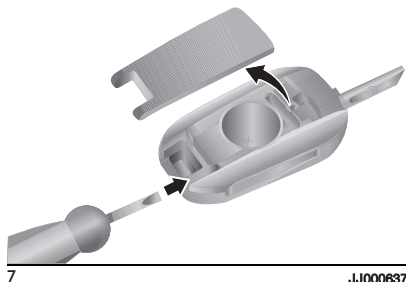

7

JJ000637

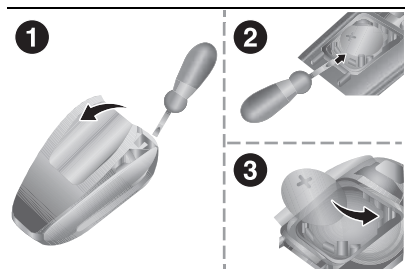

8

JJ000638

1. Remove the back cover by inserting a small screwdriver in the slot and lift the cover (fig. 7 for radio remote control, fig. 8 for electronic key).
2. Extract the flat battery from its location.

3. Replace battery with a battery of the same type. Insert the battery by pushing it against the contact located in the corner and then pressing it down. Pay attention to the respect the polarity.


4. Clip the back cover in place.
5. Reinitialise the remote control.

REINITIALISING THE REMOTE CONTROL

Following replacement of the battery or in the event of a fault, it may be necessary to reinitialise the remote control.

Radio remote control

- insert the key in the ignition switch and turn the key to position (2) fig. 9

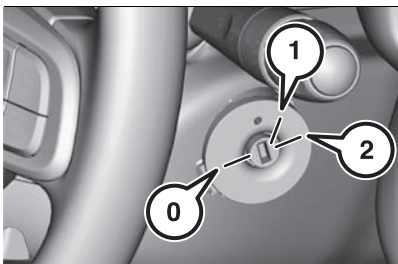

9

JJ000429

- immediately press the  button for a few seconds


- turn back the ignition switch to the position (0) fig. 9, and remove the key from the ignition switch

The remote control is now fully operational again.

If the fault persists after reinitialisation, contact a Fiat Dealership without delay.

Electronic key

- insert the mechanical key (incorporated into the electronic key) into the lock to open the vehicle
- place the electronic key against the back-up reader on the steering column and hold it there until the ignition is switched on fig. 10

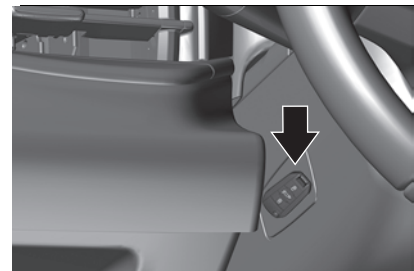

10

F6S0027

- while the PRND command is in mode P, depress the brake pedal

- switch on the ignition by pressing the STOP START ENGINE button

If the fault persists after reinitialisation, contact a Fiat Dealership without delay.

CENTRAL LOCKING SYSTEM

Unlocks and locks doors, load compartment and fuel filler flap.

A pull on an interior door handle opens the respective door.

NOTE In the event of an accident in which airbags or belt pretensioners are deployed, the vehicle is automatically unlocked.

Remote control operation




11

JJ000007

Unlocking

Press  fig. 11 to unlock the doors and switch on the interior and exterior lighting (Welcome lighting).

The function "Welcome lighting" can be activated/deactivated and adjusted through the **Uconnect™ 10.25"/10.25" NAV** system, fig. 12. See the "Guide-me-home and welcome lighting" paragraph in the "Exterior lighting" chapter.

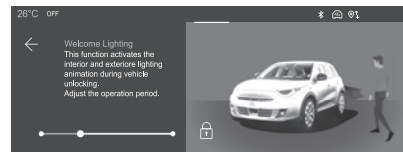


12

F6S0167

NOTE A short time after unlocking the vehicle with the remote control the doors are locked automatically if no door has been opened.

Unlocking mode can be set in the vehicle personalisation menu (Settings>Vehicle>Vehicle access) in the **Uconnect™ 10.25"/10.25" NAV** system, fig. 13 (see "Multimedia" section for further information).

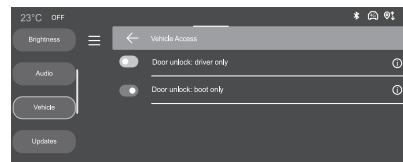

13

F6S0168

Following settings are selectable:



□ All doors, load compartment and fuel filler flap will be unlocked by pressing  once.

□ Only the driver's door and fuel filler flap will be unlocked by pressing  once. To additionally unlock all doors and the load compartment, press  a twice.

Select the relevant setting in the Vehicle personalisation.

Locking

Close doors, load compartment and fuel filler flap.



14

JJ000008

Press  fig. 14.

If the vehicle is not closed properly, the central locking system will not work. Operation of the central locking system is confirmed by the hazard warning flashers.

Load compartment



15

JJ000009

Press and hold  fig. 15 to unlock.

Unlocking settings for the load compartment can be set in the vehicle personalisation:

□ Only the load compartment will be unlocked by pressing  once.

□ All doors, load compartment and fuel filler flap will be unlocked by pressing  once.

Depending on the chosen setting in the vehicle personalisation, the load compartment can be locked:

□ by simply closing the opened tailgate.

□ by pressing  once on the remote control with the tailgate closed.

Select the relevant setting in the vehicle personalisation.

Confirmation

Operation of the central locking system is confirmed by the hazard warning flashers and an audible chime.

ELECTRONIC KEY SYSTEM OPERATION


The electronic key must be outside the vehicle, within a range of approx. 1 m of the relevant door side.

This system allows automatic vehicle locking and unlocking simply by detection of the electronic key. The electronic key must be outside the vehicle.

NOTE If the vehicle is not closed properly or the electronic key remains in the vehicle, locking will not be permitted.

If the vehicle is equipped with an anti-theft alarm system, a warning chime sounds after a few seconds.

NOTE The electronic key may not operate if placed close to electronic devices such as mobile phones or laptop computers.

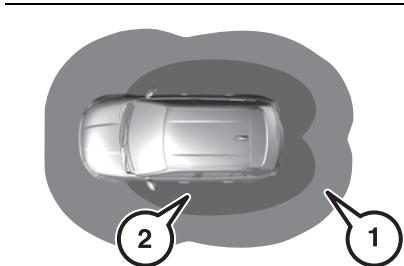

16

F6S0001

□ Zone 1 fig. 16: automatic locking on leaving the vehicle

□ Zone 2: automatic unlocking on approaching the vehicle

NOTE If the electronic key remains for more than 15 minutes in zone 1, automatic unlocking is deactivated.

Unlock the vehicle by pressing  or  on the remote control or touch the sensor of the driver's door handle to unlock the vehicle. Automatic locking and unlocking is activated again.

NOTE A short time after automatic unlocking, the vehicle is relocked if no door has been opened.

NOTE If the ignition is switched off for more than 9 days or the vehicle conventional battery has no sufficient charging, the automatic function is disabled. Press  or  on the remote control or touch the sensor of

the driver's door handle to unlock the vehicle.

In the event that the ignition is switched off for more than 21 days, the only way to unlock the vehicle is by pressing  or  on the remote control.

Unlocking / locking

Unlocking / locking mode can be set in the vehicle personalisation menu in the Info Display. Following settings are selectable:

□ Only the driver's door and fuel filler flap will be unlocked / locked.

□ All doors, load compartment and fuel filler flap will be unlocked / locked.

□ Only the load compartment will be unlocked / locked.

Operation with buttons on the electronic key



17

JJ000011


The central locking system can also be operated with the buttons on the electronic key.

Press  or  fig. 17 to unlock

Press  to lock.



Driver's door handle

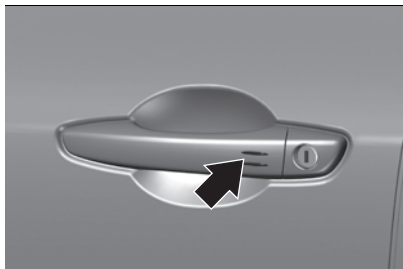

18

F6S0040

The central locking system can also be operated by touching on the sensor of the driver's door handle (where provided) (fig. 18).

Touch the sensor of the drivers's door handle to unlock or to lock.

Confirmation

Operation of central locking system is confirmed by the hazard warning flashers.

CLOSING THE WINDOWS

An audible signal sounds before the start of the movement.

To completely close the windows press the locking button for more than 2 seconds.

Press again to stop closing.



WARNING

- 17)** Never remove the key from ignition switch during driving as this will cause steering wheel lock.
- 18)** Press button only with the key away from your body, especially your eyes and from objects which could get damaged (e.g. your clothes). Do not leave the key unattended to avoid the button being accidentally pressed while it is being handled, e.g. by a child.
- 19)** Do not swallow the battery. Danger of chemical burns. The keys contain a small battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and cause death. Keep new and used batteries out of the reach of children. If the battery compartment does not close securely, discontinue use of the product and keep it out of reach of children. If you believe that batteries may have been swallowed or inserted inside the body, seek medical attention immediately. The emergency key (where provided) must be immediately inserted into the electronic key to prevent easy access to the battery.
- 20)** Risk of explosion if the battery is replaced with an incorrect type! Replace the battery with the same type.
- 21)** Risk of explosion or leaking of inflammable liquid or gas! Do not use in/store in/place in an environment where the temperature is extremely high or where the pressure is extremely low due to very high altitude. Do not try to burn, crush or cut a used battery.
- 22)** Ensure that no person or object could prevent the correct closing of the windows and sunroof. If, on versions with alarm, you

want to leave the windows and/or sunroof partially open, you must first deactivate the interior volumetric alarm protection. For more information on the alarm, refer to "Vehicle security" chapter in this section.



IMPORTANT

- 5)** Do not attach heavy or bulky items to the ignition key.
- 6)** The electronic components inside the key may be damaged if the key is subjected to strong shocks. In order to ensure complete efficiency of the electronic devices inside the key, it should never be exposed to direct sunlight.



IMPORTANT

- 5)** Remote control used batteries may be harmful to the environment if not disposed of correctly. They must be disposed of as specified by law in the special containers or taken to a Fiat Dealership, which will take care of their disposal.


IGNITION DEVICE

23) 24) 25) 26) 27) 28)

IGNITION SWITCH POSITIONS

(where provided)

Turn key:

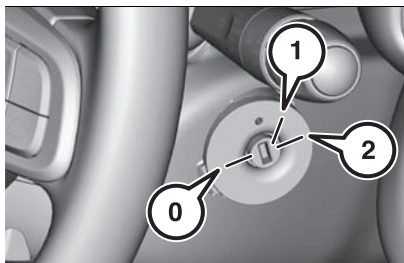

19

JJ000429

(0) fig. 19: ignition off: some functions remain active until key is removed or driver's door is opened, provided the ignition was on previously

(1): ignition on power mode: ignition is on, control indicators illuminate and most electrical functions are operable


(2): engine start: release key after engine has been started

Steering wheel lock

Remove key from ignition switch and turn steering wheel until it engages.

STOP START ENGINE BUTTON

(where provided)

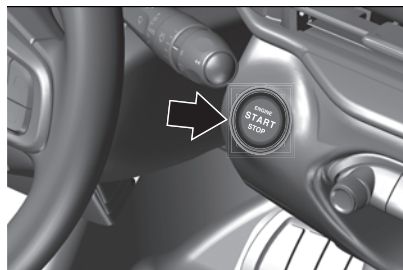

20

F6S0002

STOP: ignition off: some functions remain active until key is removed or driver's door is opened, provided the ignition was on previously

ENGINE: ignition on power mode: ignition is on, control indicators illuminate and most electrical functions are operable

START: engine start: release after engine has been started



WARNING

23) If the ignition device has been tampered with (e.g. an attempted theft), have it checked over by a Fiat Dealership before driving again.

24) Always take the key with you when you leave your car to prevent someone from accidentally operating the controls. Remember to engage the electric parking brake. Never leave children unattended in the vehicle.

25) Before leaving the car, ALWAYS engage the parking brake. On versions with automatic transmission/Electric Drive Unit, set the PRND command to P and set the ignition device to STOP. When leaving the car, always lock all the doors by pressing the button on the handle.

26) For versions equipped with the START STOP ENGINE button, do not leave the electronic key inside or near the car or in a place accessible to children. Do not leave the vehicle with the ignition device in ENGINE position. A child could activate the electric window winders, other controls or even start the vehicle.

27) It is absolutely forbidden to carry out any after-market operation involving steering system or steering column modifications (e.g. installation of anti-theft device) that could adversely affect performance and safety, invalidate the warranty and also result in noncompliance of the car with type-approval requirements.

28) Never extract the mechanical key while the car is moving. The steering wheel will automatically lock as soon as it is turned. This holds true for cars being towed as well.



VEHICLE SECURITY

ANTI-THEFT LOCKING SYSTEM



The system deadlocks all the doors. All doors must be closed otherwise the system cannot be activated.

Unlocking the vehicle disables the mechanical anti-theft locking system.

This is not possible with the central locking button.


Activating



21

JJ000013

Press  fig. 21 on the radio remote control or touch the sensor of the driver's door handle fig. 22 twice within 3 seconds.

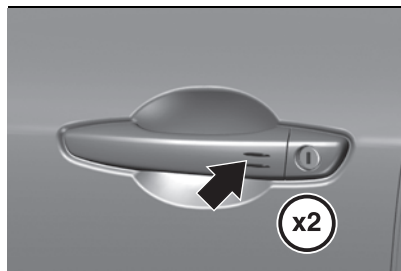

22

F6S0041

ANTI-THEFT ALARM SYSTEM

(where provided)

The anti-theft alarm system is combined with the anti-theft locking system.

It monitors:

- ☐ doors, tailgate, bonnet
- ☐ passenger compartment including adjoining load compartment
- ☐ vehicle inclination, e.g. if it is raised
- ☐ ignition

Activation

All doors, the load compartment and the engine compartment must be closed.

The electronic key must not remain in the vehicle.

The system is self-activated 45 seconds after locking the vehicle.

If a door, the tailgate or the bonnet is not properly closed, the vehicle is not


locked. However, the anti-theft alarm is self-activated after 45 seconds.

NOTE The automatic vehicle locking function does not activate the anti-theft alarm system.

To activate the anti-theft alarm system, lock the vehicle by using the radio remote control or by touching the sensor on the driver's door handle.

NOTE Changes to the vehicle interior such as the use of seat covers and open windows, could impair the function of passenger compartment monitoring.

Activation without monitoring of passenger compartment and vehicle inclination

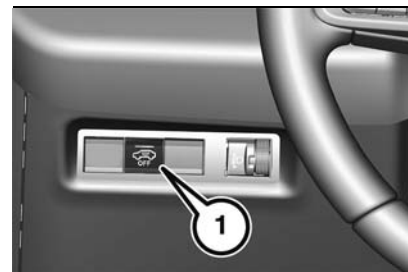

23

F6S0052

Switch off the monitoring of passenger compartment and vehicle inclination when animals are being left in the vehicle, because of high volume

ultrasonic signals or movements triggering the alarm.

Also, switch off when the vehicle is on a ferry or train.

1. Close tailgate, bonnet, windows.
2. Switch off ignition and press  (1) fig. 23 within 10 seconds until the LED in the button  illuminates.
3. Leave the vehicle and close the doors.
4. Activate the anti-theft alarm system.

Indication

LED in the  button flashes if the anti-theft alarm system is activated. The hazard warning lights illuminate for a few seconds.

Deactivation

Unlocking the vehicle deactivates the anti-theft alarm system.

The system is not deactivated by unlocking the front door with the key or with the central locking button in the passenger compartment.

Alarm

When triggered, the alarm siren sounds and the hazard warning lights flash simultaneously. The number and duration of alarm signals are stipulated by legislation.

The anti-theft alarm can be deactivated by pressing  or switching on the ignition.

A triggered alarm, which has not been interrupted by the driver, will be indicated by the LED in the button . The LED will flash quickly the next time the vehicle is unlocked.

If the vehicle conventional battery has been reconnected (e.g. after maintenance work), wait for 10 minutes to restart the engine.

Fault

If the LED in the button  illuminates permanently when switching on the ignition, seek the assistance of a Fiat Dealership.

Locking the vehicle without activation of the anti-theft alarm

Lock the vehicle by locking the front door with the key.

IMMOBILISER

The system is part of the ignition switch and checks whether the vehicle is allowed to be started with the key being used.

The immobiliser is activated automatically.

WARNING Radio Frequency Identification (RFID) tags may cause interference with the key. Do not have it placed near the key when starting the vehicle.

WARNING The immobiliser does not lock the doors. Always lock the vehicle after leaving it.



WARNING


29) Do not use the system if there are people in the vehicle! The doors cannot be unlocked from the inside.

DOORS

CENTRAL LOCKING BUTTON

 30) 31)

The central locking button (1) fig. 24 locks or unlocks all doors, the load compartment and fuel filler flap from inside the passenger compartment.

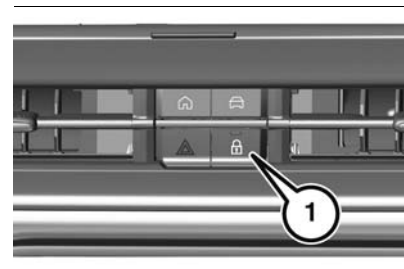

24

F6S0003

Press  to lock. The LED in the button illuminates.



Press  again to unlock. The LED in the button extinguishes.

OPERATION WITH THE KEY IN CASE OF A CENTRAL LOCKING SYSTEM FAULT

In case of a fault, e.g. vehicle conventional battery or remote control / electronic key battery is discharged, the front door can be locked or unlocked with the mechanical key.


Manual unlocking



25

JJ000563

Electronic key: push the latch fig. 25 to extract the integral key.

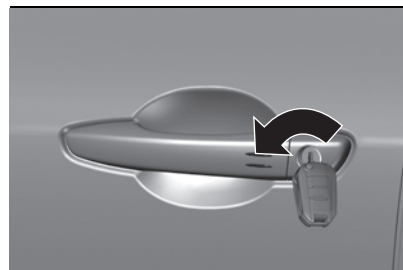


26

F6S0042

Manually unlock the left front door by inserting and turning the key in the lock cylinder fig. 26.

The other doors can be opened by pulling the interior handle. The load compartment and fuel filler flap will possibly not be unlocked. By switching on the ignition, the antitheft locking system is deactivated.


Manual locking

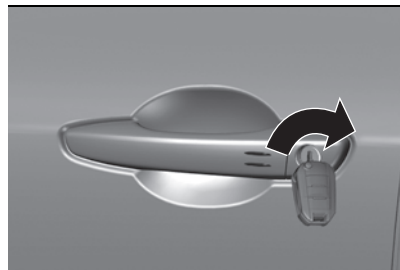

27

F6S0043

Manually lock the front door by inserting and turning the key in the lock cylinder fig. 27.

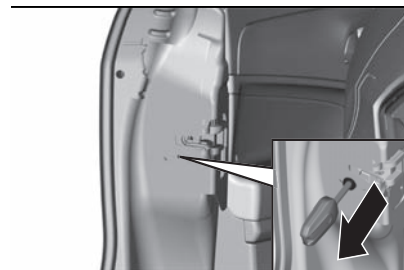

28

JJ000434

To lock the other doors, remove the black cover by using a key fig. 28 . Insert key carefully and move it to the inner side of the door without turning the key.

Then, remove key and attach black cover again. Close the doors. The fuel filler flap and tailgate are possibly not locked.

AUTOMATIC LOCKING

Automatic locking after driving off

This system allows automatic locking of the doors and tailgate as soon as the speed of the vehicle exceeds a certain speed.

If one of the doors or the tailgate is open, the automatic central locking does not take place. This is signalled by the sound of the locks rebounding, accompanied by illumination of  in the instrument panel display, an audible signal and the display of an alert message.



29

F6S0003

This function can be activated or deactivated at any time. With the ignition on, press (1) fig. 29 until an audible signal starts and a corresponding message is displayed. The state of the system stays in memory when switching off the ignition.

Automatic relock after unlocking

This feature automatically relocks the vehicle a short time after unlocking with the remote control or electronic key, provided vehicle has not been opened.

PASSIVE ENTRY

(where provided)



The system can identify the presence of an electronic key near the doors (and the tailgate) to unlock/lock the doors (or the tailgate) without having to press any button on the electronic key.


If the system identifies that the electronic key found is valid, the owner of the key can simply grasp one of the front handles to release the alarm and unlock the door and tailgate opening mechanism.

NOTE Ensure that you always have the electronic key with you (e.g. in your pocket) so that the system recognises it and lets you enter the passenger compartment and start the engine.

WARNING If wearing gloves, or if it has rained and the door handle is wet, the activation sensitivity of the

Passive Entry function may be reduced, resulting in a longer reaction time.

To lock the door, make sure that you have the electronic key and are within the 1.5-metre operating range of the driver or passenger side door handle. Press the button fig. 30 on the handle: this will lock all doors and the boot tailgate. Door locking will also activate the alarm as well (where provided).

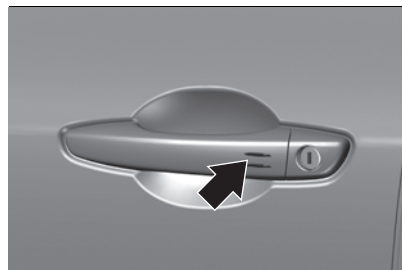

30

F6S0040

WARNING Do not simultaneously lock and unlock by pulling the handle.



CHILD LOCKS



33) 34)

Mechanical child locks



31

JJ000435

Turn the red child lock in the rear door inwards to the horizontal position by using a key fig. 31. The door cannot be opened from the inside.

To deactivate, turn the child lock to the vertical position.



WARNING

30) NEVER leave children unattended inside the car, let alone leave the car with the doors unlocked in a place that children can access easily. Children may seriously, or even fatally, injure themselves. Also ensure that children do not inadvertently operate the parking brake, the brake pedal or the PRND command of the automatic transmission/Electric Drive Unit.

31) Make sure to take the key with you once a door or the tailgate is locked, to prevent locking the same key inside the car. If the key is locked inside, it can only be retrieved by using the second key provided.

32) The operation of the recognition system depends on various factors, such as, for example, any electromagnetic wave interference from external sources (e.g. mobile phones), the charge of the battery in the electronic key and the presence of metal objects near the key or the car. In these cases it is still possible to unlock the doors by using the metal insert in the electronic key.

33) Use the child locks whenever children are occupying the rear seats.

34) Before engaging the system please therefore check that there is no-one left on board. If the remote control battery is flat, the system can be disengaged only by inserting the key metal insert in either of the door locks as described previously: in this case the device remains active only for the rear doors.

SEATS

FRONT SEATS



35) 36) 37) 38)



7)



32

JJ000025

❑ Sit with buttocks as far back against the backrest as possible. Adjust the distance between the seat and the pedals so that legs are slightly angled when pressing the pedals. Slide the front passenger seat as far back as possible.

❑ Set seat height high enough to have a clear field of vision on all sides and of all display instruments. There should be at least one hand of clearance between head and the roof frame. Your thighs should rest lightly on the seat without pressing into it.

- ❑ Adjust the head restraint so that its upper edge is at upper head level.
- ❑ Sit with shoulders as far back against the backrest as possible. Set the backrest rake so that it is possible to easily reach the steering wheel with arms slightly bent. Maintain contact between shoulders and the backrest when turning the steering wheel. Do not angle the backrest too far back. We recommend a maximum rake of approx. 25°.

- ❑ Adjust seat and steering wheel in a way that the wrist rests on top of the steering wheel while the arm is fully extended and shoulders are on the backrest.

- ❑ Adjust the lumbar support so that it supports the natural shape of the spine.


Manual seat adjustment

Drive only with engaged seats and backrests.

Longitudinal adjustment



39)

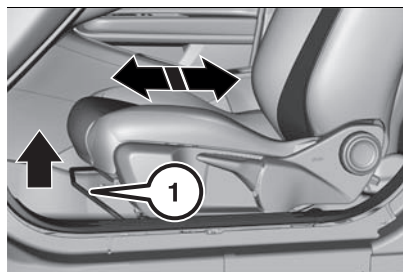


33

JJ000476

Pull handle (1) fig. 33, slide seat, release handle. Try to move the seat back and forth to ensure that the seat is locked in place.

Seat height

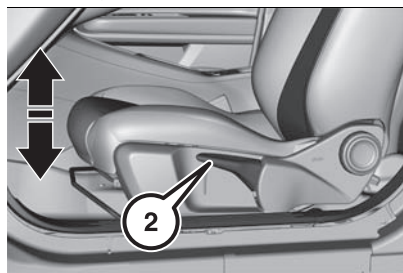


34

JJ000477

Lever (2) fig. 34 pumping motion
up: seat higher
down: seat lower

Backrest inclination

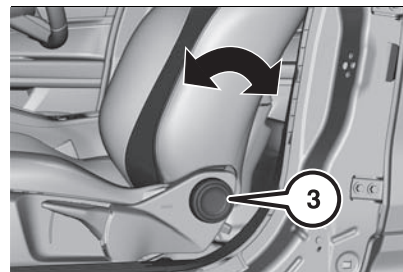

35

JJ000478

Turn handwheel (3) fig. 35. Do not lean on backrest when adjusting.

POWER SEAT ADJUSTMENT

(where provided)



Longitudinal adjustment



36

JJ000760

Move the switch fig. 36 forwards / backwards.



Backrest inclination




37

JJ000761

Turn the switch fig. 37 forwards / backwards.

Seat height and inclination

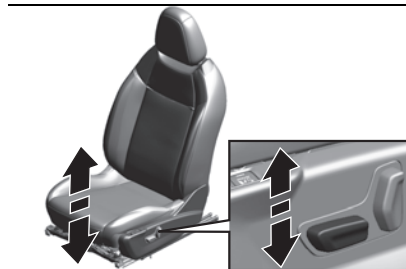


38

JJ000762

Move the switch fig. 38 upwards / downwards.

Lumbar support

(where provided)

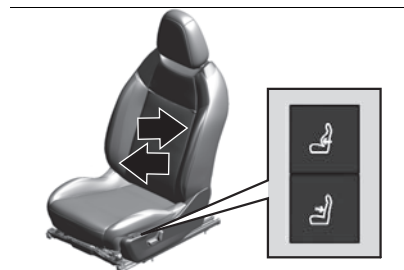

39

JJ000763


Press  or  fig. 39.

: more lumbar support

: less lumbar support

Heating

(where provided)

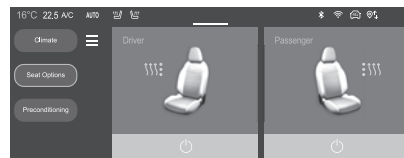

40

F6S0244

To adjust the heating to the desired intensity, proceed as follows:

☐ press the button : corresponding to the seat (fig. 40).

☐ Each press changes the heating level; the corresponding number of indicator lamps come on.

☐ To switch off the heating, press the button  until all of the indicator lamps are off.

NOTE The heating works only when the outside temperature is below 20°C.

The settings are memorised when the ignition is switched off.

MASSAGE

(where provided)



41

JJ000764

Activate the back massage function by pressing . The LED in the button illuminates to indicate activation.

The massage function is activated for a period of 1 hour. During this time, massage is performed in six cycles with breaks in between.

Pressing  once more deactivates massage function. The LED goes off.

REAR SEATS

The rear seat backrest is divided into 2/3 to 1/3 parts. Both parts can be folded down individually to increase the size of the load compartment.


Before folding rear seat backrests, execute the following if necessary:

- ❑ Move front seats forward if necessary.
- ❑ Remove the load compartment cover.
- ❑ Press and hold the catch to push the head restraints down

Folding down/up rear backrests



Check that the seat belts are not engaged in the seat belt buckles, so that the backrests can be moved.

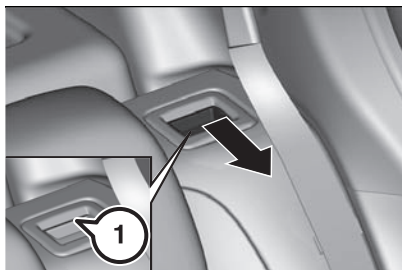


42

JJ000437

- ❑ Pull the release lever fig. 42 on one or both outer sides and fold down the backrests onto the seat cushion.

- ❑ To fold up, raise the backrests and guide them into an upright position until they engage audibly. Make sure that the belts are positioned correctly and stay clear of the folding area.

The backrests are properly engaged when the red marks (1) fig. 42 near the release levers are no longer visible.

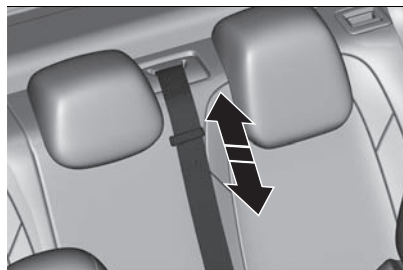

43

JJ000438

The seat belt of the centre seat could be blocked when the backrest is folded up too quickly. To unlock the retractor, push in the seat belt or pull it out by approx. 20 mm then release fig. 43.

LOAD COMPARTMENT COVER

Do not place any objects on the cover.


Removing cover



44

F6S0078

Unhook retaining straps from tailgate fig. 44.

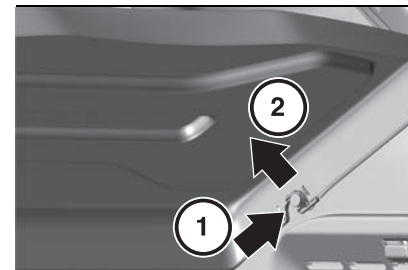

45

JJ000439

Lift cover toward back (1) fig. 45 and push it (2) upwards at the rear. Remove the cover.

Fitting cover

Engage cover in side guides and fold downwards. Attach the retaining straps to the tailgate.





WARNING

- 35)** Only drive with the seat correctly adjusted.
- 36)** Never adjust seats while driving as they could move uncontrollably.
- 37)** Do not sit closer than 25 cm to the steering wheel, to permit safe airbag deployment.
- 38)** Never store any objects under the seats.
- 39)** After releasing the adjustment lever, always check that the seat is locked on the guides by trying to move it back and forth. If the seat is not locked into place, it may unexpectedly slide and cause the driver to lose control of the car.
- 40)** Care must be taken when operating the power seats. There is a risk of injury, particularly for children. Objects could become trapped. Keep a close watch on the seats when adjusting them. Vehicle passengers should be informed accordingly.
- 41)** When folding up, ensure that backrests are securely locked in position before driving. Failure to do so may result in personal injury or damage to the load or vehicle in the event of hard braking or a collision.



IMPORTANT

- 7)** The fabric upholstery of the seats has been designed to withstand long-term wear deriving from normal use of the car. Some precautions are however required. Avoid prolonged and/or excessive rubbing

against clothing accessories such as metal buckles and Velcro strips which, by applying a high pressure on the fabric in a small area, could cause it to break, thereby damaging the upholstery.

8) Do not arrange objects beneath the electrically adjustable seat and do not impede its movement, since the controls may be damaged. They may also restrict the seat travel.


9) Before tilting the backrest, remove any objects on the seat cushion.

HEAD RESTRAINTS

POSITION



42) 43)

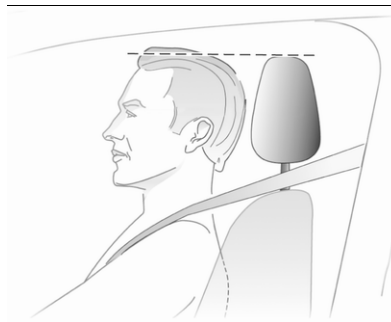


46

JJ000038_2

The upper edge of the head restraint should be at upper head level. If this is not possible for extremely tall people, set to highest position, and set to lowest position for small people.

HEIGHT ADJUSTMENT

Head restraints on front seats

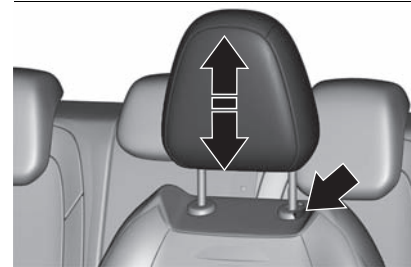


47

JJ000441

Pull the head restraint upwards fig. 47 or press the catch to release and push the head restraint downwards.

Head restraints on rear seats

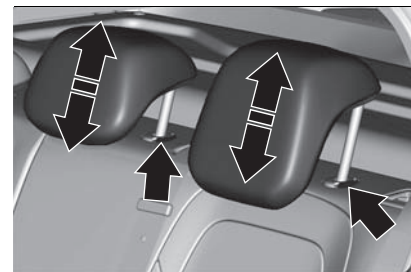

48

JJ000446

Pull the head restraint upwards fig. 48 or press the catch to release and push the head restraint downwards.

Removal

Press catch, pull the respective head restraint upwards and remove.




42) Only drive with the head restraint set to the proper position.

43) Head restraints must be adjusted so that the head, rather than the neck, rests on them. Only in this case they can protect your head correctly.

STEERING WHEEL

 44) 45)

STEERING WHEEL ADJUSTMENT

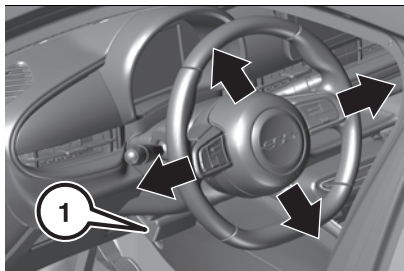

49

F6S0102

Unlock lever (1) fig. 49, adjust steering wheel, then engage lever and ensure it is fully locked.

Do not adjust steering wheel unless vehicle is stationary and steering wheel lock has been released.

Steering wheel lock

The steering wheel lock activates automatically when:

- ☐ the vehicle is stationary
- ☐ the ignition has been switched off

To release steering wheel lock, open and close driver's door and switch the ignition on power mode or start the engine directly.

 46)

Steering wheel controls

The following devices can be operated by the steering wheel controls:

- ☐ Speed Limiter, Adaptive Cruise Control, Highway Driver Assist fig. 50

(1) Activation of the Speed limiter or Cruise control with the speed setting saved. Use the speed suggested by the Road signs recognition system
(2) Up/Down: increase/decrease the speed setting. Press: display and adjustment of the distance setting to the vehicle in front (Adaptive cruise control)

(3) Select/Deselect the cruise control function. Select/Deselect the Adaptive cruise control/ Highway Driver Assist
(4) Start/Pause of the Speed limiter or Cruise control with the speed setting saved. Confirmation of vehicle restart

after automatic stop (Adaptive cruise control with Stop & Go function)
(5) Select/Deselect the speed limiter function



50

JJ000604

☐ Uconnect™ 10.25"/10.25" NAV setting controls fig. 51

(1) Press: display favourite radio stations/media Up/Down: previous/next radio/media/ smartphone selection. Press: validation of a selection
(2) Increase volume
(3) Decrease volume
(4) Pick up/Hang up. Access to the Phone application's call log
(5) Short press: system voice commands. Long press: smartphone voice commands





51

JJ000605

For further information refer to "Starting and driving" and "Multimedia" sections.

Horn



52

F6S0103

Press  fig. 52.



WARNING

44) All adjustments must be carried out only with the car stationary and engine off.

45) It is absolutely forbidden to carry out any after-market operation involving steering system or steering column modifications (e.g. installation of anti-theft device) that could adversely affect performance and safety, invalidate the warranty and also result in noncompliance of the car with type-approval requirements.


46) If the conventional battery is discharged, the vehicle must not be towed, tow-started or jump-started as the steering wheel lock cannot be disengaged.

MIRRORS



47)

ELECTRIC ADJUSTMENT

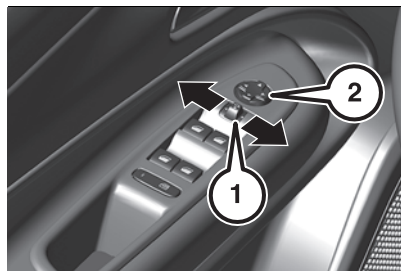


53

F6S0029

Select the relevant exterior mirror by pushing  (1) fig. 53 to the left or right.

Then swivel the control (2) to adjust the mirror.

FOLDING MIRRORS

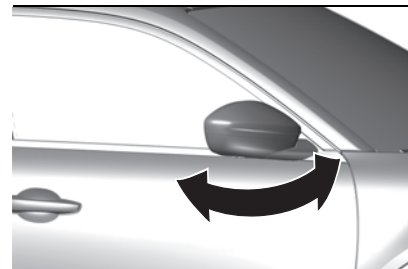

54

F6S0004

For pedestrian safety, the exterior mirrors will swing out of their normal mounting position if they are struck with sufficient force. Reposition the mirror by applying slight pressure to the mirror housing.

Manual electric folding
(where provided)



55

F6S0030

Move  (1) fig. 55 to the centre position.

Pull  rearwards. Both exterior mirrors are folded.

Pull  rearwards again. Both exterior mirrors return to their original position.

If an electrically folded mirror is manually unfolded, pulling  rearwards will only unfold the other mirror electrically.

Automatic electric folding

(where provided)

When the vehicle is unlocked, the mirrors swing to their normal mounting position. When the vehicle is locked, the mirrors are folded down.

To enable or disable automatic folding of the exterior mirrors, consult a Fiat Dealership.

Heated external mirrors

(where provided)


If this function is provided, pressing the button (1) fig. 56 on the climate controls activates demisting/defrosting of door mirrors.



56

F6S0006

INTERIOR MIRROR

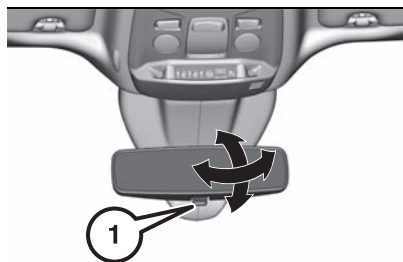

57

JJ000448


To adjust the mirror, move the mirror housing in the desired direction fig. 57.

Manual anti-dazzle

To reduce dazzle, adjust the lever (1) fig. 57 on the underside of the mirror housing.

Automatic anti-dazzle

(where provided)

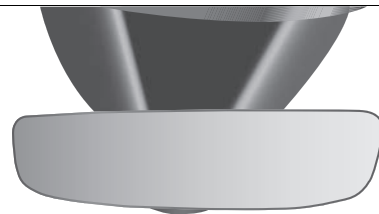

58

JJ000664

Dazzle from following vehicles is automatically reduced, when driving in the dark.




WARNING

47) As the driver's door mirror is curved, it may slightly alter the perception of distance.



EXTERIOR LIGHTING

48)

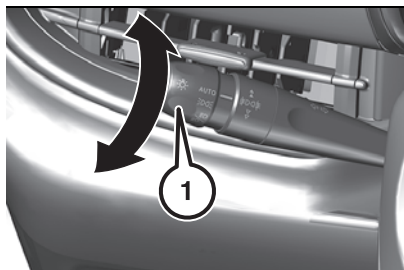


59

F6S0033

Turn light switch (1) fig. 59:
 AUTO : automatic light control,
 switches automatically between
 daytime running light and headlight
 ☼☼☼: sidelamps
 ☼/☼: dipped or main beam
 headlamps

HEADLAMP DIPPING

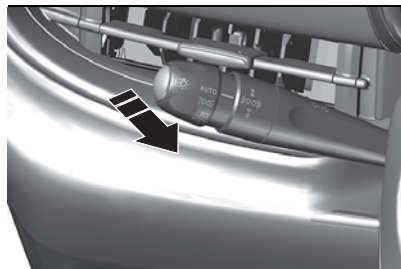

60

F6S0034

Pull the lighting control stalk fig. 60 to switch between dipped and main beam headlamps.

In "AUTO" and sidelamps mode, pull the lighting control stalk to switch the main beam headlamps on directly ("headlamp flash").


Main beams on: the lamp ☼/☼ switches on in the instrument panel.

Dipped headlamps on: the lamp ☼/☼ switches on in the instrument panel.

REAR FOGLAMP

It only works if the dipped or main beam headlamps are on.

Rotate the ring (2) fig. 61 forwards/backwards to turn it on/off.

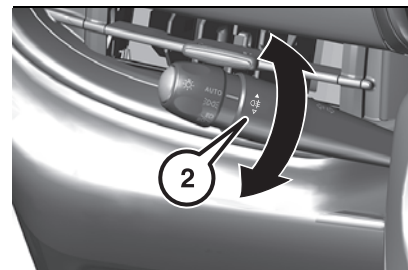

61


F6S0035

When the lighting is switched off automatically ("AUTO" position) the foglamp and the sidelamps remain on.

FRONT FOGLAMPS/REAR FOGLAMP

(where provided)

They operate with the sidelamps, dipped or main beam headlamps on.

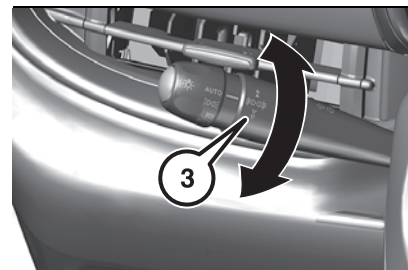

62

F6S0036

Rotate the ring (3) fig. 62 forwards:

- once to switch on the front foglamps
- a second time to switch on the rear foglamp

Turn in the opposite direction to switch off

If the lighting is switched off automatically ("AUTO" position) or the dipped beam headlamps are switched off manually, the foglamps and sidelamps remain on.

Rotate the ring backwards to switch the foglamps off; the sidelamps will then switch off.



When the ignition is switched off, all of the lamps turn off immediately, except for the sidelamps and the dipped beam headlamps if automatic guide-me-home lighting is activated.

To reactivate the lighting control, rotate the ring to the "AUTO" position, then to the desired position. If the driver's door is opened, a temporary audible signal warns the driver that the lamps are on. They will go off automatically after a period of time that depends on the level of charge in the conventional battery (entering energy economy mode). In some weather conditions (e.g. low temperature or humidity), misting on the internal surface of the glass of the headlamps and rear lamps is normal, and will disappear after the lamps have been on for a few minutes.




Daytime running lamps/ Sidelamps

These LED lamps at the front and rear of the vehicle light up automatically when the engine starts.

They perform the following functions:

- Daytime running lamps (lighting control stalk at position "AUTO" with adequate ambient light)
- Sidelamps (lighting control stalk at position "AUTO" with low ambient light or "Sidelamps only" or "Dipped/main beam headlamps")

DIRECTION INDICATORS

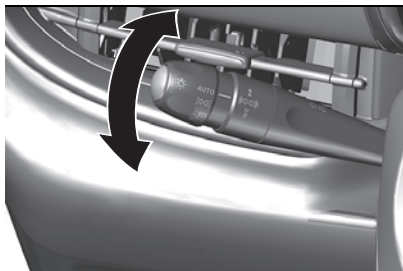

63

F6S0039

Left or right: lower or raise the lighting control stalk fig. 63, beyond the point of resistance.

NOTE If you keep the direction indicators on for more than 20 seconds, the volume of the audible

signal will increase if the speed is above 50 mph (80 km/h).

Three flashes

Press briefly upwards or downwards, without going beyond the point of resistance; the direction indicators will flash 3 times.

Parking lamps

(where provided)

Vehicle side marking by lighting the sidelamps on the traffic side only.

□ Within one minute after switching off the ignition, operate the lighting control stalk upwards or downwards, depending on the side of the traffic (e.g. when parking on the right, push the lighting control stalk down to light up on the left). This is confirmed by an audible signal and the lighting of the corresponding direction indicator lamp on the instrument panel.

□ To switch off the parking lamps, return the lighting control stalk to the central position.

AUTOMATIC ILLUMINATION OF LAMPS

With the lighting control stalk in the "AUTO" position and if a low level of exterior brightness is detected by the rain/sunshine sensor, the sidelamps and dipped beam headlamps are switched on automatically, without any



action on the part of the driver. They may also come on if rain is detected, at the same time as automatic operation of the windscreen wipers.

As soon as the brightness returns to a sufficient level or after the windscreen wipers are switched off, the lamps are switched off automatically.

In the event of a malfunction of the rain/sunshine sensor, the vehicle's lamps come on and this warning lamp  is displayed on the instrument panel, accompanied by an audible signal and/or the display of a message. Have it checked by a Fiat Dealership.



NOTE In fog or snow, the rain/sunshine sensor may detect sufficient light. For this reason, the lighting will not come on automatically.

NOTE The inner surface of the windscreen may become misted up and affect the proper operation of the rain/sunshine sensor. In humid and cold weather, demist the windscreen regularly.

Operating limits


The automatic lighting systems use a detection camera, located at the top of the windscreen.

The system may be disrupted or not work correctly:

- ❑ When visibility conditions are poor (e.g. snowfall, heavy rain)
 - ❑ If the windscreen is dirty, misted-up or masked (e.g. sticker) in front of the camera
 - ❑ the vehicle is facing highly reflective signs or safety barrier reflectors
- The system is not able to detect:
- ❑ Road users that do not have their own lighting, such as pedestrians
 - ❑ Vehicles with hidden lighting (e.g. travelling behind a safety barrier on the motorway)
 - ❑ Vehicles at the top or bottom of a steep slope, on winding roads, on crossroads



HEADLAMP BEAM HEIGHT ADJUSTMENT

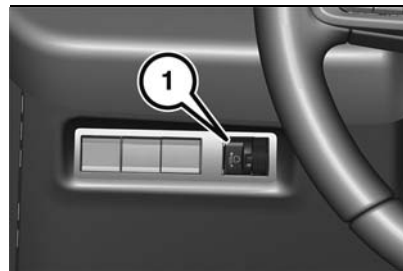

64

F6S0053

To avoid dazzling other road users, the height of these headlamp beams must

be adjusted according to the load in the vehicle.

Turn the gear (1) fig. 64:

0 (Initial setting): Driver only or driver + front passenger

1: 5 people

2: 5 people + load in the boot

3: Driver only + load in the boot

4, 5, 6: Not used

GUIDE-ME-HOME AND WELCOME LIGHTING

Guide-me-home lighting

Automatic: with the ring of the lighting control stalk in the "AUTO" position and when the light is poor, the sidelamps and dipped beam headlamps come on automatically when the ignition is switched off. The function can be activated/deactivated and the guide-me-home lighting duration adjusted through the **Uconnect™ 10.25"/10.25" NAV** system (Settings>Vehicle>Vehicle lighting).


Manual: with the ignition off, pull the lighting control stalk toward you ("headlamp flash") to activate/deactivate the function. Manual guide-me-home lighting goes off automatically after a period of time.

Welcome lighting

(where provided)

When the vehicle is unlocked, if the ambient light is low and the "Automatic

illumination of headlamps" function is activated, this system automatically turns on certain exterior lamps as well as certain lamps in the passenger compartment. The function can be activated/deactivated and the welcome lighting duration adjusted through the **Uconnect™ 10.25"/10.25" NAV** system, fig. 65.

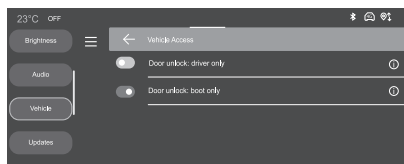

65

F6S0168


AUTOMATIC HEADLAMP DIPPING

With the ring of the lighting control stalk in the "AUTO" position and the function activated on the touch screen, this system automatically switches between dipped and main beam headlamps when a vehicle approaches in the opposite direction, using a camera located at the top of the windscreen.

 51) 52)

NOTE The system becomes operational when the vehicle exceeds 25 km/h (16 mph). When the speed

falls below 15 km/h (9 mph), the function is no longer operational. The function can be activated/deactivated through the **Uconnect™ 10.25"/10.25" NAV** system (Settings>Vehicle>Vehicle lighting), fig. 66.

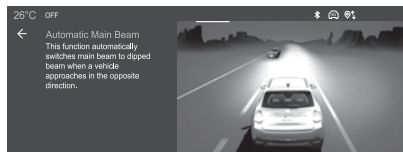

66

F6S0169

Operation

If the ambient light level is very low and traffic conditions permit, the main beam headlamps come on automatically.

The lamps  and  light up on the instrument panel.

If the ambient light level is sufficient and/or the traffic conditions do not allow the main beam headlamps to be lit, the dipped beam headlamps remain lit.  and  light up on the instrument panel.

The function is deactivated if the foglamps are switched on or if the

system detects poor visibility conditions (e.g. fog, heavy rain, snowfall).

When the foglamps are switched off or when the visibility conditions become favourable again, the function is automatically reactivated.

The lamp  goes out when the function is deactivated.

Pause

If the situation requires a change of headlamp beam, the driver can take over at any time.

Switch the headlamps manually between dipped and main beam to pause the function.

If the  and  lamps were on, the system changes to main beam.

If the  and  indicator lamps were on, the system changes to dipped beam.

To reactivate the function, once again switch the headlamps manually between dipped and main beam.

Malfunction

If a malfunction occurs with the system or the camera, the  orange lamp lights up on the instrument panel, accompanied by an audible signal and a message. Have it checked by a Fiat Dealership.



CORNERING LIGHTING

(where provided)

This system makes use of the beam from a front foglamp to illuminate the inside of a bend, when the main or dipped beam headlamps are on and the vehicle speed is below 40 km/h (25 mph) (urban driving, winding road, junctions, parking manoeuvres).



67

F6S0007

The function can be activated/deactivated through the **Uconnect™ 10.25"/10.25" NAV** system (Settings>Vehicle>Vehicle lighting), fig. 68.



68

F6S0170

Switching on/off

This system starts:

❑ when the corresponding direction indicator is switched on or

❑ from a certain angle of rotation of the steering wheel

It becomes inactive:

❑ below a certain angle of rotation of the steering wheel

❑ above approximately 40 km/h (25 mph)

❑ when reverse gear is engaged

PUDDLE LIGHT

(where provided)

The puddle light under each external mirror comes on automatically when the door is opened and switches off when it is closed regardless of the ignition device status.



WARNING

48) When driving, the driver is responsible for ensuring that the light control switch is in the **AUTO** position (dusk sensor active) or in the "position light" (sidelamp) mode , if visibility and ambient light are sufficient to allow safe driving in accordance with the local traffic regulations.

49) Switching on the foglamps is prohibited in clear weather or in rain, both day and night. In these situations, the

power of their beams may dazzle other drivers. They must only be used in fog or falling snow (rules may vary depending on country). Do not forget to switch off the foglamps when they are no longer necessary.

50) Never look too closely at the light beam of LED technology lamps - risk of serious eye injury!

51) This system is a driving aid. The driver remains responsible for the vehicle's lighting, its correct use in the prevailing light, visibility and traffic conditions, and for compliance with driving and vehicle regulations.

52) The Automatic headlight dipping function may dazzle other road users when the vehicle is driven in countries where traffic moves on the opposite side of the road. E.g. when the vehicle was designed for left hand drive traffic and it is driven in a country with right hand drive traffic. Switch off the function whenever you are driving in countries mentioned above!



IMPORTANT


10) Do not cover the rain/sunshine sensor located at the top centre of the windscreen behind the interior rear view mirror; the associated functions would no longer be controlled.

11) Clean the windscreen regularly, particularly the area in front of the camera. The internal surface of the windscreen can also become misted around the camera. In humid and cold weather, demist the windscreen regularly. Do not allow snow to

accumulate on the bonnet or roof of the vehicle as this could obstruct the camera.

INTERIOR LIGHTING

INTERIOR LIGHTS - HALOGEN VERSION

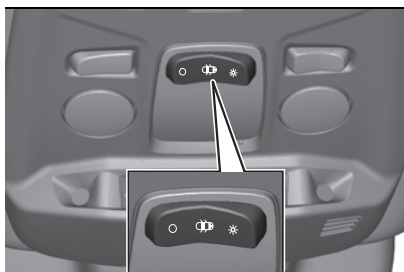

69

JJ000451

Operate rocker switch fig. 69:


automatic switching on and off

press : on

press : off

NOTE In the event of an accident with airbag deployment the courtesy lights are turned on automatically.

READING LIGHTS

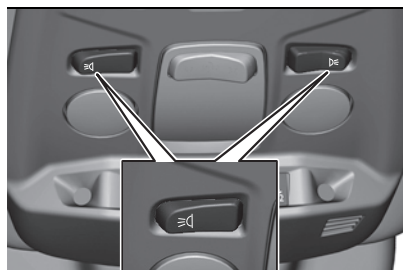

70

JJ000450

Operated by pressing fig. 70.

INTERIOR LIGHTS - LED VERSION

(where provided)



71


JJ000642

(1) Front touch-sensitive courtesy lamp

(2) Front touch-sensitive reading lamps

LED rear lights

There are two touch lights behind the front seats (fig. 72).

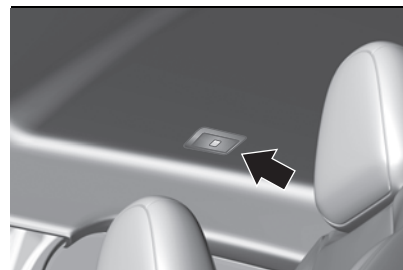

72

F6S0209

AMBIENT LIGHTING

(where provided)

The interior ambient lighting casts soft, coloured lighting in the passenger compartment, when low lighting conditions are detected.

By default, the colour of the interior ambient lighting is linked to that of the screens.

Activation/deactivation and adjustment of the brightness are set via "Settings" > "Brightness" on **Uconnect™ 10,25"/10,25" NAV**.

The colour is selected via "Settings" > "Customisation" on **Uconnect™ 10,25"/10,25" NAV**.

LIGHTING FEATURES

Entry lighting - Welcome lighting

Some or all of the interior lights are switched on for a short time by unlocking the vehicle with the radio remote control.



The number of activated lights depends on the surrounding light conditions. The lighting switches off immediately when the ignition is switched on. This function can be activated or deactivated in the vehicle personalisation.

The following lights will additionally switch on when the driver's door is opened:

- ☐ illumination of some switches
- ☐ instrument panel display
- ☐ door pocket lights

Exit lighting

The following lights are switched on when the ignition is switched off:

- ☐ headlights
- ☐ interior lights
- ☐ centre console lighting

They will switch off automatically after a delay. This function works only in the dark.

Vehicle locator lighting

This function allows to locate the vehicle, e.g., in weak lighting conditions using the remote control. The headlights come on and the turn lights flash for 10 seconds.

Press  on the remote control.

Peripheral lighting

Peripheral lighting allows you to switch on the position lights, low beam and

number plate lighting using the remote control.

Press  on the remote control to switch on peripheral lighting.

Press  a second time to switch off peripheral lighting.


Conventional battery discharge protection

To prevent discharge of the vehicle conventional battery when the ignition is switched off, some interior lights are switched off automatically after some time.

WIPER CONTROL STALK

 12) 13) 14) 15)

NOTE After using an automatic car wash, you may temporarily notice abnormal noises and poorer wiping performance. You do not need to replace the wiper blades.

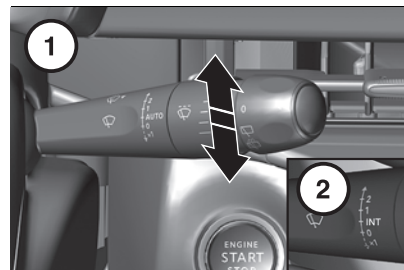

73

F6S0044

- (1) Automatic wipers
- (2) Intermittent wipers

WINDSCREEN WIPERS

To select the wiping speed: raise or lower the stalk fig. 73 to the desired position.

2: Fast wiping (heavy rain)

1: Normal wiping (moderate rain)

Int: Intermittent wipers

Auto: Automatic wipers

0: Switching off

x1: Manual

NOTE In position 1 or 2, the wiping frequency is automatically reduced when the speed of the vehicle drops below 5 km/h (3 mph). When the speed is above 10 km/h (6 mph) again, the wiping frequency returns to the original frequency (fast or normal).

Single wipe

Press and release the control stalk or briefly pull the control stalk towards you.


WINDSCREEN WASH

Pull the wiper control stalk towards you and hold. A final wiping cycle is performed when screenwashing ends.

NOTE With automatic air conditioning, any action on the screenwash control results in temporary closure of the air intake to protect the passenger compartment from any odour.

FRONT INTERMITTENT WIPING

In Intermittent mode, the driver can adjust the wiping frequency by turning the ring (2) fig. 74 to one of the 5 available positions.

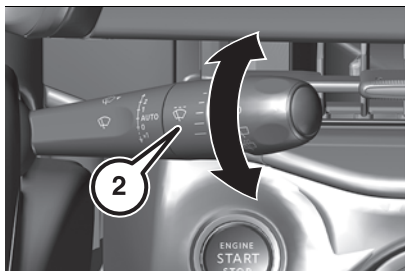

74

F6S0045

The first (upper) position corresponds to the longest time interval between 2 wipes for light rain.

The last (lower) position corresponds to the shortest time interval between 2 wipes for heavy rain.

A rotation of the ring from a higher position to a lower position triggers a confirmation wiping.

After the ignition has been switched off for more than 1 minute with the wiper control stalk in the INT, 1 or 2 position, when the ignition is switched on again:

- ❑ the system works as soon as the vehicle exceeds 10 km/h (6 mph), if the outside temperature is below +3°C.
- ❑ the system works immediately, if the outside temperature is above +3°C.

AUTOMATIC WINDSCREEN WIPERS

In AUTO mode, the front wipers work automatically and adapt to the intensity of precipitation depending on the sensitivity of the sensor selected.

The rainfall detection function uses a rain/ sunshine sensor located at the top centre of the windscreen, behind the rear view mirror.

NOTE In certain weather conditions (e.g. fog, frost, snow, projections on salty roads), the driver may have to return to manual wiping.

Switching on/off



53)



17) 18)

To switch on:

- ❑ Put the wiper control stalk in the AUTO position
- ❑ Turn the ring (3) fig. 76 to adjust the sensitivity of the sensor. A wiping cycle, accompanied by the display of a message, confirms that the request has been taken into account
- ❑ To switch off, put the wiper control stalk in another position or in the 0 position

Windscreen wipers in reverse

To increase safety during the manoeuvres in reverse gear, the rear window windscreen wiper can be automatically activated in case of rain. The function can be activated/deactivated through the **Uconnect™ 10.25"/10.25" NAV** system (Settings>Vehicle>Safety), fig. 75.




75

F6S0171



Adjusting the sensitivity

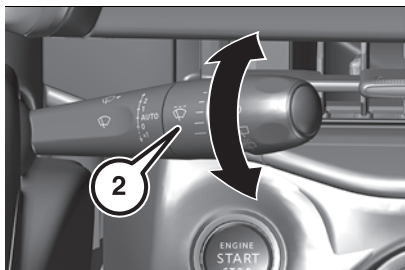

76

F6S0045

The first position (upper) corresponds to the lowest sensitivity of the sensor. The last position (lower) corresponds to the highest sensitivity of the sensor.

The higher the sensitivity, the faster the system reacts and increases the wiping frequency.

A rotation of the ring from a higher position to a lower position triggers a confirmation wiping.

After the ignition has been switched off for more than 1 minute with the wiper control stalk in the AUTO position, when the ignition is switched on again:

- ❑ the system works, depending on the volume of rain detected, as soon as the vehicle exceeds 10 km/h (6 mph), if the outside temperature is below +3°C.
- ❑ the system works immediately, depending on the volume of rain

detected, if the outside temperature is above +3°C.

Malfunction

If a fault occurs with the automatic wipers, the wipers operate in intermittent mode. Have it checked by a Fiat Dealership.



WARNING

53) Make sure the device is turned off whenever the windscreen glass must be cleaned.



IMPORTANT

12) Before operating the wipers in wintry conditions, clear any snow, ice or frost from the windscreen and around the wiper arms and blades.

13) Do not operate the wipers on a dry windscreen. In extremely hot or cold weather, check that the wiper blades are not stuck to the windscreen before operating the wipers.

14) Never use the screen wiper to remove layers of snow or ice from the windscreen glass. In such conditions, the windscreen wiper may be subjected to excessive stress and the motor cut-out switch, which prevents operation for a few seconds, may intervene. If operation is not subsequently restored, even after restarting the engine, contact a Fiat Dealership.

15) Do not operate the screen wiper with the blades lifted from the windscreen glass.

16) To avoid damaging the wiper blades, do not operate the screenwash if the screenwash reservoir is empty. Only operate the screenwash if there is no risk of the fluid freezing on the windscreen and hindering visibility. During the winter period, use "very cold climate" rated products. Never top up with water.

17) Make sure the device is switched off if there is ice on the windscreen glass.


18) Do not cover the rain/sunshine sensor. When using an automatic car wash, switch off the automatic wipers and the ignition. In winter, wait until the windscreen is completely clear of ice before activating the automatic wipers.

CLIMATE CONTROL SYSTEMS

PASSENGER COMPARTMENT AIR DIFFUSERS

Side air diffusers


(1) fig. 77 - Fixed side air diffuser (driver and passenger side).

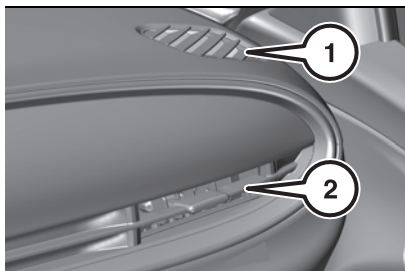

77

F6S0008

(2) fig. 77 - Adjustable side vents.

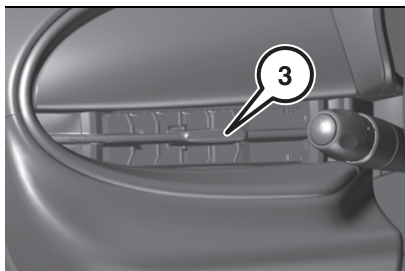

78


F6S0009

Use device (3) fig. 78 to adjust the diffuser to the desired position (up / down / left / right)

Central air vents

(1) fig. 79 - Adjustable and directable central vents.

Use device (2) to adjust the diffuser to the desired position (up / down / left / right)

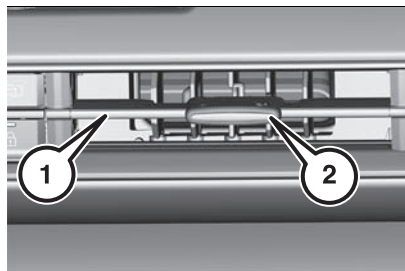

79

JJ000369

SYSTEM MAINTENANCE



In winter, the climate control system must be turned on at least once a month for about 10 minutes. Before summer, have the system checked at a Fiat Dealership.



IMPORTANT

6) The system uses R1234yf coolant, which does not pollute the environment in the event of accidental leakage. Under no circumstances use R134a and R12 fluids, which are incompatible with the components of the system.



MANUAL CLIMATE CONTROL SYSTEM



80

F6S0005

AIR TEMPERATURE ADJUSTMENT

Press the (1) fig. 80 button:

□ press downwards: decrease temperature

□ press upwards: temperature rise

By repeatedly pressing the (1) button upwards or downwards the HI (maximum air temperature) and LO (minimum air temperature) functions are switched on respectively. To turn these functions off, ask for a numerical air temperature.

AIR DISTRIBUTION SELECTION

You can manually set one of the following air distributions by pressing the (2), (4), (5), (6) fig. 80 buttons on the dashboard or the graphic buttons located on the **Uconnect™ 10.25"/10.25" NAV** system display:

(2) Maximum windscreen defrosting.

(4) Airflow to the front and rear footwell vents. This air distribution setting heats the passenger compartment most quickly, giving a prompt sensation of warmth.

(5) Airflow at central and side dashboard vents to ventilate the chest during the hot season.

(6) Air flow towards windscreen.

You can select the combination of several modes by pressing the buttons in sequence.

FAN SPEED ADJUSTMENT

Press button (10) to increase/decrease the fan speed:

□ press downwards: decrease speed

□ press upwards: increase speed

The speed is displayed on the A/C screen of the **Uconnect™ 10.25"/10.25" NAV** system. A specific fan level can be selected by pressing the button .

□ **maximum fan speed:** all bars are lit up;

□ **minimum fan speed:** one bar is lit up.

AIR RECIRCULATION

The air recirculation can be switched on/off by pressing the button (7) fig. 80.

WARNING The engagement of the recirculation system makes it possible to reach the required heating/cooling conditions faster. It is, however, inadvisable to use it on rainy/cold days, or with low external temperatures, as it would considerably increase the possibility of the windows misting up inside rapidly (especially if the climate control system is off).

When the outside temperature is low, recirculation could be switched off (air drawn from the outside) to prevent the windows misting up.

To guarantee good air quality inside the passenger compartment, every 15 minutes of recirculation, the system takes in air from outside for 1 minute and then returns to recirculation.

CLIMATE CONTROL COMPRESSOR

Press button (8) fig. 80 to activate/deactivate the compressor. Switching off the compressor remains stored even after the ignition device has been turned to the STOP position.

WARNING With the compressor off, air cannot be introduced to the passenger compartment with a temperature lower than the external temperature. Moreover, under certain environmental conditions, windows could mist up rapidly since the air is not dehumidified.

HEATED REAR WINDOW DEMISTING/DEFROSTING

Press button (3) fig. 80 to activate heated rear window demisting/defrosting.

Whenever the ignition device switches to the position 2, the function switches off automatically after approx. 10



minutes the first time it is activated. The following activations have a duration of 5 minutes.


If this function is provided, pressing the button  REAR also activates demisting/defrosting of door mirrors and heated vents (where provided).

WARNING Do not apply stickers to the inside of the heated rear window over the heating filaments, to avoid damage that might cause them to stop working properly.

HEATED WINDSCREEN

(where provided)

In cold weather, this system heats the bottom of the windscreen, as well as the area alongside the left-hand windscreen pillar fig. 81.

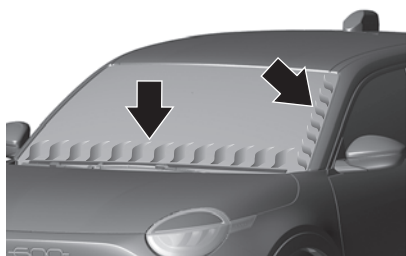

81


F6S0047

Without changing the settings for the air conditioning system, it allows faster

release of the windscreen wiper blades when they are frozen to the windscreen and helps avoid the accumulation of snow resulting from the operation of the windscreen wipers.

Push the button (1) fig. 82 to activate the windscreen heating. The warning light on the button comes on to indicate that it has been turned on.

Push the button again to switch off.

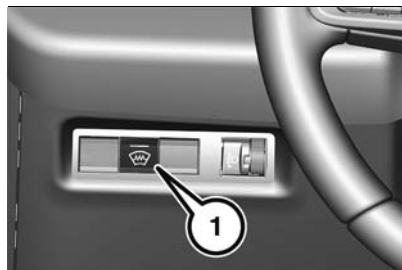

82

F6S0054

The function is activated when the outside temperature drops below 0°C. It is deactivated automatically when the engine is switched off.

SWITCHING THE CLIMATE CONTROL SYSTEM OFF/ON

Switching off the climate control system

Press the A/C button (8) fig. 80.

With climate control system off:

- ☐ air recirculation is on, thus isolating the passenger compartment from the outside;
- ☐ the compressor is off;
- ☐ the fan is off;
- ☐ the heated rear window can be activated/deactivated.

Switching off the climate control system

To turn the climate control system off press the OFF button (9) fig. 80.

Switching on the climate control system

To turn the climate control system back on press the A/C button (8) fig. 80.

HEATER

The heater activates automatically depending on the environmental conditions and with ignition device in the position 2 or with the STOP START ENGINE button in position START.

AUTOMATIC CLIMATE CONTROL SYSTEM




83

F6S0010



AUTOMATIC CLIMATE CONTROL SYSTEM COMMANDS ON UCONNECT™ 10,25"/10,25" NAV

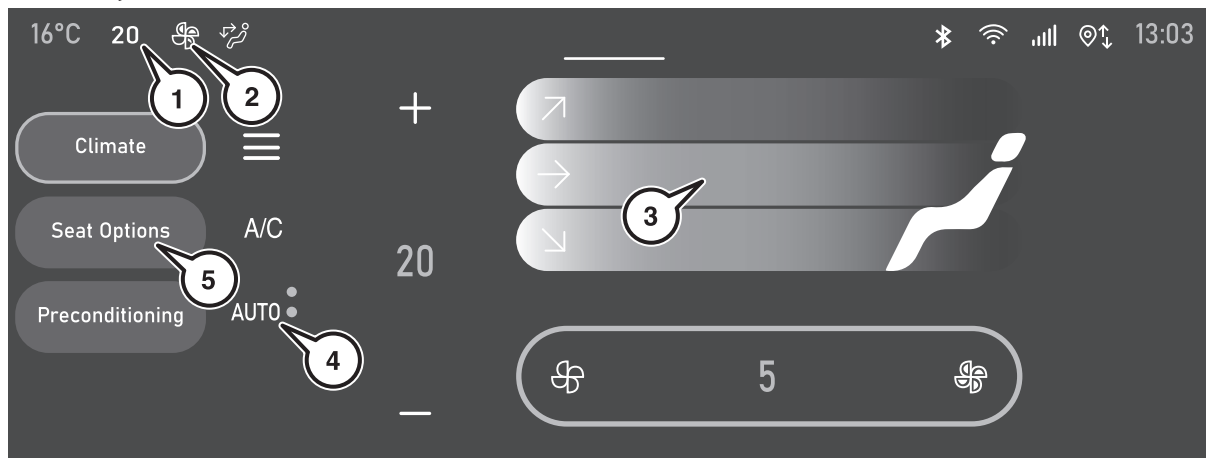

84

F6S0079

1. Internal temperature - 2. Ventilation level - 3. Air distribution adjustment - 4. AUTO function - 5. Heated seats settings

DESCRIPTION OF THE CONTROLS

The automatic climate control system maintains comfort inside the passenger compartment and compensates for possible variations in outside weather conditions.

The reference temperature is 22°C for optimal comfort management.

The automatically controlled parameters and functions are:

- ❑ air temperature at the driver/front passenger side vents
- ❑ air distribution at the driver/front passenger side vents
- ❑ fan speed (continuous variation of the air flow)
- ❑ compressor engagement (for cooling/dehumidifying the air)
- ❑ air recirculation

All these functions can be adjusted manually by operating the system and selecting one or more functions and modifying their parameters.

Manual selections always have higher priority than automatic settings and are stored until the AUTO button (2) fig. 83 is pressed, except for cases in which the system intervenes for safety reasons. The following operations do not deactivate the AUTO function:

- ❑ recirculation on/off

- ❑ compressor on/off, compatibly with environmental conditions

- ❑ variation of set temperature
- ❑ heated rear window activation/deactivation

The amount of air introduced into the passenger compartment is not affected by car speed; it is electronically controlled by a fan.

The temperature of the air sent is always automatically controlled according to the temperature set on the display (except for when the system is off or in certain conditions when the compressor is not running).

The system allows the following to be set or adjusted manually:

- ❑ air temperature
- ❑ fan speed has 8 positions
- ❑ air distribution
- ❑ compressor enabling
- ❑ rapid defrosting/ demisting function
- ❑ air recirculation
- ❑ heated rear window
- ❑ system deactivation

OPERATING MODE

The climate control system can be activated in different ways: it is advisable to press the AUTO button and press the button (1) fig. 83 to set the desired temperature.

In this way the system operates completely automatically to adjust the temperature, quantity and distribution

of the air introduced into the passenger compartment. It also manages the air recirculation system and the enabling the air conditioning compressor.

During automatic operation, you can change the set temperatures, activate/deactivate the rear window, activate/deactivate the compressor and the recirculation at any time by using the relevant buttons; the system will automatically change the settings to adjust to the new requirements.

In this way the climate control system will continue to automatically manage all functions except for those that have been manually adjusted. The fan speed is the same in all the zones of the passenger compartment.

AIR TEMPERATURE ADJUSTMENT

Press the (1) fig. 83 button:

- ❑ press downwards: decrease temperature

- ❑ press upwards: temperature rise

By repeatedly pressing the (1) buttons upwards or downwards the HI (maximum air temperature) and LO (minimum air temperature) functions are switched on respectively.



AIR DISTRIBUTION SELECTION

You can manually set one of the following air distributions by pressing the (5) fig. 83 button on the dashboard. Through the **Uconnect™ 10.25"/10.25" NAV** system display (3) fig. 84 can be selected:

 Airflow at central and side dashboard vents to ventilate the chest during the hot season.

 Airflow to the front and rear footwell vents. This air distribution setting heats the passenger compartment most quickly, giving a prompt sensation of warmth.

 Air flow towards windscreen.

You can select the combination of several modes by pressing the buttons in sequence.

In AUTO mode, the climate control system automatically manages the air distribution. The air distribution, when manually set, is displayed on the **Uconnect™ 10.25"/10.25" NAV** system A/C screen.

FAN SPEED ADJUSTMENT

Press button (10) fig. 83 to increase/decrease the fan speed:

☐ press downwards: decrease speed;

☐ press upwards: increase speed.

The speed is displayed on the "Climate" page of the **Uconnect™ 10.25"/10.25" NAV** system ((2) fig. 84).

WARNING To restore automatic control of the fan speed after a manual adjustment, press the AUTO button (2) fig. 83 or (4) fig. 84.

By setting the fan speed manually, the automatic ventilation is interrupted.

AUTO BUTTON

When the AUTO button (2) is pressed the climate control system is automatically adjusted in the corresponding zones:

- ☐ quantity and distribution of the air introduced into the passenger compartment
- ☐ climate control compressor
- ☐ air recirculation
- ☐ cancelling any previous manual settings

If a manual intervention is made on the air distribution or on the fan speed the climate control system is no longer controlling all functions automatically. To restore automatic system control after one or more manual adjustments, press the AUTO button.

AIR RECIRCULATION

The air recirculation can be switched on/off by pressing the button (6) fig. 83.

WARNING The engagement of the recirculation system makes it possible to reach the required heating/cooling conditions faster. It is, however, inadvisable to use it on rainy/cold days, or with low external temperatures, as it would considerably increase the possibility of the windows misting up inside rapidly (especially if the climate control system is off).

When the outside temperature is low, recirculation could be switched off (air drawn from the outside) to prevent the windows misting up.

In automatic operation inside air recirculation will be controlled automatically by the system according to outside environmental conditions.

CLIMATE CONTROL COMPRESSOR

Press button (7) fig. 83 to activate/deactivate the compressor. Switching off the compressor remains stored even after the ignition device has been turned to the STOP position.

To restore automatic control of compressor engagement, press again

button (4) fig. 84 or the AUTO button (2) fig. 83.

WARNING With the compressor off, air cannot be introduced to the passenger compartment with a temperature lower than the external temperature. Moreover, under certain environmental conditions, windows could mist up rapidly since the air is not dehumidified.

MAX A/C MODE

Press and release the button (8) fig. 83 to activate the maximum cooling function.

In MAX A/C mode, the fan speed and fan mode can be adjusted according to needs. When other settings are pressed, the MAX A/C switches to the selected setting and is turned off.

HEATED FRONT AND REAR WINDOW DEMISTING/DEFROSTING

Press button (3) fig. 83 to activate heated front window demisting/defrosting.

Press button (4) fig. 83 to activate heated rear window demisting/defrosting.

Whenever the ignition device switches to the position 2 or the STOP START ENGINE button is on START position, the function switches off automatically

after approx. 10 minutes the first time it is activated. The following activations have a duration of 5 minutes.

If this function is provided, pressing the button  MAX also activates demisting/defrosting of door mirrors and heated vents (where provided).

WARNING Do not apply stickers to the inside of the heated rear window over the heating filaments, to avoid damage that might cause them to stop working properly.

SWITCHING THE CLIMATE CONTROL SYSTEM OFF/ON

Switching off the climate control system

Press the OFF button (9) fig. 83.

With climate control system off:

- ☐ air recirculation is on, thus isolating the passenger compartment from the outside
- ☐ the compressor is off
- ☐ the fan is off
- ☐ the heated rear window can be activated/deactivated

The climate control system control unit stores the temperatures set before the system was switched off and restores them when any button of the system is pressed.

Switching on the climate control system

To switch on the climate control system in fully automatic mode press the AUTO button (2) fig. 83 or (4) fig. 84.

HEATER

The heater activates automatically depending on the environmental conditions and with ignition device in the position 2 or with the STOP START ENGINE button in position START.

SEAT HEATING

To open the page for setting the seat heating levels press (5) fig. 84.

OPERATING LIMITS

With the car in "TURTLE" mode, climate control limitations are automatically introduced to preserve the range.

TEMPERATURE PRE-CONDITIONING

(Electric versions)

This function allows you to programme the temperature in the passenger compartment to reach a pre-defined, non-modifiable temperature (approx. 21°C) before you enter the vehicle, on the days and at the times of your choice.

This function is available when the vehicle is connected or not connected.



Programming

❑ Press the button (5) fig. 83 to open the Climate touch screen application on the **Uconnect™ 10.25"/10.25" NAV**.

Select the Preconditioning tab

❑ press + to add a programme

❑ select the time of entry into the vehicle and the desired days. Press OK

❑ press ON to activate this programming

The pre-conditioning sequence begins approximately 45 minutes before the programmed time when the vehicle is connected (20 minutes when it is not connected) and is maintained for 10 minutes after.

NOTE You can set multiple programmes. Each one is saved in the system. To optimise the driving range, we recommend starting a programme while the vehicle is connected.

The programming can also be carried out from a smartphone via the Fiat® app.

NOTE The fan noise that occurs during temperature pre-conditioning is perfectly normal.

WINDOWS

WINDSCREEN



54)

Windscreen stickers

Do not attach stickers such as toll road stickers or similar on the windscreen in the area of the interior mirror. Otherwise the detection zone of the sensor and the view area of the camera in the mirror housing could be restricted.

Windscreen replacement



19)

POWER WINDOWS



20)



85

F6S0031


Operate the switch fig. 85 for the respective window by pushing to open or pulling to close.

Pushing or pulling gently to the first detent: window moves up or down as long as the switch is operated.

Pushing or pulling firmly to the second detent then releasing: window moves up or down automatically with safety function enabled. To stop movement, operate the switch once more in the same direction.

Rear windows

Operate the switch fig. 86 by pushing to open or pulling to close.

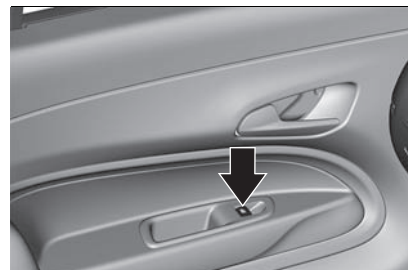

86

JJ000589

Safety function

If the window glass encounters resistance of the window during automatic closing, it is immediately stopped and opened again.

Child safety system for rear windows




87

F6S0032

Press  fig. 87 to deactivate rear door power windows; the LED illuminates. To activate, press  again.

Closing windows from outside

The windows can be closed remotely from outside the vehicle.

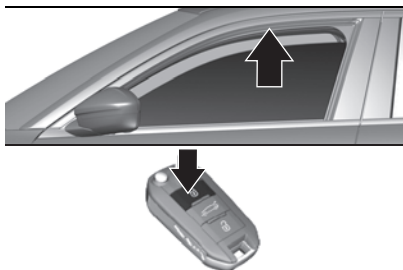

88

F6S0080

Press and hold  to close windows. If the windows are fully closed, the hazard warning lights will flash twice.

Overload

If the windows are repeatedly operated within short intervals, the window operation is disabled for some time.

Initialising the power windows

Activate the window electronics as follows:

1. Close doors.
2. Switch on ignition.
3. Open the window completely by using the switch.
4. Pull the switch repeatedly until the window is completely closed and keep pushing for additional 1 second. Note that the window closes only a few centimetres after each pull of the switch.
5. Repeat for each window.



WARNING

54) *Incorrect use of the electric windows may be dangerous. Before and during their operation, ensure that any passengers are not at risk from the moving glass either by personal objects getting caught in the mechanism or by being hit by it directly. When leaving the vehicle (equipped with radio remote control), always remove the key from the ignition device to prevent accidental operation of the electric windows from being a hazard for those still on board.*



IMPORTANT

19) *If the vehicle has a front-looking camera sensor for the driver assistance systems, it is very important that any windscreen replacement is performed accurately according to the Manufacturer specifications. Otherwise, these systems may not work properly and there is a risk of unexpected behaviour and / or messages from these systems.*

20) *Take care when operating the power windows. Risk of injury, particularly to children. If there are children on the rear seats, switch on the child safety system for the power windows. Keep a close watch on the windows when closing them. Ensure that nothing becomes trapped in them as they move.*



BONNET

OPENING

⚠ 55) 56) 57) 58) 59) 60)

⚠ 21)



89

F6S0081



90


F6S0082

WARNING Before doing anything under the bonnet, you must switch off the ignition to avoid any risk of the engine restarting automatically. Take care with objects or clothing that could be caught in the blades of the cooling fan

or in certain moving components - risk of strangulation and serious injury!

Open the driver's door (for left-hand drive versions) or the passenger door (for right-hand drive versions).


Pull the release lever (1) fig. 91 and return it to its original position.

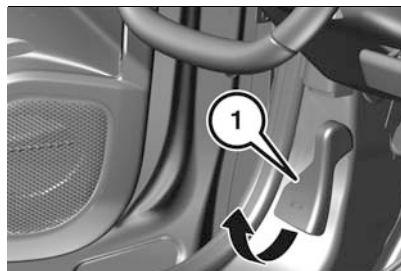

91


F6S0101

Push the safety catch (2) fig. 92 upwards and open the bonnet.

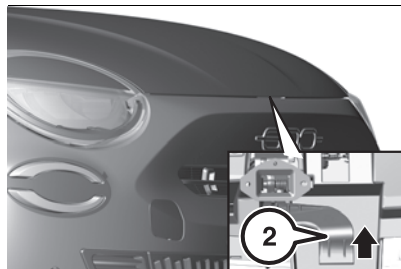

92

F6S0011

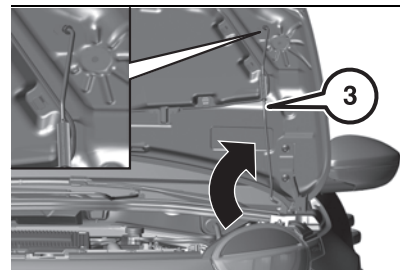

93

F6S0012

Release the supporting rod (3) fig. 93 from its locking device, then insert the rod end into the recess of the bonnet.

CLOSING

Hold the bonnet up with one hand and with the other remove the rod from recess and fit it back into the locking device.

Lower the bonnet and let it fall into the latch from a low height (20-25 cm). Make sure that the bonnet is completely closed and not only fastened by the locking device by trying to open it. If it is not perfectly closed, do not try to press the bonnet down but open it and repeat the procedure.

⚠ 61) 62)

⚠ 22) 23)



WARNING

55) Before doing anything under the bonnet, you must switch off the ignition to avoid any risk of the engine restarting automatically (fig. 309). Take care with objects or clothing that could be caught in the blades of the cooling fan or in certain moving components - risk of strangulation and serious injury!

56) For electric vehicles: before any work is carried out under the bonnet, it is essential to switch off the ignition and disconnect the charging cable if it is connected (fig. 308), check that the READY indicator lamp is off on the instrument panel and wait 4 minutes - risk of serious injury!

57) When the engine is hot, handle the exterior safety catch and the bonnet stay with care (risk of burns), using the protected area. When the bonnet is open, take care not to damage the safety catch. Do not open the bonnet under very windy conditions.

58) Cooling of the engine when stopped
The engine cooling fan may start after the engine has been switched off. Take care with objects or clothing that could be caught in the blades of the fan!

59) The bonnet may drop suddenly if the supporting rod is not positioned correctly.

60) Use both hands to lift the bonnet. Before lifting, check that the windscreen wiper arms are not raised from the windscreen or in operation, that the car is stationary and that the electric parking brake is engaged.



IMPORTANT

21) Before opening the bonnet, deactivate the Stop-Start system.


22) Do not press the bonnet into the latch to avoid dents.

23) Because of the presence of electrical equipment under the bonnet, it is strongly recommended that exposure to water (rain, washing, etc.) be limited.

LOAD COMPARTMENT

TAILGATE

Opening

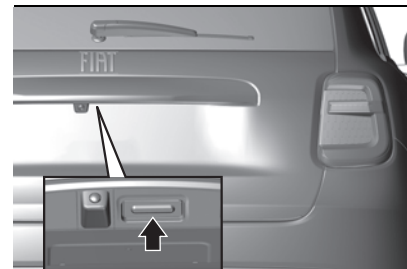

94

F6S0013

1. Press the tailgate button fig. 94 or press long  on the radio remote control

2. Open the tailgate.

On some versions, pressing the tailgate button or pressing long  button opens the tailgate automatically.

If the tailgate is stopped during an upward or downward movement, a new automatic manoeuvre can be started by pressing the button. If this function is not available, check that the tailgate is not damaged, misaligned or that bulky objects placed in the boot do not obstruct closing. Then open and close the tailgate completely by hand to restore operation.



Closing

Use the interior handle or, where provided, push the button fig. 95.



95

JJ000406

Do not push the tailgate button whilst closing as this will open the tailgate again.

HANDS-FREE BOOT OPENING

(where provided)

To operate the system in "hands-free" mode, proceed as follows:

- ❑ if the doors are locked or unlocked, the system must recognise the electronic key fob near the liftgate;
- ❑ go to the rear of the car, in the centre and about 50 cm from the liftgate;
- ❑ move your foot under the bumper, simulating a kick. When you have done this movement, withdraw your leg. To activate the movement, both sensors must detect your leg fig. 96.



96

F6S0055

If it is closed, the Hands-Free tailgate:

- ❑ unlocks and opens completely;
- ❑ with another movement of the foot, it stops;
- ❑ a further movement of the foot reverses the direction and closes the tailgate completely, if you do not stop it again.

If it is open, with a movement of the foot, the Hands-Free tailgate:

- ❑ closes completely;
- ❑ another movement of the foot before it closes completely will stop it;
- ❑ if the tailgate was stopped, another movement of the foot reverses the direction and opens it completely.

You can activate/deactivate the automatic tailgate opening and closing function in "Hands Free" mode on the **Uconnect™ 10.25"/10.25" NAV** system by activating the Main menu and selecting the following items in sequence: "Settings", "Doors

and Locks" and "Hands-Free Boot opening".

WARNING Before lifting the foot off the ground, make sure that you are in stable position. Do not touch any part of the car. There is a risk of injury from touching, for example, the very hot exhaust system.

WARNING To safeguard the charge of the conventional battery, avoid repeatedly performing this operation while the engine is stopped.

WARNING To prevent accidentally opening the tailgate when washing the car at a car wash station or using a high-pressure cleaner, use the **Uconnect™ 10.25"/10.25" NAV** system to disable the "Boot automatic opening" function.

NOTE The function is not available when the vehicle is connected.

General hints for operating tailgate



NOTE The installation of certain heavy accessories onto the tailgate may affect its ability to remain open.

NOTE At low outside temperatures the tailgate may not open fully by itself. In

this case lift the tailgate manually to its normal end position.

Opening from inside

Double press the button (1) fig. 97 on the overhead console.



97


JJ000377

BACK-UP RELEASE

To manually unlock the boot in the event of a battery or central locking failure.

Unlocking

❑ Fold the rear seats to gain access to the lock from inside the boot

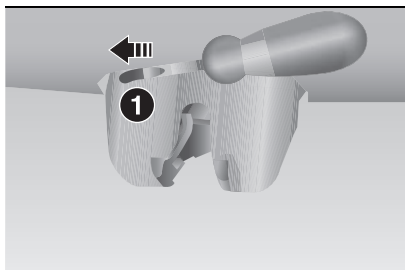

98


JJ000639

- ❑ insert a small screwdriver into hole (1) fig. 98 of the lock to unlock the boot
- ❑ move the latch to the left

Locking after closing

If the fault persists after closing again, the boot will remain locked.

REAR FLOOR STORAGE COVER

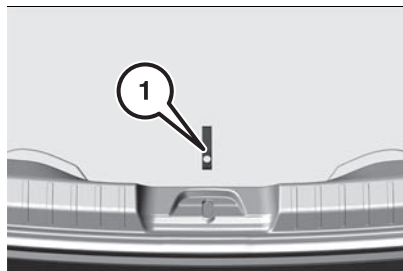


99

JJ000485

The rear floor cover can be lifted and removed. Use opening (1) fig. 99 to raise the rear floor cover and then remove it.

DOUBLE LOAD FLOOR

(where provided)

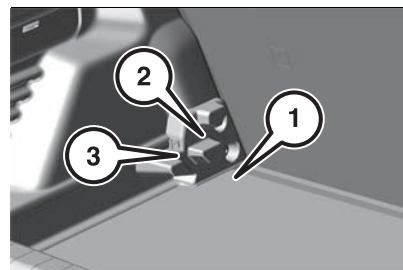

100

JJ000486

The double load floor can be inserted in the load compartment in two positions:

- ❑ lower position above the rear floor storage cover (1) fig. 100
- ❑ upper position interlocked into back panel trim (2) fig. 100

The floor can be inclined at 45° and locked on the supports (3) fig. 100 for facilitating the access to the load area below the storage cover.

To remove, use opening to raise the rear floor cover and lift it up.

If mounted in the upper position, the space between the load floor and the spare wheel well cover can be used as a storage compartment.

In this position, if the rear seat backrests are folded forwards, an almost completely flat load bay is created.

In the upper position, the double load floor is able to withstand an equally



distributed maximum load of 60 kg. In the lower position, the double load floor is able to withstand the maximum permissible load.

LOADING INFORMATION



64)

- ❑ Heavy objects in the load compartment should be placed against the seat backrests. Make sure that the backrests are securely engaged. If objects can be stacked, heavier objects should be placed at the bottom.
- ❑ Prevent sliding of loose objects by securing them with straps attached to the lashing eyes.
- ❑ Do not allow the load to protrude above the upper edge of the backrests.
- ❑ Do not place any objects on the load compartment cover or the instrument panel, and do not cover the sensor on top of the instrument panel.
- ❑ The load must not obstruct the operation of the pedals, parking brake and gear selector, or hinder the freedom of movement of the driver. Do not place any unsecured objects in the interior.
- ❑ Do not drive with an open load compartment.
- ❑ The payload is the difference between the permitted gross vehicle weight (see identification plate) and the EC kerb weight. To calculate the payload, enter the data for your vehicle

in the weights table at the front of this manual.

The EC kerb weight includes weights for the driver (68 kg), luggage (7 kg) and all fluids (fuel tank 90% full).

Optional equipment and accessories increase the kerb weight.

- ❑ Driving with a roof load increases the sensitivity of the vehicle to cross-winds and has a detrimental effect on vehicle handling due to the vehicle's higher centre of gravity. Distribute the load evenly and secure it properly with retaining straps. Adjust the tyre pressure and vehicle speed according to the load conditions. Check and retighten the straps frequently. Do not drive faster than 120 km/h. The permissible roof load is 50 kg. The roof load is the combined weight of the roof rack and the load.



WARNING

63) Do not drive with the tailgate open or ajar, e.g. when transporting bulky objects, since toxic exhaust gases, which cannot be seen or smelled, could enter the vehicle. This can cause unconsciousness and even death.

64) Always make sure that the load in the vehicle is securely stowed. Otherwise objects can be thrown around inside the vehicle and cause personal injury or damage to the load or car.



IMPORTANT

24) Before opening the tailgate, check overhead obstructions, e.g. a garage door, to avoid damage to the tailgate. Always check the moving area above and behind the tailgate.

INTERIOR FITTINGS




65)

GLOVEBOX



66)

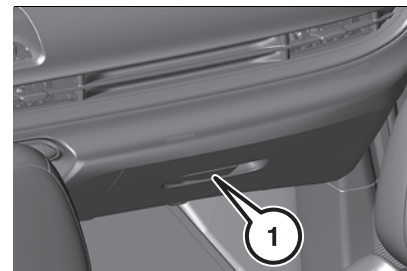

101

F6S0048

Pull lever (1) fig. 101 to open the glovebox.

The glovebox should be closed whilst driving.


CENTRAL CONSOLE STORAGE COVER

(where provided)

The central console can be protected by a three-sections foldable cover, fig. 102. The cover can be opened partially or completely. To easily reach the load compartment, the cover can be removed.

WARNING The cover is not a table top: do not place any object over it.

WARNING Be careful not to cover the PRND command while driving.

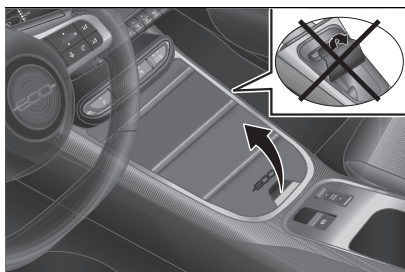


102

F6S0172

ADJUSTABLE STORAGE COMPARTMENT

(where provided)

A storage compartment is located in the centre console. By moving the partition (1) fig. 103 it's possible to adapt the width of the compartments.

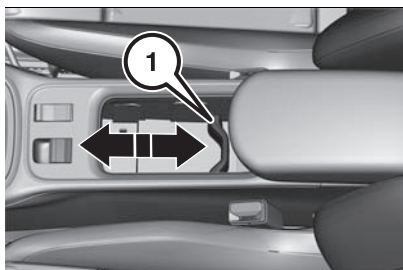

103

JJ000457

DOOR PANEL STORAGE




104

F6S0049

A storage compartment is located in the front and rear door panels

CENTRAL CONSOLE STORAGE

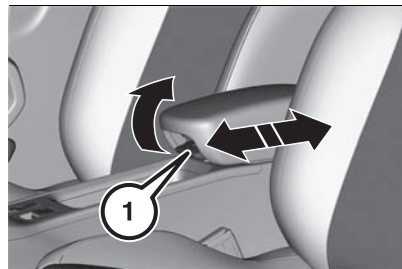

105

JJ000489

Slide armrest backwards, push button (1) fig. 105 and fold upwards. Under the armrest there is a storage compartment. The armrest can be adjusted.

SUN VISORS

The sun visors can be folded down or swivelled to the side to prevent dazzling.

If the sun visors have integral mirrors, the mirror covers should be closed when driving.

A ticket holder is located on the backside of the sun visor.

WARNING TRIANGLE

(Where provided)

If the warning triangle is not provided it's advised anyway to stow the warning triangle bought in the space at



the rear of the load compartment and secure it with the Velcro® fastener.

POWER OUTLETS

The car is equipped with a 12 V power outlet (fig. 106)

Do not exceed the maximum power consumption of 120 W.

The 12 V power outlet is deactivated in the event of low conventional battery voltage.

Electrical accessories that are connected must comply with the electromagnetic compatibility requirements laid down in DIN VDE 40 839.

Do not connect any current-delivering accessories, e.g. electrical charging devices or batteries.

Do not damage the outlet by using unsuitable plugs.



106

JJ000490


USB PORTS

Front USB ports

The car is equipped with USB-A (charge only) (1) fig. 107 and USB-C (data and charge) (2) fig. 107 sockets for charging the connected device and playing multimedia content through the **Uconnect™ 10.25"/10.25" NAV** system. Refer to the "Multimedia" section.

The USB-C socket (2) fig. 107 allows a smartphone to be connected by Android Auto® or CarPlay®, enabling certain smartphone applications to be used on the touch screen. For best results, use a cable made or approved by the device manufacturer. These applications can be managed using the steering-mounted controls or the audio system controls.

NOTE The sockets must always be kept clean and dry.

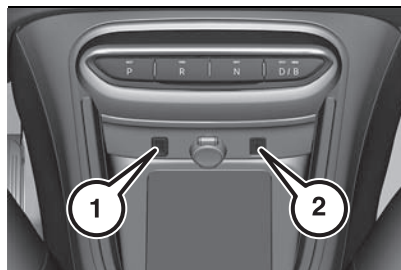


107

JJ000491

Rear USB port

(where provided)

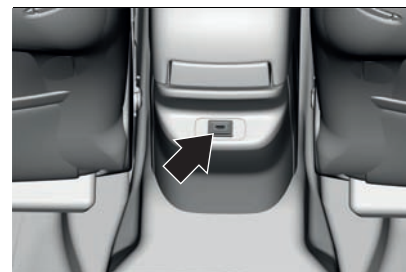

108

JJ000494

The car can be equipped with an USB-C (charge only) socket fig. 108 for charging the connected device.

NOTE The sockets must always be kept clean and dry.

INDUCTIVE CHARGING

(where provided)



67) 68)

25)

This system allows wireless charging of a portable device such as a smartphone, using the magnetic induction principle, in accordance with the Qi 1.1 standard.

The portable device to be charged must be compatible with the Qi standard, either by design or by using a compatible holder or shell.

A mat can also be used provided that it is approved by the Manufacturer. The charging area is identified by the Qi symbol.

The charger works with the engine running and with the Stop-Start system deactivated.

Charging is managed by the smartphone.

With the Electronic key system, the charger's operation may be briefly disrupted when a door is opened or the ignition is switched off.

WARNING To avoid the damage or cut of the inductive charging surface, do not place on the surface objects with pointy and/or sharp edges or, anyway, objects different from a mobile phone.

WARNING The system is not designed to charge multiple devices simultaneously.

WARNING Do not place contactless cards (RFID), credit cards or metal objects in the charging compartment. The presence of an active NFC function on a smartphone could signal a malfunction.

WARNING Not all mobile phone covers guarantee the correct charging of

the phone. Check that charging is in progress after having placed the phone in the charging compartment.

To charge a mobile device:



109

F6S0066

1. Remove all objects from the charging device.
2. Place the mobile device with the display facing upwards on the charging area, (1) fig. 109. Place the device in its centre.

When the portable device is detected, the charger's indicator LED (2) fig. 109 lights up green. It remains lit for the whole time that the battery is being charged.

Status LED

The LED indicates the current charging status.

Illuminates green

A compatible portable device detected and the mobile device is charging.

Flashes orange

The mobile device has not been centred properly in the charging zone or an unknown object has been detected in the charging zone.

Fixed orange

There is a problem with the mobile device's battery, device battery temperature too high or a fault of the inductive charger has been detected. If the indicator lamp is fixed orange:

❑ remove the device, then place it back in the centre of the charging zone or


❑ remove the device and try again in a quarter of an hour

If the problem persists, have the system checked by a Fiat Dealership.

SHARK FIN ANTENNA

A ventilation grille is present at the rear of the roof for cooling the shark fin antenna fig. 110. Any ventilation noise produced, with the ignition on or the engine running, is completely normal.



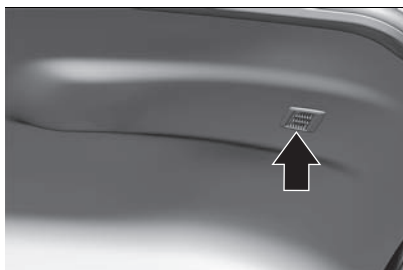

110

F6S0208



WARNING

- 65)** Do not store heavy or sharp objects in the storage compartments.
- 66)** Do not travel with the glovebox open: it may injure the front seat occupants in the event of an accident.
- 67)** Inductive charging can affect the operation of implanted pacemakers or other medical devices. If applicable, seek medical advice before using the inductive charging device.
- 68)** Do not leave metal objects (e.g. coins, keys, vehicle remote control) in the charging area while a device is being charged - risk of overheating or interrupting the charging!



IMPORTANT

- 25)** The use of multiple wireless functions on the smartphone at the same time (Apple CarPlay/Android Auto and wireless charging), as indicated by the smartphone

manufacturers, could cause it to overheat, resulting in a limitation of the active functions or its turning off. In this case, it is recommended to connect the system using the USB socket.

ROOF RACK SYSTEM



69)



26) 27) 28) 29) 30)

ROOF RACK

(where provided)

For safety reasons and to avoid damage to the roof, the vehicle approved roof rack system is recommended. For further information, contact a Fiat Dealership.

Direct fitting on roof



111

F6S0067

If the vehicle is not provided of longitudinal bars, the roof rack can be installed directly on the roof:

- ☐ open all doors
 - ☐ mounting points are located in each door frame of the vehicle body fig. 111.
- Fasten the roof rack according to the installation instructions delivered with the roof rack
- Remove the roof rack when not in use.

WARNING For electric versions: travelling with the rack/ski rack fitted impacts on the life of the high-voltage battery.



WARNING

- 69)** Before driving, make sure that the transversal bars have been fitted properly.



IMPORTANT

- 26)** Never exceed the maximum permitted loads (see the "Weights and loads" chapter in the "Technical specifications" section).
- 27)** Fully comply with the regulations in force concerning maximum clearance.
- 28)** Do not operate the sunroof when using roof bars - risk of major damage!
- 29)** After travelling for a few kilometres, check to ensure that the fixing screws for the attachments are well tightened.
- 30)** Evenly distribute the load and take into account, when driving, the increased responsiveness of the vehicle to side wind.

ENGINE EXHAUST

(where provided)



EXHAUST FILTER

Automatic cleaning process

The exhaust filter system filters soot particles out of the exhaust gases.

The start of saturation of the exhaust filter is indicated by the temporary illumination of  accompanied by a message in the instrument panel display.

As soon as the traffic conditions permit, regenerate the filter by driving at a vehicle speed of at least 60 km/h until the control indicator extinguishes.

NOTE On a new vehicle, the first exhaust filter regeneration operations may be accompanied by a burning smell, which is normal. Following prolonged operation of the vehicle at very low speed or at idle, water vapour can be emitted at the exhaust on acceleration. This does not affect the behaviour of the vehicle or the environment.

Cleaning process not possible

If  stays on, accompanied by an audible signal and a message, this indicates that the exhaust filter additive level is too low.

The reservoir must be topped-up without delay. Seek the assistance of a Fiat Dealership.

Catalytic converter

The catalytic converter reduces the amount of harmful substances in the exhaust gases.



In the event of misfiring, uneven engine running, a reduction in engine performance or other unusual problems, have the cause of the fault rectified by a Fiat Dealership as soon as possible. In an emergency, driving can be continued for a short period, keeping vehicle speed and engine speed low.



WARNING

70) Engine exhaust gases contain poisonous carbon monoxide, which is colourless and odourless and could be fatal if inhaled. If exhaust gases enter the interior of the vehicle, open the windows. Have the cause of the fault rectified by a Fiat Dealership. Avoid driving with an open load compartment, otherwise exhaust gases could enter the vehicle.



IMPORTANT

31) Fuel grades other than those listed in the "Fuel" chapter could damage the catalytic converter or electronic components. Unburnt petrol will overheat and damage the catalytic converter. Therefore avoid excessive use of the starter, running the fuel tank dry and starting the engine by pushing or towing.




KNOWING THE INSTRUMENT PANEL

This section of the handbook provides all information that is useful for getting to know, interpreting, and using the instrument panel correctly.

7" DIGITAL INSTRUMENT PANEL.....	71
WIDGETS.....	74
TRIP COMPUTER	75
REMOTELY OPERABLE ADDITIONAL (ELECTRIC VERSIONS)	77
WARNING INDICATOR LAMPS.....	78

7" DIGITAL INSTRUMENT PANEL

Hybrid version

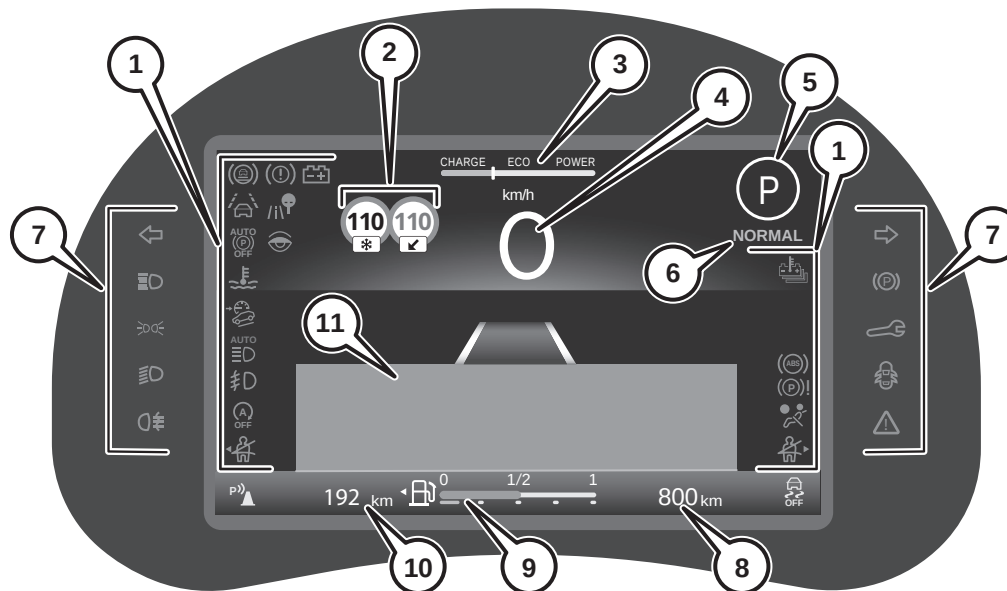


112

F6S0261

1. Warning, signalling and notification symbols 2. Driving assistance systems notifications 3. Auxiliary battery operating mode (where provided) 4. Digital speedometer 5. Engaged gear indicator 6. Drive mode indicator 7. Warning, signalling and notification lamps 8. Odometer 9. Digital fuel level gauge (the triangle on the left side of the symbol indicates the side of the vehicle with the fuel filler) 10. Estimated autonomy 11. Message area



Electric version

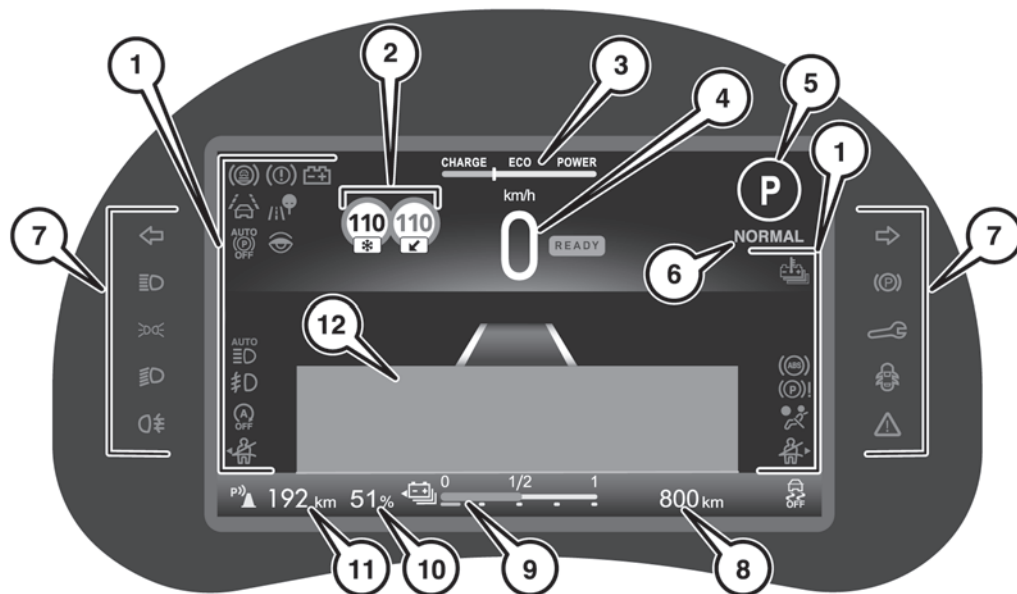

113

F6S0173

1. Warning, signalling and notification symbols 2. Driving assistance systems notifications 3. High-voltage battery operating mode (where provided) 4. Digital speedometer, "READY" symbol 5. Engaged gear indicator 6. Drive mode indicator 7. Warning, signalling and notification lamps 8. Odometer 9. High-voltage battery state of charge gauge (the triangle on the left side of the symbol indicates the side of the vehicle with the charging port) 10. High-voltage battery state of charge (in %) 11. Estimated autonomy 12. Message area

WARNING, SIGNALLING AND NOTIFICATION SYMBOLS/LAMPS

All warning, signalling and notification icons are displayed in these positions.

DRIVING ASSISTANCE SYSTEMS NOTIFICATION

This position displays the status icons of the various functions (where provided): Adaptive Cruise Control, Speed limiter and Traffic Sign Recognition.

Refer to the "Starting and Driving" section for more information about driving assistance systems.

HIGH-VOLTAGE/AUXILIARY BATTERY OPERATING MODE

The power indicator shows in real time the power demanded from the vehicle. There are 3 zones:

- ☐ CHARGE: the battery is charged while the car is slowing down or braking (regeneration)
- ☐ ECO: low power requested from the battery
- ☐ POWER: high power requested from the battery

With hybrid engine POWER

High power demand, using the combined capabilities of the petrol engine and the electric motor.

The slider is located in this zone during more dynamic driving phases when high levels of performance are being demanded.

ECO

Optimal use of energy (internal combustion or electric).

The slider is located in this zone when driving under electric power and when optimal use is being made of the petrol engine, both accessible by adopting a suitable driving style.

CHARGE

Energy recovery for recharging the traction battery.

The slider is located in this zone during deceleration: taking your foot off the accelerator pedal or braking.

When the ignition is switched on and before the engine is started, the power indicator only displays "OFF".

DIGITAL SPEEDOMETER AND "READY" SYMBOL

These positions show the instantaneous speed of the car (in km/h or mph) and (where provided) the electrical system readiness at startup ("READY") warning.

If the vehicle is driven in "Electric" mode, the speed is indicated in blue.

ENGAGED GEAR INDICATOR

(where provided)

This position shows the mode or the selected gear (D with the gear number, P, R, N, B).

Refer to the "Starting and Driving" section for more information about the automatic transmission and Electric Drive Unit.

DRIVE MODE INDICATOR

This position shows the Drive Mode setting (Normal, Eco, Sport).

Refer to the "Starting and Driving" section for more information about the Drive Mode.

ODOMETER

Kilometres or miles travelled (depending on the display settings) are displayed in position.

DIGITAL FUEL LEVEL GAUGE

(where provided)

The digital gauge shows the level of fuel still available in the tank and the estimated range. The triangle to the side of the symbol indicates the side of the car with the fuel filler.

The warning light  turns yellow when the level has reached the fuel reserve.

The indications on the graphic scale indicate the amount of fuel:



- 1 = full tank
- 0 = empty tank

WARNING If the reserve switches on, refuel at the earliest opportunity.

HIGH-VOLTAGE BATTERY STATE OF CHARGE AND ESTIMATED AUTONOMY

(Electric versions)

In this position the state of charge of the high-voltage battery is indicated by a percentage and a bar of width proportional to the state of charge of the battery. The triangle to the side of the symbol indicates the side of the car with the charging port. The estimated remaining range is indicated by a numerical value (in km or miles, depending on the display settings).

The indications on the graphic scale indicate the amount of charge:

- 1 = full charge
- 0 = battery discharged

AUXILIARY BATTERY STATE OF CHARGE

(Hybrid versions)

In this position the state of charge of the auxiliary battery is indicated by a percentage and a bar of width proportional to the state of charge of the battery.

The indications on the graphic scale indicate the amount of charge:


- 1 = full charge
- 0 = battery discharged

MESSAGES AND POP-UP AREA

The area shows messages and notifications for the driving assistance systems and multimedia, navigation repetition and menus.

WIDGETS

Press the button shown in fig. 114 to change the information page shown on the display central area.

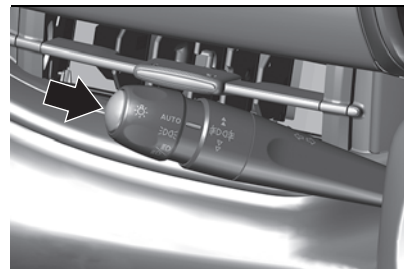

114

F6S0050

These are the available information:

- RPM meter (Hybrid versions)
- Coolant temperature
- Energy flow
- Powermeter (Charge/Eco/Power)
- Thermal comfort consumption

- Navigation repetition (map or turning indication)
- Radio / Media / Phone repetition

"ENERGY FLOW"

Electric versions

On e Full Electric versions, by default the "Energy Flow" screen is shown fig. 115. The page shows the energy fluxes from the high-voltage battery to the electric motor and regeneration:

- Electric motor (1): in light blue if power is requested from the high-voltage battery (traction), in green when the vehicle decelerates or brakes and the high-voltage battery is recharged (regeneration). Same colours are used to highlight the front wheels (3) in the same conditions.
- High-voltage battery (2): the high-voltage battery charge level is indicated by set of 8 green bars. The more coloured bars there are, the greater the battery charge state.



115

F6S0175

Hybrid versions

On Hybrid versions, the "Energy Flow" screen fig. 116 shows the energy fluxes from the auxiliary battery to the Belt Starter and regeneration, and the torque from the internal combustion engine to the wheels:


❑ Internal combustion engine (1): in orange if the engine is running and transfers torque to the wheels. In black if it's not running

❑ Auxiliary battery (2): the Auxiliary battery charge level is indicated by set of 8 green bars. The more coloured bars there are, the greater the battery charge state.

❑ Electrified dual clutch automatic transmission (4):

- In green when the vehicle brakes decelerates or brakes and the Auxiliary battery is recharged (regeneration)
- In light blue if power is requested from the Auxiliary battery (traction)
- In grey when the electrified dual clutch automatic transmission is idle

Same colours are used to highlight the front wheels (3) in the same conditions.

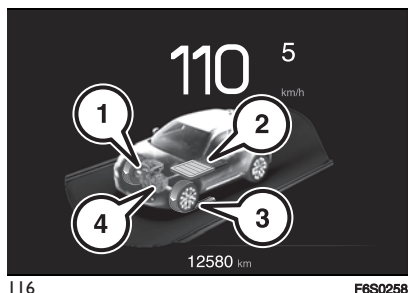

TRIP COMPUTER

Displays information related to the current trip (range, fuel consumption, average speed, etc.).

DATA DISPLAYED ON THE INSTRUMENT PANEL



117

F6S0051

Displaying the different tabs

Pressing the button located on the end of the wiper control stalk fig. 117 displays the following tabs in turn:

❑ Current information:

- Percentage of the current journey travelled in all-electric driving mode (Electric vehicles).
- Total distance recorder (Electric vehicles).
- Current consumption (Hybrid versions).

❑ Trips "1" then "2":

- Average speed.
- Average fuel consumption.
- Distance travelled.



118

F6S0259

End of trip page


(where provided)

When the ignition is switched off, the instrument panel automatically displays an additional page of the trip computer that recapitulates information about the last trip (fig. 120 for Electric versions, fig. 119 for Hybrid versions).

The end of trip page contains the following information:




- Range
- Trip time
- Distance travelled
- Percentage of the current journey travelled in all-electric driving mode (Hybrid versions)
- Average consumption

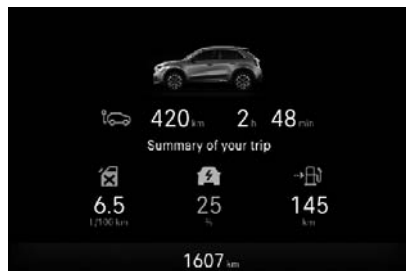

119

F6S0249

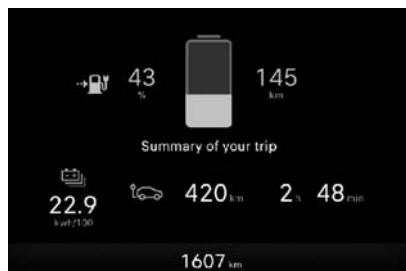

120

F6S0250

TRIP RESET

When the desired trip is displayed, press the button on the end of the wiper control stalk for more than 2 seconds.

Trips "1" and "2" are independent and are used in the same way.

DEFINITIONS

Range

(miles or km)

Distance that can still be travelled with the fuel remaining in the tank (based on the average fuel consumption over the last few kilometres or miles travelled).

This value may vary following a change in driving style or terrain, leading to a significant change in current fuel consumption.

When the range falls below 30 km (19 miles), dashes are displayed.

After filling with at least 5 litres of fuel, the range is recalculated and is displayed if it exceeds 100 km (62 miles).

Dashes appearing permanently in place of numbers while driving indicates a malfunction. Consult a Fiat Dealership.

Current consumption

(mpg or l/100 km or km/l)

Calculated during the last few seconds. This function is only displayed at speeds above 30 km/h (19 mph).

Average consumption

(mpg or l/100 km or km/l)

Calculated since the last trip computer reset.

Average speed

(mph or km/h)

Calculated since the last trip computer reset.

Distance travelled

(miles or km)

Calculated since the last trip computer reset.

Stop-Start time counter

(minutes/seconds or hours/minutes)

If your vehicle is fitted with the Stop-Start function, a time counter calculates the time spent in STOP mode during a journey. The time counter is reset each time the ignition is switched on

REMOTELY OPERABLE ADDITIONAL (ELECTRIC VERSIONS)



The following functions are available from the Fiat® app, which is accessible from a smartphone:

- ❑ Managing the high-voltage battery charging (deferred charging).
- ❑ Managing the temperature pre-conditioning.
- ❑ Viewing the state of charge and range of the vehicle.

Installation procedure

- ❑ Download the Fiat® app from the appropriate online store for your smartphone.
- ❑ Create an account.
- ❑ Enter the vehicle's VIN (code beginning with "VF" on the vehicle registration certificate). For more information on VIN, refer to the "Vehicle identification" chapter in "Technical specifications" section.

NOTE Network coverage In order to be able to use the various remotely operable features, ensure that your vehicle is located in an area covered by the mobile network. A lack of network coverage may prevent communication with the vehicle (for example, if it is in an underground car park). In such cases, the application will display a message indicating that the connection with the vehicle could not be established.



WARNING INDICATOR LAMPS

WARNING Warning lights may be accompanied by a specific message and/or sound when implemented on the instrument panel. These indications are indicative and precautionary and as such must not be considered as exhaustive and/or alternative to the information contained in the Owner Handbook, which you are advised to read carefully in all cases. Always refer to the information in this section in the event of a failure indication.

Displayed as symbols, the warning and indicator lamps inform the driver of the occurrence of a malfunction (warning lamps) or of the operating status of a system (operation or deactivation indicator lamps). Certain lamps light up in two ways (fixed or flashing) and/or in several colours.

When a failure is detected in the sound module  appears in the instrument panel display, accompanied by a display message. No warning chime will sound, also not for the driver assistance systems.

Associated warnings

The illumination of a lamp may be accompanied by an audible signal and/or a message displayed in a screen.

Relating the type of alert to the operating status of the vehicle allows you to determine whether the situation is normal or whether a fault has occurred: refer to the description of each lamp for further information.

When the ignition is switched on

Certain red or orange warning lamps come on for a few seconds when the ignition is switched on. These warning lamps should go off as soon as the engine is started.

For more information on a system or a function, refer to the corresponding section.

Persistent warning lamp

If a red or orange warning lamp comes on, there may be fault which needs further investigation.

If a lamp remains lit

The tables in the next pages indicate whether you should contact a Fiat Dealership in addition to the immediate recommended actions.

LIST OF WARNING AND INDICATOR LAMPS

Red Warning Indicator Lamps

Lamp	Meaning
	STOP Fixed, associated with another warning lamp, accompanied by the display of a message and an audible signal. A serious fault with the engine, braking system, power steering or automatic transmission/Electric Drive Unit or a major electrical fault has been detected. Stop the vehicle as soon as it is safe to do so and switch off the ignition. Then contact a Fiat Dealership.
	Maximum coolant temperature Fixed. The temperature of the cooling system is too high. Stop the vehicle as soon as it is safe to do so and switch off the ignition, then wait until the engine has cooled down before topping up the level, if necessary. If the problem persists, contact a Fiat Dealership.
	Low engine oil pressure Fixed. There is a fault with the engine lubrication system. Stop the vehicle as soon as it is safe to do so and switch off the ignition. Then contact a Fiat Dealership.  32)
	System malfunction (Electric versions) Fixed. The electric traction system is faulty. Stop the vehicle as soon as it is safe to do so and switch off the ignition. Then contact a Fiat Dealership.
	System malfunction (Hybrid versions) Fixed. The hybrid system is faulty. Stop the vehicle as soon as it is safe to do so and switch off the ignition. Then contact a Fiat Dealership.
	Cable connected (Electric versions) Fixed when the ignition is switched on. The charging cable is connected to the vehicle's connector. Fixed when the ignition is switched on, accompanied by a message. It is not possible to start the vehicle while the charging cable is connected to the vehicle's connector. Disconnect the charging cable and close the flap.



Lamp	Meaning
	Conventional battery charge fault Fixed. The battery charging circuit is faulty (e.g. dirty terminals, loose or severed alternator belt). Stop the vehicle as soon as it is safe to do so and switch off the ignition. If the electric parking brake stops working, immobilise the vehicle and fit the chocks against one of the wheels. Clean and tighten the terminals. If the warning lamp does not go off when the engine is started, contact a Fiat Dealership.
 red  red	High-voltage/auxiliary battery temperature overheating Fixed, combined with the STOP warning lamp. Accompanied by the display of a message and an audible signal. The battery's temperature is too high. Stop as soon as it is safe to do so and switch off the ignition. You must stop and evacuate the vehicle.
 red  yellow	Electric traction system malfunction Fixed, combined with the Service warning lamp, accompanied by the display of a message. The electric traction / traction battery system has a fault. Contact a Fiat Dealership.
	Low braking fluid level Fixed. The brake fluid level in the braking circuit has dropped significantly. Stop the vehicle as soon as it is safe to do so and switch off the ignition. Then top up with fluid that complies with the manufacturer's recommendations. If the problem persists, contact a Fiat Dealership.
 red  yellow	Electronic brake force distribution (EBFD) fault Fixed. The electronic brake force distribution (EBFD) system is faulty. Stop the vehicle as soon as it is safe to do so and switch off the ignition. Then contact a Fiat Dealership.

Lamp	Meaning
	Electric parking brake Fixed. The electric parking brake is applied. Flashing. Application/release is faulty. Stop the vehicle as soon as it is safe to do so and switch off the ignition. Park on flat ground (on a level surface). Select mode P. Switch off the ignition and contact a Fiat Dealership.
	Door(s) open Fixed, associated with a message identifying the access. An audible signal supplements the alert if the speed is higher than 10 km/h (6 mph). A door or the boot is not properly closed.
	Seat belts unfastened Fixed or flashing, accompanied by an increasing audible signal. A seat belt has not been fastened or has been unfastened.
	High-voltage/auxiliary battery failure The symbol appears on the instrument panel display in case of high-voltage/auxiliary battery failure. Contact a Fiat Dealership.



IMPORTANT

32) If the  symbol switches on while driving, stop the engine immediately and contact a Fiat Dealership.



Orange warning/indicator lamps

Lamp	Meaning
	Service Temporarily on, accompanied by the display of a message: one or more minor faults, for which there is/are no specific warning lamp(s), have been detected. Identify the cause of the fault using the message displayed on the instrument panel. You may be able to deal with some faults yourself, such as changing the battery in the remote control. For other faults, such as with the tyre underinflation detection system, go to a Fiat Dealership. Fixed, accompanied by the display of a message: one or more major faults, for which there is/are no specific warning lamp(s), have been detected. Identify the cause of the fault using the message displayed on the instrument panel, then go to a Fiat Dealership. Fixed, accompanied by a dedicated message: automatic release of the electric parking brake is unavailable. Contact a Fiat Dealership.
	Braking fault Fixed: a minor fault with the braking system has been detected. Drive carefully. Go to a Fiat Dealership.  71)
	Electric parking brake malfunction Fixed, accompanied by a dedicated message: the vehicle cannot be immobilised with the engine running. If manual application and release commands are not working, the electric parking brake control is faulty. The automatic functions must be used at all times and are automatically reactivated in the event of a fault with the control. Contact a Fiat Dealership.
	Electric parking brake fault Fixed, accompanied by a dedicated message. The electric parking brake is faulty: manual and automatic functions may not be working. When stationary, to immobilise the vehicle: ☐ Pull the electric parking brake control and hold it for approximately 7 to 15 seconds, until the indicator lamp lights up on the instrument panel. If this procedure does not work, secure the vehicle: ☐ Park on a level surface. ☐ Select P, then place the supplied chocks against one of the wheels. Then contact a Fiat Dealership

Lamp	Meaning
	Automatic Parking Brake deactivated Fixed: the "automatic application" (on switching off the engine) and "automatic release" (on acceleration) functions are deactivated. If automatic application/release is no longer possible: ☐ Start the engine. ☐ Use the control to apply the electric parking brake. ☐ Take your foot fully off the brake pedal. ☐ Hold the control pressed in the release direction for between 10 and 15 seconds. ☐ Release the control. ☐ Depress and hold the brake pedal. ☐ Pull the control in the application direction for 2 seconds. ☐ Release the control and the brake pedal.
	Anti-lock braking system (ABS) fault Fixed. The anti-lock braking system has a fault. The vehicle retains conventional braking. Drive carefully at moderate speed, then go to a Fiat Dealership.
	Engine self-diagnostic system Flashing: the engine management system has a fault. There is a risk that the catalytic converter will be destroyed. You must contact a Fiat Dealership. Fixed: the emissions control system has a fault. The warning lamp should go off when the engine is started. Go to a Fiat Dealership without delay. 🚗 33
	Dynamic stability control (DSC)/Traction Control (TC) OFF Fixed: the system is deactivated. The system is reactivated automatically when the vehicle is restarted, and at speeds above approximately 50 km/h (31 mph). At speeds below 50 km/h (31 mph), it can be reactivated manually.
	Dynamic stability control (DSC)/Traction Control (TC) Flashing: DSC/TC system regulation is activated in the event of a loss of grip or trajectory. Fixed: the DSC/TC system has a fault. Go to a Fiat Dealership.
	Emergency brake malfunction (with electric parking brake) Fixed, accompanied by a dedicated message: emergency braking does not deliver optimal performance. If automatic release is not available, use manual release or go to a Fiat Dealership.
	Hill Start Assist fault Fixed, accompanied by a dedicated message: the system has a fault. Go to a Fiat Dealership.



Lamp	Meaning
	Under-inflation Fixed. The pressure in one or more tyres is too low: check the pressure of the tyres as soon as possible. Reinitialise the Tyre Underinflation Detection System after adjusting the pressure.
	Tyre Underinflation Detection System fault Underinflation warning lamp flashing then fixed and Service warning lamp fixed: the Tyre Underinflation Detection System is faulty. Underinflation detection is no longer monitored. Check the tyre pressures as soon as possible and go to a Fiat Dealership.
	Close Obstacle Detection Fixed, accompanied by an onscreen message: the sensors are blocked. Flashes yellow as soon as an obstacle gets closer to the vehicle.
	Close Obstacle Detection OFF (where provided) Fixed, accompanied by an onscreen message and an audible signal: the system is deactivated.
 or  (for versions/markets where provided)	Close Obstacle Detection fault Fixed, associated with the Service warning lamp, accompanied by the display of a message and an audible signal. The system has a fault. Go to a Fiat Dealership.
	Airbags fault Fixed, associated with the Service warning lamp and accompanied by the display of a message: one of the airbags or seat belt pyrotechnic pretensioners is faulty. Go to a Fiat Dealership.  72) 73)

Lamp	Meaning
	Low fuel level Fixed, with the reserve level shown in red, accompanied by an audible signal and the display of a message: when it first comes on, there are approximately 5 litres of fuel remaining in the tank (reserve). Until the fuel level is topped up, this alert will be repeated every time the ignition is switched on, with increasing frequency as the fuel level decreases and approaches zero. Refuel without delay to avoid running out of fuel. Never drive until completely empty, as this could damage the emissions control and injection systems. WARNING Never refuel with the engine stop with Stop-Start; you must switch off the ignition.
	"Turtle" mode with limited driving range (Electric version) Fixed: the state of charge of the high-voltage battery is critical. The engine power gradually decreases. You must put the vehicle on charge. If the warning lamp remains lit, contact a Fiat Dealership.
 OFF	Pedestrian horn fault In the event of a malfunction, this warning lamp lights up on the instrument panel. Have it checked by a Fiat dealer or a qualified workshop.
	Automatic Braking System Fixed, accompanied by the display of a message: the system has been deactivated via the touch screen. Flashing: the system activates and brakes the vehicle momentarily to reduce the speed of collision with the vehicle in front. For more information, refer to the "Starting and driving" section. Fixed, accompanied by a message and an audible signal: the system has a fault. Contact a Fiat Dealership.
	Automatic Braking System fault Fixed: the system has a fault. If these warning lamps come on after the engine is switched off and then restarted, contact a Fiat Dealership.
 yellow  red	Automatic Braking System temporarily deactivated Fixed: the system is deactivated temporarily because the driver and/or front passenger (depending on version) has been detected as present but the corresponding seat belt has not been fastened.



Lamp	Meaning
	Lane Keeping Assist / Lane Departure warning Fixed. The system has been automatically deactivated or placed on standby. Flashing. You are about to cross a broken lane marking without operating the direction indicators. The system is activated, then corrects the trajectory if it detects a risk of unintentionally crossing a line or hard shoulder (depending on version). For more information, refer to the "Starting and driving" section.
	Lane Keeping Assist fault / Lane Departure warning Fixed, accompanied by the display of a message and an audible signal. The system has a fault. Contact a Fiat Dealership.
	e-Auto mode (Hybrid versions) Fixed, accompanied by the display of a message. The e-Auto mode has been deactivated manually. The petrol engine will not switch off at the next release of the accelerator pedal or at the next traffic stop. Reactivate the mode via the touch screen. For more information, refer to the "Starting and driving" section. Flashing then fixed, accompanied by a message: the system has a fault. Contact a Fiat Dealership.
	Rear foglamps on Fixed: the lamps are on.
	Adaptive Headlights fault Fixed, accompanied by an audible signal and a message: a function or camera malfunction is detected. Go to a Fiat Dealership.
	Driver Attention Alert warning (for versions/markets where provided) Fixed, accompanied by an audible signal and a message: if the Driver Attention Alert detect low driver alertness, high fatigue or distraction, the driver is warned by a message and an audible sound. After three alerts the message is accompanied by a more pronounced audible signal. Stop the vehicle in a safe place and take a break. Fixed: the Driver Attention Alert is deactivated. Fixed, accompanied by an audible signal and a message: system fault. Contact an Fiat Dealership. Fixed, accompanied by a message: covered camera by snow, ice, slush, mud, dirt or affected by windscreen damage or foreign items.

Lamp	Meaning
	Traffic Sign Recognition / Speed Limit Recognition (for versions/markets where provided) Illuminated for a few seconds: if the vehicle exceeds the speed limit provided by the traffic sign assistant, the speed limit displayed in the instrument panel display flashes and an audible signal is given. If flashing and audible signal are deactivated,  illuminates for a few seconds. Illuminates permanently: if the traffic sign assistant has a failure,  illuminates permanently. Consult an Fiat Dealership.

 **WARNING**

71) If a failure is present with sharp braking, the rear wheels may lock and the vehicle may swerve.

72) If, when the ignition device is turned to **ENGINE**, the warning light  does not switch on or stays on while driving, there may be an anomaly in the restraint systems. In this case the airbags or pretensioners may not deploy in case of an accident or, in a more limited number of cases, they may be deployed accidentally. Before continuing, contact a Fiat Dealership to have the system immediately checked.

73) The failure of the  warning light is signalled by the switching on of the  icon on the instrument panel. In this case, the warning light may not indicate any faults with the restraint systems. Before continuing, contact a Fiat Dealership to have the system immediately checked.

 **IMPORTANT**

33) If, when turning the ignition device to **ENGINE**, the warning light  does not switch on, or switches on constantly or flashes while driving, contact a Fiat Dealership as soon as possible.

Green warning/indicator lamps

Lamp	Meaning
	Stop-Start (Hybrid versions) Fixed: when the vehicle stops, the Stop-Start puts the engine into STOP mode. Flashing temporarily: STOP mode is momentarily unavailable or START mode is automatically triggered. For more information, refer to the "Starting and driving" section.



Lamp	Meaning
READY	Vehicle ready to drive (Electric versions) Fixed, accompanied by an audible signal when it comes on: the vehicle is ready to drive. The indicator lamp goes out upon reaching a speed of approximately 5 km/h (3 mph) and lights up again when the vehicle stops moving. The lamp will go out when you turn off the engine and exit the vehicle.
	Direction indicators Flashing with audible signal: the direction indicators are on.
	Daytime running lamps/Sidelamps Fixed. With adequate ambient light, the daytime running lamps are on. With inadequate ambient light, the sidelamps are on.
	Dipped beam headlamps Fixed: the lamps are on.
AUTO 	Adaptive Headlights on Fixed: the function has been activated via the touch screen. The lighting control stalk ring is in the "AUTO" position. For more information, refer to the "Knowing your car" section.
	Front foglamps on Fixed: the lamps are on.

Grey warning/indicator lamps

Lamp	Meaning
AUTO 	Adaptive Headlights activated Fixed: the function is activated, but not available. All the operating conditions have not been met

Blue warning/indicator lamps

Lamp	Meaning
	Main beam headlamps on Fixed. The lamps are on.

White warning lamps

Lamp	Meaning
	Fuel level Fixed. The graphic bar shows the fuel quantity in the fuel tank. The triangle to the side of the symbol indicates the side of the car with the fuel filler.
	High-voltage/auxiliary battery level Fixed. The graphic bar shown on the display indicates the high-voltage/auxiliary battery state of charge. The triangle to the side of the symbol indicates the side of the car with the charging port.



The following section is very important: it describes the safety systems fitted on the car and provides the necessary information on how to use them correctly.

SAFETY

PRECAUTIONS RELATING TO THE HIGH VOLTAGE SYSTEM.....	91
ACTIVE SAFETY SISTEMS	92
DRIVING ASSISTANCE SYSTEMS	94
PEDESTRIAN SAFETY ALERT	104
OCCUPANT PROTECTION SYSTEMS	104
SEAT BELTS	104
SEAT BELT REMINDER	108
CHILD RESTRAINTS	109
AIR BAG	126

PRECAUTIONS RELATING TO THE HIGH VOLTAGE SYSTEM

(Electric versions)

 74) 75) 76) 77) 78) 79)

WORKS ON THE HIGH-VOLTAGE SYSTEM

The vehicle's high-voltage system:

- is isolated from the vehicle and is secured by protective equipment;
- is protected from the outside environment;
- is only accessible for maintenance work by qualified personnel.

The vehicle monitors the integrity of the high-voltage system: if a fault is detected, a dedicated message will appear on the instrument panel display together with the relevant icon.

Warnings

In case of fault, damage or fire to the vehicle:

- the components of the high-voltage system can be live and the high-voltage battery can be charged;
- the high-voltage battery, cables and electrical components may be exposed and pose a potential risk of electrocution;

□ vapours released during handling or disconnection of the high-voltage battery from the system are potentially toxic and flammable;

□ damage to the vehicle or high-voltage battery may cause immediate or delayed release of toxic and/or flammable gases or a fire;

The high-voltage components are orange.

WARNING Non-insulated cables or wires may be visible inside or outside the car. **Never touch** cables and/or connectors: electric shock could occur, resulting in injury or death by electrocution.

WARNING Do not touch, disassemble or remove the electric climate control compressor.

WARNING Do not touch / disassemble / remove the high-voltage battery.



WARNING

74) *Improperly performed work, in particular maintenance and repair work on the high-voltage system, can result in current leakage: risk of injury, burns or death. Any maintenance, repair or*

modification work must usually be carried out by qualified technicians.

75) According to ECE100 standard, the label  is affixed to the vehicle's high-voltage components with which the driver may come into direct or indirect contact.

76) *The components of the high-voltage system are not repairable. All high voltage wiring harness is orange. If necessary, contact the Fiat Dealership for servicing or repair work. NEVER touch the orange wiring harness. Severe injury or death by electric shock could result if the high-voltage system components are damaged.*

77) *Do not pour water or any other kind of liquid into the boot. Even if insulated by specific protections, high voltage components are mounted. Risk of death by electrocution.*

78) *Never perform any operation on high voltage components. In case of need, contact a Fiat Dealership.*

79) *Even if the high-voltage battery is flat, the high-voltage system will still remain live - danger of fire or fatal injury. Do not touch or modify live parts in any way (e.g. orange cables, even with discharged high-voltage batteries).*



ACTIVE SAFETY SYSTEMS

ABS SYSTEM (Antilock Brake System)

 80) 81) 82) 83) 84) 85) 86)

Antilock brake system (ABS) prevents the wheels from locking.

ABS starts to regulate brake pressure as soon as a wheel shows a tendency to lock. The vehicle remains steerable, even during hard braking.

ABS control is made apparent through a pulse in the brake pedal and the noise of the regulation process.

For optimum braking, keep the brake pedal fully depressed throughout the braking process, despite the fact that the pedal is pulsating. Do not reduce the pressure on the pedal.

When braking in an emergency, the hazard warning flashers are switched on automatically depending on the force of deceleration. They are switched off automatically the first time you accelerate.

After starting off, the system performs a self-test which may be audible.



121

JJ000144

Fault

 87)

Have the cause of the fault remedied by a Fiat Dealership.

BRAKE ASSIST

If brake pedal is depressed quickly and forcefully, maximum brake force is automatically applied. Operation of brake assist might become apparent by a pulse in the brake pedal and a greater resistance when depressing the brake pedal. Maintain steady pressure on the brake pedal as long as full braking is required. Maximum brake force is automatically reduced when brake pedal is released.

DSC (Dynamic Stability Control) SYSTEM AND TC (Traction Control System)

 82) 83) 84) 85) 86)

Dynamic Stability Control improves driving stability when necessary, regardless of the type of road surface or tyre grip

As soon as the vehicle starts to swerve (understeer / oversteer), engine output is reduced and the wheels are braked individually.

Dynamic Stability Control operates in combination with the Traction Control system. It prevents the driven wheels from spinning.

The Traction Control system is a component of the Dynamic Stability Control.

The Traction Control system improves driving stability when necessary, regardless of the type of road surface or tyre grip, by preventing the driven wheels from spinning.

As soon as the driven wheels start to spin, engine output is reduced and the wheel spinning the most is braked individually. This considerably improves the driving stability of the vehicle on slippery road surfaces.

Dynamic Stability Control and the Traction Control system are operational after each engine start as soon as the control indicator  extinguishes

When Dynamic Stability Control or the Traction Control system operates,  flashes.

On some occasions, e.g. after disconnecting the conventional battery, the control indicator  may illuminate during some seconds accompanied

by a message in the instrument panel display. This may be caused by the reset of the steering angle sensor.

Deactivation

The Traction Control system can be deactivated in the instrument panel display.

Deactivation is confirmed by a message in the instrument panel display.

Fault

If there is a fault in the system, the control indicator  illuminates continuously, a message appears in the instrument panel display and a warning chime sounds. The system is not operational. Have the cause of the fault remedied by a Fiat Dealership.

HSA (Hill Start Assist) SYSTEM

(Where provided)

This system keeps the vehicle briefly stationary (for approximately 2 seconds) when making a hill start, while you transfer your foot from the brake pedal to the accelerator pedal.


The system is only active when:

- ☐ the vehicle is completely stationary, with your foot on the brake pedal
- ☐ certain slope conditions are met
- ☐ the driver's door is closed



NOTE The Hill Start Assist function cannot be deactivated. However, using the parking brake to immobilise the vehicle interrupts its operation.

Operation

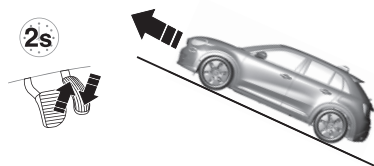

122

F6S0056

Facing uphill, with the vehicle stationary, the vehicle is held for a short time when the driver releases the brake pedal if mode D is selected on the Electric Drive Unit/ Automatic gearbox.



123

F6S0057

Facing downhill, with the vehicle stationary and reverse gear engaged, the vehicle is held for a short time when the driver releases the brake pedal.

Malfunction

If the event of a malfunction, warning lamps  and  light up on the instrument panel. Have it checked by a Fiat Dealership.



WARNING

80) If the ABS intervenes, this indicates that the grip of the tyres on the road is nearing its limit: you must slow down to a speed compatible with the available grip.

81) To achieve maximum efficiency of the braking system, a settlement period of some hundred kilometers is required. During this time, avoid sudden, repeated and prolonged braking.



82) The system cannot overrule the natural laws of physics, and cannot increase the grip available according to the condition of the road.

83) The system cannot prevent accidents, including those due to excessive speed on corners, driving on low-grip surfaces or aquaplaning.

84) The capability of the system must never be tested irresponsibly and dangerously, in such a way as to compromise personal safety and the safety of others.

85) For the correct operation of the system, the tyres must of necessity be the same make and type on all wheels, in perfect condition and, above all, of the prescribed type and dimensions.

86) The features must not induce the driver to take unnecessary or unwarranted risks. Your driving style must always be suited to the road conditions, visibility and traffic. The driver is, in any case, responsible for safe driving.

87) If there is a fault in the ABS, the wheels may be liable to lock due to braking that is heavier than normal. The advantages of ABS are no longer available. During hard braking, the vehicle can no longer be steered and may swerve.

88) Do not leave the vehicle while it is being held temporarily by Hill Start Assist. If someone needs to get out of the vehicle with the engine running, apply the parking brake manually. Then check that the lamp **(P)** in the instrument cluster is on (fixed).


DRIVING ASSISTANCE SYSTEMS

NOTE To comply with the European general safety regulations, some driving assistance systems are automatically reactivated at the next vehicle start.

AUTOMATIC BRAKING SYSTEM

(where provided)

The Automatic Braking System may help to avoid or reduce the harm caused by front-end crashes.

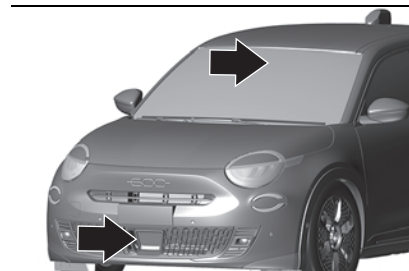

124

F6S0058

The Automatic Braking System uses the front camera in the windscreen and depending on the vehicle configuration a radar unit located behind the front bumper to detect vehicles, cyclists and pedestrians directly ahead, in the path (fig. 124).

If a vehicle directly ahead is approached too quickly, a warning chime sounds and a message is displayed in the instrument panel display.

 **89) 90) 91) 92) 93) 94) 95) 96)**

 **35) 36) 37) 38) 39) 40) 41) 42) 43)**

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in the "Starting and driving" section.

Activation

The Automatic Braking System operates from 5 km/h to 140 km/h.

Alerting the driver

The driver is warned by following alerts:

☐ A warning message is displayed in the instrument panel display, when the distance to the vehicle ahead gets too small.

☐ A warning message is displayed in the instrument panel display and a warning chime sounds, when a collision is imminent and immediate driver's action is required.

Selecting the alert sensitivity

Three alert sensitivities can be selected in the settings of the active

emergency braking within the vehicle personalisation

The chosen setting will be memorised when the ignition has been switched off. The alert timing will vary based on selected alert setting.

Deactivation

Depending on version, deactivation is only possible at a standstill.

The system can only be deactivated by deactivating the active emergency braking in the vehicle personalisation. When ignition is switched on next time, system is activated.

System limitations

Automatic Braking System is designed to warn on vehicles, pedestrians and cyclists, but may react also to other objects.

In the following cases, Automatic Braking System may not detect a vehicle ahead or sensor performance is limited:

- ❑ driving on winding or hilly roads
- ❑ driving during nighttime
- ❑ weather limits visibility, such as fog, rain, or snow
- ❑ the sensor in the windscreen or the radar unit behind the front bumper are blocked by snow, ice, slush, mud, dirt etc.

❑ the windscreen is damaged or affected by foreign objects, e.g. stickers

❑ the bumper is damaged or affected by foreign objects, e.g. license plate support

ACTIVE EMERGENCY BRAKING

Active emergency braking can help to reduce the damage and injury from crashes with vehicles and pedestrians directly ahead, when the driver does not actively take action either by manual braking or by steering.

For vehicles equipped with camera and radar, active emergency braking also detects cyclists.

Before the active emergency braking applies, the driver may be warned by the Automatic Braking System.

Active emergency braking can be deactivated in the vehicle personalisation. If deactivated (🚫), illuminates and a message is shown in the instrument panel. Depending on version, the system is automatically activated when the ignition is switched on next time.

The feature uses various inputs (e.g. camera sensor, radar sensor) to calculate the probability of a frontal collision.

Functionality

Depending on the vehicle configuration and the detected objects, there are several operational speed ranges.

On vehicles equipped only with front camera, the active emergency braking operates from 5 km/h to 85 km/h when a vehicle is detected.

On vehicles equipped with radar sensor and front camera, the active emergency braking operates from 5 km/h to 85 km/h when a stationary vehicle is detected or up to 140 km/h if a moving vehicle or from 5 km/h to 82 km/h when a pedestrian or cyclist is detected.

Active emergency braking only works when:

- ❑ the brake system is operational
 - ❑ Dynamic Stability Control and Traction Control are activated
 - ❑ the seat belts of the front seats and depending on version of the rear seats are fastened
 - ❑ constant speed on unwinding roads
- The system includes:
- ❑ brake preparation system
 - ❑ emergency automatic braking
 - ❑ smart brake assist
 - ❑ front pedestrian protection

Forward Collision Alert

The forward collision alert warns the driver if there is a risk of collision with



the vehicle ahead, with a cyclist or a pedestrian.

Alerting the driver

The driver is warned by following alerts:

▣ **Level 1:** a warning message is displayed in the instrument panel, when the distance to the vehicle ahead gets too small

▣ **Level 2:** a warning message is displayed in the instrument panel and a warning chime sounds, when a collision is imminent and immediate driver's action is required

▣ **Level 3:** depending on version, the vehicle may produce a short brake jerk to confirm the risk of collision. The immediate driver's action is required

WARNING When approaching a vehicle ahead too rapidly, a level 2 alert may be displayed without a level 1 alert before.

WARNING Level 1 alerts depend on the alert sensitivity set. This alert type is only displayed in case of moving vehicles. At lower speed it is disabled.

Selecting the alert sensitivity

NOTE If the alert sensitivity setting with the longest distance is set, the system warns earlier. This increases the safety, but increases the amount of alerts if

the legal safety distance is not kept. To reduce the number of alerts, select a shorter alert sensitivity setting.

NOTE Three alert sensitivities can be selected in the driver assistance systems menu in the vehicle personalisation menu ("Settings" > "Vehicle" > "Vehicle access") in the Connect system.

NOTE The chosen setting will be memorised when the ignition has been switched off. The alert sensitivity will vary based on selected alert setting.

Brake preparation system

When approaching a vehicle ahead or a pedestrian so quickly that a collision is likely, the brake preparation system slightly pressurises the brakes. This reduces the response time, when braking is requested.

The pressurisation of the brakes may produce a noise in the brake system.

Automatic braking



Just before the imminent collision, this function automatically applies braking to reduce the impact speed of the collision or prohibit a crash.

If active emergency braking is applied, flashes in the instrument panel. If active emergency braking is finished, flashes for a few seconds. During this time, active emergency braking

cannot be applied if there is a risk of a further collision.

Emergency automatic braking is designed to react on vehicles or pedestrians ahead. If the vehicle is equipped with camera and radar, it also reacts on cyclists ahead.

Depending on version, below a speed of 30 km/h or 50 km/h, automatic braking may slow down the vehicle to a complete stop. If the speed exceeds this limit, automatic braking reduces the speed. However, the driver must apply the brake to come to a complete stop.

If the vehicle comes to a complete stop, automatic braking is maintained for a certain time. Keep the brake pedal depressed to prevent the vehicle from starting off again.

Cruise control will be deactivated when an emergency automatic braking occurs.

In some cases, the driver may wish to override the automatic braking provided by the active emergency braking system. Firmly apply the accelerator pedal or firmly turn the steering wheel to override the automatic braking if the situation and the surroundings permit.

Smart brake assist

If the driver brakes, but not sufficiently to avoid a collision, this system will supplement the braking. This assistance will only be provided if the driver presses the brake pedal. Smart brake assist will automatically disengage when the brake pedal is released.

System limitations

The system performance may be degraded or not available in the following cases:

- ❑ sensor covered with snow, ice, slush, mud or dirt
- ❑ windscreen damaged or smeared, with blurred view or covered with foreign items, e.g. stickers
- ❑ damaged front bumper (or deformed in the past) or covered with foreign items, e.g. stickers
- ❑ radar unit is out of its regular position resulting from an impact of the front bumper
- ❑ front camera out of its regular position or missing cover
- ❑ automatic braking not available, e.g. brake discs cooling going on
- ❑ brake pedal continuously used for a long time, e.g. on a long downhill road
- ❑ winding or hilly roads
- ❑ system initialization process after battery disconnection

- ❑ sun or lights shining into the front camera lens
 - ❑ adverse environmental conditions, e.g. rain, fog, or snow
 - ❑ vehicle ahead creating road spray
- After an impact or when damages are visible have the vehicle checked by an Fiat Dealership.

The system performance may be affected by:

- ❑ Electronic Stability Control and Traction Control in progress
- ❑ vehicle battery voltage out of range
- ❑ wet road reflecting lights
- ❑ close vehicles ahead
- ❑ tractors, muddy vehicles or vehicles with a trailer
- ❑ banked roads
- ❑ winding or hilly roads
- ❑ poor lighting conditions
- ❑ sudden lighting changes
- ❑ vehicle modifications, e.g. tyres
- ❑ vehicle overloaded

The driver must not overload neither the load compartment nor the roof of the vehicle.

If a sensor is covered, a message is displayed indicating that the sensors have to be cleaned.

If the system is temporarily affected and no driver action is required, no message is displayed.

We recommend to deactivate the system in the vehicle personalisation in the following cases:

- ❑ when towing a trailer or caravan
- ❑ when carrying long objects on roof bars or a roof rack
- ❑ when the vehicle is being towed
- ❑ performing any maintenance (e.g. changing a wheel, working underhood...) with ignition on
- ❑ when the vehicle is fitted with snow chains
- ❑ when a spare wheel is fitted that is smaller than the other wheels
- ❑ before using an automatic car wash
- ❑ before placing the vehicle on a rolling road in an Fiat Dealership
- ❑ if the windscreen damaged or smeared, with blurred view or covered with foreign items, e.g. stickers
- ❑ if the front bumper has been damaged front bumper (or deformed in the past) or covered with foreign items, e.g. stickers
- ❑ if the radar unit is out of its regular position resulting from an impact of the front bumper
- ❑ if the brake lights are not working

Fault

If the system has been deactivated,  illuminates in the instrument panel display.

If the system has a fault,  illuminates in the instrument panel



display, a message is displayed and an audible signal is given. Consult a workshop. If no message is displayed, stop the vehicle and check whether sensors or front camera are covered. If the system does not work properly or is not available, e.g. during the initialisation,  illuminates in the instrument panel.

 may also illuminate if the infotainment system has an issue.

If  and  illuminate in the instrument panel after the engine has been switched off and then restarted, consult a FIAT Dealership.

Automatic deactivation

Active emergency braking is automatically deactivated in the following cases:


- ☐ a spare wheel with smaller diameter is detected
- ☐ a fault with the brake pedal switch or with the left or right brake light is detected
- ☐ a fault in the active emergency braking system, in the electronic or in the brake system is detected
- ☐ a severe crash, e.g., with airbag deployment was detected

FRONT PEDESTRIAN PROTECTION

(where provided)

Front pedestrian protection may help to avoid or reduce the harm caused

by front-end crashes with pedestrians when driving forward.

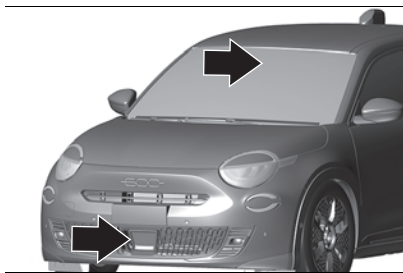

125

F6S0058

The system uses the front camera in the windscreen and depending on the vehicle configuration a radar unit in the front bumper to detect a pedestrian directly ahead in the path (fig. 125).



WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in the "Starting and driving" section.

Front pedestrian protection can detect and alert to pedestrians in a forward gear at speeds between 5 km/h and 82 km/h. Additionally, it can automatically brake the vehicle.

During nighttime driving, system performance is limited.



The system can only be deactivated by deactivating the active emergency braking in the vehicle personalisation. When ignition is switched on next time, system is activated.

Front pedestrian alert

When approaching a detected pedestrian too quickly, a warning message is displayed in the instrument panel display. A warning chime is provided.


Cruise control or adaptive cruise control may be disengaged when the front pedestrian alert occurs.

System limitations

In the following cases, front pedestrian protection may not detect a pedestrian ahead or sensor performance is limited:

- ☐ driving on winding or hilly roads
- ☐ driving in the dark
- ☐ weather limits visibility, such as fog, rain, or snow
- ☐ the sensor in the windscreen or the radar unit behind the front bumper is blocked by snow, ice, slush, mud, dirt or by foreign objects, e.g. stickers
- ☐ the windscreen damaged or smeared, with blurred view or covered with foreign items, e.g. stickers
- ☐ the bumper is damaged front bumper (or deformed in the past) or covered with foreign items, e.g. stickers

Crossing the road with another vehicle

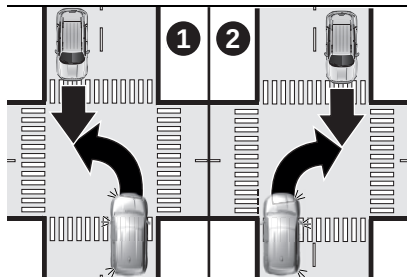

I26

F6S0235

1: Left-hand drive - 2: Right-hand drive

The system may operate when the vehicle is turning and detects another vehicle, on the adjacent lane, approaching from the opposite direction if:

- ❑ The corresponding turn signal indicator is activated
- ❑ Then the vehicle is about to cross the path of another vehicle
- ❑ The speeds of the own vehicle is between 8 and 23 km/h
- ❑ A collision on the side of the other vehicle is probable

BLIND SPOT ALERT

(where provided)

Blind Spot Alert helps to avoid crashes due to lane changes when an object is detected within a specified blind spot zone.

The system displays a visual alert in each exterior mirror, when detecting objects that may not be visible in the interior and exterior mirrors.

Blind Spot Alert uses some of the advanced parking assist sensors which are located in the front and rear bumper on both sides of the vehicle.




WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in the "Starting and driving" section.

Activation

The system can be activated via the vehicle settings menu in the **Uconnect™ 10.25"/10.25" NAV**

WARNING The system is automatically deactivated when towing with a towing device approved by the Manufacturer.

Functionality

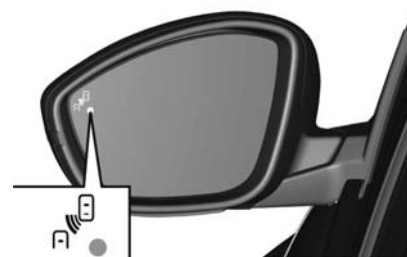

I27

F6S0176

When the system detects a vehicle in the side blind zone while driving forwards, an LED will illuminate in the relevant exterior mirror fig. 127:

- ❑ fixed, immediately when another vehicle is in the blind spot or is approaching in an adjacent lane
- ❑ flashing, after about 1 second when the direction indicator is used

Operation conditions

The following conditions must be fulfilled for proper operation:

- ❑ all vehicles are moving in the same direction and in adjacent lanes
- ❑ depending on the configuration of the vehicle, the speed of your vehicle is between 12 or 33 and 140 km/h
- ❑ passing a vehicle with a speed difference of less than 12 km/h



- ❑ another vehicle is passing with a speed difference of less than 30 km/h
 - ❑ the traffic flow is normal
 - ❑ driving on a straight or slightly curved road
 - ❑ the vehicle is not pulling a trailer
 - ❑ the sensors are not covered by mud, ice or snow
 - ❑ the warning zones in the door mirrors or the detection zones on front and rear bumper are not covered with adhesive labels or other objects
- No alert will be given in the following situations:
- ❑ in the presence of non-moving objects, e.g. parked vehicles, barriers, street lamps, road signs
 - ❑ in very dense traffic, when moving vehicles might be confused with a stationary object
 - ❑ with vehicles moving in the opposite direction
 - ❑ driving on a winding road or a sharp corner
 - ❑ when passing or being passed by a very long vehicle, e.g. lorry, coach, which is at the same time detected at the rear in the blind spot angle and present in the driver's forward field of vision
 - ❑ when passing too quickly

Deactivation

The system can be deactivated via the vehicle settings menu in the **Uconnect™ 10.25"/10.25" NAV**.

The state of the system is memorised when switching off the ignition.

The system is automatically deactivated when towing an electrically connected trailer.

Due to adverse weather conditions, such as heavy rain, false detections may occur.

Fault

In the event of a fault,  illuminates in the instrument panel, accompanied a display message. Contact a Fiat Dealership to have the system checked.

DRIVER ALERT

(where provided)

The driver alert system monitors the driving time and the vigilance of the driver. Monitoring the vigilance of the driver is based on the trajectory variations of the vehicle compared to the lane markings.

The system cannot replace the need for vigilance on the part of the driver. Taking a break is recommended as soon as feeling tired or at least every 2 hours. Do not drive when feeling tired.

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in the "Starting and driving" section.

Activation or Deactivation

This system can be activated or deactivated in the vehicle personalisation through the **Uconnect™ 10,25"/10,25" NAV**.

If deactivated, the system is automatically on when ignition is switched on.

Driving time alert

The driver gets notified by a pop-up reminder symbol  in the instrument panel display simultaneously with an acoustic alert if the driver has not taken a break after 2 hours of driving at a speed above 65 km/h. The alert is repeated hourly until the vehicle is stopped, no matter how vehicle speed evolves.

The counting of driving time alert is reset when the ignition has been switched off for a few minutes.

Driver Attention Alert

(for versions/markets where provided)

The system monitors the driver's level of vigilance at speeds above 65 km/h. A camera at the top of the windscreen

detects variations in trajectory compared to the lane markings.

The system may perform a learning procedure for up to 30 minutes after the start of the monitoring. During this period, the driver's individual driving behaviour is analysed and no alert is given.

If the trajectory of the vehicle suggests a certain level of drowsiness or inattention by the driver, the system triggers the first level of alert. The driver is notified by a message and an audible signal is given.

After three first level alerts, the system triggers a new alert with a message, accompanied by a more pronounced audible signal.

In certain driving conditions such as poor road surface or strong winds etc., the system may give alerts independent of the driver's level of vigilance.

The driver drowsiness detection is reinitialised in the following situations:

- ❑ the ignition has been switched off for a few minutes
- ❑ the speed remains below 65 km/h for a few minutes
- ❑ the driver's seat belt has been unfastened and the driver's door has been opened

System limitations

In the following situations, the system may not operate properly or even not operate at all:

- ❑ poor visibility caused by inadequate lighting of the roadway, falling snow, heavy rain, dense fog etc.
- ❑ dazzle caused by headlamps of oncoming vehicles, low sun, reflections on damp roads, leaving a tunnel, alternating shade and light etc.
- ❑ windscreen area in front of the camera covered by dirt, snow, stickers etc.
- ❑ no lane markings detected or multiple lane markings due to roadworks
- ❑ close vehicles ahead
- ❑ winding roads or narrow roads

TYRE UNDERINFLATION DETECTION SYSTEM



The Tyre Underinflation Detection System continually checks the rotation speed of all four wheels and warns on low tyre pressure condition once vehicle is driving. This is achieved by comparing tyre rolling circumference with reference values and further signals.

If a tyre loses pressure the control indicator illuminates and a warning

message is displayed in the instrument panel display.

In this case reduce speed, avoid sharp cornering and strong braking. Stop at next safe opportunity and check tyre pressure.

After adjusting tyre pressure initialise system to extinguish the control indicator and restart system.

If the failure continues to be displayed, contact a Fiat Dealership. The system is inoperable when the ABS or Dynamic Stability Control has a malfunction or a temporary spare wheel is used. Once the tyre has been refitted, check the tyre pressure with cold tyres and initialise the system.

System initialisation

After tyre pressure correction or wheel change, the system must be initialised to learn new circumference reference values:

- ❑ Always ensure that all four tyres have correct tyre pressure.
- ❑ Apply parking brake.
- ❑ Initialise the system via the

Uconnect™ 10,25"/10,25" NAV

fig. 128 ("Settings" > "Vehicle" > "Safety").





128

F6S0177

❑ Reset is confirmed by pop-up indication.

After initialisation system automatically calibrates to new tyre pressures during driving. After longer drive the system will adopt and monitor new pressures.

The Tyre Underinflation Detection signals the driver a possible insufficient pressure if this falls below the warning limit for any reason.

Always check tyre pressure with cold tyres.

The system will not warn instantaneously on a tyre blow out or a rapid deflation.

This is due to requires calculation time. System has to be reinitialised when:

- ❑ Tyre pressure has been changed
- ❑ Load condition has been changed
- ❑ Wheels have been swapped or exchanged

- ❑ Tyre pressure is affected by temperature decrease
- ❑ When the space-saver wheel is fitted In these cases the system can require a Reset.

If the signals persist, contact a Fiat Dealership.



WARNING

89) *The system is an aid for car driving, it DOES NOT warn the driver about incoming cars outside of the detection areas. The driver must always maintain a sufficient level of attention to the traffic and road conditions and for controlling the trajectory of the vehicle.*

90) *The system is an aid for the driver, who must always pay full attention while driving. The responsibility always rests with the driver, who must take into account the traffic conditions in order to drive in complete safety. The driver must always maintain a safe distance from the vehicle in front.*

91) *The capability of the system must never be tested irresponsibly and dangerously, in such a way as to compromise personal safety and the safety of others.*

92) *If the driver presses the accelerator pedal fully or steers abruptly during system operation, the automatic braking function may stop (e.g. to allow a possible manoeuvre to avoid the obstacle).*

93) *The system may also react on animals. However, animals smaller than 0.5 m or*

objects on the road may not be detected. After a sudden lane change, the system needs a certain time to detect the next preceding vehicle. The driver must always be ready to take action and apply the brakes and steer to avoid collisions.

94) *If the car must be placed on a roller bench for maintenance or if it is washed in an automatic car wash with an obstacle in the front part (e.g. another car, a wall or another obstacle), the system may detect its presence and activate. In this case the system must be deactivated through the settings of the Uconnect™ 10.25"/10.25" NAV system.*

95) *The radar (if installed) is provided with defrosting system. For this reason, it can reach high temperatures in some conditions. If you need to operate in the zone surrounding the sensor, wait for at least 30 seconds from when the engine is switched off.*

96) *This system is not intended to replace the driver's responsibility for driving the vehicle and looking ahead. It warns the driver if the vehicle is at risk of a collision with the preceding vehicle, a pedestrian or a cyclist. Just before the imminent collision, it reduces the vehicle's speed to avoid a collision or to limit its severity.*

97) *The usage of a license plate support on the front bumper may affect the proper radar unit functionality. When using a license plate support, follow the markings and indications on the front bumper.*

98) *Front pedestrian braking does not provide an alert or automatically brake the vehicle, unless it detects a pedestrian. The system may not detect pedestrians, including children, when the pedestrian*

is not directly ahead, not fully visible, not standing upright, or when part of a group.

99) Blind Spot Alert is only a driving assistance and must not replace the driver vigilance and responsibility. It's only a lane changing aid and does not replace driver vision. Blind Spot Alert does not detect: vehicles outside the side blind zones which may be rapidly approaching; pedestrians or animals; non-moving objects, e.g. stationary vehicles, street lights, road signs, etc. Failure to use proper care when changing lanes may result in damage to the vehicle, injury, or death. Always check the outside and rearview mirrors, glance over your shoulder, and use the turn signal before changing lanes.

100) The presence of the Tyre Underinflation Detection System does not permit the driver to neglect regular checks of the tyre pressure, including for the spare wheel, and correct maintenance. The system is not used to signal a possible tyre failure.

101) Tyre pressure must be checked with tyres rested and cold. Should it become necessary for whatever reason to check pressure with warm tyres, do not reduce pressure even though it is higher than the prescribed value. Repeat the check when the tyres are cold.

102) The Tyre Underinflation Detection System cannot indicate sudden tyre pressure drops (for example when a tyre bursts). In this case, stop the vehicle, braking with caution and avoiding abrupt steering.

103) Changes in outside temperature may cause tyre pressures to vary. The system may temporarily indicate insufficient pressure. In this case check the tyre

inflation pressure with the tires cold and, if necessary top up the inflation pressure.



WARNING

34) Do not rely on the system to brake the vehicle. Active emergency braking will not brake automatically outside of its operating speed range.

35) The system may have limited operation or not work at all in weather conditions such as: heavy rain, hail, thick fog, heavy snow.

36) The section of the bumper in front of the sensor must not be covered with stickers, auxiliary headlights or any other object.

37) System intervention might be unexpected or delayed when other cars transport loads projecting from the side, above or from the rear, with respect to the normal size of the car.

38) Operation can be adversely affected by any structural change made to the vehicle, such as a modification to the front geometry, tyre change, or a heavier than standard load of the vehicle.

39) Incorrect repairs made on the front part of the car (e.g. bumper, chassis) may alter the position of the radar sensor (if installed), and adversely affect its operation. Go to a Fiat Dealership for any operation of this type.

40) Do not tamper with or carry out any intervention on the radar sensor (if installed) or on the camera on the windscreen glass. In the event of a sensor failure, contact a Fiat Dealership.

41) When towing a trailer (with modules installed after purchasing the car), a

vehicle or during loading manoeuvres on a car carrier (or in vehicle for transport), the system must be deactivated via the **Uconnect™ 10.25"/10.25" NAV** system.

42) Do not wash with high-pressure jets in the bumper lower area: in particular do not operate on the system's electrical connector.

43) Be careful in the case of repairs and new paintings in the area around the radar sensor (if installed) (trim covering the radar sensor in the central part of the bumper). In the event of a frontal impact the sensor may automatically deactivate and display a warning to indicate that the radar sensor needs to be repaired. Even without a malfunction warning, deactivate the system operation if you think that the position of the radar sensor (if installed) has changed (e.g. due to low-speed frontal impact as during parking manoeuvres). In these cases, go to a Fiat Dealership to have the radar sensor (if installed) realigned or replaced.



PEDESTRIAN SAFETY ALERT

The sound of the pedestrian safety alert is generated to indicate the vehicle presence to pedestrians. It is active up to 30 km/h.



This system alerts pedestrians that the vehicle is approaching, when driving in all-electric.

The pedestrian horn operates once the vehicle is moving and at speeds of up to 30 km/h (19 mph), in forward or reverse gear.

This function cannot be deactivated.



WARNING

104) *The pedestrian acoustic warning system is a driving aid and was not designed to avoid collisions. The driver must never reduce their level of attention while driving. Driving is always the responsibility of the driver, who must take into consideration the traffic conditions to drive in complete safety. The driver is always required to maintain a safe distance from the vehicle in front and from any persons and/or animals located near the car. Failure to observe what is described could cause a collision or serious injuries to persons and/or animals located near the car.*

OCCUPANT PROTECTION SYSTEMS

Some of the most important safety equipment of the car comprise the following protection systems:

- ☐ seat belts
- ☐ Seat Belt Reminder
- ☐ head restraints
- ☐ child restraint systems
- ☐ front airbags and side bags

Read the information given the following pages with the utmost care. It is of fundamental importance that the protection systems are used in the correct way to guarantee the maximum possible safety level for the driver and the passengers.

For the description of the head restraint adjustment, see the "Head restraints" chapter in the "Knowing your car" section.

SEAT BELTS

The driver is responsible for respecting, and ensuring that all the other occupants of the vehicle also respect, the local laws in force in relation to the use of the seat belts.

Always fasten the seat belts before setting off.

The seat belts are locked during heavy acceleration or deceleration of the vehicle, holding the occupants in the seat position. Therefore the risk of injury is considerably reduced.

The retractor may lock when the car is parked on a steep slope: this is perfectly normal. Furthermore, the reel mechanism locks the belt if it is pulled sharply or in the event of sudden braking, collisions and high-speed bends.

Seat belts are designed to be used by only one person at a time.

Periodically check all parts of the belt system for damage, soiling and proper functionality.


Have damaged components replaced. After an accident, have the seat belts and triggered belt pretensioners replaced by a Fiat Dealership.

WARNING Make sure that the belts are not damaged by shoes or sharp-edged

objects or trapped. Prevent dirt from getting into the belt retractors.

WARNING Use the belt buckle intended for the respective seat belt when fastening in order to ensure proper functionality.

Wear the rear seat belts as shown in fig. 129

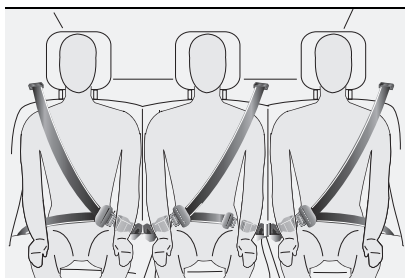

129

J0A0169C

SEAT BELT REMINDER

Each seat is equipped with a seat belt reminder, indicated by a control indicator  for the respective seat in the roof console.

BELT FORCE LIMITERS

Stress on the body is reduced by the gradual release of the belt during a collision.

BELT PRETENSIONER

 105) 106) 107) 108) 109)

 44)

The car is equipped with front and rear lateral seat belt pretensioners, which draw back the seat belts by several centimetres in the event of a strong frontal impact. This guarantees the perfect adherence of the seat belts to the occupant's bodies before the retention action begins.

In the event of a head-on, rear-end or side-on collision of a certain severity, the front seat belts and the outer rear seat belts are tightened.

It is evident that the pretensioners have been activated when the belt withdraws toward the retractor.

Deployment of the belt pretensioners is indicated by continuous illumination of control indicator .

Triggered belt pretensioners must be replaced by a Fiat Dealership. Belt pretensioners can only be triggered once.

A slight discharge of smoke may be produced during the activation of the pretensioner which is not harmful and does not involve any fire hazard.

The pretensioner does not require any maintenance or lubrication: any changes to its original conditions will invalidate its efficiency.

If, due to unusual natural events (floods, sea storms, etc.), the device has been affected by water and/or mud, contact a Fiat Dealership to have it replaced.


WARNING To obtain the highest degree of protection from the action of the pretensioner, wear the seat belt tight to the torso and pelvis.

WARNING Do not affix or install accessories or other objects that may interfere with the operation of the belt pretensioners. Do not make any modifications to belt pretensioner components as this will invalidate the operating permit of your vehicle.



THREE-POINT SEAT BELT


⚠ 110)

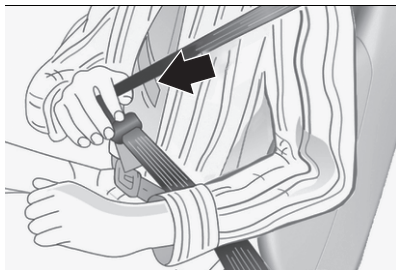Fasten

130

JJ000566

Withdraw the belt from the retractor, guide it untwisted across the body and insert the latch plate into the buckle. Make sure the belt fits tightly to the body while driving.

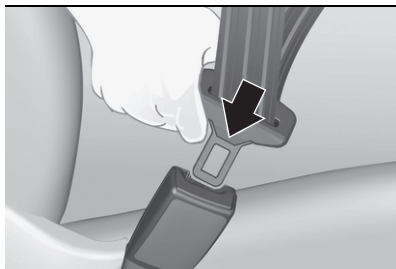


131

JJ000567

Loose or bulky clothing prevents the belt from fitting snugly. Do not place

objects such as handbags or mobile phones between the belt and your body.

⚠ 111)

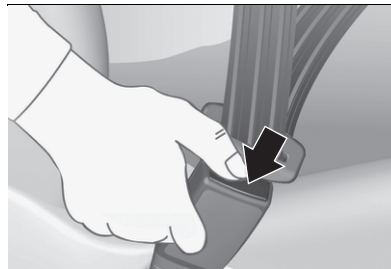Unfasten

132

JJ000568

To release belt, press red button on belt buckle. ⚠ 112)

GENERAL WARNINGS FOR USING THE SEAT BELTS

Respect and ensure that all the other occupants of the car comply with the local laws in force regarding the use of seat belts.

Always fasten the seat belts before setting off.

The seat belt strap must not be twisted. The upper part must pass over the shoulder and cross the chest diagonally fig. 133. The lower part must adhere to the pelvis, not to the abdomen of the occupant. Never use

devices (clips, clamps, etc.) that hold the seat belt away from your body.



133

J0A0149C

Each seat belt must be used by only one person. Never travel with a child sitting on the passenger's lap and a single belt to protect them both fig. 134. In general, do not place any objects between the person and the belt.



134

J0A0150C

USING SEAT BELTS WHILE PREGNANT



135

J0A0148C

Seat belts must also be worn by pregnant women: the risk of injury in the event of an accident is reduced for them and the unborn child if they are wearing a seat belt.

Pregnant women must position the lower part of the belt very low down so that it passes over the pelvis and under the abdomen fig. 135. While pregnancy increases, the driver must adjust both seat and steering wheel to have full control over the vehicle (pedals and steering wheel should be easily accessed). The maximum clearance should be kept between the abdomen and the steering wheel.



113)

SEAT BELTS MAINTENANCE

For keeping the seat belts in efficient conditions, carefully observe the following warnings:

- ❑ always use the seat belt well stretched and never twisted; make sure that it is free to run without obstructions
- ❑ check seat belt operation as follows: attach the seat belt and pull it hard
- ❑ replace the seat belt after an accident of a certain severity even if it does not appear to be damaged.
- Always replace the seat belt if the pretensioners were deployed
- ❑ prevent the retractors from getting wet: their correct operation is only guaranteed if water does not get inside
- ❑ replace the seat belt when it shows wear or cuts



WARNING

105) *Incorrect handling (e.g. removal or fitting of belts) can trigger the belt pretensioners.*

106) *The pretensioner may be used only once. Contact a Fiat Dealership to have it replaced after it has been deployed.*

107) *Removing or otherwise tampering with pretensioner and seat belt components is strictly prohibited. Any intervention on these components must be performed by qualified and authorised*

technicians. Always contact a Fiat Dealership.

108) *For maximum safety, keep the backrest upright, lean back into it and make sure the seat belt fits closely across your chest and pelvis. Always fasten the seat belts for both the front and rear seats! Travelling without wearing seat belts will increase the risk of serious injury and even death in the event of an accident.*

109) *If the belt has been subjected to high levels of stress, for example after an accident, it should be changed completely together with the attachments, attachment fixing screws and the pretensioner. In fact, even if there are no visible defects, the belt could have lost its resistance properties.*

110) *Remember that, in the event of an accident, the rear seat passengers not wearing seat belts are exposed to a very serious risk and also represent a serious danger for the front seat occupants.*

111) *The belt must not rest against hard or fragile objects in the pockets of your clothing.*

112) *Never press the red button fig. 132 while driving.*

113) *The lap belt must be positioned as low as possible across the pelvis to prevent pressure on the abdomen.*



IMPORTANT


44) *Operations which lead to impacts, vibrations or localised heating (over 100°C for a maximum of six hours) in the area around the pretensioner may cause damage or make it deploy. Contact a*



Fiat Dealership should intervention be necessary on these components.

SEAT BELT REMINDER

114) 115) 116) 117)

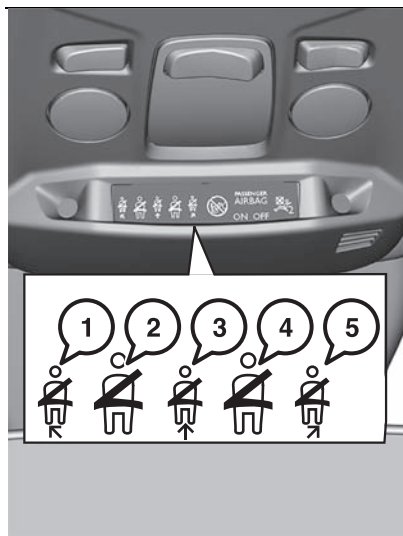

136

JJ000643

- (1) Rear left seat belt warning lamp
- (2) Front left seat belt warning lamp
- (3) Rear centre seat belt warning lamp
- (4) Front right seat belt warning lamp
- (5) Rear right seat belt warning lamp

Not fastened/unfastened warning lamp

It comes on in red on both the instrument panel and on the seat belts warning lamps display as soon as the system detects that a seat belt is not fastened or has been unfastened.

Front seat belt not fastened alert

When the ignition is switched on, if the driver or front passenger has not fastened their seat belt, the corresponding warning lamp (1 or 2) fig. 136 comes on in red. At a speed greater than 20 km/h (12 mph), the warning lamp flashes red, accompanied by an audible signal for around 2 minutes. After this time has elapsed, the warning lamp remains on fixed in red until the seat belt is fastened.

Rear seat belt not fastened alert

When the ignition is switched on, if one of the rear passengers has not fastened their seat belt, the corresponding warning lamp (3, 4 or 5) fig. 136 comes on in red for 1 minute.

Seat belt unfastened alert

After the ignition is switched on, if the driver or a passenger unfastens their seat belt, the corresponding warning lamp (1, 2, 3, 4 or 5) fig. 136 comes on in red. At a speed greater than 20 km/h (12 mph), the warning lamp flashes, accompanied by an audible signal for

around 2 minutes. After this time has elapsed, the warning lamp remains on until the seat belt has been fastened again.

Seat belt fastened

With the ignition on, if the driver or a passenger fastens their seat belt, the corresponding warning lamp (1, 2, 3, 4 or 5) fig. 136 comes on in green on the display.

Seat unoccupied

With the ignition on, if one of the front or rear passenger seats is detected as being unoccupied, the corresponding warning lamp (2, 3, 4 or 5) fig. 136 comes on in grey on the display. When there are no longer any not fastened/ unfastened alerts, the green or grey warning lamps remain on for around 30 seconds, then go off.



WARNING

114) *The driver must ensure that passengers use the seat belts correctly and that they are all fastened before setting off. Wherever seated in the vehicle, you must always fasten the seat belt, even for short journeys. Do not invert the seat belt buckles, as they will not fulfil their role properly. To ensure the proper functioning of the belt buckles, make sure that there are no foreign bodies present (e.g. a coin) before fastening. Before and after use, ensure that the seat belt is reeled in*

correctly. After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

115) The lower part of the strap must be positioned as low as possible over the pelvis. The upper part must be positioned in the hollow of the shoulder. At the front, adjusting the position of the seat belt may require the seat height to be adjusted. In order to be effective, a seat belt must: be tightened as close to the body as possible; be pulled in front of you with a smooth movement, checking that it is not twisted; must only be used to secure one person; not show signs of tearing or fraying; not be changed or modified, in order to avoid affecting its performance.

116) Use a suitable child seat if the passenger is less than 12 years old or shorter than 1.5 metres. Never use the same seat belt to secure more than one child. Never carry a child on your lap. For more information on Child seats, refer to the "Child restraints" section.

117) In accordance with current safety regulations, for all work on your vehicle's seat belts, contact a Fiat Dealership with the skills and equipment needed. Have the seat belts checked regularly by a Fiat Dealership, particularly if the straps show signs of damage. Clean the seat belt straps with soapy water or a textile cleaning product, sold by Fiat Dealership.

CHILD RESTRAINTS

CHILD RESTRAINT SYSTEMS

 **118) 119) 120) 121) 122)**

For optimal protection in the event of an impact, all occupants must be seated and wearing adequate restraint systems, including newborn and other children. This prescription is compulsory in all EC countries according to EC Directive 2003/20/EC.

Children below the height of 1.50 meters and up to 12 years must be protected with suitable restraint systems and be seated on the rear seats.

According to crash statistics, children are safer when properly restrained in the rear seats, rather than in the front.

Compared with an adult, a child's head is larger and heavier in proportion to their body and the child's muscular and bone structures are not fully developed.

Therefore, correct restraint systems other than adult seat belts are necessary to reduce as much as possible the risk of injuries in the event of an accident, braking or sudden manoeuvre.

The choice of the most suitable child restraint system depends on the weight and size of the child. There are various types of child restraint systems, which

can be secured to the vehicle by means of the seat belts or with the ISOFIX/i- Size anchors.

Children must be seated safely and comfortably. Depending on the characteristics of the child restraint systems used, you are advised to keep children in rearward-facing child restraint systems for as long as possible (at least until 3-4 years old), since this is the most protected position in the event of an impact.

It is recommended to always choose the restraint system most suitable for the child; for this reason always refer to the Owner Handbook provided with the child restraint system, to be sure that it is of the right type for the children it is intended for.

We recommend a child restraint system which is tailored specifically to the vehicle also. For further information, contact your Fiat Dealership.

In case of any interference of the child restraint system with vehicle seat head restraint, adjust or remove the corresponding head restraint.

When a child restraint system is being used, pay attention to the following usage and installation instructions and also those supplied with the child restraint system. Make sure that the front seats do not interfere with the used child restraint system.



Always comply with local or national regulations. In some countries, the use of child restraint systems is forbidden on certain seats.

Only drive with the driver seat correctly adjusted.

Child restraint systems can be fastened with:

- ☐ Three-point seat belt
- ☐ ISOFIX brackets
- ☐ Top-tether

Three-point seat belt

Child restraint systems can be fastened by using a three-point seat belt. After fastening the child restraint system the seat belt has to be tightened.

ISOFIX brackets

 123) 124) 125) 126)

This system prevents the child seat from tipping forwards in the event of a front impact.

This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in the vehicle.


Fasten vehicle-approved ISOFIX child restraint systems to the ISOFIX brackets. Specific vehicle ISOFIX child restraint system positions are marked in the ISOFIX table.



137

F6S0229

fig. 137 ISOFIX child restraints for the front passenger seat (where provided).

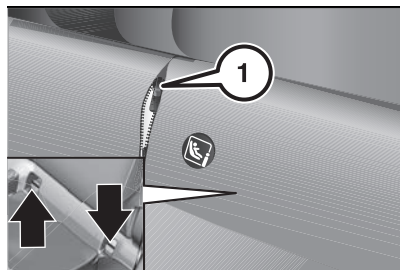

138

JJ000662

Open the zip (1) fig. 138 on the external rear seats to access to the ISOFIX child restraints for the rear seats.

When fastening ISOFIX child restraint systems on adjustable passenger seats, such as the front passenger seat (if the ISOFIX child restraint system is provided), first incline the backrest as far as necessary backwards in order

to get access to the ISOFIX brackets. After the proper fastening of the ISOFIX child restraint system, incline the backrest forward again.

WARNING When fitting an ISOFIX child seat to the left-hand rear seat of the bench seat, before fitting the seat, first move the centre rear seat belt towards the middle of the vehicle, so as to avoid the seat interfering with the operation of the seat belt.


An i-Size child restraint system is an universal ISOFIX child restraint system according UN Regulation No. 129.

All i-Size child restraint systems can be used on any vehicle seat suitable for i-Size, i-Size table.

Either a Top-tether strap or a support leg must be used in addition to the ISOFIX brackets.

fig. 139 shows an example of a Universal ISOFIX child restraint system for weight group 1.

WARNING The fig. 139 is indicative and for assembly purposes only. Fit the child restraint system according to the instructions, which must be included.

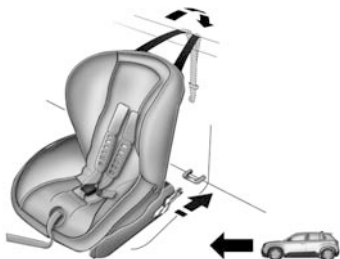

139

JJ000500



140

JA0328C

When a Universal ISOFIX child restraint system is used, only ECE R44 "ISOFIX Universal" (R44/03 or further upgrades) type-approved child restraint systems can be used (see fig. 140).

The other weight groups are covered by specific ISOFIX child restraint systems, which can be used only if specifically tested for this car (see list of cars provided with the child restraint system).

i-Size CHILD RESTRAINT SYSTEMS

These child restraint systems, built and type-approved according to the i-Size (ECE R129) standard, ensure better safety conditions to carry children on board a vehicle:

- ❑ the child must be transported rearward facing until 15 months;
- ❑ child restraint system protection is increased in the event of a side collision;

❑ the use of the ISOFIX system is promoted to avoid faulty installation of the child restraint system;

❑ efficiency in the choice of the child restraint system, which isn't made according to weight any more but according to the child's height, is increased;

❑ compatibility between the vehicle seats and the child restraint systems is better: the i-Size child restraint systems can be considered as "Super ISOFIX"; this means that they can be perfectly fitted in type-approved i-Size seats, but can also be fitted in ISOFIX (ECE R44) type-approved seats.

i-Size child seats have two latches that engage on the two rings fig. 138.


These i-Size child seats also have:

- ❑ either an upper strap that is attached to ring fig. 144.

❑ or a support leg that rests on the vehicle floor, compatible with the approved i-Size seat position


Their role is to prevent the child seat from tipping forward in the event of a collision.

NOTE The seats illustrated in fig. 141 and fig. 142 are equipped with ISOFIX-compliant mountings (for versions/markets where provided):

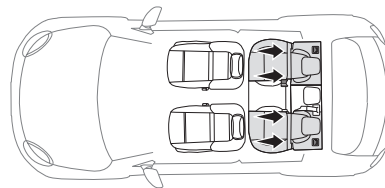

141

F6S0248

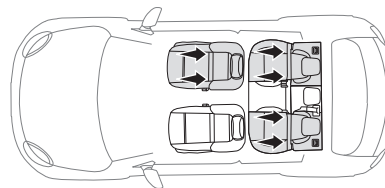

142

F6S0231




Top-tether anchors



143

F6S0230

Top-tether anchors fig. 143 (front seat), fig. 144 (rear seats) are marked with the symbol  for child seat.

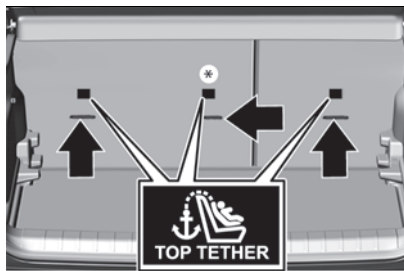

144

F6S0257

* Depending on country of sale
In addition to the ISOFIX brackets, fasten the Top-tether strap to the Top-tether anchors.

ISOFIX child restraint systems of universal category positions are marked in the table by IUF.

To secure the child seat to the TOP TETHER:

- ☐ remove and stow the head restraint before installing the child seat on this seat (refit it once the child seat has been removed)
- ☐ pass the strap of the child seat behind the seat backrest, centring it between the openings for the head restraint rods
- ☐ secure the upper strap hook to ring fig. 144
- ☐ tighten the upper strap



WARNING

118) An incorrectly installed child seat in a vehicle compromises the child's safety in the event of an accident. Strictly observe the fitting instructions provided in the user guide supplied with the child seat.

119) SEVERE DANGER When a front passenger airbag is fitted, do not install rearward facing child restraint systems on the front passenger seat. Deployment of the airbag in a crash could cause fatal injuries to the child regardless of the severity of the collision. It is advisable to always carry children in a child restraint system on the rear seat, which is the most protected position in the event of a collision.

120) There is a symbol on the label on the sun visor that illustrates the need to deactivate the air bag if you are installing a rear-facing child seat. Always comply with the instructions on the passenger side sun visor (see the "Airbag" chapter).

121) Should it be necessary to carry a child on the passenger side front seat in a rearward facing child restraint system, the passenger side front airbag and side bag must be deactivated through the key-operated switch in the glovebox, verifying deactivation by checking whether the OFF  LED has switched on in the panel located on the ceiling. Move the passenger's seat as far back as possible to avoid contact between the child seat and the dashboard.

122) Do not move the front or rear seat if a child is seated on it or on the dedicated child restraint system.

123) Always make sure that the chest section of the seat belt does not pass under the arms or behind the back of the child. In the event of an accident the seat belt will not be able to secure the child, with the risk of injury, including fatal injury. Therefore the child must always wear the seat belt correctly.

124) Never use the same lower anchorage to attach more than one child restraint.

125) If a Universal ISOFIX child restraint system is not fixed to all three anchorages, it will not be able to protect the child correctly. In a crash, the child could be seriously or fatally injured.

126) Fit the child restraint system when the car is stationary. The child restraint system is correctly fixed to the brackets when you hear the click. Follow the

instructions for assembly, disassembly and positioning that the Manufacturer must supply with the child restraint system.



In Europe the characteristics of child restraint systems are governed by regulation ECE-R44, which divides them into five weight groups.

The ECE-R44 standard has been paired with the ECE R-129 regulation, which defines the characteristics of the new i-Size child restraint systems (see the "Suitability of passenger seats for i-Size child restraint system use" paragraph).

Group	Age	Weight ranges	Size class / Fixing
Group 0	Indicatively up to 9 months	up to 10 kg in weight	ISO/L1
			ISO/L2
			ISO/R1
Group 0+	Indicatively up to 2 years	up to 13 kg in weight	ISO/R1
			ISO/R2
			ISO/R3
Group 1	Indicatively from 8 months to 4 years	9 - 18 kg	ISO/R2
			ISO/R3
			ISO/F2
			ISO/F2X
			ISO/F3
Group 2	Indicatively from 3 to 7 years	15–25 kg in weight	–
Group 3	Indicatively from 6 to 12 years	22–36 kg in weight	–

All restraint devices must bear the type-approval data, together with the control mark, on a label solidly fixed to the child restraint system which must never be removed.

The given restrictions in the table refer to a test body, which is the maximum envelope of all existing child restraint systems.

Lineaccessori MOPAR® includes child restraint systems for each weight group. These devices are recommended, having been specifically designed for Stellantis cars.

WARNING For correct installation on the car, some universal child restraint systems require an accessory (base) sold separately by the restraint system's producer. Therefore, the Manufacturer recommends confirming the retailer if the desired child restraint system can be installed in the car by having it done, before buying the seat.

INSTALLING A CHILD RESTRAINT SYSTEM WITH SEAT BELTS

 127) 128) 129)

The Universal child restraint systems installed with the seat belts only are type-approved on the basis of the ECE R44 standard and are divided into various weight groups.

WARNING The figures are indicative and provided for assembly purposes

only. Fit the child restraint system according to the instructions, which must be included.

WARNING Following an accident of a certain importance, it is recommended to replace both the child restraint system and the seat belt to which it was bound.

Group 0 and 0+

Infants up to 13 kg must be carried with a rearward facing child restraint system of the type shown in fig. 145 which, supporting the head, does not induce stress on the neck in the event of sudden decelerations.

The child restraint system is restrained by the vehicle seat belts, as shown in fig. 145 and it must restrain the child in turn with its own belts.

0-13 kg



Group 1

Children weighing from 9 to 18 kg may be transported in forward facing child restraint systems fig. 146.

9-18 kg



Group 2

Children from 15 to 25 kg may use the vehicle seat belts directly fig. 147.

In this case, the child restraint system is used to position the child correctly with respect to the seat belts so that the diagonal belt section crosses the child's chest and not the neck, and the lower part is snug on the pelvis not the abdomen.



15-25 kg



147

JJ000505

Group 3

For children between 22 kg and 36 kg, there are boosters which allow the seat belt to be worn correctly.

The fig. 148 shows the correct child positioning on the rear seat.

Children over 1.50 m in height can wear seat belts like adults.

22-36 kg



148

JJ000506

SELECTING THE RIGHT SYSTEM

The rear seats are the most convenient location to fasten a child restraint system.

Children should travel facing rearwards in the vehicle as long as possible. This makes sure that the child's backbone, which is still very weak, is under less strain in the event of an accident. Do not use forward facing child restraint system at all seats when child's weight is below 13 kg.

Suitable are child restraint systems that comply with valid UN ECE regulations. Check local laws and regulations for mandatory use of child restraint systems.

The following child restraints are recommended for the following weight classes:

❑ Group 0, 0+: Peg Perego Primo Viaggio I-size. To be installed in the opposite direction to the direction of travel with the mandatory use of the i-size sub-base

❑ Group I: Peg Perego FF105. To be installed on the vehicle absolutely together with the Peg Perego Base I-size sub-base

❑ Group II, III: Britax Römer KidFIX I-size. To be installed with ISOFIX. It is recommended use of SecureGuard for optimal lap belt routing

❑ Group III booster child seat: Peg Perego 2-3 Shuttle booster. For children from 22 Kg to 36 Kg

Ensure that the child restraint system to be installed is compatible with the vehicle type.

Child seat at the front: Adjust the front passenger seat to the highest and fully back longitudinal position with the backrest straightened.

Child seat at the rear: Move the vehicle's front seat forward and straighten the backrest so that the legs of the child in the "forward facing" or the "rearward facing" child seat do not touch the vehicle's front seat.

In case of any interference of Child restraint system with vehicle seat head rest, adjust or remove the corresponding vehicle seat Head rest.

Do not use forward facing child restraints system when child's weight is below 13 kg at all seats.

Please follow Child restraint manufacturers instructions to install corresponding child restraints in vehicle.

For semi-universal or vehicle specific child restraint system (ISOFIX or belted child restraint system), see the vehicle list provided in the user manual of the child restraint system.

Ensure that the mounting location of the child restraint system within the vehicle is correct, see following table. Allow children to enter and exit the vehicle only on the side facing away from the traffic.

When the child restraint system is not in use, secure the seat with a seat belt or remove it from the vehicle.

WARNING Do not affix anything on the child restraint systems and do not cover them with any other materials. A child restraint system which has been subjected to stress in an accident must be replaced.

CHILD SEAT AT THE REAR

Forward-facing or rearward-facing



I 49

F6S0083

❑ Move the vehicle's front seat forward and straighten the backrest so that the legs of the child in the forward-facing or rearward-facing child seat itself do not touch the vehicle's front seat.

❑ Check that the backrest of the forward-facing child seat is as close as possible to the backrest of the vehicle's rear seat, and ideally in contact with it.

Centre rear seat

WARNING A child seat with a support leg must never be installed on the centre rear passenger seat.

CHILD SEAT AT THE FRONT



I 50

F6S0084

Adjust the front passenger seat to the highest and fully back longitudinal position, with the backrest straightened.

Forward facing



I 51

F6S0085

WARNING You must leave the front passenger airbag active.



Rearward facing

(versions/markets where provided)

 **130) 131) 132)**


152

F6S0086

**WARNING**

127) *Incorrect fitting of the child restraint system may result in an inefficient protection system. In the event of an accident the child restraint system may become loose and the child may be injured, even fatally. When fitting a restraint system for newborns or children, strictly comply with the instructions provided by the Manufacturer.*

128) *When the child restraint system is not used, secure it with the seat belt or with the ISOFIX anchorages, or remove it from the car. Do not leave it unsecured inside the passenger compartment. In this way, in the event of sudden braking or an accident, it will not cause injuries to the occupants.*

129) *After installing a child restraint system in the car, do not move the seat forwards or back as it could loosen the*

attachments. Remove the child restraint system to adjust the seat position. Install the child restraint system again once the seat has been adjusted.

130) *To ensure the safety of the child, the front passenger airbag MUST be deactivated (for versions/markets where provided) when a "rearward facing" child seat is installed on the front passenger seat. Otherwise, the child risks being seriously injured or killed in the event of deployment of the airbag.*

131) *Vehicles not equipped with a deactivation/reactivation control Installing a "rearward facing" child seat on the front passenger seat is strictly prohibited - risk of death or serious injury in the event of airbag deployment!*

132) *Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seatbelts, harnesses, or for attaching other items or equipment to the vehicle.*

INSTALLING UNIVERSAL, ISOFIX AND I-SIZE CHILD SEATS

In compliance with European regulations, this table indicates the options for installing child seats secured using the seat belt and universally approved (a) as well as the largest ISOFIX and i-Size child seats for the seat positions fitted with ISOFIX anchorage points in the vehicle.

	Seat number					
	Front seats (d)					
Left-hand drive	1		2		3	
Right-hand drive	3		2		1	
Front passenger airbag		Deactivated "OFF" (c)	Activated "ON" (d)	Deactivated "OFF" (c)	Activated "ON" (d)	
Position compatible with a universal (a) child seat Rearward facing	no	not applicable	not applicable	yes	no	
Position compatible with a universal (a) child seat Forward facing	no	not applicable	not applicable	no	yes (x)	
Position compatible with an i-Size child seat Rearward facing	no	not applicable	not applicable	yes (t)	no	
Position compatible with an i-Size child seat Forward facing	no	not applicable	not applicable	no	yes (x) (t)	
Position equipped with a TOP TETHER hook	no	not applicable		yes (t)		
"Carrycot" type child seat (L1 L2)	no	not applicable		no		



	Seat number					
	Front seats (d)					
Left-hand drive	1		2		3	
Right-hand drive	3		2		1	
Front passenger airbag		Deactivated "OFF" (c)	Activated "ON" (d)		Deactivated "OFF" (c)	Activated "ON" (d)

"Rearward facing" ISOFIX child seat (R1|R2|R3)

no

not applicable

not applicable

R3 (g) (h) (t)

no

"Forward facing" ISOFIX child seat (F2|F2X|F3)

no

not applicable

not applicable

no

F3 (x) (h) (t)

"Booster" child seat (B2/B3)

no

not applicable

not applicable

no

B3 (x)

	Seat number					
	Rear seats (b) row 2			Rear seats (d) row 3		
Left-hand drive	4	5	6	7	8	9
Right-hand drive	4	5	6	7	8	9

Position compatible with a universal (a) child seat
Rearward facing

yes

no

yes

not applicable

not applicable

not applicable

Position compatible with a universal (a) child seat
Forward facing

yes

no

yes

not applicable

not applicable

not applicable

	Seat number					
	Rear seats (b) row 2			Rear seats (d) row 3		
Left-hand drive	4	5	6	7	8	9
Right-hand drive	4	5	6	7	8	9
Position compatible with an i-Size child seat Rearward facing	yes	no	yes	not applicable	not applicable	not applicable
Position compatible with an i-Size child seat Forward facing	yes	no	yes	not applicable	not applicable	not applicable
Position equipped with a TOP TETHER hook	yes	no	yes	not applicable	not applicable	not applicable
"Carrycot" type child seat (L1 L2)	no	no	no	not applicable	not applicable	not applicable
"Rearward facing" ISOFIX child seat (R1 R2 R3)	R3 (h) (j)	no (q)	R3 (h) (j)	not applicable	not applicable	not applicable
"Forward facing" ISOFIX child seat (F2 F2X F3)	F3 (h) (j)	no (q)	F3 (h) (j)	not applicable	not applicable	not applicable
"Booster" child seat (B2/B3)	B3 (h)	no (q)	B3 (h)	not applicable	not applicable	not applicable

Rules:

- ☐ A position that is i-Size compatible is also compatible for R1, R2 and F2X, F2, B2.
- ☐ A position that is R3 compatible is also compatible for R1 and R2.
- ☐ A position that is R2 compatible is also compatible for R1.
- ☐ A position that is F3 compatible is also compatible for F2X and F2.
- ☐ A position that is B3 compatible is also compatible for B2.

Mandatory notes

- (a) Universal child seat: child seat that can be installed in all vehicles using the seat belt.
- (b) Depending on version, refer to the legislation in force in your country before installing a child in this seat position.



- (c) To install a "rearward facing" child seat at this seat position, the front passenger airbag must be deactivated ("OFF") (versions/markets where provided).
- (d) Only a "forward facing" child seat is authorised at this seat position with the front passenger airbag activated ("ON") (versions/markets where provided).

Optional notes

- (g) The vehicle seat must be adjusted in the rearmost longitudinal position.
- (q) Seats not fitted with ISOFIX compliant mountings.
- (x) With forward facing child restraint system, the seat must be positioned no more forward than the longitudinal halfway point.
- (t) only valid for seats equipped with isofix anchorages.
- (h) it may be necessary to remove the head rest to correctly install the child restraint system.
- (j) it may be necessary to move front seats to correctly install child restraint system.

CHILD RESTRAINT SYSTEMS RECOMMENDED BY FIAT FOR YOUR CAR

In the markets for which they are available, Lineaccessori MOPAR® offers a complete range of child restraint systems to be fixed using the seat belt with three anchor points or the ISOFIX anchorages. **IMPORTANT** The Manufacturer recommends fitting the child restraint system according to the instructions, which must be included.

Weight group	Child restraint system	Type of child restraint system	Child restraint system installation
Group 0+: from birth to 13 kg from 40 cm to 80 cm		Peg Perego Primo Viaggio i-Size MOPAR order code: 50290501	i-Size universal child restraint system. It is installed in the opposite direction to the direction of travel with the mandatory use of the i-Size sub-base (can be purchased together with the child restraint system or separately) and the ISOFIX anchorages of the car. It must be fitted on the right rear seat.
		Peg Perego Base i-Size MOPAR order code: 50290505	



Weight group	Child restraint system	Type of child restraint system	Child restraint system installation
Group 0+/1: from 9 to 18 kg, from 67 cm to 105 cm		Peg Perego Viaggio FF105 MOPAR order code: 50290502	i-Size approved child restraint system. It must be installed on the car absolutely together with the Peg Perego Base i-Size sub-base (to be purchased separately or together with the Peg Perego Primo Viaggio i-Size child restraint system). It must be fitted on the right rear seat.
		Peg Perego Base i-Size MOPAR order code: 50290505	
Group 2: from 15 to 25 kg, from 95 cm to 135 cm		Britax Römer Kidfix i-Size MOPAR order code: 71809272	It can only be fitted facing forwards, using the three-point seat belt and the ISOFIX anchorages of the vehicle, if present. The Manufacturer recommends installing it using the ISOFIX anchorage points of the car. Advisable, it should be fitted on the rear outer seats.

Weight group	Child restraint system	Type of child restraint system	Child restraint system installation
Group 3: from 22 to 36 kg from 136 cm to 150 cm		Britax Römer Kidfix i-Size MOPAR order code: 71809272	It can only be fitted facing forwards, using the three-point seat belt and the ISOFIX anchorages of the vehicle, if present. The Manufacturer recommends installing it using the ISOFIX anchorage points of the car. Advisable, it should be fitted on the rear outer seats.



MAIN WARNINGS TO CARRY CHILDREN SAFELY

- ❑ Install the child restraint systems on the rear seat, which is the most protected position in the event of a collision.
 - ❑ Keep children in rearward facing child restraint systems for as long as possible, until 3–4 years old if possible.
 - ❑ The rear head restraint can be removed if needed to install a child restraint system.
- The head restraint must always be present in the vehicle and fitted if the seat is used by an adult passenger or a child sitting in a restraint system without backrest.
- ❑ If the passenger's front airbag is deactivated always check the dedicated warning light on the trim located on the dashboard to make sure that it has actually been deactivated.
 - ❑ Carefully follow the instructions supplied with the child restraint system. Keep the instructions in the car along with the other documents and this handbook. Do not use second-hand child seats without instructions.
 - ❑ Only one child is to be strapped into each restraint system; never carry two children using one child restraint system.

- ❑ Always check that the seat belts do not rest on the child's neck.
- ❑ Always check that the seat belt is well fastened by pulling on it.
- ❑ While travelling, do not let the child sit incorrectly or unfasten the belts.
- ❑ Never allow a child to put the belt's diagonal section under an arm or behind their back.
- ❑ Never carry children on your lap, even newborns. No-one can hold a child in the event of a collision
- ❑ If the car has been involved in a road accident, replace the child restraint system with a new one. In addition, and depending on the type of child restraint system installed, replace the ISOFIX anchors or the seat belt with which the child restraint system was connected.

AIR BAG

The airbag system consists of a number of individual systems. When triggered, the airbags inflate within milliseconds. They also deflate so quickly that it is often unnoticeable during the collision.



WARNING The airbag systems and belt pretensioner control electronics are located in the centre console area. Do not put any magnetic objects in this area.

WARNING Do not affix any objects onto the airbag covers and do not cover them with other materials. Have damaged covers replaced by a Fiat Dealership.

WARNING Each airbag is triggered only once. Have deployed airbags replaced by a Fiat Dealership. Furthermore, it may be necessary to have the steering wheel, the instrument panel, parts of the panelling, the door seals, handles and the seats replaced.

WARNING Do not make any modifications to the airbag system as

this will invalidate the vehicle operating permit.



WARNING

133) The airbag system deploys in an explosive manner, repairs must be performed by skilled personnel only.

134) Adding accessories that change the vehicle's frame, bumper system, height, front end or side sheet metal, may keep the airbag system from working properly.

The operation of the airbag system can also be affected by changing any parts of the front seats, seat belts, airbag sensing and diagnostic module, steering wheel, instrument panel, inner door seals including the speakers, any of the airbag modules, ceiling or pillar trim, front sensors, side impact sensors or airbag wiring.

135) Keep the area in which the airbag inflates clear of obstructions.

136) Do not apply stickers or other objects on the steering wheel, on the dashboard in the passenger side airbag area, on side upholstery on the roof or on the seats. Never put objects (e.g. mobile phones) on the passenger side of the dashboard since they could interfere with correct inflation of the passenger airbag and also cause serious injury to the passengers.

137) The airbag must be able to inflate without obstruction in the event of deployment. It is therefore recommended not to drive with the body bent forward, but to sit up resting your back and shoulders on the backrest of the seat. Adjusting the position of the seat so that

you can reach and manoeuvre the steering wheel comfortably with your arms slightly bent being as far away as possible from the steering wheel. Being too close to the steering wheel when the airbag is deployed may cause serious injury.

138) When there is an active passenger airbag, DO NOT install rearward facing child restraint systems on the front seat. Deployment of the airbag in a crash could cause fatal injuries to the child regardless of the severity of the collision. Therefore, always deactivate the passenger side airbag when a rearward facing child restraint system is installed on the front passenger seat. The front passenger seat must also be positioned back as far as possible in order to prevent the child restraint system from coming into contact with the dashboard. Immediately reactivate the passenger airbag as soon as the child restraint system has been removed.

139) The front airbags and/or side bags may be deployed if the car is subject to heavy knocks or accidents involving the underbody area, such as for example violent shocks against steps, pavements or low obstacles, the car falling in big holes or dips in the road.



CHILD RESTRAINT SYSTEMS ON FRONT PASSENGER SEAT WITH AIRBAG SYSTEMS

Warning according to ECE R94.03 and ADR 04/06:

EN: NEVER use a rearward-facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it; DEATH or SERIOUS INJURY to the CHILD can occur.

DE: Nach hinten gerichtete Kindersitze NIEMALS auf einem Sitz verwenden, der durch einen davor befindlichen AKTIVEN AIRBAG geschützt ist, da dies den TOD oder SCHWERE VERLETZUNGEN DES KINDES zur Folge haben kann.

FR: NE JAMAIS utiliser un siège d'enfant orienté vers l'arrière sur un siège protégé par un COUSSIN GONFLABLE ACTIF placé devant lui, sous peine d'infliger des BLESSURES GRAVES, voire MORTELLES à l'ENFANT.

ES: NUNCA utilice un sistema de retención infantil orientado hacia atrás en un asiento protegido por un AIRBAG FRONTAL ACTIVO. Peligro de MUERTE o LESIONES GRAVES para el NIÑO.

RU: ЗАПРЕЩАЕТСЯ устанавливать детское удерживающее устройство лицом назад на сиденье автомобиля, оборудованном фронтальной подушкой безопасности, если ПОДУШКА НЕ ОТКЛЮЧЕНА! Это может привести к СМЕРТИ или СЕРЬЕЗНЫМ ТРАВМАМ РЕБЕНКА.

NL: Gebruik NOOIT een achterwaarts gericht kinderzitje op een stoel met een ACTIEVE AIRBAG ervoor, om DODELIJK of ERNSTIG LETSEL van het KIND te voorkomen.

DA: Brug ALDRIG en bagudvendt autostol på et forsæde med AKTIV AIRBAG, BARNET kan komme i LIVSFARE eller komme ALVORLIGT TIL SKADE.

SV: Använd ALDRIG en bakåtvänd barnstol på ett säte som skyddas med en framförvarande AKTIV AIRBAG. DÖDSFALL eller ALLVARLIGA SKADOR kan drabba BARNET.

FI: ÄLÄ KOSKAAN sijoita taaksepäin suunnattua lasten turvaistuinta istuimelle, jonka edessä on AKTIIVINEN TURVATYNNY, LAPSI VOI KUOLLA tai VAMMAUTUA VAKAVASTI.

NO: Bakovervendt barnesikringsutstyr må ALDRI brukes på et sete med AKTIV KOLLISJONSPUTE foran, da det kan føre til at BARNET utsettes for LIVSFARE og fare for ALVORLIGE SKADER.

PT: NUNCA use um sistema de retenção para crianças voltado para trás num banco protegido com um AIRBAG ACTIVO na frente do mesmo, poderá ocorrer a PERDA DE VIDA ou FERIMENTOS GRAVES na CRIANÇA.

IT: Non usare mai un sistema di sicurezza per bambini rivolto all'indietro su un sedile protetto da AIRBAG ATTIVO di fronte ad esso: pericolo di MORTE o LESIONI GRAVI per il BAMBINO!

EL: ΠΟΤΕ μη χρησιμοποιείτε παιδικό κάθισμα ασφαλείας με φορά προς τα πίσω σε κάθισμα που προστατεύεται από μετωπικό ΕΝΕΡΓΟ ΑΕΡΟΣΑΚΟ, διότι το παιδί μπορεί να υποστεί ΘΑΝΑΣΙΜΟ ή ΣΟΒΑΡΟ ΤΡΑΥΜΑΤΙΣΜΟ.

PL: NIE WOLNO montować fotelika dziecięcego zwróconego tyłem do kierunku jazdy na fotelu, przed którym znajduje się WŁĄCZONA PODUSZKA POWIETRZNA. Niezastosowanie się do tego zalecenia może być przyczyną ŚMIERCI lub POWAŻNYCH OBRAŻEŃ u DZIECKA.

TR: Arkaya bakan bir çocuk emniyet sistemini KESİNLİKLE önünde bir AKTİF HAVA YASTIĞI ile korunmakta olan bir koltukta kullanmayınız. ÇOCUK ÖLEBİLİR veya AĞIR ŞEKİLDE YARALANABİLİR.

UK: НЕКОЛИ не використовуйте систему безпеки для дітей, що встановлюється обличчям назад, на сидінні з УВІМКНЕНОЮ ПОДУШКОЮ БЕЗПЕКИ, інакше це може призвести до СМЕРТІ чи СЕРІОЗНОГО ТРАВМУВАННЯ ДИТИНИ.

HU: SOHA ne használjon hátrafelé néző biztonsági gyerekülést előlről AKTÍV LÉGZSÁKKAL védett ülésen, mert a GYERMEK HALÁLÁT vagy KOMOLY SÉRÜLÉSÉT okozhatja.

HR: NIKADA nemojte koristiti sustav zadržavanja za djecu okrenut prema natrag na sjedalu s AKTIVNIM ZRAČNIM JASTUKOM ispred njega, to bi moglo dovesti do SMRTI ili OZBILJNIH OZLJEDA za DIJETE.

SL: NIKOLI ne nameščajte otroškega varnostnega sedeža, obrnjenega v nasprotni smeri vožnje, na sedež z AKTIVNO ČELNO ZRAČNO BLAZINO, saj pri tem obstaja nevarnost RESNIH ali SMRTNIH POŠKODB za OTROKA.

SR: NIKADA ne koristiti bezbednosni sistem za decu u kome su deca okrenuta unazad na sedištu sa AKTIVNIM VAZDUŠNIM JASTUKOM ispred sedišta zato što DETE može da NASTRADA ili da se TEŠKO POVREDI.

MK: НИКОГАШ не користете детско седиште свртено наназад на седиште заштитено со АКТИВНО ВОЗДУШНО ПЕРНИЧЕ пред него, затоа што детето може ДА ЗАГИНЕ или да биде ТЕШКО ПОВРЕДЕНО.

BG: НИКОГА не използвайте детска седалка, гледаща назад, върху седалка, която е защитена чрез АКТИВНА ВЪЗДУШНА ВЪЗГЛАВНИЦА пред нея - може да се стигне до СМЪРТ или СЕРИОЗНО НАРАНЯВАНЕ на ДЕТЕТО.

RO: Nu utilizați NICIODATĂ un scaun pentru copil îndreptat spre partea din spate a mașinii pe un scaun protejat de un AIRBAG ACTIV în fața sa; acest lucru poate duce la DECESUL sau VĂTĂMAREA GRAVĂ a COPILULUI.

CS: NIKDY nepoužívejte dětský zádržný systém instalovaný proti směru jízdy na sedadle, které je chráněno před sedadlem AKTIVNÍM AIRBAGEM. Mohlo by dojít k VÁŽNÉMU PORANĚNÍ nebo ÚMRTÍ DÍTĚTE.

SK: NIKDY nepoužívajte detskú sedačku otočenú vzad na sedadle chránenom AKTÍVNÝM AIRBAGOM, pretože môže dôjsť k SMRTI alebo VÁŽNYM ZRANENIAM DIEŤAŤA.

LT: JOKIU BŪDU nemontuokite atgal atgręžtos vaiko tvirtinimo sistemos sėdynėje, prieš kurią įrengta AKTYVI ORO PAGALVĖ, nes VAIKAS GALI ŽŪTI arba RIMTAI SUSIŽALOTI.



LV: NEKĀDĀ GADĪJUMĀ neizmantojiet uz aizmuguri vērstu bērnu sēdekli sēdvietā, kas tiek aizsargāta ar tās priekšā uzstādītu AKTĪVU DROŠĪBAS SPILVENU, jo pretējā gadījumā BĒRNS var gūt SMAGAS TRAUMAS vai IET BOJĀ.

ET: ĀRGE kasutage tahapoole suunatud lapseturvaistet istmel, mille ees on AKTIIVSE TURVAPADJAGA kaitstud iste, sest see võib põhjustada LAPSE SURMA või TÕSISE VIGASTUSE.

MT: QATT tuża trażżin għat-tfal li jħares lejn in-naħa ta' wara fuq sit protett b'AIRBAG ATTIV quddiemu; dan jista' jikkawża I-MEWT jew ĠRIEHI SERJI lit-TFAL.

GA: Ná húsáid srian sábháilteachta linbh cúil RIAMH ar shuíochán a bhfuil mála aeir ag feidhmiú os a chomhair. Tá baol BÁIS nó GORTÚ DONA don PHÁISTE ag baint leis.

Beyond the warning required by ECE R94.02, for safety reasons a forward-facing child restraint system must only be used subject to the instructions and restrictions in the table "Child restraint installation locations".

The airbag labels are located on the mirror side fig. 156 and aesthetic side fig. 157 of the front passenger sun visor.



156

F6S0114



157

F6S0115

Front airbag system

The front driver/passenger airbags protect the front seat occupants in the event of frontal impacts of medium/high severity, by placing the bag between the occupant and the steering wheel or dashboard.

The front airbag system consists of an instantly inflating bag contained in a special compartment in the centre of the steering wheel fig. 158 and one in the dashboard on the front passenger side fig. 159. These can be identified by the word **AIRBAG**.

WARNING Do not use particularly aggressive products to clean the steering wheel airbag cover.

The front airbag system is triggered in the event of a front-end impact of a certain severity. The ignition must be switched on.

Therefore non-activation of airbags in other types of collisions (side impacts, rear shunts, roll-overs, etc.) does not indicate a system malfunction.

The driver and passenger front airbags are not a replacement for, but are complementary to, the seat belts, which should always be worn as required by law in Europe and most non-European countries.


In the event of impact, anyone not wearing a seat belt is projected forwards and may come into contact with the bag while it is still inflating. The protection offered by the bag is compromised in these circumstances. The front airbags may not activate in the case of a frontal impact against highly deformable objects not involving the front surface of the vehicle (e.g. wing collision against guard rail) or in the case of the vehicle wedging under other vehicles or protective barriers (e.g. under trucks or guard rails). Failure to activate in the conditions described above is due to the fact that they may not provide any additional protection compared with seat belts, so their activation would be inappropriate. In these cases, non-deployment does not indicate a system malfunction.



158

F6S0103



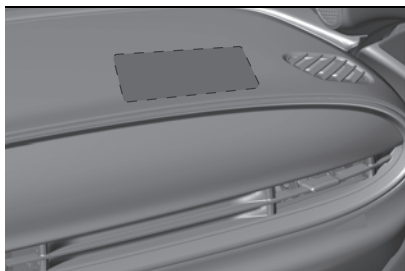

159


F6S0087

The inflated airbags cushion the impact, thereby reducing the risk of injury to the upper body and head of the front seat occupants considerably.



140j

SIDE AIRBAG SYSTEM

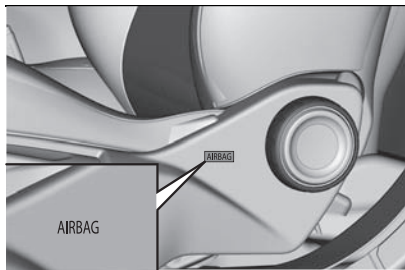

160

JJ000509

The side airbag system consists of an airbag in each front seat backrest. This can be identified by the word **AIRBAG** fig. 160.

The side airbag system is triggered in the event of a side impact of a certain severity. The ignition must be switched on.


The inflated airbags cushion the impact, thereby reducing the risk of injury to the upper body and pelvis in the event of a side-on collision considerably.

WARNING Only use protective seat covers that have been approved for the vehicle. Be careful not to cover the airbags.

CURTAIN AIRBAG SYSTEM

The curtain airbag system consists of an airbag in the roof frame on each side. This can be identified by the word **AIRBAG** on the roof pillars.

The curtain airbag system is triggered in the event of a side-on impact of a certain severity. The ignition must be switched on.

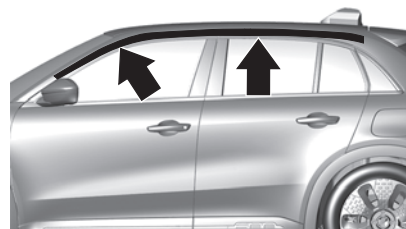

161

F6S0059

The inflated airbags cushion the impact, thereby reducing the risk of injury to the head in the event of a side-on impact considerably.

In the event of a side impact, the system provides best protection if the passenger sits on the seat in a correct position, thus allowing correct window bag deployment.



141) 142) 143) 144) 145) 146) 147) 148) 149) 150)

Warnings

Do not wash the seats with water or pressurised steam (wash by hand or at automatic seat washing stations). The front airbags and/or side bags may be deployed in the event of sharp impacts to the underbody of the car (e.g. impact with steps, pavements, potholes or road bumps etc.). When the airbag deploys it emits a small amount of dust: the dust is

harmless and does not indicate the beginning of a fire.

The dust may irritate the skin and eyes however: in this case, wash with neutral soap and water.

Airbag checking, repair and replacement must be carried out at a Fiat Dealership. If the car is scrapped, have the airbag system deactivated at a Fiat Dealership.


Pretensioners and airbags are deployed in different ways on the basis of the type of collision. Failure to activate one or more of the devices does not indicate a system malfunction.

AIRBAG DEACTIVATION

(for versions/markets where provided)

The front passenger airbag system must be deactivated for child restraint system on the passenger seat according to the instructions in the table "Child restraint installation locations".

The side airbag and curtain airbag systems, the belt pretensioners and all driver airbag systems will remain active.

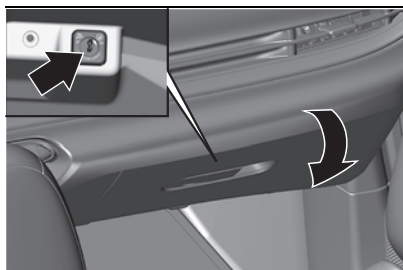

162

F6S0060

For vehicles on which it is fitted, the front passenger airbag system can be deactivated via a key-operated switch in the glovebox fig. 162.

Use the ignition key to choose the position:

OFF : front passenger airbag is deactivated and will not inflate in the event of a collision, control indicator OFF  illuminates continuously in the centre console.

ON : front passenger airbag is active.

WARNING After turning the key-operated switch to position OFF , keep on turning towards this position until key is removed.



151)



163

JJ000512

If the control indicator  fig. 163 illuminates for approx. 60 seconds after the ignition is switched on, the front passenger airbag system will inflate in the event of a collision.

If the control indicator  illuminates after the ignition is switched on, the front passenger airbag system is deactivated. It stays on while the airbag is deactivated.

If both control indicators are illuminated at the same time, there is a system failure. The status of the system is not discernible, therefore no person is allowed to occupy the front passenger seat. Contact a Fiat Dealership immediately.

Consult a Fiat Dealership immediately if neither of the two control indicators are illuminated.

Change status only when the vehicle is stopped with the ignition off.



Status remains until the next change.

AIRBAG AND BELT TENSIONERS FAULT LAMP

If the lamp  illuminates whilst driving, there is a fault in the airbag system. Seek the assistance of a Fiat Dealership. The airbags and belt pretensioners may fail to trigger in the event of an accident.



152)



WARNING

140) Optimum protection is only provided when the seat is in the proper position. Fasten the seat belt correctly and engage securely. Only then is the airbag able to protect.

141) The hooks on the handles in the roof frame are only suitable for hanging up light articles of clothing, without coat hangers. Do not keep any items in these clothes

142) Do not rest your head, arms or elbows on the door, on the windows or in the window bag area to prevent injury during deployment.

143) Never lean your head, arms or elbows out of the window.

144) If the  warning light does not switch on or stays on whilst driving when the ignition device is turned to ENGINE, a failure may have occurred in the restraint systems. In this case the airbags or pretensioners may not be deployed in an impact or, in a lower number of cases,

they may be deployed accidentally. Before continuing, contact a Fiat Dealership to have the system immediately checked.

145) On cars with side bags, do not cover the front seat backrests with extra covers.

146) Do not travel with objects in your lap, in front of your chest or held in your mouth (e.g., pipe, pencil etc.). They could cause severe injury if the airbag is deployed in a crash.

147) If the car has been stolen or in the case of attempt to steal it, if it has been subjected to vandalism or floods, have the airbag system checked by a Fiat Dealership.

148) If the ignition device is at ENGINE, even if the engine is switched off, airbags may be deployed when the car is stationary and hit by another car. Therefore, even if the vehicle is stationary, when an active front passenger airbag is fitted, DO NOT install rearward facing child restraint systems on the front passenger seat. Deployment of the airbag following an impact could cause fatal injuries to the child. Therefore, always deactivate the passenger side airbag when a rearward facing child restraint system is installed on the front passenger seat. The front passenger seat must also be positioned back as far as possible in order to prevent the child restraint system from coming into contact with the dashboard. Immediately reactivate the passenger airbag as soon as the child restraint system has been removed. Also remember that, if the ignition device is set to STOP, none of the safety devices (airbags or pretensioners) will be deployed in the event of collision. Non-deployment in such cases does not indicate a system malfunction.

149) The front airbag deployment threshold is higher than that of the pretensioners. For impacts whose intensity falls between the two levels, normally, only the pretensioners will be activated.

150) The airbag does not replace seat belts but increases their efficiency. Because front airbags are not deployed for low-speed crashes, side collisions, rear-end shunts or rollovers, occupants are protected, in addition to any side bags, only by their seat belts, which must therefore always be fastened.

151) Deactivate passenger airbag (for versions/markets where provided) only in combination with the use of a child restraint system, subject to the instructions and restrictions in the table "Child restraint installation locations". Otherwise, there is a risk of fatal injury for a person occupying a seat with a deactivated front passenger airbag.

152) Malfunction of the airbag failure warning light is indicated by the activation of the airbag failure lamp and by a dedicated message on the instrument panel display. The pyrotechnic charges are not disabled. Before continuing, contact a Fiat Dealership immediately to have the system checked.

STARTING AND DRIVING

We have now reached the "heart" of the car: let's see how to use the car to its full potential.

We'll look at how to drive safely in any situation, making it a welcome companion with our comfort and wallets in mind.

START AND OPERATING.....	136	CLOSE OBSTACLE	
PARKING	138	DETECTION	174
PARKING BRAKE.....	139	ADVANCED PARKING ASSIST	179
ELECTRIFIED DUAL CLUTCH		E-AUTO MODE	183
AUTOMATIC TRANSMISSION	141	CHARGING	184
ELECTRIC DRIVE UNIT	145	POWER SOURCES THAT CAN	
DRIVE MODE	147	BE USED	186
COASTING.....	147	PROCEDURE FOR CHARGING	
STOP-START SYSTEM.....	147	FROM A DOMESTIC POWER	
ADVANCED DRIVER		SOCKET (AC)	193
ASSISTANCE SYSTEMS		CHARGING PROCEDURE	
RECOMMNDATIONS (ADAS)	149	FROM WALLBOX CHARGING	
SHORTCUTS FOR ADVANCED		STATION	195
DRIVER ASSISTANCE		CHARGING PROCEDURE	
SYSTEMS	150	FROM PUBLIC CHARGING	
SPEED LIMITER	150	STATION (AC/DC)	197
CRUISE CONTROL	152	CHARGING FUNCTIONS	199
ADAPTIVE CRUISE CONTROL.....	155	FUEL	199
LANE DEPARTURE WARNING.....	162	DRIVING HINTS AND	
LANE KEEPING ASSIST	163	RECOMMENDATIONS.....	201
ADVANCED LANE KEEP		TRAILER HITCH.....	205
ASSIST	165		
SPEED LIMIT RECOGNITION.....	167		
HIGHWAY DRIVER ASSIST			
(LEVEL 2 AUTONOMOUS			
DRIVING)	172		
PANORAMIC CAMERA.....	173		



START AND OPERATING

 153) 154) 155) 156) 157)

 45) 46)

NEW VEHICLE RUNNING-IN


Do not brake unnecessarily hard for the first few journeys.

During the first drive, smoke may occur because of wax and oil evaporating off the exhaust system. Park the vehicle in the open for a while after the first drive and avoid inhaling the fumes.

During the running-in period, fuel and engine oil consumption may be higher. Additionally, the cleaning process of the exhaust filter may take place more often.

 47)

VEHICLES WITH IGNITION SWITCH

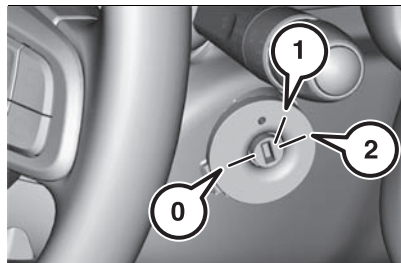


164

JJ000429

Turn key to position 1 to release the steering wheel lock.
Operate brake pedal.
Do not operate accelerator pedal.
Turn key briefly to position 2 and release after engine has been started.
During an Autostop, the engine can be started by releasing the brake pedal.

VEHICLES WITH STOP START ENGINE BUTTON

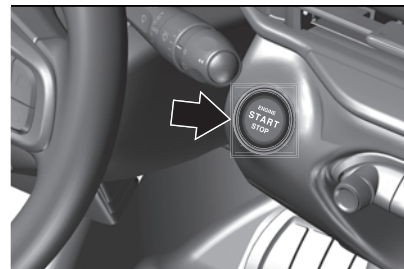


165

F6S0002

- ☐ Operate brake pedal.
- ☐ Do not operate accelerator pedal.
- ☐ Press the STOP START ENGINE button.
- ☐ Release button after starting procedure begins.
- ☐ Before restarting or to switch off the engine when vehicle is stationary, press the STOP START ENGINE button once more briefly.

To start the engine during an Autostop (with Adaptive Cruise Control) the engine can be started by releasing the brake pedal.

Operation in case of failure

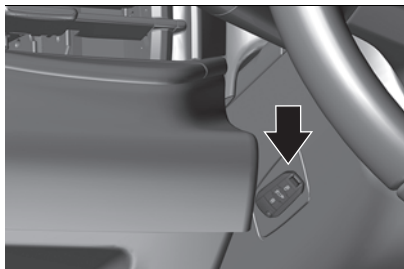

166

F6S0027

If either the electronic key fails or the battery of the electronic key is weak, a message may be displayed in the instrument panel display.

Hold the electronic key at the marking on the steering column cover as shown in the illustration fig. 166.

Set the PRND command to position P, operate the brake pedal and press the STOP START ENGINE button.

This option is intended for emergencies only. Replace the electronic key battery as soon as possible.

For unlocking or locking the doors, see "Doors" chapter in "Knowing your car" section.

ELECTRIC VERSIONS



154)

The PRND command must be in position P or N. Proceed as follows:

- ❑ fully depress the brake pedal without touching the accelerator
- ❑ press the STOP START ENGINE button to take the ignition switch to the position 3. Hold it fully depressed for a couple of seconds.

At the end of the procedure, an acoustic warning will be heard and the message "READY" will appear on the instrument panel display to indicate that the electric traction system of the car has started. When the "READY" message appears, the car is ready to go.

HYBRID VERSION

Proceed as follows:

- ❑ Fully depress the brake pedal.
- ❑ Start the petrol engine by depressing the brake pedal until the engine is running at a stabilised engine speed.
- ❑ With your foot on the brake pedal, select the automatic mode D or the reverse gear R on the PRND command.
- ❑ Release the brake pedal.
- ❑ Accelerate gradually to automatically release the electric parking brake.

The petrol engine may stop after the first start if operating conditions allow (e.g. state of charge of the traction battery, external temperature, efficiency of the catalytic converter, torque demand, selected driving mode,

thermal comfort of the passenger compartment).

Then, the vehicle moves off immediately in all-electric (e-Launch function).

Switching the vehicle off

Regardless of the current gearbox mode, P mode is immediately engaged automatically when the ignition is switched off.

However, in mode N, mode P will be engaged after a delay of 5 seconds (time to enable free-wheeling mode).

NOTE Check that mode P has been engaged and that the electric parking brake was applied automatically; if not, apply it manually.

EMERGENCY SHUT OFF DURING DRIVING

If the engine needs to be switched off during driving in case of emergency, press the STOP START ENGINE button for 5 seconds.



158)

COLD START RECOMMENDATIONS

Starting the engine without additional heaters is possible down to -30 °C for petrol engines. Required is an engine oil with the correct viscosity, the correct fuel, performed services and a sufficiently charged conventional



vehicle battery. It is necessary to do as follows:

- ❑ run the engine (idle speed) at least 1 min before take-off vehicle
- ❑ in very cold conditions, the enjoyability of use will be reached after a few kilometres

With temperatures below -30 °C the automatic transmission requires a warming phase of approx. 5 minutes. The PRND command must be in position P.

TURBO ENGINE WARM-UP

Upon start-up, engine available torque may be limited for a short time, especially when the engine temperature is cold. The limitation is to allow the lubrication system to fully protect the engine.

OVERRUN CUT-OFF

The fuel supply is automatically cut off during overrun, i.e. when the vehicle is driven with a gear engaged but accelerator pedal is released.

Depending on driving conditions, the overrun cut-off may be deactivated.



WARNING

153) *It is dangerous to run the engine in enclosed areas. The engine consumes oxygen and engine exhaust contains carbon dioxide, carbon monoxide and other toxic gasses.*

154) *The brake servo is not active until the engine is started, so you would need to apply much more force than usual to the brake pedal.*

155) *Do not start the engine by pushing, towing or driving downhill. These manoeuvres may damage the catalytic converter.*

156) *Do not leave the vehicle in a poorly ventilated area with electrical operating mode on and heat engine switched off, as the heat engine may start automatically if the residual charge level of the high-voltage battery is insufficient. The exhaust gases generated can cause serious damage to people and animals.*

157) *When leaving the vehicle, you must set the PRND command to P. If you unintentionally press the accelerator pedal or when the PRND command is in a position other than P the vehicle can move abruptly, resulting in serious injury or death.*

158) *Switching off the engine during driving may cause loss of power support for brake and steering systems. Assistance systems and airbag systems are disabled. Lighting and brake lights will extinguish. Therefore power down the engine and ignition while driving only when required in case of emergency.*



IMPORTANT

45) *When the engine is switched off never leave the ignition device in the ENGINE position to prevent useless current absorption from draining the conventional battery.*

46) *A quick burst on the accelerator before turning off the engine serves absolutely no practical purpose; it wastes fuel and is damaging for the engine.*

47) *We recommend that during the initial period, or during the first 1600 km (1000 miles), you do not drive to full car performance (e.g. excessive acceleration, long journeys at top speed, sharp braking, etc.).*

PARKING



Always remove the key from the ignition device when leaving the car. When parking and leaving the car, proceed as follows:

- ❑ put the PRND command on P before releasing the brake pedal
 - ❑ stop the engine and apply the electric parking brake
 - ❑ lock the vehicle
 - ❑ activate the anti-theft alarm system
- Block the wheels with a wedge or a stone if the car is parked on a steep slope.

The engine cooling fans may run after the engine has been switched off

WARNING NEVER leave the car before putting the PRND command in P.



48)

WARNING In the event of an accident with airbag deployment, the engine is switched off automatically if the vehicle comes to a standstill within a certain time.

In countries with extremely low temperatures it may be necessary to park the vehicle without applied parking brake. Make sure to park the vehicle on a level surface.



WARNING

159) Do not park the vehicle on an easily ignitable surface. The high temperature of the exhaust system could ignite the surface. Always apply the parking brake. If the vehicle is on a level surface or uphill slope, engage first gear or set the PRND command to position P. If the vehicle is on a downhill slope, set the PRND command to position P. Turn the front wheels towards the kerb. Close the

windows. Switch off the engine. Remove the ignition key from the ignition switch or switch off ignition on vehicles with STOP START ENGINE button. Turn the steering wheel until the steering wheel lock is felt to engage.

160) Never leave children unattended in the vehicle. Always remove the ignition key when leaving the vehicle and take it out with you.




IMPORTANT

48) After running at high engine speeds or with high engine loads, operate the engine briefly at a low load or run in neutral for approx. 30 seconds before switching off, in order to protect the turbocharger.

PARKING BRAKE



161)

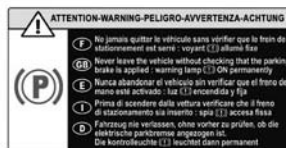

167

F6S0104

MANUAL PARKING BRAKE

The parking brake lever is located between the front seats.


Engaging the parking brake

Pull lever upwards until the car is secured. Four or five clicks are generally enough when the car is on level ground while ten or eleven may be required if the car is on a steep slope and laden: if it is not so, contact a Fiat Dealership to have it adjusted.

Releasing the parking brake

Slightly raise lever and hold button on top of the lever pressed, checking that the (!) warning light switches off in the instrument panel.

ELECTRIC PARKING BRAKE

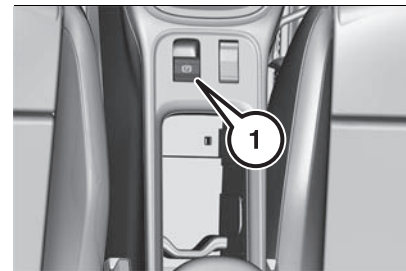

168

JJ000514

The electric parking brake can be engaged in two ways:



- ❑ manually, by pulling the switch (P) (1) fig. 168 on the central tunnel
- ❑ automatically, when the vehicle is stationary and the ignition is switched off (Automatic Parking Brake)

APPLYING WHEN VEHICLE IS STATIONARY



The electric parking brake can always be activated, even if the ignition is off. Do not operate electric parking brake system too often without engine running as this will discharge the conventional battery.

RELEASING

Switch on ignition. Keep foot brake pedal depressed and then push switch (P).

DRIVE AWAY FUNCTION

Engaging R, D, M (for e-Hybrid versions) or B (for Electric versions) and then depressing the accelerator pedal releases the electric parking brake automatically. This is only possible if the Automatic Parking Brake is activated. It is not possible when switch (P) is pulled at the same time.

BRAKING WHEN VEHICLE IS MOVING

When the vehicle is moving and the switch (P) is kept pulled, the electric parking brake system will decelerate

the vehicle. As soon as the switch (P) is released, braking will be stopped. The antilock brake system and the Dynamic Stability Control stabilise the vehicle while the switch (P) is kept pulled. If an error of the electric parking brake occurs, a warning message is displayed in the instrument panel display. If the antilock brake system and the Dynamic Stability Control fail,  indicator illuminates in the instrument panel display. In this case, stability during deceleration of the vehicle can only be maintained with repeated short pulls of the switch until the vehicle is immobilised.

AUTOMATIC PARKING BRAKE

Automatic Parking Brake includes automatic application and automatic release of the electric parking brake.

Automatic application:

- ❑ The electric parking brake is automatically applied when the vehicle is stationary and the ignition is switched off.
 - ❑ (P) illuminates in the instrument panel display and a display message pops up to confirm the application.
- Automatic release:

WARNING The automatic release of the electric parking brake is inhibited as long as the driver's door is open.

- ❑ Parking brake releases automatically on driving off.
- ❑ (P) extinguishes in the instrument panel display and a display message pops up to confirm the release.

Deactivation of Automatic Parking Brake

This procedure will deactivate the Automatic Parking Brake as well as the automatic selection of P mode. In certain situations such as following, it is necessary to deactivate the Automatic Parking Brake and the automatic selection of P mode:

- ❑ while being towed
- ❑ on a rolling road
- ❑ in an automatic car wash
- ❑ while being transported by rail or sea freight

For the deactivation, the vehicle must be stationary and the engine must be switched on.

- ❑ Depress the brake pedal and select N.
- ❑ Within 5 seconds, depress and hold the brake pedal.
- ❑ Switch off ignition and move the selector forwards or backwards.

- ❑ Release the brake pedal and switch on ignition.
- ❑ Depress and hold the brake pedal and push the switch (P).
- ❑ Release the brake pedal and switch off ignition.

The deactivation will be confirmed by a message and will be cancelled after 15 minutes. To previously return to normal operation, depress the brake pedal and start the engine.

FAULT

Failure mode of electric parking brake is indicated by a lamp (P)! and by a message displayed in the instrument panel display.

The lamp (P) flashes: electric parking brake is not fully applied or released. When continuously flashing, release electric parking brake and retry applying.



WARNING

161) Do not park the vehicle on an easily ignitable surface. The high temperature of the exhaust system could ignite the surface. Always apply the parking brake. If the vehicle is on a level surface or uphill slope, set the PRND command to position P. If the vehicle is on a downhill slope, set the PRND command to position P. Turn the front wheels towards the kerb. Close the windows. Switch off the engine.

Remove the ignition key from the ignition switch or switch off ignition on vehicles with STOP START ENGINE button. Turn the steering wheel until the steering wheel lock is felt to engage.

162) Pull switch (P) for a minimum of 1 second until control indicator (P) illuminates constantly and electric parking brake is applied. The electric parking brake operates automatically with adequate force. Before leaving the vehicle, check the electric parking brake status.

ELECTRIFIED DUAL CLUTCH AUTOMATIC TRANSMISSION

(Hybrid versions)

6-speed electrified dual-clutch automatic gearbox with push selector for hybrid vehicles. It also offers a manual mode with gear changes via control paddles located behind the steering wheel. It includes the 48 V electric motor, which improves the performance of the petrol engine, reduces fuel consumption and drives in all-electric.

GEAR SELECTION

163) 164) 165)

49)



169

F6S0215

Push the buttons fig. 169:

(P) park position, wheels are locked, engage only when the vehicle is stationary, engaged automatically when driver's door is opened or engine is switched off

(R) reverse gear, engage only when the vehicle is stationary


(N) neutral

(D) automatic mode (first push)

(M) manual mode (second push)

The mode or selected gear is shown in the instrument panel display (1) fig. 173.



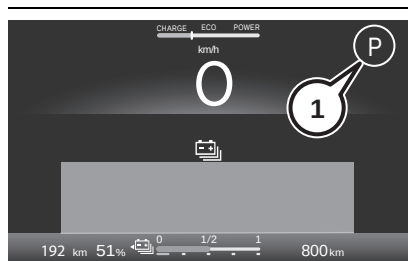

170

F6S0282

In automatic mode, the driving programme is indicated by (D).

In manual mode, (M) and the number of the selected gear is indicated.

In all-electric driving, the gear engaged is not indicated.

The state of the gearbox remains displayed on the instrument panel for a few seconds after switching off the ignition.

Park position P

This mode locks the front wheels. (P) is automatically engaged when ignition is switched off.

The vehicle automatically shifts into (P) if

- ☐ the vehicle is stopped
- ☐ the driver's door is opened while the vehicle's speed is below 2 km/h

The vehicle will not shift into (P) if it is moving too fast. Stop the vehicle and shift into (P).

To shift into (P), press button (P). The LED on the button turns on.

To shift out of (P): Depress the brake pedal and select the desired mode.

Reverse gear R

To shift into and out of (R), the vehicle must be at standstill and the brake pedal has to be depressed.

With the reverse gear engaged, the LED on the button turns on.



Neutral N

In this mode, the propulsion system does not transfer torque to the wheels.

To restart the propulsion system when the vehicle is already moving, use (D) only.

With the neutral engaged, the LED on the button turns on.

When (N) is selected and ignition is switched off, (P) is engaged after a short time

Automatic mode D

With the (D) engaged, the LED on the button turns on.

WARNING In slippery conditions, operate the vehicle in (D) for enhanced riding and handling performance.

Manual mode M

With the (M) engaged, the LED on the button turns on.

In this mode, it is possible to change gears manually using steering the wheel paddles.

Steering-mounted controls

In mode (M) or (D), the steering-mounted control paddles can be used to change gear manually. They cannot be used to select neutral or to engage or disengage reverse gear.


MANUAL MODE

Manual mode (M) can be activated pushing the button (D) in each driving situation and speed.

The selected gear is indicated in the instrument panel display.

If a higher gear is selected when vehicle speed is too low, or a lower gear when vehicle speed is too high, the shift is not executed. This can cause a message in the instrument panel display.

In manual mode, no automatic shifting to a higher gear takes place at high engine revolutions.

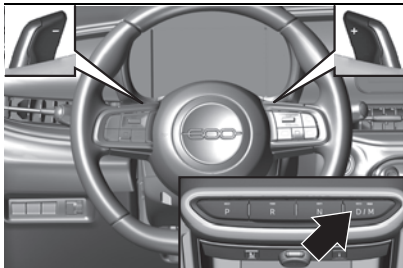

171

F6S0105

Press button (M).

Pull steering wheel paddles to select gears manually fig. 171.

Pull right paddle + to shift to a higher gear.

Pull left paddle - to shift to a lower gear.

Multiple pulls allow gears to be slipped.

Gear shift indication

The symbol ▲ or ▼ with a number beside it is indicated when gearshifting is recommended for fuel saving reasons. Shift indication.

Electric motor

The electric motor included in the automatic gearbox, which is used for the first start, provides 12 V power supply via the DC/DC converter and provides electric assistance to the petrol engine.

The electric motor has the following features:

- Provide an additional torque to the gearbox,
- Recover the kinetic energy of the deceleration phases, converting it into electrical energy, which can be used for traction or for the power supply of electrical accessories installed on the vehicle.

- Recharge the 48 V traction battery when the state of charge is too low.

- Provide all-electric driving only.

These features are achieved through the following functions set of automatic operating mode:

- e-Boost
- e-Creeping
- e-Launch
- e-Queueing
- e-Parking

A manual operating mode is also available to activate/deactivate the restart of the petrol engine while driving: the e-Auto mode.

WARNING When mode P or N is selected on the automatic gearbox, the noise level in the engine compartment may increase due to the start of the charging phase of the traction battery: this is normal and does not represent a malfunction.

OPERATION

Only appropriate mode change instructions are validated. With the engine running, if it is necessary to depress the brake pedal to change modes, an alert message will be displayed on the instrument panel.

WARNING With the engine running and the brakes released, if (R), (D) or (M) is selected, the vehicle moves off, even without pressing the accelerator pedal. Never depress the accelerator and brake pedals at the same time: risk of damage to the gearbox!

WARNING At speeds below 2 mph, opening the driver's door will engage mode - risk of sudden braking!

WARNING In the event of battery failure, it is essential to place the chock(s) supplied with the tool kit against one of the wheels to immobilise the vehicle.

NOTE If you open the driver's door while mode is engaged, an audible signal will sound and mode will be engaged. The audible signal stops when the driver's door is closed.



SPECIAL ASPECTS OF AUTOMATIC MODE

These functions respond to common driving situations where the electric motor is available to provide additional power or zero-emission driving.

NOTE These functions are only available if the traction battery is sufficiently charged. These five functions cannot be deactivated.

e-Launch

With the petrol engine off, this function allows the vehicle to run in electric mode without affecting performance. By depressing the accelerator pedal, the vehicle starts to drive as soon as the mode D or R of the automatic gearbox is selected.

e-Creeping

With the petrol engine off, by releasing the brake pedal, this function allows the vehicle to be moved forward or backward in electric mode without having to depress the accelerator pedal, as soon as the mode D or R of the automatic gearbox is selected.

e-Queueing

This function makes it possible to follow a queue of vehicles with several stops followed by restarts of the vehicle, using the e-Creeping, e-Launch and electric driving modes.

e-Parking

This function allows parking manoeuvres to be carried out at reduced speed with the help of the electric motor when the mode D or R of the automatic gearbox is selected.

e-Boost

This function allows simultaneous operation of the petrol engine and the electric motor, combined with the automatic gearbox.

By fully depressing the accelerator pedal ("kick-down" function), when the traction battery is fully charged, it is possible to exceed the torque of the petrol engine alone, thanks to the additional torque provided by the electric motor.

NOTE Repeated use of the brake pedal causes the restart of petrol engine to provide braking assistance.

Special aspects of manual mode

The gearbox only changes from one gear to another if the vehicle speed and engine speed conditions permit.

The petrol engine can also be switched off in manual mode when stopped in traffic or when the accelerator pedal is released. The all-electric potential of the driving mode used (Normal or Eco) is also retained.

NOTE Using the steering wheel paddles also causes the restarting of petrol engine. If high traction is required, the driver can deactivate the e-Auto mode using the touch screen menu.



WARNING

163) Never use P mode instead of the electric parking brake. Always engage the electric parking brake when parking the car to avoid the accidental movement of the vehicle.

164) If the P position is not engaged, the car could move and injure people. Before leaving the car, make sure that the PRND command is in position P and that the parking brake is engaged.

165) Do not shift the automatic transmission to N and do not stop the engine when driving on a downhill road. This type of driving is dangerous and reduces the possibility of intervening in the case of variation of the road traffic or surface. You risk losing control of your car and causing accidents.



IMPORTANT

49) If the car is on a gradient, always engage the electric parking brake **BEFORE** placing the automatic transmission in P.

50) Shifting into R while the vehicle is moving forward could damage the electric

drive unit. Only shift into R after the vehicle has been stopped.

ELECTRIC DRIVE UNIT

(Electric versions)



OPERATION



172

F6S0205

The vehicle uses an Electric Drive Unit with a 1-gear transmission. Push the buttons fig. 172:

P : park position, wheels are locked, engage only when the vehicle is stationary, engaged automatically when driver's door is opened or engine is switched off


R : reverse gear, engage only when the vehicle is stationary

N : neutral

D : drive mode, low recuperation (first push)

B : regenerative braking (second push)

The mode is shown in the instrument panel display (1) fig. 173.

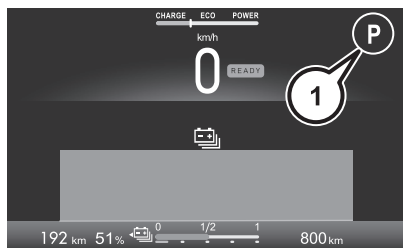

173

F6S0178

The state of the Electric Driving Unit remains displayed on the instrument panel for a few seconds after switching off the ignition.

Park mode P

This mode locks the front wheels. It is the recommended mode when starting the propulsion system because the vehicle cannot move easily.



The electric drive unit automatically shifts to P if

- ☐ the vehicle is stopped
- ☐ the driver's door is opened while the vehicle's speed is below 2 km/h

The vehicle will not shift into P if it is moving too fast. Stop the vehicle and shift into P.

To shift into P, press button P. The LED on the button turns on.

To shift out of P: Depress the brake pedal and select the desired mode.

Reverse gear R

To shift into and out of R, the vehicle must be at standstill and the brake pedal has to be depressed.

With the reverse gear engaged, the LED on the button turns on.



Neutral N

In this mode, the propulsion system does not transfer torque to the wheels. To restart the propulsion system when the vehicle is already moving, use D only.

With the neutral engaged, the LED on the button turns on.



Drive mode D

With the D engaged, the LED on the button turns on.



WARNING In slippery conditions, operate the vehicle in D for enhanced riding and handling performance.



Regenerative braking mode B

Regenerative braking generates electrical energy resulting from engine braking to charge the high-voltage battery. Regenerative power may be limited when the high-voltage battery is fully charged.

If B mode is selected, energy is regenerated when the accelerator pedal is lifted. In this mode, vehicle speed is significantly reduced by releasing the accelerator pedal, without operating the brake pedal.

Use B mode when driving down steep hills, in deep snow, in mud or in stop-and-go traffic.



170) 171)

B can only be activated if D is selected. Press button B. The LED on the button turns on.

To deactivate B, press button B.



54)

Deactivating the automatic operation of P mode for electric vehicles

The procedure for the deactivation of the automatic operation of P mode also deactivates the automatic operation of the electric parking brake.

For this procedure, refer to the description of the automatic parking brake.



WARNING

166) Never leave children unattended in the vehicle. Always remove the ignition key when leaving the vehicle and take it out with you.

167) Never use P mode instead of the electric parking brake. Always engage the electric parking brake when parking the car to avoid the accidental movement of the vehicle.

168) Do not leave the vehicle when the propulsion system is running, the vehicle may move suddenly. You or others can be injured. To be sure the vehicle will not move, even if you are on even ground, make sure the parking brake is applied and P is selected.

169) Do not shift the Electric Drive Unit to N and do not stop the engine when driving on a downhill road. This type of driving is dangerous and reduces the possibility of intervening in the case of variation of the road traffic or surface. You risk losing control of your car and causing accidents.

170) In the case of extreme temperatures or if the high-voltage battery is almost fully charged, the brake force of the regenerative braking may be temporarily reduced. If the braking force is not sufficient, the driver has to be prepared to use the brake pedal.

171) While using regenerative braking, the brake lights do not illuminate. If the succeeding traffic is to be warned, depress the brake pedal.



IMPORTANT

51) If the car is on a gradient, always engage the electric parking brake **BEFORE** placing the Electric Drive Unit in P.

52) Shifting into R while the vehicle is moving forward could damage the electric drive unit. Only shift into R after the vehicle has been stopped.

53) If the vehicle seems to accelerate slowly or not respond when you try to go faster, do not continue your journey. The electric drive unit could be damaged. Consult a Fiat Dealership as soon as possible.

54) Spinning the tyres or holding the vehicle in one place on a hill using only the accelerator pedal may damage the electric drive unit. If you are stuck, do not spin the tyres. When stopping on a hill, use the brakes to hold the vehicle in place.


DRIVE MODE

(Electric versions)



172)

Each drive mode corresponds to a different vehicle setting.

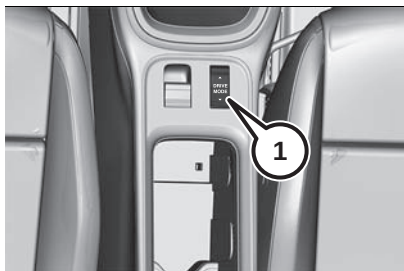

174

JJ000517

To select the respective drive mode, use the toggle switch (1) fig. 174. Push the button ▲ or ▼ for selecting the requested mode and wait 2 seconds after release for confirmation. The list of the modes is shown on the **Uconnect™ 10.25"/10.25" NAV** display.

Normal mode

The settings in this mode are set by default. Everytime the ignition is switched on, this mode is selected. Electric vehicle: To optimise range, electric engine power output is reduced.

Sport mode

To obtain more dynamic driving with action on the power steering,

accelerator, gear changes, displaying the vehicle's dynamic settings on the instrument panel (depending on version) and activation/ deactivation of the display colour (depending on version).

Eco mode

To optimise range, electric engine power output is reduced and heating is switched off.

Recommendations

The vehicle is designed principally to drive on tarmac roads, but it may occasionally drive on other less passable terrain. However, it does not permit off-road driving:

- ❑ Driving on terrain that can damage the underbody or tear off elements (e.g. fuel pipe, fuel cooler) by obstacles or stones in particular
- ❑ Driving on terrain with steep gradients and poor grip
- ❑ Crossing a waterway



WARNING

172) *Your driving style must always be suited to the road conditions, visibility and traffic. The driver is, in any case, responsible for safe driving.*

COASTING

(Hybrid versions)

With the PRND command in mode D, except in Sport mode, fully releasing the accelerator pedal allows free-wheeling which can save fuel. A drop in engine speed is normal (rev counter at idle, drop in engine noise).

STOP-START SYSTEM

(where provided)

The Stop-Start system helps to save fuel and to reduce the exhaust emissions. When conditions allow, it switches off the engine as soon as the vehicle is at a low speed or at a standstill, e.g. at a traffic light or in a traffic jam.

Activation/deactivation

The Stop-Start system is available as soon as the engine is started, the vehicle starts-off and the conditions as stated below in this section are fulfilled. The deactivation and reactivation of the Stop-Start system can be done through the **Uconnect™ 10.25"/10.25" NAV** settings.

Autostop

If the vehicle is at a standstill with depressed brake pedal, Autostop is activated automatically.



The engine will be switched off while the ignition stays on.
The Stop-Start system will be disabled on steep inclines.

Indication



175

JJ000184

An Autostop is indicated by control indicator

During an Autostop, the brake performance will be maintained.

NOTE The heating and air conditioning systems only operate when the engine is running. Temporarily deactivate the corresponding system to maintain a comfortable temperature in the passenger compartment. For more information, refer to the corresponding section.

Conditions for an Autostop

The Stop-Start system checks if each of the following conditions is fulfilled.

- ☐ The Stop-Start system is not manually deactivated.
- ☐ The driver's door is closed or the driver's seat belt is fastened.

- ☐ The conventional battery is sufficiently charged and in good condition.
 - ☐ The engine is warmed up.
 - ☐ The engine coolant temperature is not too high.
 - ☐ The engine exhaust temperature is not too high, e.g. after driving with high engine load.
 - ☐ The ambient temperature is not too low or too high.
 - ☐ The climate control system allows an Autostop.
 - ☐ The brake vacuum is sufficient.
 - ☐ The self-cleaning function of the exhaust filter is not active.
 - ☐ The vehicle was driven at least at walking speed since the last Autostop.
- Autostop will be inhibited if these conditions are not met. In addition, Autostop may be inhibited
- ☐ by certain settings of the climate control system
 - ☐ immediately after higher speed driving
 - ☐ in the case of new vehicle running-in
 - ☐ by active demisting
 - ☐ in the case of steep ascending or descending slopes

WARNING The Autostop may be inhibited for several hours after a conventional battery replacement or reconnection.

Conventional battery discharge protection

To ensure reliable engine restarts, several conventional battery discharge protection features are implemented as part of the Stop-Start system.

Power saving measures

During an Autostop, several electrical features such as auxiliary electric heater or rear window heating are disabled or switched to a power saving mode. The fan speed of the climate control system is reduced to save power.

 
Restart of the engine by the driver

The engine is restarted in the following cases:

- ☐ brake pedal released while D or M is selected
- ☐ brake pedal released or N selected when selector is moved to select D or M
- ☐ selector is moved to select R

ADVANCED DRIVER ASSISTANCE SYSTEMS RECOMMENDATIONS (ADAS)

 173) 174) 175) 176) 177)  55) 56) 57) 58) 59)



176

F6S0061

NOTE Ensure that the units of speed displayed in the instrument panel (mph or km/h) are those for the country you are driving in. If this is not the case, when the vehicle is stationary, set the display to the required units of speed so that it complies with what is authorised locally. In case of doubt, contact a Fiat Dealership.



WARNING

173) Advanced Driver Assistance System (ADAS) are developed to support the driver and not to replace the driver's attention. The driver accepts full responsibility when driving the vehicle. Driving and manoeuvring aids cannot, in any circumstances, replace the need for vigilance on the part of the driver. The driver must comply with the Highway Code, must remain in control of the vehicle in all circumstances and must be able to retake control of it at all times. The driver must adapt the speed to climatic conditions, traffic and the state of the road. It is the driver's responsibility to constantly monitor traffic conditions, assess the distance and relative speed of other vehicles, and anticipate their manoeuvres before using the direction indicator and changing lanes. These systems do not make it possible to exceed the laws of physics.

174) You should hold the steering wheel with both hands, always use the door and interior mirrors, always leave your feet close to the pedals and take a break every 2 hours.

175) The driver must always check the surroundings of the vehicle before and during the whole manoeuvre, in particular using the mirrors.

176) The usage of a license plate support on the front bumper may affect the proper radar unit functionality. When using a license plate support, follow the markings and indications on the front bumper

177) The use of mats or pedals covers not approved by the Manufacturer may interfere with the operation of the speed limiter or cruise control. To avoid any risk of jamming the pedals ensure that the mat is secured correctly and never fit one mat on top of another.



IMPORTANT

55) The operation of the radar(s), along with any associated functions, may be affected by the accumulation of dirt (e.g. mud, ice), in poor weather conditions (e.g. heavy rain, snow), or if the bumpers are damaged. If the front bumper is to be repainted, contact a Fiat Dealership; certain types of paint could interfere with the operation of the radar(s).

56) This camera and its associated functions may be impaired or not work if the windscreen area in front of the camera is dirty, misty, frosty, covered with snow, damaged or masked by a sticker. In humid and cold weather, demist the windscreen regularly. Poor visibility (inadequate street lighting, heavy rain, thick fog, snowfall), dazzle (headlamps of an oncoming vehicle, low sun, reflections on a damp road, leaving a tunnel, alternating shade and light) can also impair detection performance. In the event of a windscreen replacement, contact a Fiat Dealership to recalibrate the camera; otherwise, the operation of the associated driving aids may be disrupted.

57) The images from the camera(s) displayed on the touch screen or on the instrument panel may be distorted by



the terrain. In the presence of areas in shade, or in conditions of bright sunlight or inadequate lighting, the image may be darkened and with lower contrast. Obstacles may appear further away than they actually are.

58) *The operation of the sensors, as well as any associated functions, may be disrupted by noise pollution such as that emitted by noisy vehicles and machinery (e.g. lorries, pneumatic drills), by the accumulation of snow or dead leaves on the road or in the event of damaged bumpers and mirrors. When reverse gear is engaged, an audible signal (long beep) indicates that the sensors may be dirty. A front or rear impact to the vehicle can upset the sensors' settings, which is not always detected by the system: distance measurements may be distorted. The sensors do not systematically detect obstacles that are too low (pavements, studs) or too thin (trees, posts, wire fences). Certain obstacles located in the sensors' blind spots may not be detected or may no longer be detected during the manoeuvre. Certain materials (fabrics) absorb sound waves: pedestrians may not be detected.*

59) *Clean the bumpers and door mirrors and the field of vision of the cameras regularly. When washing your vehicle at high pressure, direct the spray from at least 30 cm away from the radar, sensors and cameras.*

SHORTCUTS FOR ADVANCED DRIVER ASSISTANCE SYSTEMS

Advanced Driver Assistance System (ADAS) can be accessed directly to quickly activate/deactivate them.

By default, driving aids are already stored in the system (e.g. Stop-Start, Lane Keeping Assist)

Other driving aids can be added or deleted from the page.

It is configured in the "ADAS">"Functions" touch screen application.

☐ press the button (1) fig. 177



177

F6S0014

☐ press the button corresponding to the Advanced Driver Assistance System concerned:

- full symbol: the function is added to the shortcuts

- empty symbol: the function is deleted from the shortcuts

☐ check the modification in the "Shortcuts" tab.

SPEED LIMITER

(where provided)

178) 179) 180)

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in this section.

The Speed limiter prevents the vehicle from exceeding a preset maximum speed.

The maximum speed can be set at speeds above 30 km/h.

The driver can accelerate the vehicle up to the preset speed. Deviations from the limited speed may occur when driving downhill.

The preset speed can be exceeded temporarily by pressing the accelerator pedal firmly.

The status and preset speed limit are displayed in the instrument panel display.

STEERING-MOUNTED CONTROLS



178

JJ000612

(1) Activate the speed limiter at the previously saved speed setting. Use the speed suggested by the Road signs recognition

(2) Increase/Decrease the speed setting

(3) Switch on/pause the speed limiter at the previously saved speed setting

(4) Speed limiter ON/OFF

SWITCHING ON/PAUSING

□ press (4) fig. 178 to select the speed limiter mode; the function is paused (the speed shown on the instrument panel display is grey).

□ if the limit speed setting is suitable (most recent speed setting programmed in the system), press (3) or (1) OK to switch the speed limiter on (the speed is green)

□ pressing (3) again temporarily pauses the function

ADJUSTING THE SPEED SETTING

To change the speed setting:

□ for steps of +/- 1 km/h (1 mph), make successive short presses upwards/downwards on (2) to increase/decrease

□ for steps of +/- 5 km/h (5 mph), press and hold upwards/downwards on (2) to increase/ decrease


When the function is activated, it is possible to modify the Speed Limit setting based on the speed suggested by the Traffic Sign Recognition function, as shown on the instrument panel:

□ When passing the sign:

- press (1) OK to save the suggested speed. This value is then immediately shown as the new speed setting on the instrument panel

□ After passing the sign:

- Press (1) OK. The message "OK?" (1) fig. 179 is displayed to confirm the request to save
- Press (1) OK again to save the suggested speed. The new speed setting value is displayed on the instrument panel

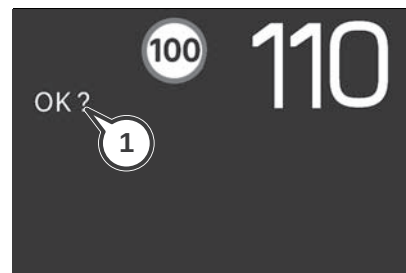

179

F6S0179



DISPLAY VISUALIZATION



180

F6S0252

Depending on the Speed limiter status, different notifications are shown in the instrument panel display, fig. 180:

- (1) Speed selection
- (2) Speed limiter activated
- (3) Speed limited paused

TEMPORARILY EXCEEDING THE SPEED SETTING

☐ fully depress the accelerator pedal.
The speed limiter is temporarily

deactivated and the displayed speed setting flashes

☐ release the accelerator pedal to return to below the speed setting

When the vehicle speed returns to the speed setting level, the speed limiter operates again: the speed setting display becomes fixed again.

OFF

Press (4): the speed limiter information display disappears.

MALFUNCTION

In the event of a malfunction, dashes are displayed flashing and then fixed (orange) instead of the speed setting. Have it checked by a Fiat Dealership.



WARNING

178) While driving with the device active, never move the gear lever to neutral or the PRND command to N.

179) In case of a malfunction or failure of the device, contact a Fiat Dealership.

180) On a steep descent or in the event of sharp acceleration, the speed limiter will not be able to prevent the vehicle from exceeding the speed setting. If necessary, apply the brakes to control your vehicle's speed.

CRUISE CONTROL

(where provided)



181) 182)

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in this section.

This system automatically maintains the vehicle's speed at the value programmed by the driver (speed setting), without the use of the accelerator pedal.


Cruise control is switched on manually. It requires a minimum vehicle speed of 40 km/h (25 mph).

With an automatic gearbox, mode D or second gear or higher in mode M must be engaged.

NOTE Cruise control remains active after changing gear on engines fitted with Stop-Start.

NOTE Switching off the ignition cancels any speed setting.

STEERING-MOUNTED CONTROLS

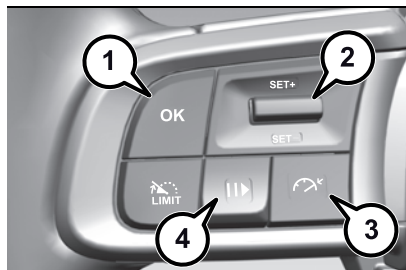

181

JJ000759

(1) Activation of cruise control in progress. Use the speed suggested by the Traffic Sign Recognition

(2) Increase/Decrease the speed setting (if cruise control activated). Activation of cruise control in progress (if cruise control deactivated)

(3) Cruise control ON/OFF

(4) Switch on/pause cruise control at the previously saved speed setting

SWITCHING ON/PAUSING

□ Press button (3) fig. 181 to select the cruise control mode; the function is paused (grey)

□ press (2) upwards/downwards, or press (1) OK to activate the cruise control and save a speed setting as soon as the vehicle speed reaches the desired level (green)

□ pressing button (4) temporarily pauses the function

□ pressing (4) or (1) OK again will reactivate cruise control (green).

Cruise control operation is also temporarily interrupted (pause):

□ by pressing the brake pedal

□ automatically, if the electronic stability control (ESC) system is triggered

□ by shifting to neutral or engaging reverse gear

□ by using the electric parking brake

NOTE You can temporarily exceed the speed setting by pressing the accelerator pedal (the programmed speed flashes). To return to the speed setting, release the accelerator pedal (when the set speed is reached again, the displayed speed stops flashing).

MODIFYING THE SPEED SETTING

The cruise control must be active.

To change the speed setting using the vehicle's current speed:

□ for steps of +/- 1 km/h (1 mph), make successive short presses upwards/ downwards on (2) to increase/decrease.

□ for steps of +/- 5 km/h (5 mph), press and hold upwards/ downwards on (2) to increase/decrease.

WARNING Prolonged pressing and holding upwards/downwards on 2 causes a very rapid change in vehicle speed.

WARNING As a precaution, we recommend setting a cruise speed fairly close to the current speed of your vehicle, to avoid any sudden acceleration or deceleration of the vehicle.

When the function is activated, it is possible to change the speed setting using the speed suggested by the Traffic Sign Recognition function (where provided) displayed on the instrument panel:


□ When passing the sign:

- press (1) OK to save the suggested speed. This value is then immediately shown as the new speed setting on the instrument panel

□ After passing the sign:

- Press (1) OK. The message "OK?" (1) fig. 182 is displayed to confirm the request to save
- Press (1) OK again to save the suggested speed. The new speed setting value is displayed on the instrument panel



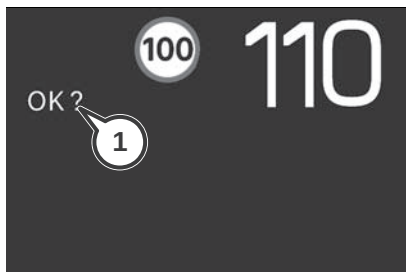


182

F6S0179

OFF

Press (3): the cruise control information display disappears.

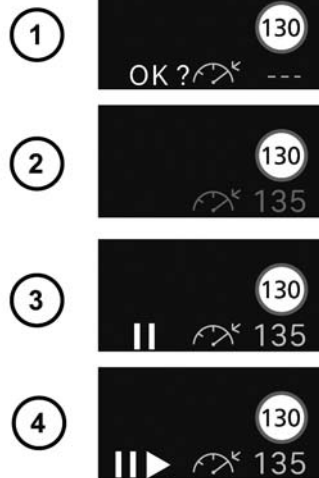DISPLAY VISUALIZATION

183

F6S0253

Depending on the Cruise control status, different notifications are shown in the instrument panel display, fig. 183:

- (1) Speed selection
- (2) Cruise control activated
- (3) Cruise control paused
- (4) Cruise control ready to be resumed

MALFUNCTION

In the event of a malfunction, dashes are displayed flashing and then fixed (orange) instead of the speed setting. Have it checked by a Fiat Dealership.

**WARNING**

181) The cruise control function does not guarantee compliance with the maximum authorised speed and the safety distance between vehicles, the driver remains responsible for their driving. In the interest of public safety, only use cruise control if the traffic conditions enable vehicles to drive at a steady speed and maintain an adequate safety distance. Remain vigilant while cruise control is activated. If you press and hold one of the speed setting modification buttons, your vehicle may change speed very abruptly. When descending a steep hill, the cruise control system cannot prevent the vehicle from exceeding the set speed. Brake if necessary to control the vehicle speed. On steep climbs or when towing, the set speed may not be reached or maintained.

182) Never use the system in the following situations: in an urban area with the risk of pedestrians crossing the road; in heavy traffic; on winding or steep roads; on slippery or flooded roads; in poor weather conditions; in the event of restricted visibility for the driver; driving on a speed circuit; driving on a rolling road; when using a "space-saver" type spare wheel; when using snow chains, non-slip covers or studded tyres.

ADAPTIVE CRUISE CONTROL

(where provided)

183) 184) 185) 186) 187) 188) 189) 190) 191) 192)

60) 61) 62) 63) 64) 65) 66) 67)

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in this section and "System limits" in this chapter.

The Adaptive Cruise Control is an enhancement of the cruise control with the additional feature of maintaining a certain following distance to the vehicle ahead.

NOTE Primarily designed for driving on main roads and motorways, this system only works with moving vehicles driving in the same direction as your vehicle.

It uses radar and camera sensors to detect the vehicles ahead fig. 184. If no vehicle is detected in the driving path, the Adaptive Cruise Control will behave like a conventional cruise control.



184

F6S0061


The Adaptive Cruise Control automatically decelerates the vehicle when approaching a slower moving vehicle. It then adjusts the vehicle speed to follow the vehicle ahead at the selected following distance. The vehicle speed increases or decreases to follow the vehicle ahead, but will not exceed the set speed. It may apply limited braking with activated brake lights. If the vehicle ahead accelerates or changes lane, the Adaptive Cruise Control progressively accelerates the vehicle to return to the stored set speed. If the driver operates the turn lights to overtake a slower vehicle, the Adaptive Cruise Control allows the vehicle to temporarily approach the vehicle ahead to help passing it. However, the set speed will never be exceeded.

The system can brake the vehicle until a full stop. Depending on variant, the

system can automatically accelerate the vehicle after a full stop.

193)

STEERING-MOUNTED CONTROLS

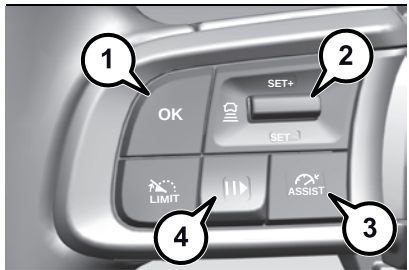

185

JJ000610

- (1) Activation of cruise control in progress. Use the speed suggested by the Road signs recognition
- (2) Increase/Decrease the speed setting (if cruise control activated). Activation of cruise control in progress (if cruise control deactivated). Display and configuration of the inter-vehicle distance setting
- (3) Selection of cruise control alone or Highway Driver Assist (depending on version)/Deselection
- (4) Switch on/pause cruise control at the previously saved speed setting. Confirmation of vehicle restart after automatic stop



USE**Selecting the system**

- ☐ With the engine running, press successively on (3) fig. 185 until cruise control mode is displayed on the instrument panel
- ☐ after a few seconds, cruise control mode is selected. The Driving aids mini-view is displayed (grey) and cruise control is ready to be activated


Switching on cruise control

To activate Adaptive Cruise Control the vehicle speed must be between 30-180 km/h: for vehicles with electrified dual clutch automatic transmission, the Adaptive Cruise Control stays active between 0-180 km/h.

System activation is also subject to the following conditions:

- ☐ driver's door closed
- ☐ driver's seat belt fastened
- ☐ mode D selected on the automatic gearbox
- ☐ parking brake released
- ☐ if the vehicle is stationary, brake pedal depressed

The message "OK?" (1) fig. 186 is displayed if all the activation conditions are met.

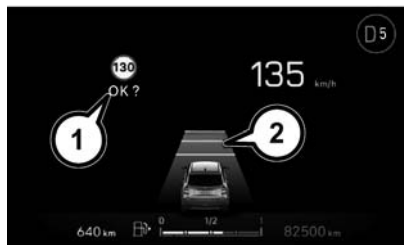

186

F6S0254

- ☐ press on (1): the current speed becomes the speed setting (minimum 30 km/h or 0 km/h for vehicles with electrified dual clutch automatic transmission) and Adaptive Cruise Control is immediately activated (green display)

Modifying the speed setting

To change the speed setting using the vehicle's current speed:

- ☐ for steps of +/- 1 mph (1 km/h), make successive short presses upwards/downwards on (2) to increase/decrease
- ☐ for steps of +/- 5 mph (5 km/h), press and hold upwards/downwards on (2) to increase/ decrease

WARNING Prolonged pressing and holding upwards/downwards on 3 causes a rapid change in vehicle speed.

When the function is activated, it is possible to change the speed setting using the speed suggested by the Traffic Sign Recognition function displayed on the instrument panel:

- ☐ When passing the sign:
 - Press OK to save the suggested speed. This value is then immediately shown as the new speed setting on the instrument panel.
- ☐ After passing the sign:
 - press OK. The message "OK?" fig. 182 is displayed to confirm the request to save
 - press OK again to save the suggested speed. The new speed setting value is displayed on the instrument panel

Pausing/resumption of cruise control

Press (4) or depress the brake pedal. The symbol  is displayed if all the activation conditions are met.

Cruise control may also have been paused:

- ☐ automatically, if the Dynamic Stability Control (DSC) system is triggered
- ☐ by shifting to neutral or engaging reverse gear
- ☐ by using the electric parking brake

- ❑ by unfastening the seat belt
 - ❑ by opening the driver's door
- Press (4) or OK to reactivate cruise control.

Following braking that has brought the vehicle to a complete stop, if the traffic conditions do not allow the vehicle to begin moving again within 3 seconds of stopping, press (4) or the accelerator pedal to move off.

NOTE Cruise control remains active following a gear change.

WARNING When cruise control is paused and the driver tries to reactivate it, a specific message is temporarily displayed if reactivation is impossible (required conditions not met).

Changing the programmed speed setting with the Traffic Sign Recognition function

Press OK to accept the speed suggested by the function on the instrument panel, then press again to confirm.

WARNING If the selected speed is far from the current vehicle speed, a strong acceleration or deceleration is felt.

Display visualization



187

F6S0255

Depending on the Adaptive Cruise Control status, different notifications are shown in the instrument panel display, fig. 187:

- (1) Speed selection
- (2) Cruise control activated
- (3) Cruise control paused
- (4) Cruise control ready to be resumed

Changing the inter-vehicle distance

Press (2) to display distance setting thresholds ("Distant", "Normal" or "Close"), then make successive short

presses upwards/downwards to select a threshold.

The distance set is shown through the bars (2) fig. 187.

After a few seconds, the option is accepted and will be memorised when the ignition is switched off.

The driver must keep a sufficient safety distance from the vehicle in front.

Temporarily exceeding the speed setting

Depress the accelerator pedal. The system is suspended as long as the acceleration is maintained. The speed setting flashes as long as the current speed of the vehicle is higher than the speed setting.

Deselecting the system

Press successively on (3) until OFF mode is displayed on the instrument panel. After a few seconds, cruise control mode is deselected. The Driving aids mini-view disappears.



Cruise control selected, but

cannot be activated. All the operating conditions have not been met.



Cruise control selected, awaiting confirmation for activation. All the operating conditions are met.



90
95

Cruise control paused, but cannot be activated. All the operating conditions have not been met.

90
95

Cruise control paused, awaiting confirmation for reactivation. All the operating conditions are met.

90
70

Adaptive Cruise Control active, vehicle upfront is detected.

90
95

Cruise control suspended, following brief acceleration by the driver.



(yellow) (with acoustic message)
Brake or accelerate, depending on the context.



(red) (with acoustic message)
Take back control of the vehicle immediately: the system cannot manage the current driving situation.



(with acoustic message) The system refuses to activate cruise control, as the necessary conditions are not fulfilled.

ADAPTIVE CRUISE CONTROL WITH STOP&GO FUNCTION

For vehicles with automatic transmission/Electric Drive Unit, Adaptive Cruise Control allows to maintain the selected distance behind a braking vehicle until a complete stop is reached.

If the system has stopped your vehicle behind another vehicle, next to the set speed is shown the symbol (A). This symbol notifies, that the vehicle is hold automatically in stop position.

90
(A) 95

While the vehicle is hold in stop position, the following recommendations should be followed:

- ☐ do not leave the vehicle
- ☐ do not open the load compartment
- ☐ do not engage the reverse gear
- ☐ do not drop off or pick up passengers

Within three seconds after the vehicle has been stopped by the system, if the target vehicle moves, the vehicle slowly moves again.

After three seconds, accelerate or press button (4) to drive away. Pay attention to the surroundings of the vehicle when driving away.

If the vehicle stays stopped for more than 5 minutes or if the driver's door is opened or the driver's seat belt is unfastened, then the electric parking brake is applied automatically to hold the vehicle. The symbol (P) will illuminate. To release the electric parking brake, if the manual gearbox has the gear engaged or the electrified dual clutch transmission/Electric Drive Unit are in position D, press the accelerator pedal.



DRIVER'S ATTENTION

- ☐ Use the Adaptive Cruise Control carefully on bends or mountain roads, as it can lose the vehicle ahead and needs time to detect it again
- ☐ do not use the system on slippery roads as it can create rapid changes in tyre traction (wheel spinning), so that you could lose control of the vehicle
- ☐ do not use the Adaptive Cruise Control during rain, snow or heavy dirt, as the radar sensor can be covered by a water film, dust, ice or snow. This reduce or suppresses completely the visibility. In case of sensor blockage, clean the sensor cover
- ☐ do not use the system when the spare wheel is in use

SYSTEM LIMITS



195)

❑ After a sudden lane change, the system needs a certain time to detect the next preceding vehicle. So if a new vehicle is detected, the system may accelerate instead of braking.

❑ The Adaptive Cruise Control does ignore the oncoming traffic.

❑ The Adaptive Cruise Control does not consider pedestrians and animals for braking and driving off.


❑ The Adaptive Cruise Control considers stopped vehicles only at low speed.

❑ Do not use the Adaptive Cruise Control when towing a trailer.

❑ Do not use the Adaptive Cruise Control on roads with an incline of more than 10%.

As the radar's field of detection is quite narrow, it is possible that the system may not detect:


❑ vehicles of reduced width, e.g. motorcycles, scooters fig. 188

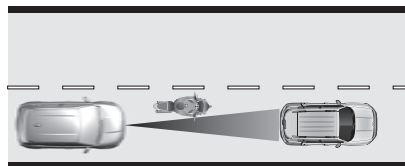

188

F6S0015


❑ vehicles not running in the middle of the lane fig. 189

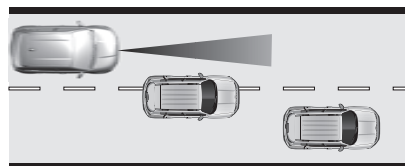

189

F6S0016


❑ vehicles entering a corner
❑ vehicles suddenly pulling out
Deactivate the system in the following situations:

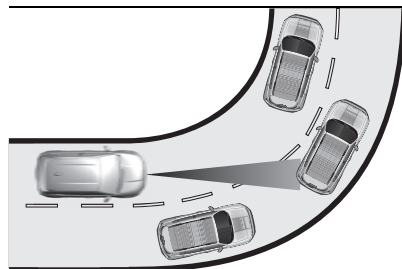

190

F6S0017

❑ when driving in a tight bend fig. 190
❑ when approaching a roundabout
❑ when following a vehicle not detected by system, e.g., a motorcycle
❑ when the vehicle ahead sharply decelerates

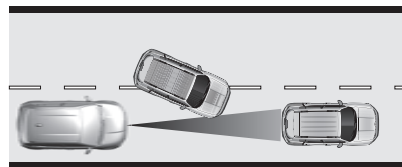

191

F6S0018

❑ when a vehicle cuts in sharply between your vehicle and the vehicle ahead fig. 191



Hill considerations



192

F6S0019



196)

System performance on hills depends on vehicle speed, vehicle load, traffic conditions and the road gradient. It may not detect a vehicle in your path while driving on hills. On steep hills, you may have to use the accelerator pedal to maintain your vehicle speed.

When going downhill you may have to brake to maintain or reduce your speed.

Note that applying the brake deactivates the system.

RADAR UNIT



193

F6S0082

The radar unit is located in the middle of the front bumper (fig. 193).



197) 198)

FAULT

In the event of an Adaptive Cruise Control fault, a warning light is illuminated in the instrument panel display and a warning message is displayed in the instrument panel display accompanied by an audible signal.

The speed limit recognition may not operate correctly if traffic signs do not comply with the Vienna Convention on Road Signs and Signals. Have the system checked by a Fiat Dealership. As a safety measure, do not use the system if the brake lights are faulty. Do not use the system if the front bumper is damaged.



WARNING

183) Pay the utmost attention while driving at all times and be always ready to press the brakes if needed.

184) The system is an aid for the driver, who must always pay full attention while driving. The responsibility always rests with the driver, who must take into account the traffic conditions in order to drive in complete safety. The driver must always maintain a safe distance from the vehicle in front.

185) The device is not activated in presence of pedestrians, oncoming vehicles in the opposite direction of travel or moving in the crosswise direction and stationary objects (e.g. a vehicle standing in a queue or a broken down vehicle).

186) The device cannot take account of road, traffic and weather conditions and conditions of poor visibility (e.g. fog).

187) The device does not always fully recognise complicated driving conditions which could cause incorrect or non-existing determination of the safe distance to be held.

188) The device cannot apply the maximum braking force: the car will not be stopped completely.

189) The radar is provided with defrosting system. For this reason, it can reach high temperatures in some conditions. If you need to operate in the zone surrounding the sensor, wait for at least 30 seconds from when the engine is switched off.

190) If any of the following malfunctions occurs, do not use the system: following an impact on the windscreen close to the

camera or on the front bumper; in case of a brake lamp failure.

191) If the vehicle has undergone any of the following modifications, do not use the system: carrying long objects on roof bars; towing; front end of the vehicle modified (for example by adding long-range headlamps or painting the front bumper); obstructed radar.

192) If the driver activates the direction indicator to overtake a slower vehicle, cruise control may temporarily reduce the distance to the target vehicle to facilitate overtaking, without exceeding the speed setting.

193) The complete driver attention is always required while driving with adaptive cruise control. The driver stays fully in control of the vehicle because the brake pedal, the accelerator pedal and the button **||▶** have priority over any adaptive cruise control operation.

194) When the system is deactivated or cancelled, the vehicle will no longer be held at a stop and can start moving. Be always prepared to manually apply the brake to hold the vehicle stationary. Do not leave the vehicle while it is being held at a stop by adaptive cruise control. Always move the PRND command to park position P and switch off the ignition before leaving the vehicle.

195) The system's automatic brake force does not permit hard braking and the braking level may not be sufficient to avoid a collision.

196) Do not use the adaptive cruise control on steep hill roads.

197) The radar unit was aligned carefully during manufacture. Therefore, in the

event of a frontend impact, do not use the system. The front bumper may appear to be intact, however the sensor behind may be affected and react incorrectly. After an accident, consult a Fiat Dealership to verify and adjust the radar unit position.

198) The usage of a license plate support on the front bumper may affect the proper radar unit functionality. When using a license plate support, follow the markings and indications on the front bumper.



IMPORTANT

60) The system may have limited operation or not work at all in weather conditions such as: heavy rain, hail, thick fog, heavy snow.

61) The section of the bumper area in front the sensor or the radar sensor itself must not be covered with stickers, auxiliary headlights or any other object.

62) Operation can be adversely affected by any structural change made to the vehicle, such as a modification to the front geometry, tyre change, or a heavier than standard load of the vehicle.

63) Incorrect repairs made on the front part of the car (e.g. bumper, chassis) may alter the position of the radar sensor, and adversely affect its operation. Go to a Fiat Dealership for any operation of this type.

64) Do not tamper with or carry out any intervention on the radar sensor or on the camera on the windscreen glass. In the event of a sensor failure, contact a Fiat Dealership.

65) Do not wash with high-pressure jets in the bumper lower area: in particular

do not operate on the system's electrical connector. Do not use solvents or abrasive paste.


66) Be careful in case of repairs and painting in the zone around the sensor. In the event of a frontal impact the sensor may automatically deactivate and display a warning to indicate that the sensor needs to be repaired. Even without a malfunction warning, deactivate the system operation if you think that the position of the radar sensor has changed (e.g. due to low-speed frontal impact as during parking manoeuvres). In these cases, go to a Fiat Dealership to have the radar sensor realigned or replaced.

67) The brake lamps come on if the vehicle is slowed down by the system. The system is not operational in the event of a brake lamp failure.



LANE DEPARTURE WARNING

The Lane Departure Warning system supports the driver to avoid unintended leaving of the lane. The front camera fig. 194 observes road edges, as well as the lane markings between which the vehicle is driving. If the vehicle crosses a road edge or a lane marking, the system warns the driver.

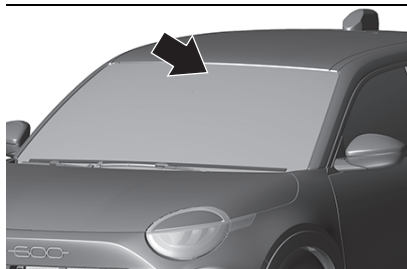

194

F6S0068

Unintended lane departure is not assumed by the system when the turn lights are operated and during few seconds after turn lights have been switched off.

The system will inform the driver with a message and a chime if there is an ongoing correction for more than 10 seconds. If the driver is still unable to keep the vehicle in the lane, the correction interrupts after a short time.

No warning will be issued with a dynamic driving, i.e. pressure on the brake or accelerator pedal or heavy steering.

When the system recognises an unintended lane departure, the control indicator  rapidly flashes yellow.



199)

For a correct operation of the system, the following preconditions have to be fulfilled:

- ☐ vehicle speed must be between approx. 65 km/h and 180 km/h
- ☐ the turn lights are not activated
- ☐ no dynamic driving, i.e. pressure on the brake or accelerator pedal
- ☐ lane boundaries can be clearly detected by the system
- ☐ the vehicle is not driven in a tight corner
- ☐ no system fault is present which prevents corrections

ACTIVATION/ DEACTIVATION

This system can be activated or deactivated in the vehicle personalisation through the **Uconnect™ 10,25"/10,25" NAV.**

Depending on version, the system is automatically reactivated at the next vehicle start.

FAULT

In the event of a fault,  and  appear in the instrument panel, accompanied by a display message and a warning chime. Seek the assistance of a Fiat Dealership.

SYSTEM LIMITATIONS

The system performance may be affected by:

- ☐ covered camera by snow, ice, slush, mud, dirt, or affected by windscreen damage or foreign items, e.g. stickers
- ☐ close vehicles ahead
- ☐ banked roads
- ☐ winding or hilly roads
- ☐ poor lighting conditions
- ☐ sudden lighting changes
- ☐ shining sun directly into the camera lens
- ☐ adverse environmental conditions, e.g. heavy rain or snow
- ☐ vehicle modifications, e.g. tyres
- ☐ roads with poor lane markings
- ☐ construction areas



WARNING

199) *This system is a driving aid that cannot, in any circumstances, replace the need for vigilance on the part of the driver.*

LANE KEEPING ASSIST

(where provided)



200)

68) 69) 70) 71) 72) 73)

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in this section.

Lane Keeping Assist supports the driver to avoid unintended leaving of the lane. The front camera observes road edges, as well as the lane markings between which the vehicle is driving. If the vehicle approaches a road edge or a lane marking, the steering wheel is gently turned to position so that the vehicle turns back into the lane. The driver will then notice a turning movement of the steering wheel. Turn steering wheel in same direction, if the system does not steer sufficiently. Turn steering wheel gently into opposite direction, if lane change is intended.

When the system steers to correct the trajectory of the vehicle,  flashes yellow in the instrument panel display. Unintended lane departure is not assumed by the system when the turn lights are operated and during few

seconds after turn lights have been switched off.

If the system detects that the steering wheel is not held permanently, it interrupts the correction. A warning message in the instrument panel display accompanied by a warning chime alerts when immediate driver's action is required.

The system will inform the driver with a message and a chime if there is an ongoing correction for more than 10 seconds. If the driver is still unable to keep the vehicle in the lane, the correction interrupts after a short time.

WARNING The system may be switched off if it detects lanes which are too narrow, too wide or too curved.

Following preconditions have to be fulfilled:

- ☐ vehicle speed must be between approximately 65 km/h and 180 km/h
- ☐ the driver must hold the steering wheel
- ☐ the turn lights are not activated
- ☐ the Dynamic Stability Control is activated and not in operation
- ☐ the vehicle is not connected to a trailer or a bicycle carrier
- ☐ normal driving behaviour (system detects dynamic driving style, i.e.

pressure on the brake or accelerator pedal)


- ☐ roads with good lane markings
- ☐ no spare wheel is used
- ☐ the vehicle is not driven in a tight corner

ACTIVATION/ DEACTIVATION

This system can be activated or deactivated in the vehicle personalisation through the **Uconnect™ 10,25"/10,25" NAV.**

NOTE Depending on version, the system is automatically reactivated at the next vehicle start.

DISPLAY VISUALIZATION

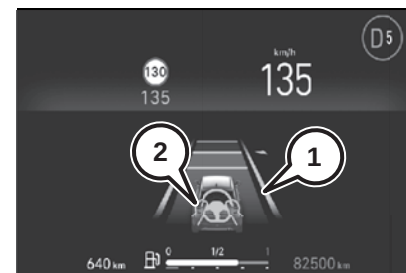

195

F6S0256

Depending on the system status, a different visualization is shown on the instrument panel display. The road limit lines (1) fig. 195 and the steering wheel (2) change colours:



- grey: system paused
- green: system active
- orange: alert, too close to a road limit line

FAULT

In the event of a fault,  and  appear in the instrument panel, accompanied by a display message and a warning chime. Seek the assistance of a Fiat Dealership.

SYSTEM LIMITATIONS

The system performance may be affected by:

- a dirty or foggy windscreen or if the windscreen is affected by foreign objects, e.g. stickers
- close vehicles ahead
- banked roads
- winding or hilly roads
- road edges
- sudden lighting changes
- adverse environmental conditions, e.g. heavy rain or snow
- vehicle modifications, e.g. tyres
- construction areas

Switch off the system if the system is disturbed by tar marks, shadows, road cracks, temporary or construction lane markings, or other road imperfections.



WARNING

200) Always keep your attention on the road and maintain proper vehicle position within the lane, otherwise vehicle damage, injury or death could occur. Lane Keeping Assist does not continuously steer the vehicle. The system may not keep the vehicle in the lane or give an alert, even if a lane marking is detected. The steering of the Lane Keeping Assist may not be sufficient to avoid a lane departure. The system may not detect handsoff driving due to external influences like road condition and surface and weather. The driver has full responsibility to control the vehicle and is always required to keep the hands on the steering wheel while driving. Using the system on slippery roads could cause loss of control of the vehicle and a crash. Switch the system off.



IMPORTANT

68) The camera may have limited or absent operation due to weather conditions such as: heavy rain, hail, thick fog, heavy snow, formation of ice layers on the windscreen glass.

69) Camera operation may also be compromised by the presence of dust, condensation, dirt or ice on the windscreen glass, by traffic conditions (e.g. cars that are driving not aligned with yours, car driving in a transverse or opposite way on the same lane, bend with a small radius of curvature), by road surface conditions and by driving

conditions (e.g. off-road driving). Make sure the windscreen is always clean. Use specific detergents and clean cloths to avoid scratching the windscreen. The camera operation may also be limited or absent in some driving, traffic and road surface conditions.

70) Projecting loads on the roof of the car may interfere with the correct operation of the camera. Before starting make sure the load is correctly positioned, in order not to cover the camera operating range.

71) If the windscreen glass must be replaced due to scratches, chipping or breakage, contact exclusively a Fiat Dealership. Do not replace the windscreen on your own, risk of malfunction! It is advisable to replace the windscreen if it is damaged in the area of the camera.

72) Do not tamper with nor operate on the camera. Do not close the openings in the aesthetic cover located under the interior rear view mirror. In the event of a failure of the camera, contact a Fiat Dealership.

73) Do not cover the operating range of the camera with stickers or other objects. Also pay attention to other objects on the bonnet (e.g. a layer of snow) and make sure they do not interfere with the camera.

ADVANCED LANE KEEP ASSIST


(where provided)



74) 75) 76) 77) 78) 79)

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in this section and "System limitations" in this chapter.


Advanced lane keep assist is an enhancement of the lane keep assist system.

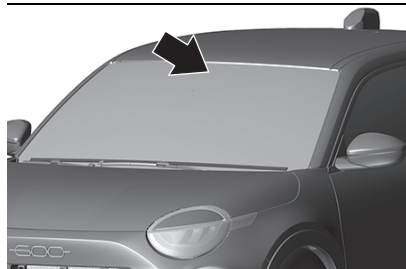

196

F6S0068

The activated system observes the lane markings by using the camera located at the top of the windscreen, fig. 196. It steers the vehicle inside the detected lane. The driver will notice a turning movement of the steering wheel.

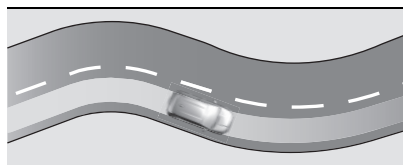

197

F6S0063

Thus, the current position of the vehicle within the lane is kept. This position is not necessarily the centre of the lane. In the case that the vehicle is driving at the outer edge of the lane, the system corrects the trajectory smoothly towards the centre of the currently driven lane when a determined speed has been exceeded. Again, the driver will notice a turning movement of the steering wheel.

When the vehicle is steered by the system,  illuminates green in the instrument panel display. However, the control of the vehicle can be taken over at any time by the driver. Therefore, the driver needs to apply some additional force when turning the steering wheel.

If the system detects that the driver is not holding the wheel firmly enough, it triggers a series of alert messages. If interruption takes too, the system will be deactivated.  extinguishes in the instrument panel display. The system has to be reactivated again by the

driver. The alert (1) fig. 198 will appear when the vehicle moves out of the line (i.e. in case of tight corners). It is necessary by the driver to move the steering wheel in the right trajectory. Advanced Lane Keep Assist operates only in combination with Adaptive Cruise Control.

Required preconditions


- ☐ Adaptive cruise control with Stop&Go must be activated.
- ☐ The driver must hold the steering wheel.
- ☐ The turn lights are not activated.
- ☐ The Dynamic Stability Control is activated and not in operation.
- ☐ The vehicle is not connected to a trailer or a bicycle carrier.
- ☐ Normal driving behaviour is required (system detects dynamic driving style, i.e. pressure on the brake or accelerator pedal).
- ☐ Roads with good lane markings are required.
- ☐ No spare wheel is used.
- ☐ The vehicle is not driven in a tight corner.

Activation/deactivation

This system can be activated or deactivated in the vehicle personalisation through the **Uconnect™ 10,25"/10,25" NAV.**



Display visualization

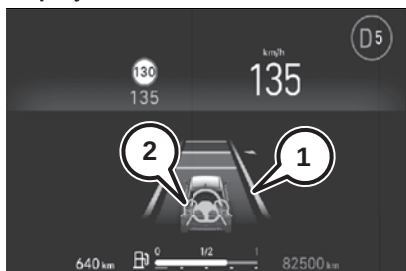

198

F6S0256

Depending on the system status, a different visualization is shown on the instrument panel display. The road limit lines (1) fig. 198 and the steering wheel (2) change colours

- ☐ grey: system paused
- ☐ green: system active
- ☐ orange: alert, too close to a road limit line

Pausing / suspending the system



202j

Advanced lane keep assist may be paused or suspended in the following situations:

- ☐ The Dynamic Stability Control is in operation or it has been deactivated.
- ☐ At least one of the lane markings is not detected by the system for several seconds. The system will be reactivated once the operating conditions are regained.

- ☐ The turn lights are activated.
- ☐ Driving outside the lane limits.
- ☐ The steering wheel is held too tight or moved too dynamically.
- ☐ The brake pedal or the accelerator pedal are applied.
- ☐ The adaptive cruise control is paused.
- ☐ The road is too narrow or wide.
- ☐ The lateral acceleration in curves is too high

Pausing the system is accompanied by a specific audible signal.

If the system detects that the driver is not holding the wheel firmly enough, it triggers a series of gradual alerts and then deactivates itself if there is no response from the driver.

If the function is suspended due to the prolonged release of the force holding the steering wheel, the system must be reactivated by pressing the (1) fig. 199 button.



199

JJ000623

Fault

In the event of a fault, and appear in the instrument panel, accompanied by a display message and a warning chime. Seek the assistance of a Fiat Dealership.

System limitations

The system performance may be affected by:

- ☐ a dirty or foggy windscreen or if the windscreen is affected by foreign objects, e.g. stickers
- ☐ close vehicles ahead
- ☐ banked roads
- ☐ winding or hilly roads
- ☐ road edges
- ☐ sudden lighting changes
- ☐ adverse environmental conditions, e.g. heavy rain or snow
- ☐ vehicle modifications, e.g. tyres
- ☐ load condition of the vehicle, i.e., whether the vehicle heavily or lightly loaded

A warning message may appear when the vehicle is travelling in a long straight lane on a smooth road surface even if the driver is holding the steering wheel properly.

Deactivate the system if the system is disturbed by tar marks, shadows, road cracks, temporary or construction lane markings, or other road imperfections.



203j 204j



WARNING

201) The system assists the driver in managing the steering, acceleration and braking within the limits of the laws of physics and the capabilities of the vehicle. Some road infrastructure elements or vehicles present on the road may not be properly seen or may be poorly interpreted by the camera and radar, which may lead to an unexpected change in direction, a lack of steering correction and/or inappropriate management of the acceleration or braking.

202) The driver must act promptly if they believe that the traffic conditions or the state of the road surface require their intervention, by moving the steering wheel to temporarily suspend system operation. Any intervention on the brake pedal that causes the Adaptive cruise control to pause will also cause the system to pause.

203) Always keep your attention on the road and maintain proper vehicle position within the lane, otherwise vehicle damage, injury or death could occur. The system may not keep the vehicle in the lane or give an alert, even if a lane marking is detected. The steering of the advanced lane keep assist may not be sufficient to avoid a lane departure. The system may not detect handsoff driving due to external influences (road condition and surface, weather etc). The driver has full responsibility to control the vehicle and is always required to keep the hands on the steering wheel while driving. Using the system while towing a trailer or on slippery roads could cause loss of control of the vehicle and a crash. Switch the system off.



IMPORTANT

74) The camera may have limited or absent operation due to weather conditions such as: heavy rain, hail, thick fog, heavy snow, formation of ice layers on the windscreen glass.

75) Camera operation may also be compromised by the presence of dust, condensation, dirt or ice on the windscreen glass, by traffic conditions (e.g. cars that are driving not aligned with yours, car driving in a transverse or opposite way on the same lane, bend with a small radius of curvature), by road surface conditions and by driving conditions (e.g. off-road driving). Make sure the windscreen is always clean. Use specific detergents and clean cloths to avoid scratching the windscreen. The camera operation may also be limited or absent in some driving, traffic and road surface conditions.

76) Projecting loads on the roof of the car may interfere with the correct operation of the camera. Before starting make sure the load is correctly positioned, in order not to cover the camera operating range.

77) If the windscreen glass must be replaced due to scratches, chipping or breakage, contact exclusively a Fiat Dealership. Do not replace the windscreen on your own, risk of malfunction! It is advisable to replace the windscreen if it is damaged in the area of the camera.

78) Do not tamper with nor operate on the camera. Do not close the openings in the aesthetic cover located under the interior rear view mirror. In the event of a failure of the camera, contact a Fiat Dealership.

79) Do not cover the operating range of the camera with stickers or other objects. Also pay attention to other objects on the bonnet (e.g. a layer of snow) and make sure they do not interfere with the camera.

SPEED LIMIT RECOGNITION

(where provided)

 205) 206) 207)

 80) 81) 82) 83) 84) 85) 86) 87)

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in this section and "System limitations" in this chapter.

Depending on the vehicle features, the Speed Limit Recognition uses the camera at the top of the windscreen (Traffic Sign Recognition) or the camera




combined with the navigation system of **Uconnect™ 10,25"/10,25" NAV**.

TRAFFIC SIGN RECOGNITION

Using the camera at the top of the windscreen, this system detects and reads speed limit signs and end of speed limit signs.

If the function is activated and set as a widget in the **Uconnect™ 10,25"/10,25" NAV**, up to two speed limit signs including supplementary signs are displayed in the instrument panel display (1) fig. 200.

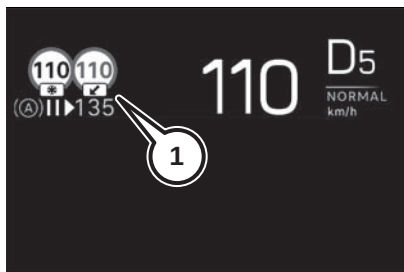


200

F6S0180

If several speed limits are recognised, the vehicle may analyse and display the valid speed limit.

When a traffic sign for a certain area, e.g. city or motorway, is recognised and the vehicle is fitted with a navigation system, the corresponding speed limit will also be displayed.

If the system is activated but does not detect a speed limit sign, the following sign is displayed:

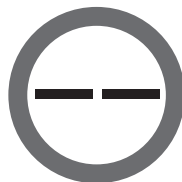

201

F6S0181

If a speed limit is detected and the vehicle exceeds it for the first time by more than 5 km/h, the speed is displayed and flashes about 10 seconds.

This system can be activated or deactivated in the vehicle personalisation through the **Uconnect™ 10,25"/10,25" NAV**.

NOTE Specific speed limits, such as those for heavy goods vehicles, are not displayed. The display of the speed limit on the instrument panel is updated when passing a speed limit sign intended for cars (light vehicles).


SPEED LIMIT RECOGNITION WITH NAVIGATION SYSTEM

(for versions/markets where provided)

Depending on version, two different systems are available.

Version 1

Using the camera at the top of the windscreen and the vehicle's integrated navigation system, this system provides speed limits and end of speed limits. If the function is activated and set as a widget in the **Uconnect™ 10,25"/10,25" NAV**, up to two speed limit signs including supplementary signs are displayed (1) fig. 202.

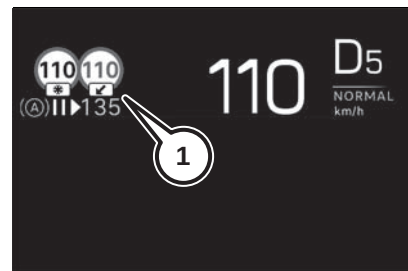


202

F6S0180

This system can be activated or deactivated in the vehicle personalisation through the **Uconnect™ 10,25"/10,25" NAV**.

If the system is activated but does not detect a speed limit sign, the following sign is displayed:

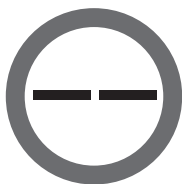

203

F6S0181

If a speed limit is detected and the vehicle exceeds it for the first time by more than 5 km/h, the speed is displayed and flashes about 10 seconds.

Updating navigation map data

To maintain the performance of the system, the navigation map should be kept updated via "Over-The-Air map updates". Further information are available in the paragraph "TomTom Services" in the "Multimedia" section.

Version 2

This system displays permanently speed limit information in the instrument panel display. If the function is activated and set as a widget in the **Uconnect™ 10,25"/10,25" NAV**, up to two speed limit signs including supplementary signs are displayed (1 fig. 202.

Providing the speed limit information involves the following systems:

- ❑ camera at the top of the windscreen
- ❑ vehicle's integrated navigation system
- ❑ telematics service


If travelling on a road with no speed restrictions, e.g., on German motorways, the following sign is displayed:



204

F6S0182

If the system is activated but does not detect a speed limit sign, the following sign is displayed:

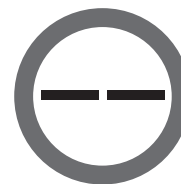

205

F6S0181

If a new speed limit is provided, a confirmation chime is given. The confirmation chime can be activated or deactivated in the vehicle personalisation through the **Uconnect™ 10,25"/10,25" NAV**.

If the vehicle exceeds the speed limit, the speed limit displayed in the instrument panel display flashes and an audible signal is given after some time. Time of occurrence varies. Both flashing and audible signal are terminated after a few seconds. Due to legal requirements, the audible signal can only be deactivated in the vehicle personalisation until the next time the ignition is switched on. If the audible signal is deactivated,  illuminates for a few seconds.

In case of a failure,  illuminates permanently. Seek the assistance of a Fiat Dealership.



Operation conditions

To provide country-specific speed limit information, the vehicle needs to identify the country it is currently in. If a corresponding country list is available in the instrument panel display, the respective country has to be selected manually. Otherwise, the country is automatically selected.

To get valid speed limit information, the vehicle's current position is sent via the telematics unit and is immediately deleted after processing. Tracking of the vehicle position is not possible at any time.

This is not impacted by the privacy settings of **Uconnect™ 10,25"/10,25" NAV**.

WARNING It is possible to report a permanent speed limit misinformation through the Manufacturer website.

Updating data

To maintain the performance of the system, the navigation map should be kept updated via "Over-The-Air map updates". Further information are available in the paragraph "TomTom Services" in the "Multimedia" section.

OTHER TRAFFIC SIGNS

The system recognises other traffic signs (shared traffic zones, supplementary traffic signs) and displays them in the instrument panel display.

Entry into a shared traffic zone

Example:



Suggested speed (calculated): 10 mph or 20 km/h (depending on the units on the instrument panel)

Speed limit when raining

Example:



If the wiper control stalk is in the "intermittent wipe" or "automatic wipe" position (in order to activate the rain sensor): 110 km/h (68 mph) (for example)

 
Speed limit when towing



If an approved towing device is fixed to the vehicle: 90 km/h (56 mph) (for example)

Speed limit applicable over a certain distance

Example:



70 km/h (43 mph) (for example)

Speed limit for vehicles with a gross vehicle weight or gross train weight less than 3.5 tonnes



90 km/h (56 mph) (for example)

Speed limit in case of snow

Example:



If the outside temperature is below 3°C: 30 km/h (19 mph) (for example) with a "snowflake" symbol

Speed limit at certain times of the day

Example:

16-18h

30 km/h (19 mph) (for example) with a "clock" symbol



This system can be activated or deactivated in the vehicle personalisation through the **Uconnect™ 10,25"/10,25" NAV**.

SYSTEM LIMITATIONS

The system does not take account of reduced speed limits, especially those imposed in the following cases:

- ☐ Atmospheric pollution
- ☐ Towing
- ☐ Driving with a space-saver type spare wheel or snow chains fitted
- ☐ Tyre repaired using the temporary puncture repair kit
- ☐ Young drivers

The system may not operate properly when:

- ☐ Driving on winding or hilly roads.
- ☐ During nighttime driving.
- ☐ Driving with snow chains.
- ☐ Driving with a trailer.
- ☐ The area of the windscreen, where the front camera is located, is not clean or affected by foreign items, e.g. stickers.
- ☐ The visibility is limited because of the weather, such as fog, rain, or snow.
- ☐ The sun is shining directly into the camera lens.
- ☐ Traffic signs are completely or partially covered or difficult to discern.
- ☐ Traffic signs are incorrectly mounted or damaged.

- ☐ Traffic signs do not comply with the Vienna Convention on Road Signs and Signals.
- ☐ The navigation map data is outdated.



WARNING

205) The system only detects preset traffic signs if the minimum visibility conditions and distance from the sign are met.

206) The system is an aid for driving and does not relieve the driver of responsibility for driving the car. Always respect the highway code of the country you are driving in.

207) When the system is active, the driver is responsible for controlling the car and monitoring the system, and must be ready to intervene as appropriate if necessary.

208) The actual traffic sign always takes priority over the traffic sign displayed in the instrument panel display.



IMPORTANT

80) The system is intended to help the driver within a defined speed range to discern certain traffic signs. Do not ignore traffic signs which are not displayed by the system. The system does not discern any other than the conventional traffic signs that might give or end a speed limit. Do not let this special feature tempt you into taking risks when driving. Always adapt speed to the road conditions. The driver assistance systems do not relieve the

driver from full responsibility for vehicle operation.

81) Functionality may be limited or the system may not work if the sensor is obstructed.

82) The system may have limited operation or not work at all in weather conditions, such as heavy rain, hail, thick fog and low temperatures. Strong light contrasts can influence the recognition capability of the sensor.

83) The area surrounding the sensor must not be covered with stickers or any other object.

84) Do not tamper or perform any operations in the area of the windscreen glass directly surrounding the sensor.

85) Clean the windscreen glass from foreign matters such as bird droppings, insects, snow or ice. Use specific detergents and clean cloths to avoid scratching the windscreen.

86) The units for the speed limit (mph or km/h) depend on the country you are driving in. This should be taken into account to ensure you observe the speed limit. For the system to work properly when changing countries, the speed unit of the instrument panel must match that of the country you are driving in.

87) Automatic sign reading is a driving aid system and does not always display the correct speed limits. The speed limit signs present on the road always take priority over those displayed by the system. The system is designed to detect signs that conform to the Vienna Convention on road signs.



HIGHWAY DRIVER ASSIST (LEVEL 2 AUTONOMOUS DRIVING)

(where provided)

This system automatically adjusts the speed and corrects the trajectory of the vehicle, using the Adaptive Cruise Control with Stop&Go in conjunction with the Advanced Lane Keep Assist. These two functions must be activated and in operation.

This system is especially suitable for driving on motorways and main roads. For more information on Adaptive Cruise Control and Advanced Lane Keep Assist, refer to the corresponding chapters in this section.



209)

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in this section.

SELECTING THE SYSTEM



207

JJ000623

- Press the button (1) fig. 207 successively until the Highway Driver Assist mode is displayed on the instrument panel
- after a few seconds, the Highway Driver Assist mode is selected. The Driving aids miniview is displayed on the instrument panel:



The colour of the symbols, representing the steering wheel and the side lines, depends on the operating state of the system:

-  (grey) One or more operating conditions is not met; the system is paused.
-  (green) All operating conditions are met; the system is active.
-  (orange) System malfunction.

DESELECTING THE SYSTEM

- press the button (1) successively again until the OFF mode is displayed on the instrument panel
- after a few seconds, the Highway Driver Assist mode is deselected



WARNING

209) The system assists the driver by acting on the steering, acceleration and braking within the physical limits and capacities of the vehicle. Certain road infrastructure elements or vehicles in the surroundings may not be properly seen or may be poorly interpreted by the camera and radar, resulting in an unexpected change in direction, a lack of steering correction and/or inappropriate management of acceleration or braking.


PANORAMIC CAMERA

(where provided)

The Panoramic Camera assists the driver when reversing by displaying a view of the area behind the vehicle. It allows views of the vehicle's surroundings to be displayed as a nearly 180° picture in the **Uconnect™ 10.25"/10.25" NAV**, like a bird's eye view.

 **210 211**

The system uses:

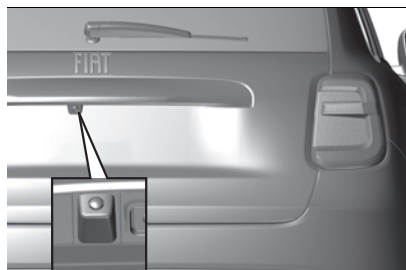

208

F6S0020

- ☐ rear view camera, mounted above the number plate fig. 208
- ☐ ultrasonic parking sensors in the rear bumper



209

F6S0260

The screen in the **Uconnect™ 10.25"/10.25" NAV** fig. 209 may vary according to the view selected by pressing the following icons:

☐ Standard view: only the area behind the vehicle (1) is displayed in the screen. The vertical lines represent the width of the vehicle with mirrors unfolded. The direction of the lines changes with the position of the steering wheel.

The first horizontal line represents a distance of about 30 cm beyond the edge of vehicle's rear bumper. The upper horizontal lines represent distances of about 1 m and 2 m.

☐  Auto mode: the screen is divided into two parts: on the right there is a view from above the vehicle (2) and on the left there is the view from the rear displayed (1). The parking sensors complete the information on the view from above the vehicle.

WARNING The view from above doesn't show the live situation of the surroundings. The images shown come from a recording made by the rearview camera when driving backwards. The vertical lines represent the width of the vehicle with mirrors unfolded. The direction of the lines changes with the position of the steering wheel. The first horizontal line represents a distance of about 30 cm beyond the edge of vehicle's rear bumper. The upper horizontal lines represent distances of about 1 m and 2 m. Trajectory lane of the vehicle is shown in accordance with the steering angle.

☐ Zoom view: the rear view camera records the vehicle's surroundings during the manoeuvre in order to reconstruct a view from above the rear or the front of the vehicle in its near surroundings (2). Thus, the vehicle can be manoeuvred around obstacles nearby.

☐  180° view: only the view from the rear is displayed fullscreen (180° view) The display is immediately updated with the type of view selected.

WARNING The area displayed by the Panoramic Camera is limited. The distance of the image that appears on the display differs from the actual distance.



ACTIVATION

Panoramic Camera is activated when reverse gear is engaged.

DEACTIVATION

The Panoramic Camera is deactivated when:

- towing an electrically connected trailer, bicycle carrier, etc.
- the forward speed of 10 km/h is exceeded
- by pressing the icon "X" in the left upper corner of the touch screen

SETTINGS

By pressing the icon , the following settings can be adjusted:

-  Acoustic messages volume (where provided)
-  Brightness (where provided)
-  Contrast (where provided)

SYSTEM LIMITATIONS



The Panoramic Camera may not operate properly when:

- surrounding is dark
- sun or beam of headlights is shining directly into camera lenses
- weather limits visibility, such as fog, rain, or snow
- camera lenses are blocked by snow, ice, slush, mud, dirt. Clean the lens, rinse with water, and wipe with a soft cloth

- vehicle is towing an electrically connected trailer, bicycle carrier, etc.
- vehicle had a rear end accident
- there are extreme temperature changes



WARNING

210) *The Panoramic Camera does not replace driver vision. Note that objects that are outside the camera's field of view and the parking assist sensors, e.g. below the bumper or underneath the vehicle, are not displayed. Do not reverse or park the vehicle using only the Panoramic Camera. Always check the surrounding of the vehicle before and during driving.*

211) *Parking and other potentially dangerous manoeuvres are, however, always the driver's responsibility. While carrying out these manoeuvres, always make sure that no people (especially children) or animals are in the area concerned. The camera is an aid for the driver, but the driver must never allow his/her attention to lapse during potentially dangerous manoeuvres, even those executed at low speeds. Always keep a slow speed, so as to promptly brake in the case of obstacles.*



IMPORTANT

88) *It is vital, for correct operation, that the camera is always kept clean and free from any mud, dirt, snow or ice. Be careful not to scratch or damage the camera while*

cleaning it. Avoid using dry, rough or hard cloths. The camera must be washed using clean water, with the addition of vehicle shampoo if necessary. In washing stations which use steam or high-pressure jets, clean the camera quickly, keeping the nozzle more than 10 cm away from the sensors. Also, do not apply stickers to the camera.

CLOSE OBSTACLE DETECTION

(where provided)

GENERAL INFORMATION



212) 213)



89) 90) 91) 92) 93) 94) 95) 96)

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in this section.

REAR CLOSE OBSTACLE DETECTION (VERSIONS WITH 4 SENSORS)

The system warns the driver with acoustic signals and display indication on **Uconnect™ 10.25"/10.25" NAV** screen against potentially hazardous obstacles behind the vehicle while reverse gear is engaged.



210

F6S0021

The system operates with ultrasonic parking sensors in the rear bumper.

Indication

As soon as an obstacle gets closer to the vehicle, P)Δ telltale flashes (if provided) and you will hear acoustic warning signals coming from the direction where the closest obstacle is. The interval between the sounds becomes shorter as the vehicle gets closer to that obstacle. The sound becomes continuous if the obstacle approaches the red area.

Via **Uconnect™ 10.25"/10.25" NAV** the sound volume can be regulated and it can be temporarily muted (where the function is provided) when an obstacle is detected. If the sound is muted, it's automatically unmuted during the next manoeuvre.

The sound volume can be regulated and muted (where the function is

provided) also via Panoramic camera settings (where provided). See "Panoramic camera" chapter in this section for further information.

NOTE For safety reasons the alerts cannot be muted during an incoming call.

The visual indications on **Uconnect™ 10.25"/10.25" NAV** screen can be temporarily closed by pressing the icon "X". A message indicates that the acoustic notifications will be suspended (where provided).



211


F6S0022

Additionally, the distance to rear obstacles is displayed by changing distance lines in the instrument panel display fig. 211. When the obstacle is very close, Δ for danger is displayed. **NOTE** When starting the vehicle, the graphic and audible aids are only available after the touch screen has started up.

NOTE If the boot is heavily loaded, the vehicle may tilt, affecting distance measurements.

Function enabling/disabling

(for versions/markets where provided) The system can be enabled/disabled through the **Uconnect™ 10.25"/10.25" NAV**, fig. 212. Refer to "Multimedia" section for further information.

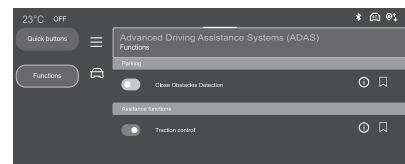

212

F6S0184

If the function is disabled, the indicator lamp P)Δ or P)Δ_{OFF} (for versions/markets where provided) lights up on the instrument panel. The system status is saved when the ignition is switched off.

Activation

Depending on the version, after engaging the reverse gear, an audible signal is given and a display indication will be shown. If no audible signal is given, the display indication is not



shown or a warning message appears, the system has a failure.

The system is activated in the following cases:

- ☐ the speed of the vehicle is below 10 km/h
- ☐ the reverse gear is engaged
- ☐ the vehicle is moving rearwards in neutral


Deactivation

The system is switched off when reverse gear is disengaged or the vehicle is moving forward at a speed of 10 km/h or above.

FRONT-REAR CLOSE OBSTACLE DETECTION (VERSIONS WITH 12 SENSORS)

The Front-rear Close Obstacle Detection measures the distance between the vehicle and obstacles in front and behind the vehicle. It informs and warns the driver by giving acoustic signals and display indication on **Uconnect™ 10.25"/10.25" NAV** screen.


Audible signals are given via front or rear loudspeaker depending on which detected obstacle is nearest to the vehicle.

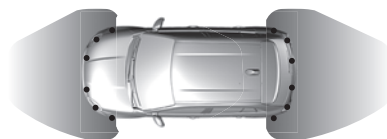

213

F6S0023

The system operates with ultrasonic parking sensors in the rear and front bumper fig. 213.

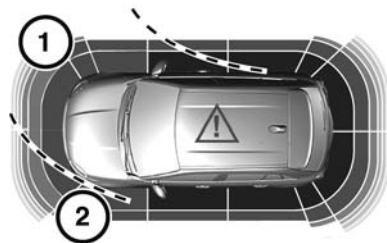

214

F6S0024

If the obstacle (1) fig. 214 is within the driving path and might lead to a collision, an acoustic signal is given.

As soon as an obstacle gets closer to the vehicle, **P** **Δ** telltale flashes (if provided) and you will hear acoustic warning signals coming from the direction where the closest obstacle

is. The interval between the sounds becomes shorter as the vehicle gets closer to that obstacle. The sound becomes continuous if the obstacle approaches the red area.

Via **Uconnect™ 10.25"/10.25" NAV** the sound volume can be regulated and it can be temporarily muted when an obstacle is detected. If the sound is muted, it's automatically unmuted during the next manoeuvre.

The sound volume can be regulated and muted (where the function is provided) also via Panoramic camera settings (where provided). See "Panoramic camera" chapter in this section for further information.

NOTE For safety reasons the alerts cannot be muted during an incoming call.

Obstacles (2) that are close to the vehicle, but not within the calculated driving path are indicated in the instrument cluster display, but no acoustic signal is given.

The distance to rear, front and lateral obstacles is displayed by changing distance lines in the instrument panel display.

The visual indications on **Uconnect™ 10.25"/10.25" NAV** screen can be temporarily closed by pressing the icon "X". A message indicates that the


acoustic notifications will be suspended (where provided).

If the vehicle stops for more than 3 seconds in a forward gear, if the PRND command is in P position, the vehicle speed exceeds 10 km/h or if no further obstacles are detected, no acoustic warning signals are given and no visual feedback is displayed in the instrument panel display.

NOTE When starting the vehicle, the graphic and audible aids are only available after the touch screen has started up.

NOTE If the boot is heavily loaded, the vehicle may tilt, affecting distance measurements.

Side protection (versions with 12 sensors)

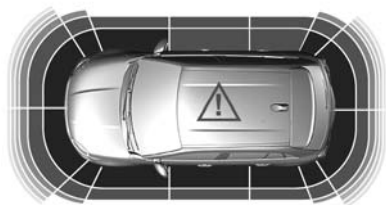

215

F6S0025

This function warns the driver by display indication on **Uconnect™ 10.25"/10.25" NAV** screen in the case

of obstacles alongside the vehicle fig. 215. If the obstacle is alongside the vehicle and within the driving path and might lead to a collision, **P** and **Δ** telltale flashes (where provided) and an acoustic signal is given, coming from the direction where the closest obstacle is. The interval between the sounds becomes shorter as the vehicle gets closer to that obstacle. The sound becomes continuous if the obstacle approaches the red area. Obstacles alongside the vehicle are only considered if they have been previously recognised by the parking sensors and memorised by the system. Via **Uconnect™ 10.25"/10.25" NAV** the sound volume can be regulated and it can be temporarily muted (where the function is provided) when an obstacle is detected. If the sound is muted, it's automatically unmuted during the next manoeuvre.

The sound volume can be regulated or muted (where the function is provided) also via Panoramic camera settings (where provided). See "Panoramic camera" chapter in this section for further information.

NOTE For safety reasons the alerts cannot be muted during an incoming call.

The visual indications on **Uconnect™ 10.25"/10.25" NAV** screen can be

temporarily closed by pressing the icon "X". A message indicates that the acoustic notifications will be suspended (where provided).



Objects memorised during the manoeuvre will only be considered during the current ignition cycle. NOTE When starting the vehicle, the graphic and audible aids are only available after the touch screen has started up.


NOTE If the boot is heavily loaded, the vehicle may tilt, affecting distance measurements.

Function enabling/disabling

(for versions/markets where provided)

The system can be enabled/disabled through the **Uconnect™**

10.25"/10.25" NAV, fig. 216. Refer to "Multimedia" section for further information.

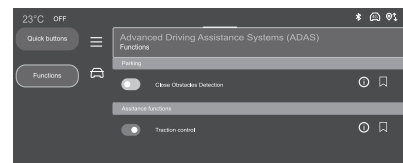

216

F6S0184



If the function is disabled, the indicator lamp $P \Delta$ or $P \Delta_{OFF}$ (for versions/markets where provided) lights up on the instrument panel. The system status is saved when the ignition is switched off.

Activation

Depending on the version, after engaging the reverse gear, an audible signal is given and a display indication will be shown. If no audible signal is given, the display indication is not shown or a warning message appears, the system has a failure.

The system is activated in the following cases:

- ☐ the speed of the vehicle is below 10 km/h
- ☐ the reverse gear is engaged
- ☐ the vehicle is moving rearwards in neutral.

Deactivation

The system is switched off when reverse gear is disengaged or the vehicle is moving forward at a speed of 10 km/h or above.

IN CASE OF TRAILER OR BICYCLE CARRIER

- ☐ the Rear Close Obstacle Detection (versions with 4 sensors) is disabled as long as the trailer is connected
- ☐ the Front-rear Close Obstacle Detection (versions with 12 sensors) is active on front and side areas only and

a trailer is shown on the screen in the rear area. fig. 217



217

F6S0026

SYSTEM LIMITATIONS

In the event of a malfunction when changing into reverse gear, $P \Delta$ and $P \Delta_{OFF}$ (for versions/markets where provided) illuminate in the instrument panel display. A message is displayed in the instrument panel display and a warning chime sounds. Have the system checked by a Fiat dealership.

If sensors are blocked, for example by ice or mud, the $P \Delta$ telltale illuminates and a message is displayed in the instrument panel display.

When the vehicle is stopped for few seconds and the obstacle is not coming closer to the vehicle, if the obstacle is in the white or orange area, the sound alert is suspended automatically. The sound alert is reactivated automatically as soon as

the vehicle moves or the obstacle comes closer to the vehicle.

WARNING Make sure that the front number plate is properly mounted, vertically and horizontally centred and the sensors are firmly in place. The performance of the parking assist will be reduced if the license plate is bent or a license plate support is used.



WARNING

212) Under certain circumstances, various reflective surfaces on objects or clothing as well as external noise sources may cause the system to fail to detect obstacles. Special attention must be paid to low obstacles which can damage the lower part of the bumper.

213) Parking and other potentially dangerous manoeuvres are, however, always under the driver's responsibility. When performing these operations, always make sure that there are no other people (especially children) or animals on the route you want to drive into. The parking sensors are an aid for the driver, but the driver must never allow their attention to lapse during potentially dangerous manoeuvres, even those executed at low speeds.

214) Only fixed obstacles are indicated correctly. Moving obstacles detected at the beginning of a manoeuvre may be indicated mistakenly. Moving obstacles that appear alongside the vehicle and were

not previously recognised by the parking sensors will not be indicated.



IMPORTANT

89) In the case of a severe failure of the vehicle with the need to stop the vehicle, the system is deactivated (for versions / markets where provided).

90) In the case of gearbox failure, the parking assist system is not active, when reverse gear is engaged (for versions / markets where provided).

91) In the case of loudspeaker failure, the audible signals may not be given (for versions / markets where provided).

92) Performance of the parking assist system may be limited or the functionality may not be available at all if  illuminates or if the image shown on the instrument panel display is frozen or if the screen is black (for versions / markets where provided).

93) Performance of the parking assist system can be reduced due to heavy loading. Special conditions apply if there are taller vehicles in the vicinity (e.g. off-road vehicles, mini vans, vans). Object identification and correct distance indication in the upper part of these vehicles cannot be guaranteed. Objects with a very small reflection cross-section, e.g. objects of narrow size or soft materials, may not be detected by the system. Parking assist systems do not detect objects outside the detection range.

94) The sensors must be clean of mud, dirt, snow or ice in order for the system to operate correctly. Be careful not to scratch

or damage the sensors while cleaning them. Avoid using dry, rough or hard cloths. The sensors should be washed using clean water with the addition of car shampoo if necessary. When using special washing equipment such as high pressure jets or steam cleaning, clean the sensors very quickly keeping the jet more than 10 cm away.

95) Only have interventions on the bumper in the area of the sensors carried out by a Fiat Dealership. Interventions on the bumper that are not carried out properly may compromise the operation of the parking sensors.

96) Only have the bumper repainted or any retouches to the paintwork in the area of the sensors carried out by a Fiat Dealership. Incorrect paint application could affect the operation of the parking sensors.

ADVANCED PARKING ASSIST

(where provided)

 **213) 216) 217) 218)**

WARNING For more information, refer to the "Advanced Driver Assistance Systems (ADAS) recommendations" chapter in this section.

The advanced parking assist measures a suitable parking slot while passing, calculates the trajectory and automatically steers the vehicle while parking.

Advanced parking assist provides assistance for the following manoeuvres:

- ☐ entry into a parallel parking slot
- ☐ entry into a perpendicular parking slot
- ☐ exit from a parallel parking slot

The driver must control acceleration, braking and gears, while steering is done automatically. The driver can take control at any time by gripping the steering wheel.

It may be necessary to move forwards and backwards more than once.

Instructions are given in the **Uconnect™ 10.25"/10.25" NAV.**

Instructions are only given in the case of entering a perpendicular parking slot.



Advanced parking assist can only be activated when driving forwards.



218

F6S0023

Advanced parking assist is always combined with front-rear parking assist. The system has six ultrasonic parking sensors each in both the rear and front bumper.

ENTRY INTO A PARKING SLOT

Activation

Slow down the vehicle speed below 30 km/h.

Activate the system via the **Uconnect™ 10.25"/10.25" NAV**. If the system is activated at a speed of 30 km/h or above, on the screen appears a dedicated message that asks to reduce the speed and the system cannot be activated. The speed limit can vary during the search and manoeuvre phases.



219

F6S0184

Select the entry manoeuvre (1) fig. 219. An acoustic message ask for the type of park requested.

Select the type of parking fig. 219:


☐ (2) Parallel parking, right/left side

☐ (3) Perpendicular parking, right/left side

The allowed parallel distance between the vehicle and a row of parked cars is between 0.5 m and 1.5 m.

The system will not identify slots that are clearly smaller than the vehicle.


NOTE The following figures illustrate an example with right side parallel parking. The procedure is similar in case of left side parallel parking and perpendicular left/right side parking.

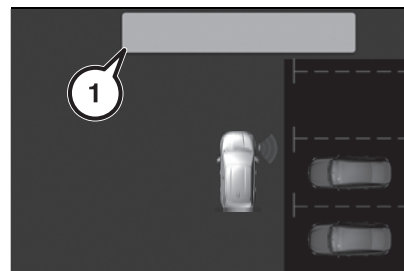

220


F6S0089

The system asks with a message (1) fig. 220 to drive slowly until a "Stop" acoustic message is audible. That means that a free slot is detected and the vehicle is in the right position to start the next manoeuvre. An "OK" message (1) fig. 221 on the screen highlight the free slot found.

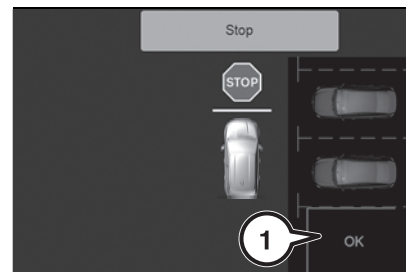

221


F6S0090

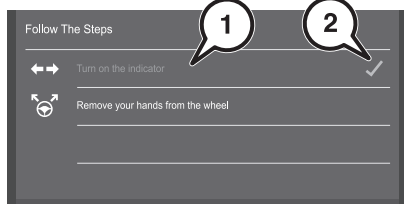

222

F6S0185

Once the driver has stopped the vehicle, a checklist appears on the screen (1) fig. 222. The driver is asked to perform the listed steps. When a step is performed, a checkmark (2) in the corresponding line is displayed and the line is greyed out. An acoustic message ask to perform the actions.

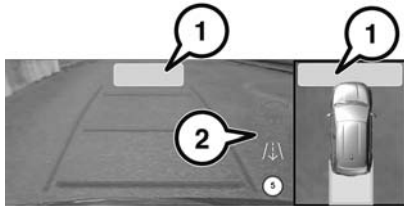

223

F6S0064

The indications of the actions to be performed by the driver are shown on the screen via messages (1) fig. 223.

The indications of the actions performed by the system are shown on the screen via icons (2) fig. 223:


- ☐ (1) the steering wheel is turned
 - ☐ (2) the vehicle advances or rollbacks
- During all the manoeuvres the speed limit is 5 km/h.

The end of manoeuvres is notified by a dedicated acoustic message and by a dedicated message on the screen in the area (1) fig. 223. Then the driver can take back control of the car.

EXITING A PARALLEL PARKING SLOT

Activation

Activate the system via the **Uconnect™ 10.25"/10.25" NAV**.

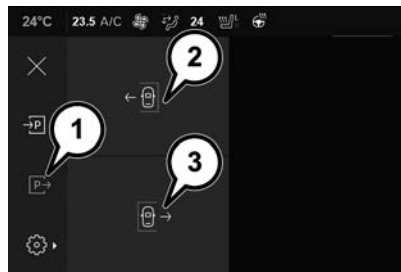

224

F6S0186

Select the exit function (1) fig. 224, then the exit side:

- ☐ (1) Left side
- ☐ (2) Right side

An acoustic message ask to choose the side.

Once the side is chosen follow the acoustic and visual commands on the **Uconnect™ 10.25"/10.25" NAV** screen.

Deactivation

The current park assist manoeuvre can be cancelled anytime pressing the button "X" on the **Uconnect™ 10.25"/10.25" NAV**. A message on the screen notify that the procedure is aborted and the driver can now take back the control of the car.

The system is deactivated automatically:

- ☐ if the ignition is switched off
- ☐ if stalling the engine
- ☐ if no manoeuvre is started within 5 minutes of selection of the type of manoeuvre
- ☐ after a prolonged stop of the vehicle during a manoeuvre
- ☐ activating the turn light on the opposite side to that of the manoeuvre
- ☐ if the Dynamic Stability Control is triggered
- ☐ if the speed of the vehicle exceeds the stated limit
- ☐ when the driver interrupts movement of the steering wheel



- ❑ after ten manoeuvres to enter or exit a parallel parking slot or after seven manoeuvres to enter a perpendicular parking slot
- ❑ by opening the driver's door
- ❑ if one of the front wheels encounters an obstacle
- ❑ if parking manoeuvre is successfully ended

Deactivation by the driver or by the system during manoeuvring will be indicated on the display. Additionally, a chime sounds.

The system is switched off automatically when towing an electrically connected trailer, bicycle carrier, etc. Contact a Fiat Dealership to switch off the system for a prolonged period.

Fault

In the event of a fault, a message is displayed in the **Uconnect™ 10.25"/10.25" NAV**, accompanied by an acoustic signal.

In the event of a fault in the power steering, a message appear on the **Uconnect™ 10.25"/10.25" NAV** screen and the driver has to confirm that has red the message.



219)



97) 98) 99)

WARNING It is possible that the sensor detects a non-existing object caused by echo disturbance from external acoustic noise or mechanical misalignments (sporadic false warnings may occur)

WARNING Make sure that the front number plate is properly mounted (not bent and no gaps to the bumper on the left or right side) and the sensors are firmly in place.

WARNING Advanced parking assist system may not respond to changes in the available parking space after initiating a parking manoeuvre. The system may recognize an entry, a gateway, a courtyard or even a crossing as a parking slot. After selecting reverse gear the system will start a parking manoeuvre. Take care regarding the availability of the suggested parking slot.

WARNING Surface irregularities, e.g. on construction zones, are not detected by the system. The driver accepts responsibility.



WARNING

215) *Parking and other potentially dangerous manoeuvres are, however, always under the driver's responsibility. When performing these operations, always make sure that there are no other people (especially children) or animals on the route you want to drive into. The parking sensors are an aid for the driver, but the driver must never allow their attention to lapse during potentially dangerous manoeuvres, even those executed at low speeds.*

216) *The driver bears full responsibility for accepting the parking slot suggested by the system and the parking manoeuvre. Always check the surrounding area in all directions when using the advanced parking assist.*

217) *The search for the parking space and the parking manoeuvres must be performed in compliance with the current regulations of the Highway Code.*

218) *If you wish to stop the steering wheel with your hands during a manoeuvre, it is advisable to handle it firmly on the outer rim. Do not try and keep your hands on the inside or hold the spokes.*

219) *Under certain circumstances, various reflective surfaces on objects or clothing as well as external noise sources may cause the system to fail to detect obstacles. Special attention must be paid to low obstacles which can damage the lower part of the bumper.*



IMPORTANT

97) Performance of the system can be reduced when sensors are covered, e.g. by ice or snow. Performance of the parking assist system can be reduced due to heavy loading. Special conditions apply if there are taller vehicles in the vicinity (e.g. off-road vehicles, mini vans, vans). Object identification and correct distance indication in the upper part of these vehicles cannot be guaranteed. Objects with a very small reflection cross-section, e.g. objects of narrow size or soft materials, may not be detected by the system. Parking assist systems do not detect objects outside the detection range.

98) The operation of the system is based on various components: front and rear parking sensors, side sensors, steering system, wheels, braking system and instrument panel. The malfunction of one of these components could compromise the operation of the system.

99) Only have the bumper repainted or any retouches to the paintwork in the area of the sensors carried out by a Fiat Dealership. Incorrect paint application could affect the operation of the parking sensors.

E-AUTO MODE

(for Hybrid versions)

The petrol engine stops when low power or torque is required and in stabilised conditions.

The petrol engine is restarted by the belt starter.

The e-Auto mode can switch off the petrol engine in the following cases:

- ❑ When the operating strategies permit.
- ❑ Vehicle speed up to 130 Km/h (80 mph).

❑ When the driver releases the accelerator pedal in stabilised conditions or in deceleration.

❑ During the stop phases.

Restarting is only achieved by the belt starter until the torque demand is available, if the traction battery is sufficiently charged. When the torque demand is insufficient, the petrol engine restarts.

NOTE Using the steering wheel paddles also causes the restarting of petrol engine.

The e-Auto mode cannot switch off the petrol engine in the following cases:

- ❑ The state of charge is less than 30% of the traction battery energy.
- ❑ There is a need for vacuum brake assist depending on the altitude.

❑ The Sport mode is selected.

❑ Maintaining thermal comfort in the passenger compartment (heating, air conditioning, demisting/defrosting).

NOTE The heating and air conditioning systems only operate when the engine is running. Temporarily deactivate the corresponding system to maintain a comfortable temperature in the passenger compartment. For more information, refer to the corresponding section.

Deactivation/Reactivation

By default, the function is activated when the ignition is switched on.

 The settings are changed via the Driving/Vehicle touch screen menu. The display of a message on the instrument panel confirms the change of state.

 Function deactivated, this indicator lights up in the instrument panel.

You can also deactivate the function from the **Uconnect™** 10.25" display by choosing OFF from the Stop and Start menu.

NOTE If high traction is required, the driver can deactivate the e-Auto mode using the touch screen menu.




CHARGING

(Electric versions)

GENERAL INFORMATION

⚠ 220) 221) 222)

⚠ 100) 101) 102) 103) 104) 105) 106) 107)

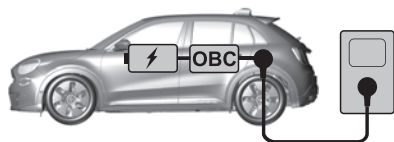

225

F6S0091

Charging the vehicle's high-voltage battery depends upon several factors:

- ☐ high-voltage battery of the vehicle
- ☐ internal onboard charger (OBC)
- ☐ external charging device
- ☐ charging cable

The charging cable connects the vehicle's high-voltage battery with an external charging device providing electric power. This may be a wall box or a public charging station.

The high-voltage battery can be charged with direct current (DC) only. When charging from a wall box or an alternating current (AC) charging station, AC has to be converted into


DC. This is done by the vehicle's onboard charger. The onboard charger (where provided) is available with 7.4 kW (single-phase) and 11 kW (3-phase) (for versions/markets, where provided). If the vehicle is charged at a public DC charging station, no DC conversion is required. The high-voltage battery can be directly charged with DC provided by the DC charging station.

The speed of charging the vehicle's high-voltage battery depends upon the weakest element of the charging chain. To achieve the maximum charging speed, charging cable and charging device have to be attuned to each other.

WARNING Make sure that the charging cable used fits to the vehicle's onboard charger.

CHARGING PORT ON THE CAR

To access the charging port, open the charging flap fig. 226 on the left side by pressing the area indicated by the arrow.

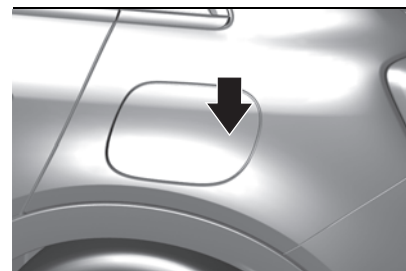

226

F6S0092

On the inside of the charging port flap there are labels with the following warnings and indications that must be checked and observed when charging the high-voltage battery.

On the label, fig. 227, there are the following symbols related to the light (1):


- ☐ : when the light is fixed blue the programmable charging is active
- ☐ : when the light flashes green the charging is in process
- ☐ : when the light is fixed green the charging is complete
- ☐ : when the light is fixed red there is a charging fault

Fixed white: welcome lighting when charging port flap is opened

Other symbols on the label remind of:

- ☐ risk of shock

☐  refer to the descriptions and figures in this supplement

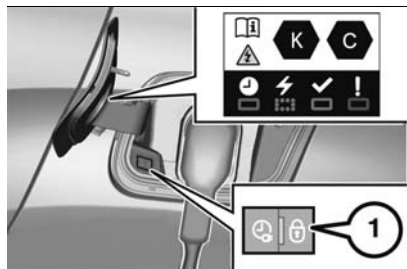

227

F6S0187

Further charging status indicators are located on the control box of the "Mode 2" charging cable. See "Power sources that can be used" chapter.


**Power sources for electric charging.
Identification of vehicle compatibility.
Graphic symbol for consumer information in accordance with EN17186:2019.**

The symbols shown below make it easier to recognise the correct power source type to use when charging your car.

Before charging, check the symbol (where provided) inside the charging port flap and compare it with the

symbol on the charging cable (where provided).

Symbol on the cable charging connector (car side) for Mode 2 and Mode 3 cables and on the charging port flap

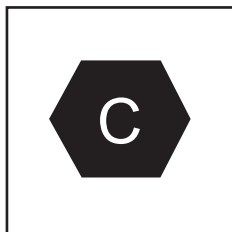


228

F1A0717

AC (alternating current) charging in the home or at a charging station (≤ 480 V RMS).

Symbol on the cable charging connector (charging station side) for the Mode 3 cable and on the charging station

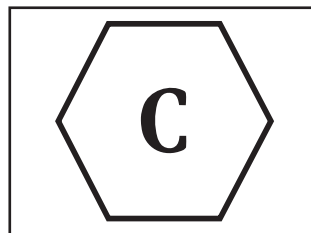

229

F1A0725

AC (alternating current) charging at a charging station (≤ 480 V RMS).

Symbol on the cable charging connector (car side) for the Mode 4 cable and on the charging port flap




230

F1A0718

DC (direct current) charging at a charging station (50–500 V).



CHARGING INFO ON CLUSTER

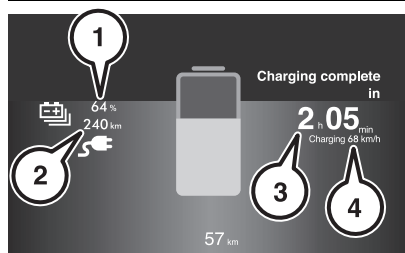

231

F6S0243

While charging the cluster displays the following information:

- ❑ The battery level in percentage (1)
- ❑ The estimated driving range (2)
- ❑ The estimated timing to reach 100% (3)
- ❑ The estimated driving range per hour of recharging (4)



WARNING

220) In order to reduce the risk of electric shock or damage to the device, special care should be taken when cleaning: ALWAYS unplug the device from the domestic power supply socket and car ports.

221) The safety and suitability of the domestic system for charging through the domestic mains are primary and are under the Customer's responsibility.

222) In case of impact, even light, against the charging flap, do not use it. Do not dismantle or modify the charging connector - risk of electrocution and/or fire! Contact a Fiat Dealership.



IMPORTANT

100) Do not charge if the external temperature is -30°C or lower, as charging is likely to take longer and the charging device may be damaged.

101) In cold temperatures, the charging cable may become stiff. Therefore, be careful not to apply excessive force to the charging cable as it may be damaged.

102) Do not use personal generators to charge the high-voltage battery. This may cause fluctuations in charging and the voltage may be insufficient, resulting in damage to the car system.

103) Charging the high-voltage battery using incorrect or damaged sockets, or charging cables and not following the prescribed charging procedures may cause short circuits, fire and potential risk of damage to the electrical system of the car.

104) Avoid leaving the high-voltage battery for several days with the charge indicator at or near zero. The high-voltage battery may be damaged.

105) You do not need to wait until the high-voltage battery level is low to recharge. The performance of the high-voltage battery is optimal when it is charged regularly.

106) Charging the high-voltage battery may take longer if the temperature of the high-voltage battery is high or low.

107) During charging, especially with fast charging, high-voltage battery cooling components may be voltage activated. Therefore, it is normal to hear noises during this operation.

POWER SOURCES THAT CAN BE USED



223) 224) 225) 226) 227) 228) 229) 230) 231) 232) 233) 234) 235) 236) 237) 238) 239) 240) 241) 242) 243) 244)

CHARGING TYPES

There are different types of charging the vehicle's high-voltage battery.

Charging at wallboxes



232

JJ000228

A



233

F6S0197

A wallbox is a charging unit for private households. It provides a charging cable which has to be connected to the vehicle's charging port. Some wallboxes do not provide a charging cable. In this case, a separate charging cable is required which has to be connected to both the wallbox and the charging port of the vehicle.

Charging time may take approximatively:

- about 16 hours 10 min with a charging power of 3.7 kW
- about 8 hours 15 min with a charging power of 7.4 kW
- about 5 hours 45 min with a charging power of 11 kW (where provided)

Charging at charging stations

Charging stations may provide alternating current (AC) or direct current (DC). Charging time may vary depending on the charging station, DC charging stations provide the fastest

charging. To charge the vehicle's battery, the charging cable of the charging station has to be connected to the charging port of the vehicle.



234

JJ000229

B



235

F6S0198

AC charging station. Charging time may take approximately:

- about 16 hours 10 min with a charging power of 3.7 kW
- about 8 hours 15 min with a charging power of 7.4 kW
- about 5 hours 45 min with a charging power of 11 kW (where provided)



236

JJ000230

C



237

F6S0199


DC charging station. Charging cable: this allows charging from public charging sockets marked as DC (direct current). Up to approx. 80% of battery capacity may be charged in approximately:

- if the battery is at least 20%, it takes approximately 27 minutes with a charging power of 100 kW

"MODE 2" CHARGING CABLE

(where provided)



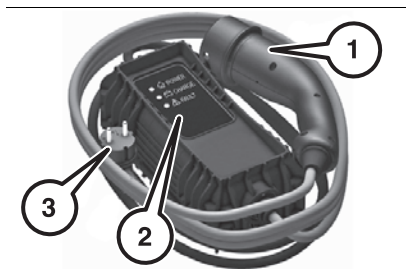

238

JJ000426

1. Vehicle plug
2. Status indicators
3. Wall plug

Basic domestic cables (mode 2) are used for charging at domestic electrical outlets. A basic domestic cable (mode 2) consists of a vehicle plug, a control box and a plug for the domestic electrical outlet. The control box has an integrated charge controller and several LEDs indicating the charging status.

Enhanced domestic cables (mode 2) are similar to basic domestic cables (mode 2). However, the charging performance of enhanced domestic cables (mode 2 charging) is better than the charging performance of basic domestic cables (mode 2).

Charge status control unit

POWER Green: electrical connection established; charging can begin.

CHARGE Flashing green: charging in progress or temperature pre-conditioning activated. Fixed green: charging complete.

FAULT Red: fault; charging not permitted or must be stopped immediately. Check that everything is connected correctly and that the electrical system is not faulty. If the indicator lamp does not go off, contact a Fiat Dealership.

Upon plugging the charging cable into a domestic socket, all of the indicator lamps come on briefly.

If no indicator lamps come on, check the domestic socket's circuit-breaker:

- ☐ if the circuit-breaker has tripped, contact a professional to check that the electrical system is compatible and/or carry out any necessary repairs
- ☐ if the circuit-breaker has not tripped, stop using the charging cable and contact a Fiat Dealership

Manual reset procedure

The control unit can be reset by simultaneously disconnecting the charging connector and the wall socket. Then, reconnect the wall

socket first. For more information, refer to the control unit handbook.

Important information about portable electric vehicle charging

☐ Charging an electric vehicle can stress a building's electrical system more than a typical household appliance.

☐ Before you plug in to any electrical outlet, have a qualified electrician inspect and verify the electrical system (electrical outlet, wiring, junctions and protection devices) for heavy-duty service at a 10 A continuous load.

☐ Electrical outlets may wear out with normal usage or be damaged over time, making them unsuitable for electric vehicle charging.

☐ Check the electrical outlet / plug while charging and discontinue use if the electrical outlet / plug is hot, then have the electrical outlet serviced by a qualified electrician.

☐ When outdoors, plug into an electrical outlet that is weatherproof while in use.

☐ Mount the charging cable to reduce strain on the electrical outlet / plug.

Charging system/ maintenance/ cleaning

The device is maintenance-free. If you need to clean the device, use a soft cloth slightly dampened with a

mild detergent solution, then wipe dry with a dry cloth. **Do not** use abrasive products or flammable substances (e.g. alcohol, petrol or their derivatives). Do not wash the device with water, hazard of fire or electric shock with the risk of serious injury or death.

WARNING Only clean the device when it is **DISCONNECTED** from both the domestic charging port and the charging port located on the car.

LABEL ON THE DOMESTIC PLUG END OF CABLE



Refer to the handbook before use.



239


F6S0113

1. Incorrect use of this charging cable may result in fire, property damage and serious injury or death by electrocution!

2. Always use a correctly earthed power socket, protected by a 30 mA residual current device.
3. Always use an electrical socket protected by a circuit-breaker appropriate for the electrical circuit's current rating.
4. The weight of the control unit must not be borne by the electrical socket, plug and cables.
5. Never use this charging cable if it is defective or in any way damaged.
6. Never attempt to repair or open this charging cable. It contains no repairable parts - replace the charging cable if it is damaged.
7. Never immerse this charging cable in water.
8. Never use this charging cable with an extension cable, a multi-plug socket, a conversion adaptor or on a damaged electrical socket.
9. Do not unplug the plug from the wall as a means of stopping charging.
10. Immediately stop charging, by locking and then unlocking the vehicle using the remote control key, if the charging cable or wall socket feel burning hot to the touch.
11. This charging cable includes components liable to cause electrical arcing or sparks. Do not expose to flammable vapours.

12. Only use this charging cable with Stellantis vehicles.
13. Never plug the cable into the wall socket (or unplug it) with wet hands.
14. Do not force the connector if it is locked into the vehicle.

Symbol label on the rear of control unit

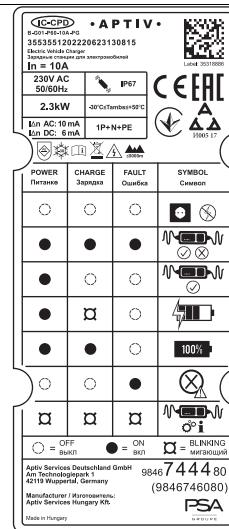

240

JJ000653





WARNING

223) Improper use of portable charging cables may cause a fire, electrical shock, or burns, and may result in damage to property, serious injury, or death. Do not use multi-outlet power strips, splitters, plug adapters, grounding adaptors, surge protectors, extension cables or similar devices. Do not use an electrical socket that is worn or damaged, or one that will not hold the plug firmly in place. Do not use an electrical socket that is on a circuit with other electrical loads.

224) If you use electrical medical devices (e.g., cardiac pacemakers), make sure in advance that charging the high-voltage battery does not affect the operation of these devices. In some cases, electromagnetic waves generated by the charger may affect the operation of such medical devices. Consult a doctor for possible precautions.

225) Read all the safety warnings and instructions before using this product. Failure to follow the warnings and the instructions may result in electric shock, fire, and / or serious injury. Never leave children unattended near the vehicle while the vehicle is charging and never allow children to play with the charging cable. If the plug provided does not fit the electrical outlet, do not modify the plug. Do not put fingers into the electric vehicle connector.

226) There is a risk of electric shock that may cause personal injury or death. Do not use the charging cable if any part of the charging cable is damaged. If the charging cable is damaged, replace it. Do not open or remove the charging cable

cover. Service by qualified personnel only. Connect the charging cable to a properly grounded outlet with cables that are not damaged.

227) Do not connect the charging cable connector if there is dust and/or water on the charging port. Making the connection in the presence of water or dust on the connector cable and the plug may cause a fire or electric shock. Use of worn-out electrical sockets may result in fire and injury.

228) Stop the charge immediately if you notice any abnormal symptoms (e.g. smell, smoke, etc.).

229) When connecting or removing the charging cable, be sure to grasp the handle of the charging connector and the charging plug. If you pull the cable directly (without using the handle) the internal conductors may disconnect or damage: this may cause a shock or fire.

230) The charging cable is a high-voltage conductor. Contact with high-voltage can cause serious personal injury or death. Similarly, do not touch the orange high-voltage cables.

231) Do not charge when the connector and charging plug are wet.

232) Do not charge in adverse weather conditions (e.g. during thunderstorms) at charging stations.

233) Be sure to use the designated charging cable to charge the car. Using any other charger may cause personal injury or damage to the car.

234) How to use the charging cables. Treat the charging cable with care: avoid folding and/or bending it on sharp surfaces. After using the charging cable,

replace the protective covers (if present) on both sides of the cable correctly. Avoid prolonged exposure of the charging cable to sunlight. Avoid dropping the charging cable from above: violent shocks could damage the cable. Always keep charging connector and charging plug clean and dry. Take care to keep the charging cable away from water or moisture. Do not use chemicals or solvents.

235) Position the charging cable in such a way that it is not crushed by other cars, trampled on by people, or positioned in way that people in the vicinity of the car may stumble, resulting in damage or personal injury.

236) Disconnect the charging cable from the domestic socket or charging station or wallbox charging station before cleaning it.

237) Never disconnect the charging cable from the domestic power socket or public charging station during charging. Always interrupt charging, then disconnect the cable, first from the car-side charging port and then from the domestic socket or public charging station.

238) Never use a visibly worn or damaged electrical socket. It could cause fire or serious damage.

239) The high-voltage battery should only be charged with the maximum allowable current or other lower current specified in local and national recommendations for charging high-voltage batteries.

240) The device is to be used exclusively for charging the car.

241) Never attempt to make a repair and/or perform maintenance on the charge cables, this may result in serious

personal injury or even death. Always go to a Fiat Dealership.

242) Incorrect connection between connector and charging terminals constitutes a fire hazard!

243) Do not insert fingers or objects in the cable charging connector.

244) Keep the charging flap closed when the charging port is not in use.



CHARGING SYSTEM FAILURE

State of the indicator lamp:



Off



(green) (red) On



(green)



(red) Flashing

POWER	CHARGE	FAULT	Symbol	Description
				Not connected to the power supply or power is not available from the infrastructure.
 (green)	 (green)	 (red)		The control unit is currently performing a self-test.
 (green)				Connected only to the infrastructure or to the infrastructure and to the Electric Vehicle (EV) but no charging in progress.
 (green)	 (green)			Connected to the power supply and to the Electric Vehicle (EV). The EV is on charge or in a temperature preconditioning sequence.
 (green)	 (green)			Connected to the power supply and to the Electric Vehicle (EV). The EV is waiting for charging or the charging of the EV is completed.
		 (red)		Control unit malfunction. No charging allowed. If an error indicator reappears after a manual reset, the control unit must be checked by a Fiat Dealership before the next charge.
 (green)	 (green)	 (red)		The control unit is in diagnostic mode.

"MODE 3" CHARGING CABLE



241

JJ000427

1. Vehicle plug
2. Plug for wall box / AC charging station

Mode 3 charging cables are used for charging at wall boxes and AC charging stations. A mode 3 charging cable provides a vehicle plug and a plug for the wall box / AC charging station. Wall boxes / AC charging stations may provide an integrated mode 3 charging cable. For more information on the mode 3 charging cable, refer to the manual of the charging cable manufacturer.

"MODE 4" CHARGING CABLE

(where provided)


WARNING Only use DC charging cables shorter than 30 metres.

This can be used to charge from DC (direct current) public charging sockets. The charging cable is connected to the charging station. The charging procedure can be faster than with AC charging stations.

PROCEDURE FOR CHARGING FROM A DOMESTIC POWER SOCKET (AC)

CHARGING PROCEDURE

- Shift the PRND command into P and switch off the vehicle
- engage the electric parking brake
- take the charging kit located in the boot
- push the charging port flap on the mark fig. 242 to release it

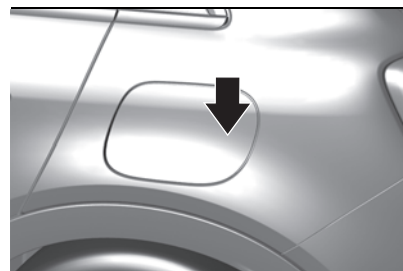

242

F6S0092

- remove any dust that may have accumulated on the charging connector and charging port
- remove the protective cover (1) fig. 243



243


JJ000675

- unroll the charging cable and connect it from the control unit to the domestic socket. When the connection is made, all of the indicator lamps on the control unit light up, then only the



POWER indicator lamp remains on in green

□ grasp the charging connector by the handle (1) fig. 244, remove the protective cover and insert the connector into the charging port fig. 245 until you hear the click indicating that it has been locked

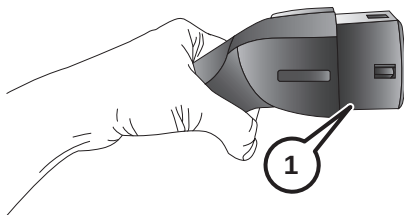

244

JJ000375



245


JJ000470

The start of charging is indicated by the the flashing of the CHARGE indicator lamp in green on the control unit and the green flashing of the status

indicator at the charging port fig. 246. See "Charging status" paragraph for further information.


If this is not the case, charging has not started; restart the procedure, ensuring that all of the connections are properly established.

The red indicator lamp next to the charging port comes on to indicate that the connector is locked.

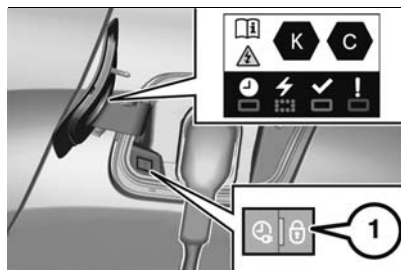

246

F6S0187

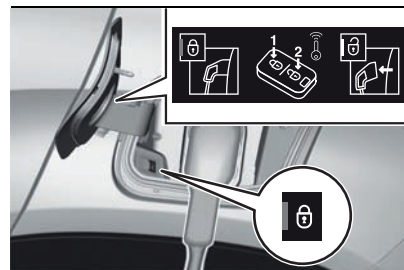

247

JJ000472

Once charging, the vehicle plug will be locked to the charging port and cannot be disconnected while charging is active. indicator fig. 247 illuminates.

CANCELLING THE CHARGING PROCESS

WARNING At public charging stations, the cancelling and subsequent resuming of the charging process may cause additional costs.

Once the charging process has started, only the driver's door can be unlocked without cancelling the charging process. Therefore, activate the driver's door only function in the vehicle personalisation.

Press on the remote control to cancel the charging process at any time.

Press  twice to to cancel the charging process at any time if the driver's only function is activated.

STOP CHARGING

 245)


Before disconnecting the plug from the charging connector: if the vehicle is locked, unlock it; if the vehicle is unlocked, lock it and then unlock it fig. 248.



248

F6S0188

The red indicator lamp next to the charging port goes out to confirm that the connector is unlocked.

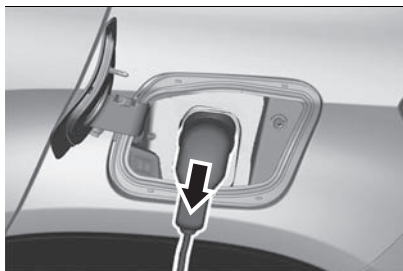

249

JJ000473

Disconnect the vehicle plug of the charging cable from the charging port fig. 249 within 30 seconds after unlocking.

The end of charging is confirmed when the green CHARGE indicator lamp on the control unit comes on fixed and the green light next to the charging port come on fixed.

After disconnection, replace the protective cover over the connector and close the charging flap.

Disconnect the control unit's charging cable from the domestic socket.




WARNING

245) After the end of the charging progress: disconnect the charging cable from the charging port of the vehicle; make sure the charging port flap is closed; always disconnect the charging cable from

the domestic electrical outlet; avoid any entry of fluids into the charging port of the vehicle, the vehicle plug of the charging cable and the domestic electrical outlet.

CHARGING PROCEDURE FROM WALLBOX CHARGING STATION

- ☐ Shift the PRND command into P and switch off the vehicle
- ☐ engage the electric parking brake
- ☐ take the charging kit located in the boot
- ☐ push the charging port flap on the mark fig. 250 to release it

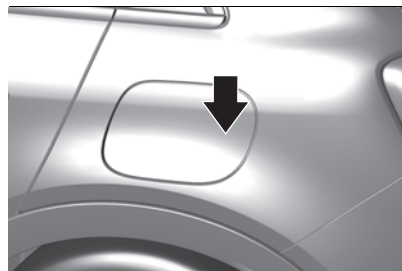

250

F6S0082

- ☐ remove any dust that may have accumulated on the charging connector and charging port
- ☐ follow the accelerated charging unit (Wallbox) user instructions



- ❑ remove the protective cover (1) fig. 251



251

JJ000675

- ❑ grasp the charging connector by the handle (1) fig. 257, remove the protective cover and insert the connector into the charging port fig. 252 until you hear the click indicating that it has been locked



252

JJ000470

The start of charging is confirmed by the flashing of the green light next to the charging port.

If this is not the case, charging has not started; restart the procedure ensuring that all connections are properly established.

The red indicator lamp next to the charging port comes on to indicate that the connector is locked.

CANCELLING THE CHARGING PROCESS

WARNING At public charging stations, the cancelling and subsequent resuming of the charging process may cause additional costs.

Once the charging process has started, only the driver's door can be unlocked without cancelling the charging process. Therefore, activate the driver's door only function in the vehicle personalisation.

Press  on the remote control to cancel the charging process at any time.

Press  twice to to cancel the charging process at any time if the driver's only function is activated.

STOP CHARGING

 246)


Before disconnecting the plug from the charging connector: if the vehicle is locked, unlock it; if the vehicle is unlocked, lock it and then unlock it fig. 253.



253

F6S0188

The red indicator lamp next to the charging port goes out to confirm that the connector is unlocked.

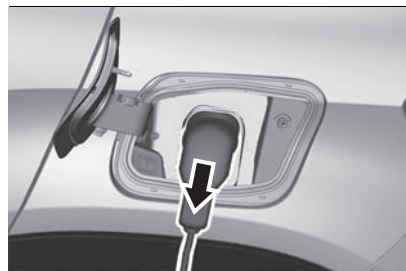

254

JJ000473

Disconnect the vehicle plug of the charging cable from the charging port fig. 254 within 30 seconds after unlocking.

The end of charging is confirmed by the accelerated charging unit (Wallbox) and when the green light close to the charging port come on fixed.

After disconnection, replace the connector on to the charging unit and close the charging flap.



WARNING


246) After the end of the charging progress: disconnect the charging cable from the charging port of the vehicle; make sure the charging port flap is closed; always disconnect the charging cable from the domestic electrical outlet; avoid any entry of fluids into the charging port of the vehicle, the vehicle plug of the charging cable and the domestic electrical outlet.

CHARGING PROCEDURE FROM PUBLIC CHARGING STATION (AC/DC)

When charging at a public AC charging station / public DC charging station, follow the instructions for the use of the respective charging station. Public AC charging stations may not provide an integrated charging cable. In this case, a portable mode 3 charging cable is required.

- ❑ Shift the PRND command into P and switch off the vehicle
- ❑ engage the electric parking brake


- ❑ take the charging kit located in the boot
- ❑ push the charging port flap on the mark fig. 255 to release it

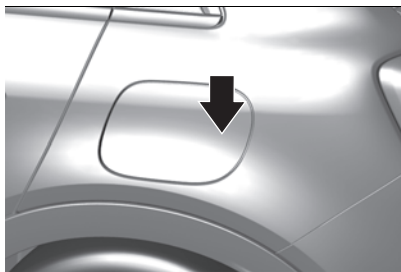

255

F6S0092


- ❑ remove any dust that may have accumulated on the charging connector and charging port
- ❑ remove the protective cover (1) fig. 256 in case of AC charge and both covers (1) and (2) in case of DC charge

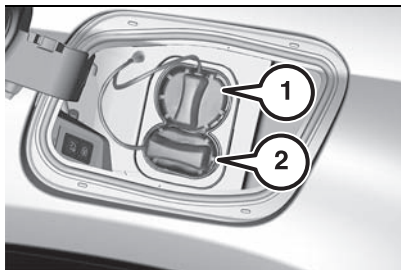

256

JJ000674

- ❑ unroll the charging cable, grasp the charging connector by the handle (1) fig. 257 and insert it into the charging port fig. 258 until you hear the click indicating that it has been locked;

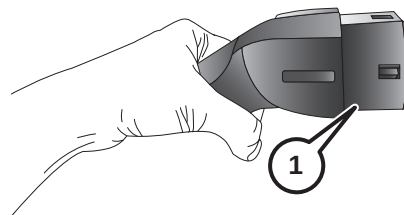

257

JJ000375



258

JJ000470

- ❑ charging starts automatically. If necessary, the public charging station must be enabled; follow the manufacturer's instructions and warnings when using the charging station.



CANCELLING THE CHARGING PROCESS

WARNING At public charging stations, the cancelling and subsequent resuming of the charging process may cause additional costs.

Once the charging process has started, only the driver's door can be unlocked without cancelling the charging process. Therefore, activate the driver's door only function in the vehicle personalisation.

Press  on the remote control to cancel the charging process at any time.

Press  twice to cancel the charging process at any time if the driver's only function is activated.

STOP CHARGING



247)


Before disconnecting the plug from the charging connector: if the vehicle is locked, unlock it; if the vehicle is unlocked, lock it and then unlock it fig. 259.



259

F6S0188

The red indicator lamp next to the charging port goes out to confirm that the connector is unlocked.

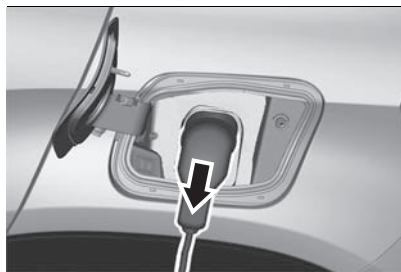

260

JJ000473

Disconnect the vehicle plug of the charging cable from the charging port fig. 260 within 30 seconds after unlocking.

Domestic charging (mode 2)

The end of charging is confirmed when the green CHARGE indicator lamp on the control unit comes on fixed and the

green light next to the charging port come on fixed.

After disconnection, replace the protective cover over the connector and close the charging flap.

Disconnect the control unit's charging cable from the domestic socket.

Accelerated charging via wallbox (mode 3)

The end of charging is confirmed by the accelerated charging unit (Wallbox) and when the green light close to the charging port come on fixed.

After disconnection, replace the connector on to the charging unit and close the charging flap.



WARNING

247) After the end of the charging progress: disconnect the charging cable from the charging port of the vehicle; make sure the charging port flap is closed; always disconnect the charging cable from the domestic electrical outlet; avoid any entry of fluids into the charging port of the vehicle, the vehicle plug of the charging cable and the domestic electrical outlet.

CHARGING FUNCTIONS


PROGRAMMABLE CHARGING

By default, charging starts as soon as the charging cable is connected to the charging port of the vehicle. It is also possible to schedule charging using the **Uconnect™ 10.25"/10.25 NAV**.


Programmable charging is only possible when charging at a wall box. Programmable charging is also available via the FIAT® app.

NOTE On vehicles without integrated navigation system, programmable charging can only be used via the FIAT® app.

- ❑ Through the **Uconnect™ 10.25"/10.25 NAV** system select Applications>Energy>Charging.
- ❑ Define the number of hours and minutes after which the loading process starts, fig. 261.

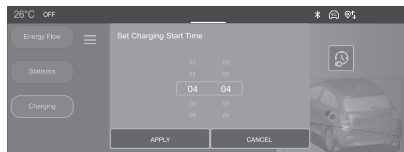

- ❑ Press APPLY.
- ❑ Plug in the vehicle.

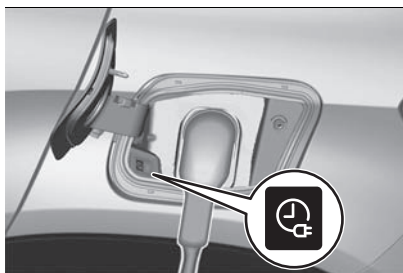

262

JJ000474


- ❑ Within 1 minute, press  fig. 262 to activate programmable charging. The status indicator illuminates blue indicating that programmable charging is active.

FUEL

Fuels - identification of vehicle compatibility. Graphic symbol for consumer information in accordance with EN16942

The symbols shown below facilitate recognising the correct fuel type to be used on your car.

Before proceeding with refuelling, check the symbols inside the fuel filler flap (where provided) and compare them with the symbols shown on the fuel pump (where provided).

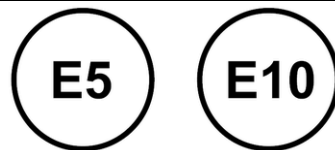

263

JJ000249

E5: Unleaded petrol 95 R.O.N. minimum containing up to 2.7% (m/m) oxygen and with maximum 5.0% (V/V) ethanol compliant with **EN228**.

E10: Unleaded petrol 95 R.O.N. minimum containing up to 3.7% (m/m) oxygen and with maximum 10.0% (V/V) ethanol compliant with **EN228**.



The engine is capable of running with fuel that contains up to 10% ethanol (e.g. named E10).

Use fuel with the recommended octane rating. A lower octane rating can reduce engine power and torque and slightly increases fuel consumption.



The engine specific requirements regarding octane rating are given in the engine data overview. A country-specific label at the fuel filler flap can supersede the requirement. In certain countries, the use of a particular fuel, e.g. a specific octane rating, may be required to ensure proper engine operation.




REFUELLING



A label with symbols at the fuel filler flap is indicating the allowed fuel types. In Europe the pump nozzles of the filling stations are marked with these symbols. Refuel only the allowed fuel type



Fuel filler flap is located at left rear side of vehicle. Push on the mark fig. 264 to open the flap.

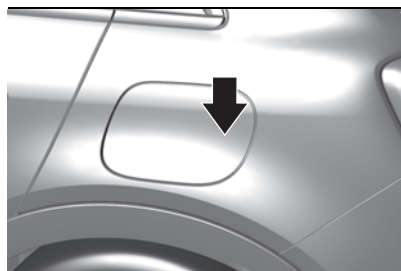

264


F6S0092

The fuel filler flap can only be opened if the vehicle is unlocked. Release the fuel filler flap by pushing the flap.

PETROL REFUELLING

(Hybrid versions)

To open, turn the cap slowly anticlockwise.

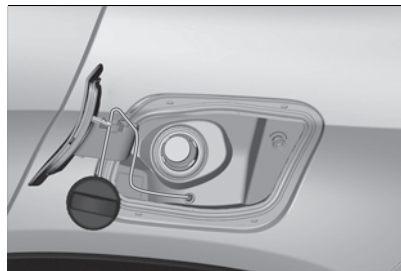

265

JJ000475

The fuel filler cap can be attached to the hook on the fuel filler flap fig. 265.

Place the nozzle in straight position to the filler neck and press with slight force to insert.

To refuel, switch on pump nozzle.

After the automatic cut-off, the tank can be topped up by operating the pump nozzle a maximum of two more times.



To close, turn the fuel filler cap clockwise until it clicks. Close the flap and allow it to engage.

FUEL FILLER CAP

Only use genuine fuel filler caps.



WARNING

248) Before refuelling, switch off ignition and any external heaters with combustion chambers. Follow the operating and safety instructions of the filling station when refuelling.

249) Do not approach naked flames or lit cigarettes to the fuel tank filler: fire risk. Keep your face away from the fuel filler to prevent breathing in harmful vapours.

250) Do not attach any object/plug to the end of the end of the filler neck that is not for the vehicle. The use of non-compliant objects/caps non-compliant objects/caps could cause a pressure inside the tank, causing dangerous situations.

251) Do not use a mobile phone near the refuelling pump: risk of fire.

252) Never refuel with the engine in STOP mode or in stand-by; you must switch off the ignition.



IMPORTANT

108) Do not use fuel or fuel additives that contain metallic compounds such as manganese-based additives. This may cause engine damage.

109) Use of fuel with a lower octane rating than the lowest possible rating could lead to uncontrolled combustion and engine damage.

110) The use of any other type of (bio) fuel (vegetable or animal oils, pure or diluted, domestic fuel etc.) is strictly prohibited (risk of damage to the engine and fuel system).

111) In case of misfuelling, do not switch on ignition.

112) Wipe off any overflowing fuel immediately.

DRIVING HINTS AND RECOMMENDATIONS

CONTROL OF THE VEHICLE

Never coast with engine not running

Many systems will not function in this situation (e.g. brake servo unit, power steering). Driving in this manner is a danger to yourself and others. All systems function during an Autostop

Pedals

To ensure the pedal travel is uninhibited, there must be no mats in the area of the pedals.


Use only floor mats, which fit properly and are fixed by the retainers on the driver side.

ON FLOODED ROADS

It's strongly advised against driving on flooded roads, as this could cause serious damage to the internal combustion engine, the electric motor, the gearbox and the electrical systems of the vehicle.



10 km/h - 6 mph MAX

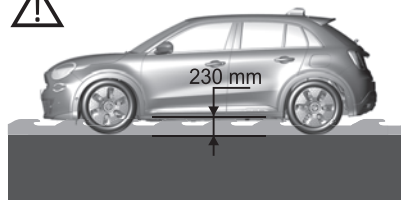

266

F6S0037

If the vehicle absolutely must drive through a flooded section of road:

- ❑ check that the depth of the water does not exceed 23 cm fig. 266, taking account of waves that might be generated by other users

- ❑ deactivate the Stop-Start function (where provided)

- ❑ drive as slowly as possible without stalling. In all cases, do not exceed 6 mph (10 km/h)

- ❑ do not stop and do not switch off the engine

On leaving the flooded road, as soon as safety conditions allow, make several light brake applications to dry the brake discs and pads.

If in doubt about the state of your vehicle, contact a Fiat dealership.

STEERING

If power steering assist is lost because the engine stops or due to a system



malfunction, the vehicle can be steered but may require increased effort.

EMERGENCIES



ENERGY/FUEL CONSUMPTION REDUCTION

Below are some useful tips that allow you to achieve a reduction in energy consumption of the high-voltage battery and a consequent increase in range (for electric versions) and save fuel and thus lower the amount of harmful emissions released into the atmosphere (for Hybrid versions).

Car maintenance

Have your vehicle serviced regularly (e.g. engine oil, oil filter, air filter, passenger compartment filter, etc.). Checks and operations should be carried out in accordance with the "Service information" (see the "Maintenance and care" chapter).

Tyres

Check the tyre pressures at least once every four weeks: if the pressure is too low, electrical energy or fuel consumption levels increase as resistance to rolling is higher.

In addition, carry out this check before a long journey, at each change of

season and after a long period out of use.

Do not forget the spare wheel and, where applicable, the tyres on your trailer or caravan.

At the end of winter, remove snow tyres and refit summer tyres.

Unnecessary loads

Do not travel with an overloaded luggage compartment. The weight of the car and its trim greatly affect electrical energy or fuel consumption and stability.

Loads placement

Spread loads throughout the vehicle. Place the heaviest items in the boot as close as possible to the rear seats.

Roof rack/ski rack

Remove the roof rack or the ski rack from the roof when they are not used. These accessories lower aerodynamic penetration and adversely affect electrical energy or fuel consumption levels.

Limit the loads carried in the vehicle and minimise wind resistance (e.g. roof bars - where present, roof rack, bicycle carrier, trailer). Preferably, use a roof box.

Electric devices

Use electrical devices only for the amount of time needed. The heated

rear window, windscreen wipers and heater fan require a considerable amount of energy or fuel; increasing the current uptake increases electrical energy or fuel consumption.

Climate control system

Using the climate control system will increase electrical energy or fuel consumption: use standard ventilation when the temperature outside permits. For electric versions: with the vehicle connected, carry out temperature pre-conditioning before setting off.

Devices for aerodynamic control

The use of non-certified devices for aerodynamic control may adversely affect air drag and electrical energy or fuel consumption levels.

DRIVING STYLE

Top speed

Energy or fuel consumption considerably increases as speed increases. Maintain a constant speed, avoiding unnecessary braking and acceleration, which cost in terms of electrical energy or fuel consumption and emissions.

Drive smoothly

Accelerating violently will greatly affect electrical energy or fuel consumption and emissions. Acceleration should be gradual.

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal and press the accelerator gradually. These practices help to save on energy consumption, reduce CO2 emissions (where present) and decrease general traffic noise. With an automatic gearbox, with the PRND command in D, and except in Sport mode, favour "free-wheeling" by fully lifting your foot from the accelerator pedal in order to save fuel. When the traffic is flowing smoothly, use the Cruise Control/Adaptive Cruise Control.

Optimise your use of the gearbox

Favour the automatic mode. Do not depress the accelerator pedal heavily or suddenly.

For electric versions

Favour the ECO zone of the operating mode indicator in the instrument panel display by driving smoothly and at a steady speed.

Anticipate slowing down as much as possible and, if possible, favour decelerations with regenerative braking mode activated (operating mode indicator in the CHARGE zone).

CONDITIONS OF USE

Traffic and road conditions

Heavy traffic with fast acceleration causes high electrical energy or fuel

consumption. Winding mountain roads and rough road surfaces also adversely affect consumption.

Control the use of electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning.

At speeds above 50 km/h (31 mph), close the windows and leave the air vents open.

Unless automatically regulated, switch off the air conditioning as soon as the desired temperature has been reached.

Switch off the demisting and defrosting functions, if they are not managed automatically.

Switch off the heated seat as soon as possible.

Adapt your use of the headlamps and/or foglamps to the level of visibility, in accordance with current legislation in the country in which you are driving.

Avoid running the engine before moving off, particularly in winter (other than in severe wintry conditions: temperature below -23°C). The vehicle will warm up much faster while driving.

In very severe wintry conditions (temperature below -23°C), let the engine run for 4 minutes before moving off, to ensure the correct operation

and durability of the mechanical components of your vehicle (engine and gearbox).

As a passenger, avoid connecting your multimedia devices (e.g. film, music, video game) to help reduce the consumption of energy. Disconnect all portable devices before leaving the vehicle.

ENERGY ECONOMY MODE

This system manages the duration of use of certain functions, in order to conserve a sufficient level of charge in the conventional battery with the ignition off.

After switching off the engine, you can still use functions such as the audio and telematic system, the wipers and the dipped beam headlamps or courtesy lamps, for a combined duration of approximately 40 minutes.

Selecting the mode

A confirmation message is displayed when energy economy mode is entered, and the active functions are placed on standby.

WARNING If a telephone call is in progress at the time, it will be maintained for around 10 minutes via the audio system's hands-free system.



Exiting the mode

These functions are automatically reactivated the next time the vehicle is used.

To restore the use of these functions immediately, start the engine and let it run:

- ❑ For less than 10 minutes, to use the equipment for approximately 5 minutes.
- ❑ For more than 10 minutes, to use the equipment for approximately 30 minutes.

Let the engine run for the specified duration to ensure that the conventional battery charge is sufficient.

To recharge the conventional battery, avoid repeatedly or continuously restarting the engine.

WARNING A flat conventional battery prevents the engine from starting. For more information on the conventional battery, refer to the "Jump starting" chapter in "In case of emergency" section.

Load reduction mode

This system manages the use of certain functions according to the level of charge remaining in the conventional battery.

When the vehicle is being driven, the load reduction function temporarily deactivates certain functions, such as the air conditioning and the heated rear screen.

The deactivated functions are reactivated automatically as soon as conditions permit.

WARNINGS

- ❑ Never leave the engine running in a closed space without sufficient ventilation. Internal combustion engines emit toxic exhaust gases such as carbon monoxide. Danger of poisoning and death!
- ❑ In very severe wintry conditions (temperature below -23°C), let the engine run for 4 minutes before moving off, to ensure the correct operation and durability of the mechanical components of your vehicle (engine and gearbox).
- ❑ Never drive with the parking brake applied. Risk of overheating and damaging the braking system!
- ❑ Never park the vehicle and never leave the engine running on a flammable surface (e.g. dry grass, dead leaves). The vehicle exhaust system is very hot, even several minutes after the engine stops. Risk of fire!
- ❑ Never drive on surfaces covered with vegetation (e.g. tall grass, accumulated dead leaves, crops, debris) such as

a field, a country lane overgrown with bushes or a grassy verge. This vegetation could come into contact with the vehicle's exhaust system or other systems which are very hot. Risk of fire!

- ❑ Make sure you do not leave any item in the passenger compartment which could act like a magnifying glass under the effect of the sun's rays and cause a fire. Risk of fire or damage to interior surfaces!
- ❑ Never leave the vehicle unattended, with the engine running. If you have to leave your vehicle with the engine running, apply the parking brake and put the gearbox into neutral or position or (depending on the type of gearbox).
- ❑ Never leave children inside the vehicle unsupervised.



WARNING

253) *Damage to the high-voltage battery or high voltage system can create a risk of electric shock, overheating, or fire. If the vehicle has been damaged or affected by a moderate to severe crash, it must be inspected as soon as possible by qualified personnel. Until the technical inspection has been carried out, the vehicle must be stored outside at a minimum distance of 5 metres from any structure or other flammable objects. If the vehicle has been damaged or affected by flood or fire, it*

must not be moved at all and has to be inspected by qualified personnel as soon as possible.

TRAILER HITCH

(where admitted)

GENERAL INFORMATION



113

Only use towing equipment that has been approved for your vehicle.

Entrust retrofitting of towing equipment to a Fiat Dealership. It may be necessary to make changes that affect the cooling system, heat shields or other equipment.

Trailers equipped with LED lights are not suitable for the wiring harness of this trailer hitch.

Fitting of towing equipment could cover the opening of the towing eye. If this is the case, use the coupling ball bar for towing. Always keep the coupling ball bar in the vehicle to have it on hand if needed.

DRIVING CHARACTERISTICS AND TOWING TIPS

Before attaching a trailer, lubricate the coupling ball. However, do not do so if a stabiliser, which acts on the coupling ball, is being used to reduce snaking movements.

During trailer towing do not exceed a speed of 80 km/h. A maximum speed of 100 km/h is only appropriate if an oscillation damper is used and the permissible gross trailer weight does not exceed the vehicle's curb weight. For trailers with low driving stability and caravan trailers, the use of an oscillation damper is strongly recommended.

If the trailer starts snaking, drive more slowly, do not attempt to correct the steering and brake sharply if necessary. When driving downhill, drive in the same gear as if driving uphill and drive at a similar speed.

Adjust tyre pressure to the value specified for full load

TRAILER TOWING

Trailer loads

The permissible trailer loads are vehicle and engine-dependent maximum values which must not be exceeded.

The actual trailer load is the difference between the actual gross weight of the trailer and the actual coupling socket load with the trailer coupled.

The permissible trailer loads are specified in the vehicle documents. In general, they are valid for gradients up to 12%.

The permissible trailer load applies up to the specified incline and at sea

level. Since engine power decreases as altitude increases due to the air becoming thinner, therefore reducing climbing ability, the permissible gross train weight also decreases by 10% for every 1000 m of altitude. The gross train weight does not have to be reduced when driving on roads with slight inclines (less than 8%, e.g. motorways)

The permissible gross train weight must not be exceeded. This weight is specified on the identification plate.

Vertical coupling load

The vertical coupling load is the load exerted by the trailer on the coupling ball. It can be varied by changing the weight distribution when loading the trailer.

The maximum permissible vertical coupling load (48 kg) is specified on the towing equipment identification plate and in the vehicle documents.

Always aim for the maximum vertical coupling load, especially in the case of heavy trailers. The vertical coupling load should never fall below 25 kg.

Rear axle load

When the trailer is coupled and the towing vehicle fully loaded, the permissible rear axle load (see identification plate or vehicle documents) may be exceeded by 60



kg, the gross vehicle weight rating must not be exceeded. If the permissible rear axle load is exceeded, a maximum speed of 100 km/h applies.

TOW HOOK SETUP



254) 255)

Instructions for using the removable ball head tow bar

WARNING Before setting off, **check** the correct **locking** of the removable ball head tow bar, as follows:

- ❑ the green mark of the knob must coincide with the green mark on the tow bar
 - ❑ the knob is in the stop position on the tow bar (without slot)
 - ❑ locked lock and key removed. The knob cannot be extracted.
 - ❑ ball head bar firmly secured to the housing pipe. Check by shaking hands
- The fitting procedure must be repeated if any of the requirements are not met. If even only one of the requirements is not met the tow hook **must not** be used, since there is risk of causing accidents. Contact a Fiat Dealership. The ball head tow bar can be fitted/removed manually, without requiring specific equipment.

WARNING Never use cars or work tools: the mechanism may be damaged.

WARNING Never unlock in the case of trailer attached to the car or with rack fitted.

WARNING When driving without trailer (or without rack), the ball head tow bar must be removed and the closing cap must always be inserted in the housing pipe. This applies particularly if, due to the bar, the visibility of the number plate or of the lighting system is reduced.

For the electrical connection, a 13 pin 12 VDC connection has to be used (CUNA/UNI and ISO/DIN Standards). Follow the instructions provided by the car Manufacturer and/or the tow hook Manufacturer.



WARNING

254) The ABS with which the car is equipped will not control the braking system of the trailer. Particular caution is therefore required on slippery roads.

255) Never modify the braking system of the vehicle to control the trailer brake. The trailer braking system must be fully

independent of the vehicle's hydraulic system.



IMPORTANT

113) For new vehicles, only tow a trailer after having driven at least 1000 km.


IN CASE OF EMERGENCY

*Have a flat tyre or a burnt-out bulb?
At times, a problem such as these may
interfere with your driving experience.
The pages on emergencies can help
you to deal with critical situations
independently and calmly.
In an emergency, we recommend that
you call the phone number found in the
Warranty Booklet.
It is also possible to call the national
or international universal freephone
number to search for the nearest
Dealership.*

HAZARD WARNING	
FLASHERS.....	208
WARNING TRIANGLE	208
EMERGENCY OR ASSISTANCE	
CALL	208
IN CASE OF ACCIDENT	210
BULB REPLACEMENT	212
FUSES.....	216
WHEEL CHANGING	217
TYRE REPAIR KIT	222
JUMP STARTING	224
TOWING	228
FREE-WHEELING	230



HAZARD WARNING FLASHERS

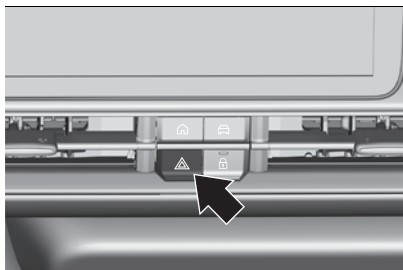

267

JJ000518

Operated by pressing  fig. 267. When braking in an emergency, the hazard warning flashers are switched on automatically, depending on the force of deceleration. They are switched off automatically, as soon as the vehicle is accelerated again.


WARNING TRIANGLE

(where provided)

This reflective and dismantable device is to be installed on the side of the road when a vehicle is broken down or damaged.



ASSEMBLING AND PLACING THE TRIANGLE

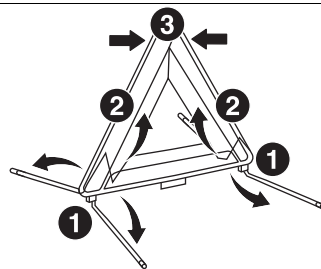

268

JJ000656

For versions supplied with a triangle as original equipment, refer to fig. 268.

For other versions, refer to the assembly instructions provided with the triangle.


Put the triangle in place behind the vehicle, as required by local legislation.



WARNING

256) Before getting out of the vehicle Turn on the hazard warning lamps, then put on the safety vest to assemble and install the triangle

EMERGENCY OR ASSISTANCE CALL

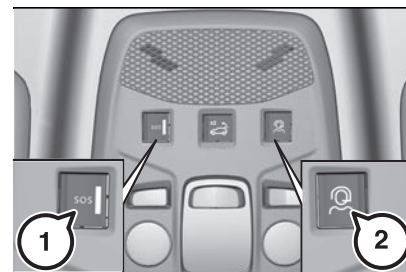

269

JJ000518

- (1) eCall (SOS)
- (2) ASSISTANCE

eCall (SOS)

Your vehicle may be fitted with the eCall (SOS) system either as standard or as an option.

The eCall (SOS) system provides direct contact to the emergency services and is fully built into the vehicle. This contact is made either automatically via the sensors built into the vehicle, or by pressing button (1) fig. 269.

According to the country of sale, the eCall (SOS) system corresponds to the systems PE112, ERAGLONASS, 999, etc.

The eCall (SOS) system is activated by default.

❑ To make an emergency call manually, press button (1) for more than 2 seconds.

The lit indicator lamp and a voice message confirm that the call has been made to the emergency services (In accordance with the general conditions of use of the service, available from dealers and subject to technological and technical limitations).

The eCall (SOS) system immediately locates your vehicle and puts you in contact with the appropriate emergency services (Depending on the geographic coverage provided by the "eCall (SOS)" and "ASSISTANCE" systems. The list of countries covered and the telematic services provided is available from dealers or on the website for your country).

❑ Pressing again immediately cancels the request.

The indicator lamp flashes while the vehicle data is being sent, and then remains lit when communication is established.



257

NOTE The eCall (SOS) system is a public service and is free-of-charge.

Operation of the system

❑ Upon switching on the ignition, the indicator lamp lights up for a few seconds and then goes out: the system is operating correctly

❑ The indicator lamp flashes red: emergency battery is flat. This will be recharged after a few minutes' driving

❑ The indicator lamp is fixed red: system malfunction. The emergency and assistance call services may not work

❑ If the indicator lamp does not light up when the ignition is turned on, this is also a system malfunction

If the problem persists, contact a qualified Fiat Dealership as soon as possible.

NOTE The malfunction of the system does not prevent the vehicle from driving.

NOTE When an onboard system update is being performed, the eCall (SOS) function is not available.

NOTE **Data processing.** All processing of personal data by the eCall (SOS) function complies with the framework for protection of personal information established by Regulation 2016/679 (General Data Protection Regulation - GDPR) and Directive 2002/58/ EC of the

European Parliament and the Council, and in particular, seeks to protect the vital interests of the data subject, in accordance with Article 6 (1) d) GDPR. The processing of personal data is strictly limited to the purpose of handling the eCall (SOS) function used with the "112" single European emergency call number. The eCall (SOS) function is only able to collect and process the following data relating to the vehicle: vehicle identification number, vehicle type (passenger vehicle or light commercial vehicle), fuel type or power source, three most recent locations and direction of travel, number of passengers and a timestamped log file of the automatic activation of the system and its timestamp. The recipients of the processed data are the emergency call handling centres designated by the relevant national authorities in the territory in which they are located, enabling priority routing and handling of calls to the "112" emergency number. NOTE **Data storage.** Data contained in the system's memory is not accessible from outside the system until a call is made. The system is not traceable and is not continuously monitored in its normal operating mode. The data in the system's internal memory is automatically



and continuously erased. Only the vehicle's three most recent locations, necessary for the normal functioning of the system, are stored. When an emergency call is triggered, the data log is stored for no more than 13 hours.

NOTE Access to data. You have the right of access to data and as appropriate to request the rectification, erasure or restriction of processing of any personal data not processed in accordance with the provisions of GDPR. Third parties to which data has been disclosed shall be notified of any rectification, erasure or restriction carried out in compliance with GDPR, unless it proves impossible or involves a disproportionate effort. You also have the right to lodge a complaint with the respective data protection supervisory authority. If you want to claim your above-mentioned rights please contact us per email at: privacyrights@stellantis.com. For more information regarding our contact details please take a look at our Privacy & Cookies Policy on the brand's website.

Assistance



258)

□ If the vehicle breaks down, press button (2) fig. 269 for more than 2 seconds to request assistance

(confirmed by a voice message. Depending on the geographic coverage of the "eCall (SOS)" and "ASSISTANCE" systems and the official national language chosen by the owner of the vehicle. The list of countries covered and the telematic services provided is available from dealers or on the website for your country).

□ Pressing again immediately cancels the request.

NOTE Privacy mode allows you to manage the level of sharing (data and/or location) between your vehicle and the Manufacturer. It can be configured in the "Settings" touch screen application.

NOTE If you purchased your vehicle outside Stellantis dealer network, you are invited to have a dealer check the configuration of these services and, if desired, modify it as required. In a multilingual country, services can be configured to use the official national language of your choice.

NOTE For technical reasons and in particular to improve the quality of telematics services provided to customers, the Manufacturer reserves the right to carry out updates to the vehicle's on-board telematics system at any time.

NOTE If SOS and Assistance function are installed on your vehicle, there are

additional services available to you in your personal space, via the website for your country. For information about SOS and Assistance, please refer to the general conditions for these services.



WARNING

257) *In the event that a serious accident is detected by the sensors built into the vehicle, such as the airbag control unit, an emergency call is made automatically.*

 
258) *During an update to the vehicle's on-board telematics system, the ASSISTANCE system will be unavailable.*

IN CASE OF ACCIDENT

(Electrified versions)



259) 260) 261) 262) 263) 264)



AUTOMATIC AUXILIARY/HIGH- VOLTAGE BATTERY DISCONNECTION

In the case of an accident, with the intervention of the battery disconnect system and airbags, the auxiliary or high-voltage battery is disconnected automatically, to avoid possible fire risks that could put passengers and any other people involved in traffic and/or near the car in a dangerous condition.

To reactivate the auxiliary/high-voltage battery, contact a Fiat Dealership.

PRECAUTIONS IN CASE OF ACCIDENT

To minimise the risk of serious injury, observe the following precautions:

□ park safely on the side of the road, apply the electric parking brake, put the PRND command in P and switch off the electric motor

□ **contact rescue immediately**
□ **for electric versions: warn that it is a electric car equipped with a high-voltage system**

□ if you notice any electrolyte leakage from the auxiliary/high-voltage battery, do not go near the vehicle. If the electrolyte from the auxiliary/high-voltage battery comes into contact with the eyes or skin, blindness or skin lesions may occur. Any vapors released

from the electrolyte, if inhaled, may also cause a risk of intoxication. In case of contact with the electrolyte, rinse immediately with plenty of water and seek medical attention

□ do not go near the auxiliary/high-voltage battery with naked flames: danger of FIRE. In case of fire, do not use water extinguishers to extinguish the fire; the use of water, even in small quantities, can be dangerous

□ if the car has been seriously damaged, maintain a safe distance of at least 15 metres between the car and the other cars / flammable materials

□ the following label fig. 270 is intended solely for use by firefighters and maintenance services in the event of any work on the vehicle



WARNING

259) Damage to the vehicle or the traction battery could result in the leakage of toxic gases or fluids either immediately or later. The Manufacturer recommends that you: always inform the fire and emergency services in the event of an incident, warning that the vehicle is equipped with a traction battery; never touch the liquids leaking from the traction battery; do not inhale the gases emitted by the traction battery which are toxic; move away from the vehicle in the event of incident

or accident, the gases emitted being flammable and could cause a fire.

260) Do not touch high-voltage components (identified by the colour orange) or any components that have come into contact with exposed high-voltage cables. NEVER touch exposed electric cables: danger of ELECTROCUTION.

261) The label fig. 270 is intended solely for use by firefighters and maintenance services in the event of any work on the vehicle. No other person must touch the device shown on this label.

262) In the event of an accident or impact to the vehicle's underbody

In these situations, the electrical circuit or the traction battery can be seriously damaged. Stop as soon as it is safe to do so and switch off the ignition. Contact a Fiat Dealership.

263) In the event of exposure to a fire Immediately exit and evacuate all passengers from the vehicle. Never attempt to fight the fire yourself - risk of electrocution! You must immediately contact the emergency services, informing them that the incident involves an electric vehicle.

264) In the event of damage to the high-voltage battery it is strictly prohibited to work on the vehicle yourself. Do not touch liquids coming from the battery, and in the event of skin contact with these products, wash abundantly with water and contact a doctor as soon as possible. Contact a Fiat Dealership to have the system checked.



BULB REPLACEMENT

 265) 266) 267) 268) 269)  114)



GENERAL INSTRUCTIONS

Observe the following precautions:

- ☐ before replacing a bulb check the contacts for oxidation
- ☐ replace blown bulbs with others of the same type and power
- ☐ after replacing a headlight bulb, always check its alignment
- ☐ if a bulb is not working, before replacing it, check that the respective fuse is intact. For the location of the fuse, refer to the "Fuse Replacement" chapter in this section.

WARNING When the weather is cold or damp or after heavy rain or washing, the surface of headlights or rear lights may steam up and/or form drops of condensation on the inside. This is a natural phenomenon due to the difference in temperature and humidity between the inside and the outside of the glass which does not indicate an anomaly fault and does not compromise the normal operation of lighting devices. The mist disappears

quickly when the lights are turned on, starting from the centre of the diffuser, extending progressively towards the edges.



WARNING

265) Before replacing the bulb, wait for the exhaust ducts to cool down: **DANGER OF SCALDING!**

266) Modifications or repairs to the electric system that are not carried out properly or do not take the system technical specifications into account can cause malfunctions leading to the risk of fire.

267) Halogen bulbs contain pressurised gas, in the case of breakage they may burst causing glass fragments to be projected outwards.

268) Only replace the light bulbs when the engine is off and in a position that does not interfere with traffic and lets you safely replace them (see the description in the "Replacement" chapter). Also make sure that the engine is cold, to avoid burns.

269) In case of regulation of headlamps beam height or bulb replacement, never look directly to the lamps if they are switched on. Risk of eye injuries!



IMPORTANT

114) Halogen bulbs must be handled holding the metallic part only. Touching the transparent part of the bulb with your fingers may reduce the intensity of the emitted light and even reduce the lifespan

of the bulb. In the event of accidental contact, wipe the bulb with a cloth moistened with alcohol and let the bulb dry.

Description	Type	Power	Figure reference
Front side lights/Daytime running lights (DRL)	LED	–	–
Tail light/brake light	LED	–	–
Turn indicator light (front and side)	LED (*)	–	–
Turn indicator light (front)	PY21W	21W	B
Turn indicator light (rear and side mirror)	LED	–	–
Main beam/dipped beam headlights (LED)	LED	–	–
Third brake light	LED	–	–
License plate light	LED	–	–
Fog lights (*)	LED	–	–
Rear fog light	W16W	16W	B
Reverse gear	W16W	16W	B
Front ceiling light	W5W	5W	A
Lights front/rear (where provided)	LED	–	–
Luggage compartment light	LED	–	–

(*) Where provided



BULB TYPES

The car is equipped with the following bulbs

Glass bulbs (type A): they are press-fitted. Pull to extract.



Bayonet-type bulbs (type B): to remove them from their holder, press the bulb and turn it anticlockwise, then extract it.



LED headlights

Headlights for low and high beam, daytime running lights and turn lights are designed as LEDs and cannot be changed.

Have lights repaired by a Fiat Dealership in case of failure.

FRONT FOG LIGHTS

(where provided)


Have lights repaired by a Fiat Dealership in case of failure.

HALOGEN FRONT DIRECTION INDICATOR

(for versions/markets where provided)


To replace the bulbs, proceed as follows:

- steer the car wheels completely inwards;
- using the screwdriver provided, undo the screw (1) fig. 271;
- remove the screws (2) fig. 272 of the wheel arch (3).

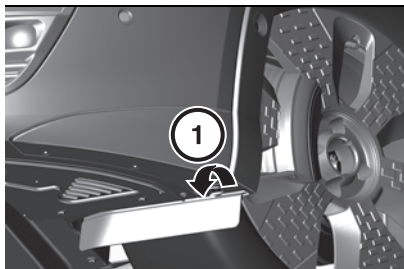

271


F6S0222

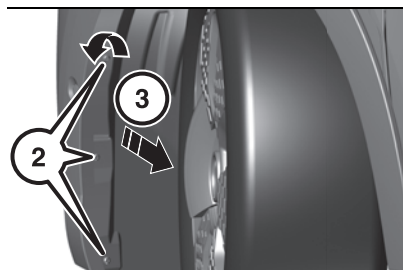

272

F6S0223

- Rotate the bulb holder (1) fig. 273 anticlockwise and extract it (2) fig. 273.

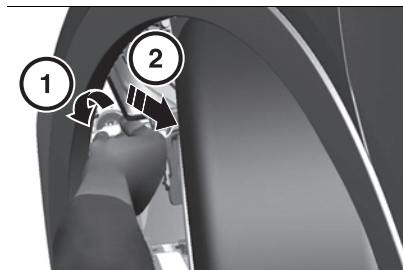

273


F6S0232

Replace the bulb and proceed in reverse order for the refitting.

HALOGEN REVERSING LIGHT/ REAR FOG LIGHTS

To replace the bulbs, proceed as follows:


- Remove the screws (1) fig. 274 and move the auxiliary wheel arch (2) partially

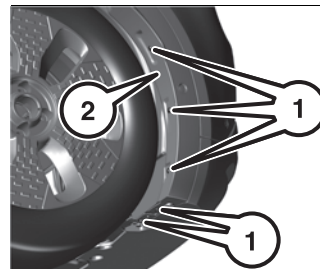

274

F6S0245

- Rotate the bulb holder (3) fig. 275 anticlockwise and extract it

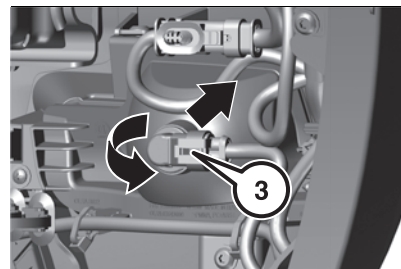


275

F6S0246

Pull the bulb (4) fig. 276 and remove it from the bulb holder



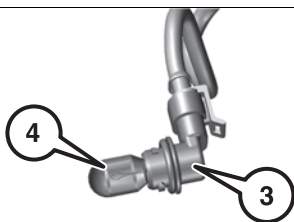

276

F6S0247

- ☐ Push and turn clockwise the bulb in the bulb holder
- ☐ Insert the bulb holder and rotate it clockwise
- ☐ Refit the auxiliary wheel arch and fix the screws

TAIL LIGHTS

LED tail, stop, reversing and turn lights (side), rear fog lights

Have lights repaired by a Fiat Dealership in case of failure.

SIDE DIRECTION INDICATORS (ON EXTERIOR REAR VIEW MIRROR)

Have lights repaired by a Fiat Dealership in case of failure.

CENTRE HIGH-MOUNTED BRAKE LIGHT

Have lights repaired by a Fiat Dealership in case of failure.

LED NUMBER PLATE LIGHTS

Have lights repaired by a Fiat Dealership in case of failure.

BULB CHECK

Switch on the ignition, operate and check all lights.

INTERIOR LIGHTS

Have the following bulbs replaced by a Fiat Dealership:

- ☐ courtesy light (halogen version)
- ☐ reading lights (halogen version)

Instrument panel lights, LED load compartment light and LED courtesy and reading lights

Have lights repaired by a Fiat Dealership in case of failure.

FUSES

 270) 271)

 115)



WARNING

270) Changing a fuse. All work must be carried out only by a qualified Fiat Dealership. The replacement of a fuse by a third party could cause a serious malfunction of the vehicle.

271) Installing electrical accessories. The vehicle's electrical system is designed to operate with standard or optional equipment. Before fitting other electrical equipment or accessories to your vehicle, contact a Fiat Dealership.



IMPORTANT

115) The Manufacturer shall not be held liable for expenses resulting from car repair or anomalies resulting from the installation of accessories not provided or recommended by the Manufacturer and not installed according to specifications, in particular when the combined consumption of all additional equipment connected exceeds 10 mA.

WHEEL CHANGING


(where the spare wheel is provided)

 272) 273) 274) 275) 276) 277) 278) 279)

TOOLS

(where provided)

Vehicles with spare wheel

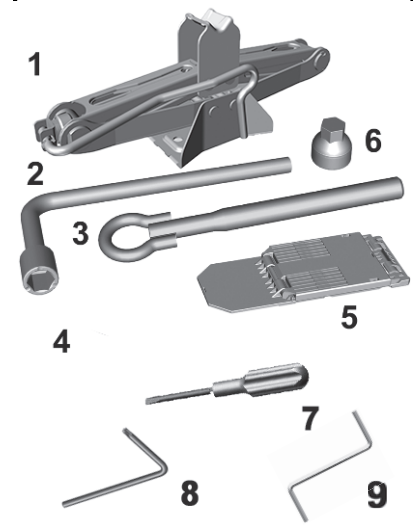


277

JJ000725

Open the load compartment.
The tools fig. 277 are located either
in the toolbag on the carpet or in the
toolbox under the carpet:

- ☐ Jack (1)
- ☐ Wheel wrench (2)
- ☐ Towing eye (3)
- ☐ (4): not available
- ☐ Chock (where provided) (5)
- ☐ Adapter for the locking wheel nuts (6)
(where provided)
- ☐ Screwdriver (7)
- ☐ Torx T30 screwdriver (where
provided) (8)
- ☐ Hex wrench (where provided) (9)

WARNING These tools are specific to
the vehicle and may vary according
to the level of equipment. Do not use
them for any other purpose.

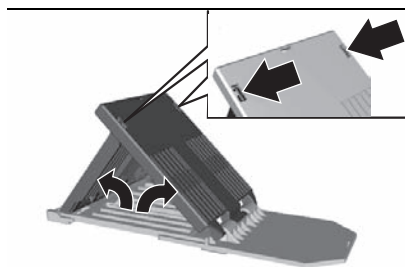

278

JJ000569

To use the chock, fold apart and stick
together (see fig. 278).


Spare wheel

(for versions/markets where provided)

The spare wheel can be classified as
a temporary spare wheel depending
on the size compared to the other
mounted wheels and country
regulations. In this case a permissible
maximum speed applies, even though
no label at the spare wheel indicates
this.

Only mount one temporary spare
wheel. Do not drive faster than 80
km/h. Take curves slowly. Do not use
for a long period of time.

 116)

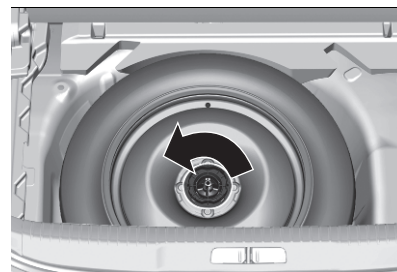

279

JJ000570

The spare wheel is located in the
load compartment beneath the floor
covering.

To remove:

- ☐ Open the floor cover
- ☐ The temporary spare wheel is
secured with a wing nut. Unscrew nut
and take out the spare wheel fig. 279



❑ When, after a wheel change, no wheel is placed in the spare wheel well, tighten the wing nut and close floor cover

❑ After wheel change back to full size wheel, place the temporary spare wheel in the well and secure with the wing nut

WHEEL CHANGING

Make the following preparations and observe the following information:

- ❑ stop the vehicle in a position that is not dangerous for oncoming traffic where you can replace the tyre safely, as far as possible from the side of the road. The ground must be as level and compact as possible. The front wheels must be in the straight ahead position
- ❑ switch on the hazard warning lights, apply the parking brake and put the PRND command on P (for Electric Drive Unit or Automatic gearbox), and leave the wheels steered
- ❑ switch off the engine
- ❑ before getting out of the vehicle, put on the reflective safety jacket (if required by the regulations in force). In any case, follow the road safety laws in force in the country where you are travelling
- ❑ place the chock provided under the wheel diagonally opposite the wheel to be changed

❑ if the ground on which the vehicle is standing is soft, a solid board (approx. 1 cm thick) should be placed under the jack

❑ take heavy objects out of the vehicle before jacking up

❑ alert any bystander that the vehicle is about to be raised: all persons should be kept away from the car and nobody must touch it until it has been lowered. Nor should any occupant remain in the vehicle


❑ never crawl under a jacked-up vehicle

❑ do not start the vehicle when it is raised on the jack

❑ before screwing in the wheel bolts, clean them




Depending on the wheel rim material (steel or alloy), two different bolts are available (fig. 280, fig. 281).

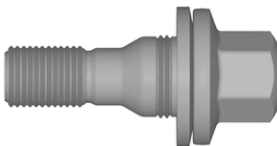

280

 JJ000270




281

JJ000271

Use the correct wheel bolts for the respective wheels.

Fitting the spare wheel

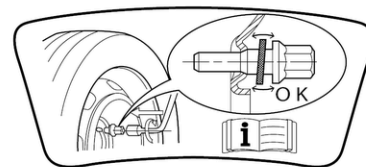

282

JJ000275

WARNING The spare wheel is secured by the conical contact of each bolt if the wheel bolts for the alloy wheels are used (fig. 282). In this case, the washers do not come into contact with the spare wheel.

❑ Disengage wheel bolt caps (where present) with the wheel bolt cover


remover. Steel wheels with cover: Pull off the wheel cover



283

F6S0099

- ❑ remove the antitheft bolt (where provided) with the dedicated tool
- ❑ attach the wheel wrench and loosen each wheel bolt by half a turn fig. 283. The wheels might be protected by locking wheel nuts (optional). To loosen these specific nuts first attach the adapter onto the head of the nut before installing the wheel wrench. The adapter is located in the tool bag

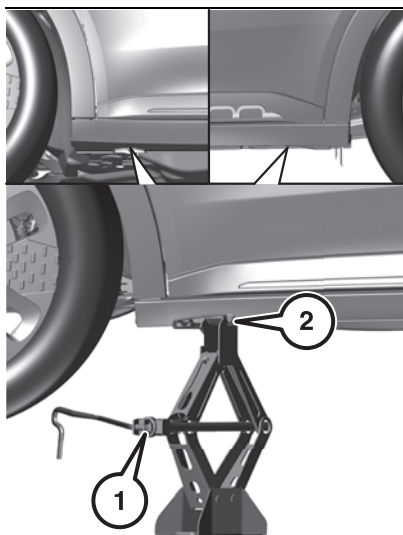


284

F6S0191

- ❑ ensure the jack is correctly positioned under the relevant vehicle jacking point
- ❑ turn the lever (1) clockwise until the jack bracket is firmly inserted in the lifting area (2) fig. 284 of the underdoor side member
- ❑ position the jack directly below the jacking point in a manner that prevents it from slipping fig. 285

WARNING Ensure that the jack is stable. If the ground is slippery or

loose, the jack may slip or collapse - risk of injury! Take care to position the jack strictly at one of the jacking points under the vehicle, ensuring that the head of the jack is centred under the contact area on the vehicle. Otherwise, there is a risk of damage to the vehicle and/or of the jack collapsing - risk of injury!

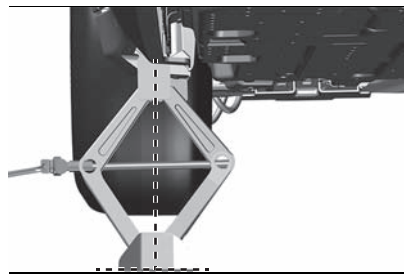

285

JJ000641

- ❑ ensure that the edge of the body fits into the notch of the jack (2) fig. 284
- ❑ with the jack correctly aligned rotate wheel wrench until wheel is clear of the ground
- ❑ unscrew the wheel nuts and store them in a clean place
- ❑ remove the wheel and replace it with the spare one
- ❑ screw on the wheel nuts by hand as far as possible



- ❑ if present, pre-tighten the security bolt using the wheel wrench equipped with the adapter for the locking wheel nut
- ❑ lower the vehicle and remove the jack
- ❑ install the wheel wrench ensuring that it is located securely and tighten each bolt in a crosswise sequence. If the vehicle is equipped with alloy wheels, note that the wheel bolts can also be used for the steel spare wheel. In this case, the spare wheel is secured by the conical contact of each bolt
- ❑ stow the replaced wheel, the vehicle tools and the adapter for the locking wheel nuts. The punctured wheel cannot be stored in place of the spare wheel. Place it in the boot
- ❑ check the tyre pressure of the installed tyre and the wheel nut torque as soon as possible

WARNINGS

- ❑ Never change more than one wheel at once.
- ❑ Use the jack only to change wheels in case of puncture, not for seasonal winter or summer tyre change.
- ❑ The jack is maintenance-free.
- ❑ If it should be absolutely necessary to operate on the road surface or near it, pay the utmost attention to cars in transit
- ❑ Pay particular attention when using the wrench to remove the wheel fastening bolts: it may have sharp edges
- ❑ Raising the car more than necessary may lower its stability. The jack may slip and injure those nearby. Do not raise the car more than required for the removal of the wheel
- ❑ Tyres with unidirectional tread can be recognised by arrows on the side of the tyre which indicate the direction of rotation. It is mandatory to comply with this direction. Only in this way, tyres maintain their characteristics in terms of grip, noise, resistance to wear and drainage on wet surfaces
- ❑ If, after a puncture, it is necessary to fit such a tyre the wrong way round, it will be necessary to continue driving with great care, since the tyre's performance is limited in these conditions. This precaution must be borne in mind above all when the road surface is wet
- ❑ In order to benefit completely from the unidirectional tread, it is advisable to restore all wheels to the correct direction of rotation as soon as possible
- ❑ Make sure that the spare wheel is fitted with the valve facing outwards. The wheel may be damaged if fitted incorrectly

- ❑ If the car has a hub cap or wheel cover, do not attempt to fit it on the spare wheel
- ❑ To prevent injury to persons, the complete tightening of the bolts must only be carried out when all of the car's wheels are on the ground, to prevent the car falling from the jack
- ❑ After having travelled for about 40 km, stop and check that the fastening bolts are tightened correctly
- ❑ Have the tightening of the spare wheel's bolts and its tyre pressure checked by a Fiat Dealership. Have the punctured tyre examined. After inspection, the technician will advise you on whether the tyre can be repaired or if it must be replaced.

After refitting the repaired standard wheel

Proceed as follows:

- ❑ stow the space-saver spare wheel in the dedicated housing of the boot
- ❑ place the jack and the other tools in the dedicated area of the boot
- ❑ correctly reposition the boot mat

Stowing a damaged full size wheel in the load compartment

The spare wheel well is not designed for other tyre sizes than the spare wheel. A damaged full size wheel must be stowed in the load compartment and secured properly.



WARNING

272) A punctured tire or jack thrown forward in a collision or hard stop, could endanger the occupants of the vehicle. For this reason, both the jack and the punctured tire should always be safely placed in the appropriate compartment in the trunk.

273) It is extremely dangerous to attempt to change a wheel on the side of the car next to the driving lane: make sure that the car is at a sufficient distance from the road, to avoid being run over.

274) Indicate the presence of the stationary car in accordance with current regulations: hazard warning lights, warning triangle, etc. Those on board should get out of the car, especially if it is heavily laden, and wait for the wheel to be replaced away from the threat posed by the traffic. On gradients or on unsurfaced roads, chock the wheels with the wedge provided (where provided).

275) The vehicle's driving characteristics will be modified with the spare tire fitted. Avoid sudden starting or stopping, sharp or fast turns. The total life of a space-saver spare wheel is approximately 3,000 km, after which it must be replaced by another wheel of the same type. Never install a standard tire on a rim that is designed for use with a space-saver spare wheel. Have the tire repaired and refitted as soon as possible. Using two or more space-saver wheels at the same time is forbidden. Do not grease the threads of the fastening bolts before fitting them: they might slip out when driving!

276) The space-saver wheel is specific to your car: do not use it on other models, or use the space-saver wheel of other models on your car. The space-saver wheel must only be used in the event of an emergency. Never use it for more than strictly necessary and never exceed 80 km/h (50 mph). "Warning! For temporary use only! 80 km/h (50 mph) max!" Replace with standard wheel as soon as possible. Never remove or cover the sticker on the space-saver wheel. Never apply a wheel cap on a space-saver wheel. The vehicle's driving characteristics will be modified with the space-saver wheel fitted. Avoid violent acceleration and braking, abrupt steering and fast cornering.

277) The jack is a tool developed and designed only for changing a wheel, if a tire gets punctured or damaged, on the car with which it is supplied or on other cars of the same model. Any other use, e.g. to jack up other vehicle models or different things, is strictly prohibited. Never use it to carry out maintenance or repairs under the vehicle or to change summer/winter wheels and vice versa; we advise you to contact a Fiat Dealership. Never go under the raised vehicle: use it only in the positions indicated. Do not use the jack to lift loads heavier than that indicated on the label affixed to the jack. Never start the engine with vehicle raised. If the vehicle is raised more than necessary, everything can become more unstable, with the risk of the vehicle dropping violently. Therefore, only lift the car just enough to access the space-saver spare wheel (where provided).

278) When turning the jack handle make sure that it can turn freely without scraping your hand against the ground. The moving components of the jack ("worm screw" and joints) can also cause injuries: do not touch them. If you come into contact with lubricating grease, clean yourself thoroughly.

279) The space-saver wheel cannot be fitted with snow chains. If a front (drive) tyre is punctured and chains are needed, use a standard wheel from the rear axle and install the space-saver wheel on the rear axle. In this way, with two normal drive wheels at the front axle, it is possible to use snow chains.

280) Do not grease wheel bolts.

281) Ensure to use always the correct wheel bolts if changing the wheels. When installing the spare wheel for temporary usage, the bolts for alloy wheels can also be used.



IMPORTANT

116) The use of a spare wheel that is smaller than the other wheels or in combination with winter tyres could affect driveability. Have the defective tyre replaced as soon as possible.



TYRE REPAIR KIT

(where provided)

Made up of a compressor and a sealant cartridge, it allows you to carry out a temporary repair of the tyre so that you can drive to the nearest garage.

Minor damage to the tyre tread can be repaired with the tyre repair kit. It is designed to repair most punctures located on the tyre tread.

Do not remove foreign bodies from the tyres.

Tyre damage exceeding 4 mm or that is at tyre's sidewall cannot be repaired with the tyre repair kit.

⚠ 282) 283)

⚠ 117)


⚠ 7)

In the case of a flat tyre:

❑ apply the parking brake and engage the reverse gear or P


❑ the tyre repair kit is in the load compartment below the floor cover,

- For Electric versions, see fig. 286
- For other versions, the compressor is in position (1) fig. 287, the bottle is under the cover (2)

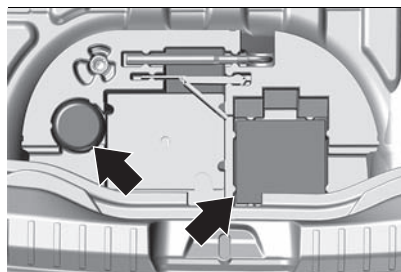

286

JJ000667

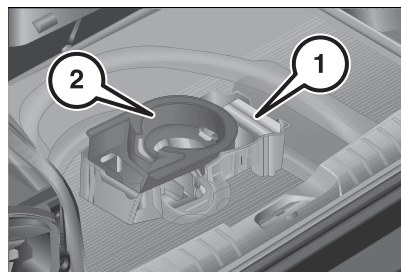


287

JJ000724

❑ remove the sealant bottle and the compressor


❑ pull speed limit label from the top of the sealant bottle and place it in driver's visible area

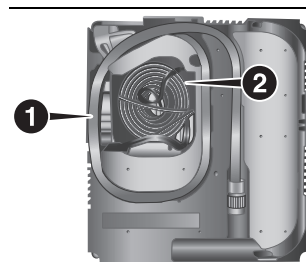

288

JJ000658


❑ remove the electrical connection cable (2) fig. 288 and air hose (1) from the stowage compartments on the underside of the compressor

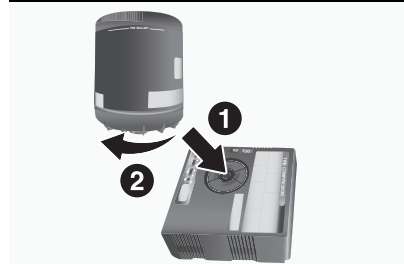

289

JJ000702


❑ join the sealant bottle to the compressor (1) fig. 289 and rotate the bottle 1/4 turn clockwise (2)

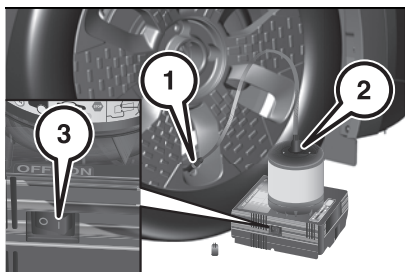

290

F6S0116

- ❑ unscrew the valve cap from the defective tyre and screw the filler hose to the tyre valve (1) fig. 290
 - ❑ screw the other end of the filler hose to the sealant bottle (2) fig. 290
 - ❑ connect the compressor plug to the 12V power outlet. To avoid discharging the conventional battery, we recommend running the engine
- NOTE** The vehicle's electric system allows the connection of the compressor to the 12 V power supply for long enough to repair a tyre after a puncture.
- ❑ turn the switch (3) fig. 290 to position I (ON): all the sealant is pumped into the tyre, then the tyre is being inflated

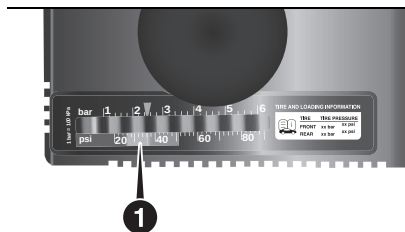


291

JJ000703

- ❑ check the tyre pressure on the gauge (1) fig. 291: if in 15 minutes the indicator is not in the green area, the tyre is too badly damaged. In this case turn the switch (3) fig. 290 to position 0 (OFF) and seek the assistance of a Fiat Dealership
 - ❑ If the indicator reaches the green area, turn the switch (3) fig. 290 to position 0 (OFF), disconnect the electrical connection cable from the 12V power outlet
 - ❑ detach the tyre repair kit from the tyre valve and reapply the valve cap
 - ❑ remove sealant bottle from compressor by rotating it 90° anticlockwise and remove any excess sealant using a cloth
- Start driving in maximum 1 minute. Maximum speed: 80 km/h (50 mph). After driving approximately 15 minutes, stop and check the tyre pressure.

For checking the tyre pressure:

- ❑ screw one end of the compressor air hose directly onto tyre valve and the other end to the compressor, without connecting the sealant bottle, fig. 292

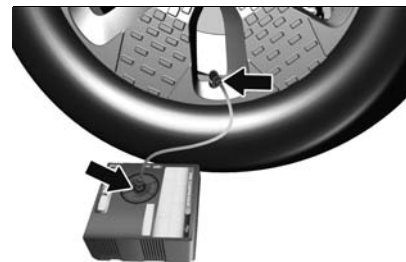

292

F6S0192

- ❑ turn the switch (3) fig. 290 to position I (ON)

If the indicator on the gauge (1) fig. 291 reaches the prescribed pressure (see "Wheels and tyres" chapter) within 15 minutes, stop the compressor turning the switch (3) fig. 290 to position I (ON), unscrew the compressor air hose from the tyre valve and reapply the valve cap.

If the indicator doesn't reach the prescribed pressure within 15 minutes, turn the switch (3) to position 0 (OFF) and seek the assistance of a Fiat Dealership.

Disconnect the compressor from the 12V power outlet.



Stow away tyre repair kit in load compartment.

The vehicle can be used for maximum 1000 km (620 mi) at a maximum speed: 80 km/h (50 mph). Tyre repair kit provides a temporary repair, therefore the tire must be examined and repaired by a specialist as soon as possible.

If the indicator doesn't reach the prescribed pressure within 15 minutes or if a loss of pressure is found after the second check the vehicle must not be used. Stop the compressor and seek the assistance of a Fiat Dealership.

WARNING The driving characteristics of the repaired tyre are severely affected, therefore have this tyre replaced. If unusual noise is heard or the compressor becomes hot, turn compressor off for at least 30 min. The built-in safety valve opens at a pressure of 600 kPa (6 bar).



WARNING

282) **WARNING!** Do not exceed 80 km/h (50 mph). Avoid sudden acceleration or braking. The Tyre repair kit provides a temporary repair, therefore the tire must be examined and repaired by a specialist as soon as possible. Before using the Tyre repair kit, make sure that the tire isn't

excessively damaged and that the rim is in good condition, otherwise do not use it and call roadside assistance. Do not remove foreign bodies from the tire. Do not let the compressor turned on for more than 15 consecutive minutes - overheating hazard.

283) *The information required by the applicable regulation is indicated on the Tyre repair kit cartridge label. Carefully read the cartridge label before use and avoid improper use. The Tyre repair kit should be used by adults and cannot be used by children.*



IMPORTANT

117) *The sealant fluid is effective with external temperatures from -30°C. The sealant fluid has an expiry date and must be replaced periodically. It is possible to repair tyres with damage on the tread up to a maximum diameter of 6 mm. Show the cartridge and the label to the personnel who must handle the tyre treated with the Tyre repair kit.*



IMPORTANT

7) *Dispose of the bottle and the sealant liquid properly. Have them disposed of in compliance with national and local regulations.*

JUMP STARTING

WARNING Charging should be slow at a low ampere rating for approximately 24 hours. Regardless of the duration of the operation, it is always recommended to disconnect the battery from the device as soon as charging is complete to avoid potential damage.

If the vehicle's battery is flat, the engine can be started using a backup battery (either external or from another vehicle) and jump leads or using a battery booster.

A vehicle with a discharged conventional battery can be started using jump leads and the conventional battery of another vehicle.

284) 285) 286) 287) 288) 289)

118) 119) 120) 121) 122)

g)

- ☐ Never expose the conventional battery to naked flames or sparks.
- ☐ A discharged conventional battery can already freeze at a temperature of 0 °C. Defrost the frozen battery before connecting jump leads.
- ☐ Use a booster battery with the same voltage (12 V). Its capacity (Ah) must not be much less than that of the discharged conventional battery.

- ❑ Use jump leads with insulated terminals and a cross section of at least 16 mm².
- ❑ Do not disconnect the discharged conventional battery from the vehicle.
- ❑ Do not lean over the conventional battery during jump starting.
- ❑ Do not allow the terminals of one lead to touch those of the other lead.
- ❑ Apply the parking brake, transmission in P.



293

9650277

Symbols

No sparks or naked flames, no smoking.

Always protect your eyes.
Explosive gases can cause blindness and injury.

Keep the vehicle's battery out of the reach of children.



The vehicle's battery contains sulphuric acid which can make you go blind or cause severe burns.





For more information, refer to the handbook.



Explosive gases can be present close to the battery.

STARTING USING A BACKUP BATTERY OR A BOOSTER (ELECTRIC VERSIONS)

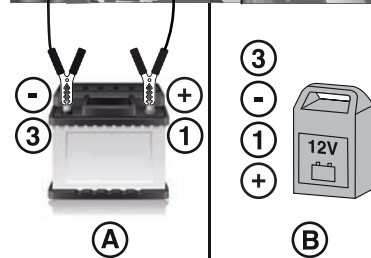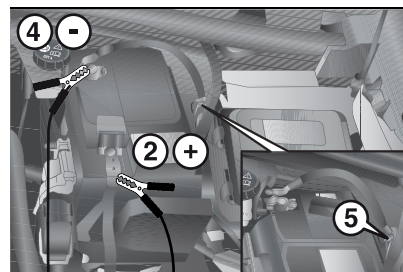

294

F6S0239

Starting using a backup battery (case A)

Cable connection order:

1. Connect the red cable to the positive terminal (+) of the backup battery (1) fig. 294.
2. Connect the other end of the red cable to the positive terminal of the discharged battery (at the metal elbow) (2).
3. Connect the black cable to the negative terminal of the backup battery (3).
4. Connect the other end of the black cable from the backup battery to a fastening bracket on the 12V battery's negative (-) (4) or to the vehicle grounding point (5) near the 12V battery in the engine compartment.

Starting using a booster (case B)

Cable connection order:

1. Connect the red cable of the booster (1) to the positive terminal (+) of the discharged battery (at the metal elbow) (2) fig. 294.
2. Connect the black cable from the booster (3) to a fastening bracket on the 12V battery's negative (-) (4) or to the vehicle grounding point (5) near the 12V battery in the engine compartment.



Route the leads so that they cannot catch on rotating parts in the engine compartment.

To start the engine:

1. Start the engine of the vehicle providing the jump.
2. After 5 minutes, start the other engine. Start attempts should be made for no longer than 15 seconds at an interval of 1 minute.
3. Allow both engines to idle for approx. 3 minutes with the leads connected.
4. Switch on electrical consumers e.g. headlights, heated rear window.
5. Reverse above sequence exactly when removing leads.

STARTING USING A BACKUP BATTERY OR A BOOSTER (HYBRID VERSIONS)

The hybrid system starts the vehicle, but a 12 V supply is required.

There are several reasons why the vehicle cannot be started. If the 12 V battery is flat, the 12 V power supply can be ensured using a backup battery (either external or from another vehicle) and jumpleads or using a battery booster or using a battery charger.

Never use a 24 V or higher battery booster.

Check beforehand that the backup battery has a nominal voltage of 12 V and a capacity at least equal to that of the discharged battery.

The two vehicles must not be in contact with each other.

Switch off all electricity-consuming equipment on both vehicles (audio system, wipers, lighting, etc.).

Make sure that the jump leads are well away from the engine's moving parts (fan, belt, etc.). Do not disconnect the (+) terminal while the engine is running. Lift the plastic cover on the (+) terminal, if the vehicle has one.

Proceed as follows:

Starting using a backup battery or an assisting vehicle (case A fig. 294)

- Connect the red cable to the positive terminal (+) of the discharged battery (at the metal elbow) (2) fig. 294, then to the positive (+) terminal of the backup battery (1).
- Connect one end of the black cable to the negative (–) terminal of the backup battery (1) (or to an earth point on the assisting vehicle).
- Connect the other end of the black cable to the vehicle grounding point (5) fig. 294 near the 12V battery in the engine compartment.

□ In case of use of an assisting vehicle: start the engine on the assisting vehicle and leave it running for a few minutes.

□ Operate the starter on the broken down vehicle and let the engine run. If the engine does not start immediately, switch off the ignition and wait a few moments before trying again.

□ Wait for it to return to idle.

□ Disconnect the jump leads

Reverse above sequence exactly when removing leads.

Refit the plastic cover to the (+) terminal, if the vehicle has one.

Allow the engine to run for at least 30 minutes, with the vehicle stationary, so that the battery reaches an adequate state of charge. Driving immediately without having reached a sufficient level of charge may affect some of the vehicle's functions (e.g. e-Auto mode).

Starting using a booster (case B fig. 294)

- Connect the red cable to the positive terminal (+) of flat battery (at the metal elbow) (2) fig. 294, then to the positive (+) terminal of the booster (1).
- Connect the end of the black cable of the booster to the vehicle grounding point (5) fig. 294 near the 12V battery in the engine compartment.
- Operate the starter on the broken down vehicle and let the engine run. If the engine does not start immediately,

switch off the ignition and wait a few moments before trying again.

- ❑ Wait for it to return to idle.
- ❑ Disconnect the jump leads

Reverse above sequence exactly when removing leads.

Refit the plastic cover to the (+) terminal, if the vehicle has one.

Allow the engine to run for at least 30 minutes, with the vehicle stationary, so that the battery reaches an adequate state of charge. Driving immediately without having reached a sufficient level of charge may affect some of the vehicle's functions (e.g. e-Auto mode).



WARNING

284) Be extremely careful when starting with jump leads. Any deviation from the following instructions can lead to injuries or damage caused by battery explosion or damage to the electrical systems of both vehicles.

285) Avoid contact of the battery fluid with eyes, skin, fabrics and painted surfaces. The fluid contains sulphuric acid which can cause injuries and damage in the event of direct contact.

286) Do not get too close to the radiator cooling fan: the electric fan may start; danger of injury. Scarves, ties and other loose clothing might be pulled by moving parts.



IMPORTANT

118) Never jump start another vehicle with an electric vehicle.

119) Never connect the negative jump lead to the metal part of the electronic control units or at the back of the headlamps. Risk of destroying the electronic control units and/or headlamps! Connect to the remote earth point provided for this purpose.

120) With automatic gearbox/Electric Drive Unit, never try to start the engine by pushing the vehicle.

121) Never start the engine by connecting a battery charger. Never use a 24 V or higher battery booster. Check beforehand that the backup battery has a nominal voltage of 12 V and a capacity at least equal to that of the discharged battery.

287) Remove any metal objects (e.g. rings, watches, bracelets), that might cause an accidental electrical contact and cause serious injury.

288) Protect your eyes and face before handling the battery. All operations on the battery must be carried out in a well ventilated area and away from naked flames and sources of sparks, to avoid any risk of explosion or fire. Wash your hands afterwards.

289) Never try to charge a frozen battery - risk of explosion! If the battery has frozen, have it checked by a Fiat Dealership, who will verify that the internal components have not been damaged and that the case has not cracked, which could lead to a risk of leakage of toxic and corrosive acid.

The two vehicles must not be in contact with each other. Switch off all electricity-consuming equipment on both vehicles (audio system, wipers, lighting, etc.). Make sure that the jump leads are well away from the engine's moving parts (fan, belt, etc.). Do not disconnect the (+) terminal while the engine is running.

122) Driving immediately without having reached a sufficient level of charge may affect some of the vehicle's functions (e.g. Stop-Start).



IMPORTANT

8) These batteries contain harmful substances (sulphuric acid and lead). They must be disposed of in accordance with regulations and must never under any circumstances be discarded with household waste. Dispose of used batteries at a designated collection point.



TOWING

TOWING THE VEHICLE

 290) 291) 292) 293) 294) 295)

A professional towing service must be called if:

- ☐ broken down on a motorway or main road
- ☐ not possible to put the gearbox into neutral, unlock the steering, or release the parking brake
- ☐ not possible to tow a vehicle with an automatic gearbox, with the engine running
- ☐ towing with only two wheels on the ground
- ☐ no approved towbar available

WARNING For electric versions: before any intervention, with the ignition on, depress the brake pedal and select mode N, then switch off the electric transmission system (READY indicator lamp off). Always call on professionals for recovery of the vehicle on a flatbed lorry or trailer. Use the towing eye only to free the vehicle if it is stuck, or to secure it for recovery on a flatbed lorry or trailer.


TOWING CONSTRAINTS

1.2 100 hp Hybrid FWD, fig. 295

- ☐ Rear wheels on the ground: YES (allowed only if the Electric Parking Brake is released)

NOTE: it is only authorized for short distances (about 15 km (9 miles)) and at reduced speed (maximum 25 km/h (15 mph)).

- ☐ Flatbed: YES
- ☐ Rear wheels on the flatbed, front wheels on the trailer: YES
- ☐ Front wheels on the ground: NO

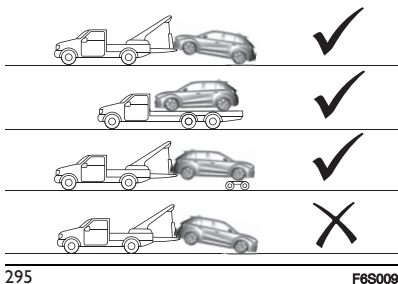


295

F6S0098

e Full Electric 50 kWh battery capacity with Electric Drive Unit, fig. 296


- ☐ Rear wheels on the ground: NO
- ☐ Flatbed: YES
- ☐ Rear wheels on the flatbed, front wheels on the trailer: NO
- ☐ Front wheels on the ground: NO

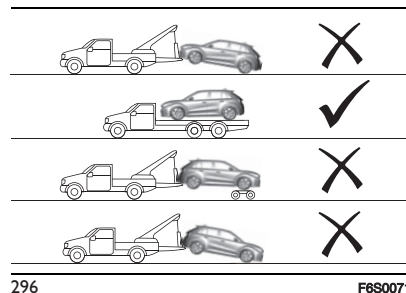

296

F6S0071

TOWING PROCEDURE

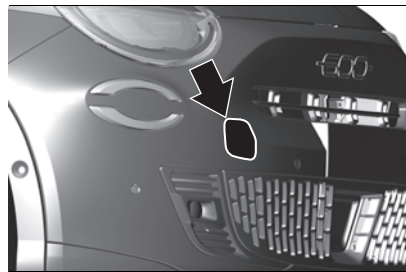


297

F6S0069


Remove the cap fig. 297 using the screwdriver.

The towing eye is located in a box (or directly in the toolbag) below the floor cover in the load compartment fig. 298.

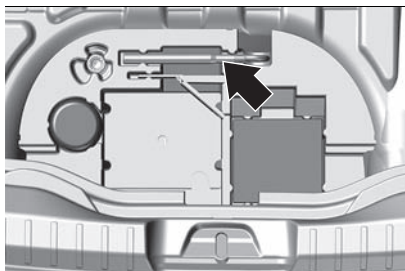

298

JJ000668

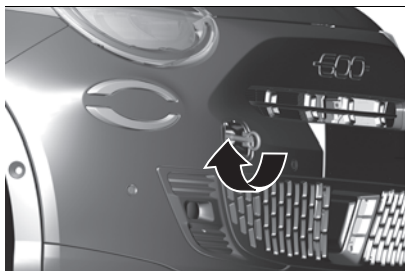

299

F6S0070

Screw in the towing eye as far as it will go until it stops in a horizontal position fig. 299.

Attach the tow rod to the towing eye. The towing eye must only be used for towing and not for recovering the vehicle.

Switch on ignition to release steering wheel lock and to permit operation of brake lights, horn and windscreen wiper.



123)

Refer to the "Free-wheeling" chapter in this section.



124)

When the engine is not running, considerably more force is needed to brake and steer.

To prevent the entry of exhaust gases from the towing vehicle, switch on the air recirculation and close the windows. After towing, unscrew the towing eye. Insert cap with the flange into the recess and fix cap by pushing.



WARNING

290) Observe the legislation in force in the country where you are driving. Ensure that the weight of the towing vehicle is higher than that of the towed vehicle. The driver must remain at the wheel of the towed vehicle and must have a valid driving licence. When towing a vehicle with all four wheels on the ground, always use an approved towing arm; rope and straps are prohibited. The towing vehicle must move off gently.

291) For versions with radio remote control, turn the ignition key to the ENGINE position and then to STOP without removing it before towing. The steering column will automatically lock when the key is removed and the wheels cannot be steered. On versions with automatic transmission/Electric Drive Unit check that the PRND command is in N position. For

versions with electronic key system, set the ignition device to the ENGINE position and then to STOP, without opening the door.

292) The brake servo and the electromechanical power steering will not work while the vehicle is being towed. You will therefore need to apply more force on the brake pedal and steering wheel. Do not use flexible ropes when towing, and avoid jerky movements. While towing, make sure that the trailer hitch does not damage any components it is touching. When towing the car, you must comply with all specific traffic regulations and adopt an appropriate driving behaviour. Do not start the engine while towing the vehicle. Before tightening the ring, clean the threaded housing thoroughly. Make sure that the ring is fully screwed into the housing before towing the car.

293) The front and rear tow hooks should be used only for emergencies on the road. You are allowed to tow the vehicle for short distances using an appropriate device in accordance with the highway code (a rigid bar), to move the vehicle on the road in readiness for towing or transport via a breakdown vehicle. Tow hooks MUST NOT be used to tow vehicles off the road or where there are obstacles and/or for towing operations using cables or other non-rigid devices. In compliance with the above conditions, towing must take place with the two vehicles (one towing, the other towed) aligned as much as possible along the same centre line.

294) In case of rescue: park the vehicle at a safe distance from the other vehicles.



295) *In case of rescue, for Electric vehicles: high-voltage battery, re-ignition is possible!*



IMPORTANT

123) *Deactivate the driver assistance systems like active emergency braking, otherwise the vehicle may automatically brake during towing.*

124) *Drive slowly. Do not drive jerkily. Excessive tractive force can damage the vehicle.*

FREE-WHEELING

(with automatic transmission and electric parking brake)

In certain situations, it is necessary to put the vehicle into free-wheeling mode (e.g. towing, on a rolling road, automatic car wash (Wash mode), rail or sea transport).

Release procedure

❑ with the vehicle stationary and the engine running, depress the brake pedal and select mode N

Within 5 seconds:

❑ depress and hold the brake pedal, then observe this order: switch off the ignition and move the push selector forwards or backwards

❑ release the brake pedal, then switch on the ignition again

❑ place your foot on the brake and press the electric parking brake control to release it
❑ release the brake pedal, then switch off the ignition

WARNING A message is displayed on the instrument panel to confirm the unlocking of the wheels for 15 minutes. In Wash mode, a message may appear on the instrument panel to indicate that the audio system cannot be updated.

Reverting to normal operation

❑ while depressing the brake pedal, restart the engine

WARNING With electronic key, you must not depress the brake pedal while switching the ignition on again, then switching it off. If you do, the engine will start, requiring you to restart the procedure.

SERVICING AND MAINTENANCE

Proper maintenance allows car performance to be maintained over time, operating costs to be contained, and safety system performance to be safeguarded.
This section explains how.

SERVICE INFORMATION	232
CHARGING THE CONVENTIONAL 12V BATTERY	232
MAINTENANCE	236
JACKING POSITIONS	248
WHEELS AND TYRES.....	248
VEHICLE STORAGE	249
EXTERIOR CARE	250
INTERIOR CARE	253



SERVICE INFORMATION

In order to ensure economical and safe vehicle operation and to maintain the value of your vehicle, it is of vital importance that all maintenance work is carried out at the proper intervals as specified.

The detailed, up-to-date service schedule for your vehicle is available at the Fiat Dealership.

Severe operating conditions exist if one or more of the following circumstances occur frequently: Cold starting, stop and go operation, e.g. for taxis and police vehicles, trailer operation, mountain driving, driving on poor and sandy road surfaces, increased air pollution, presence of airborne sand and high dust content, driving at high altitude and large variations of temperature.

Under these severe operating conditions, certain service work may be required more frequently than the regular service interval indicated in the service display. Contact a Fiat Dealership for customised service schedules.

CHARGING THE CONVENTIONAL 12V BATTERY

For optimum service life of the battery, it is essential to maintain an adequate state of charge.

In some circumstances, it may be necessary to charge the battery:

- ❑ when using the vehicle mainly for short journeys
 - ❑ if the vehicle is to be taken off the road for several weeks
- Consult a Fiat Dealership.

WARNINGS

WARNING After setting the ignition device to STOP and closing the driver's door, wait at least one minute before disconnecting the electrical supply from the conventional battery. When reconnecting the electrical supply to the conventional battery, make sure that the ignition device is in the STOP position and the driver's door is closed.

WARNING Charging should be slow at a low ampere rating for approximately 24 hours. Regardless of the duration of the operation, it is always recommended to disconnect the battery from the device as soon as charging is complete to avoid potential damage.

WARNING The cables of the electrical system must be correctly reconnected to the conventional battery, i.e. the positive cable (+) to the positive terminal and the negative cable (-) to the negative terminal.

The conventional battery terminals are marked with the positive (+) and negative (-) terminal symbols, and are shown on the cover of the battery itself. The battery terminals must also be corrosion-free and firmly secured to the terminals. If a "quick-type" conventional battery charger is used with the battery fitted on the car, before connecting it disconnect both cables of the conventional battery itself. Do not use a "quick-type" battery charger to provide the starting voltage.


CHARGING THE CONVENTIONAL 12V BATTERY USING A BATTERY CHARGER

WARNING To charge the vehicle's battery yourself, use only a charger compatible with lead-acid batteries with a nominal voltage of 12 V.

WARNING Follow the instructions provided by the manufacturer of the charger. Never reverse polarities.

WARNING For Hybrid version: the hybrid system is connected to the 12 V network through the DC/DC converter. Any operation may affect the overall behaviour of the system. To charge the vehicle's battery yourself, use only a charger compatible with lead-acid batteries with a nominal voltage of 12 V.

NOTE It is not necessary to disconnect the battery

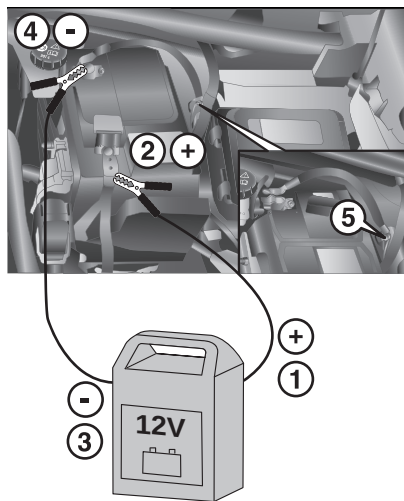


300

F6S0240

Proceed as follows:

- ❑ switch the ignition off
 - ❑ switch off all electrical consumers (audio system, lighting, wipers, etc.)
 - ❑ switch off charger before connecting the cables to the battery, so as to avoid any dangerous sparks
 - ❑ ensure that the charger cables are in good condition
 - ❑ lift the plastic cover on the (+) terminal, if the vehicle has one
 - ❑ connect the positive (+) red cable of the charger (1) fig. 300 to the positive (+) terminal of battery (2)
 - ❑ connect the negative (-) black cable of the charger (3) to a fastening bracket on the 12 V battery's negative (-) terminal (4) or to the vehicle grounding point (5) near the 12 V battery in the engine compartment
 - ❑ switch on the battery charger. At the end of the charging operation, switch off charger before disconnecting the cables from battery
- The label applied on the fuses cover fig. 301 remind the correct connections and to use a booster battery with the same voltage (12 V).

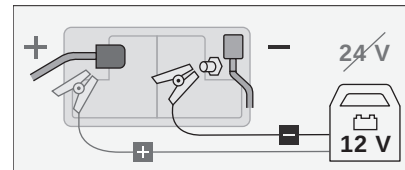

301

F6S0193

CHARGING THE AUXILIARY 48 V BATTERY USING A 12 V BATTERY CHARGER

(Hybrid versions)

In case of failure, especially after long storage, the 48 V battery may be discharged and require a charging process.

WARNING Do not try to charge the hybrid system directly. The hybrid system is connected to the 12 V network through the DC/DC converter. Any operation may affect the overall behaviour of the system.

WARNING Only use a specific 12 V battery charger capable of maintaining 13.5 V with a high level of current 40-50 A (approx. 600 W). To charge the vehicle's battery yourself, use only a charger compatible with lead-acid



batteries with a nominal voltage of 12 V. Never use a 24 V or higher battery booster.

WARNING Follow the instructions provided by the manufacturer of the charger. Never reverse polarities.

NOTE It is not necessary to disconnect the battery.

Proceed as follows:

- ❑ Switch the ignition off
- ❑ Switch off all electrical consumers (audio system, lighting, wipers, etc.)
- ❑ Switch off charger before connecting the cables to the 12 V battery, so as to avoid any dangerous sparks.
- ❑ Ensure that the charger cables are in good condition.
- ❑ Lift the plastic cover on the (+) terminal, if the vehicle has one.
- ❑ Connect the cables of charger as follows:
 - the positive (+) red cable of the charger (1) fig. 300 to the positive (+) terminal of battery (2),
 - the negative (-) black cable of the charger (3) to a fastening bracket on the 12 V battery's negative (-) terminal (4) or to the vehicle grounding point (5) near the 12 V battery in the engine compartment.

❑ Open the driver's door and turn the ignition on without pressing the brake pedal (to wake up the vehicle).

The hybrid system will automatically start charging the 48 V battery after 1 minute with a 12 V power supply higher than 13.5 V. The current supplied by the battery charger should be about 30-50A.

When the appropriate energy level is reached in the 48V battery (between 30 minutes to 40 minutes depending on 12V battery state of charge), the hybrid system automatically stops the charging process of the 48 V battery.

- ❑ At the end of the charging operation, switch off charger (2) before disconnecting the cables from 12 V battery (1).
- ❑ Refit the plastic cover to the (+) terminal, if the vehicle has one.
- ❑ Operate the starter on the vehicle and let the engine run.
- ❑ Wait for it to return to idle.
- ❑ Allow the engine to run for at least 20 minutes, with the vehicle stationary (in a ventilate area to avoid accumulation of exhaust gases), so that the 48V battery reaches an adequate state of charge.

DISCONNECTING/ RECONNECTING THE 12V BATTERY

(Hybrid versions)

In order to maintain an adequate state of charge for starting the engine, we recommend disconnecting the battery if the vehicle is to be unused for an extended period.

Before disconnecting the battery:

- ❑ close all openings (doors, boot, windows)
- ❑ switch off all electricity-consuming devices (audio system, wipers, lamps, etc.)
- ❑ switch off the ignition and wait for 4 minutes

After accessing the battery, it is only necessary to disconnect the (+) terminal.

Following reconnection

After reconnecting the battery, turn on the ignition and wait 1 minute before starting the engine, to enable the electronic systems to initialise.

WARNING For right-hand drive versions, when the total distance recorder has reached 62 miles (100 km), you must wait approximately 15 minutes before starting the engine.

If minor problems nevertheless persist following this operation, contact a Fiat dealer or a qualified workshop.

Referring to the relevant chapter, reinitialise certain equipment:

- ☐ Remote control key or electronic key (depending on version) (see "Keys locks" chapter in the "Knowing your car" section)
- ☐ Electric windows (see "Windows" chapter in the "Knowing your car" section)
- ☐ Date and time (see "Uconnect™ 10.25"/10.25" NAV" chapter in the "Multimedia" section)
- ☐ Preset radio stations (see "Uconnect™ 10.25"/10.25" NAV" chapter in the "Multimedia" section)


WARNING After reconnecting the battery, the time indication will flash for a certain period of time. Reset the time manually (refer to "Settings">"System">"Setting the date and time" in the "Uconnect™ 10.25"/10.25" NAV" chapter in the "Multimedia" section for the procedure) or wait for GPS to retrieve data and update time.

WARNING After reconnecting the battery, a message that state the Automatic Braking System fault is displayed on the instrument panel display when the ignition is switched on. This operation is perfectly normal. The message will disappear while driving.

QUICK-RELEASE TERMINAL CLAMP

(Where provided)

Disconnecting the (+) terminal

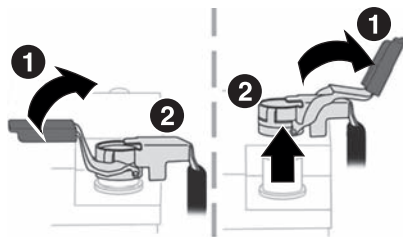


302

F6S0241

Proceed as follows:

- ☐ lift the plastic cover on the (+) terminal (where provided)
- ☐ Raise lever (1) fully to release clamp (2)
- ☐ Remove clamp (2) by lifting it off.

Reconnecting the (+) terminal

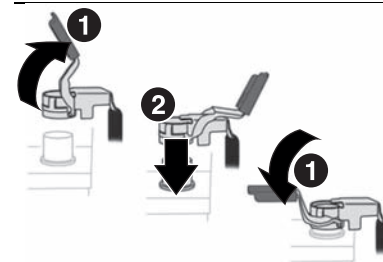

303

F6S0242

Proceed as follows:

- ☐ raise lever (1) fully
- ☐ Refit open clamp (2) on the (+) terminal.
- ☐ Push clamp (2) fully down.
- ☐ Lower lever (1) to lock clamp (2).
- ☐ Lower the plastic cover on the (+) terminal (where provided).


WARNING Do not force the lever when pressing on it, as if the clamp is not positioned correctly, locking will then not be possible. Start the procedure again.



MAINTENANCE

ENGINE COMPARTMENT

Hybrid versions

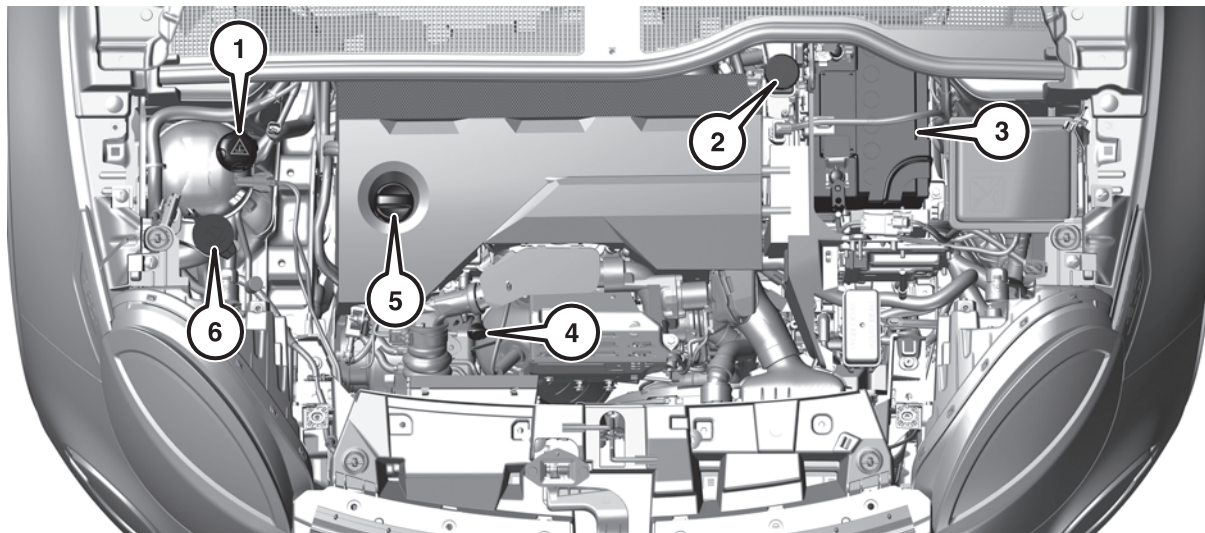


304

F6S0106

1. Engine coolant reservoir - 2. Brake fluid reservoir - 3. Conventional battery - 4. Engine oil dipstick - 5. Engine oil filler cap - 6. Screenwash fluid reservoir

Electric versions

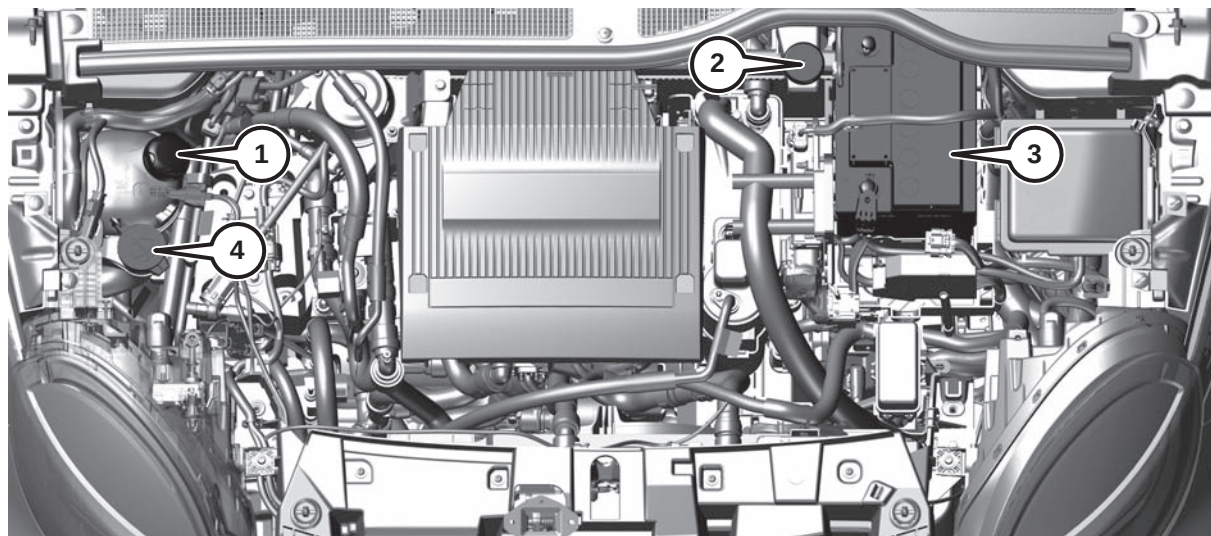

305

F6S0072

1. High-voltage system coolant reservoir - 2. Brake fluid reservoir - 3. Conventional battery - 4. Screenwash fluid reservoir


NOTE The cooling tank of the high-voltage system cannot be refilled by the driver. If it is necessary to top up the fluids, contact a Fiat Dealership.



AIR INTAKE

⚠ 296)

⚠ 297)

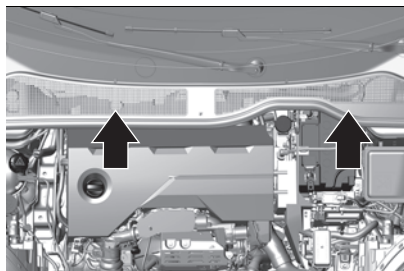

306

F6S0107

The air intake in front of the windscreen in the engine compartment fig. 306 must be kept clear to allow air intake. Remove any leaves, dirt or snow. Depending on the environment and the use of the vehicle (e.g. dusty atmosphere, city driving), change the air filter twice as often, if necessary.

SERVICE

For optimal cooling performance, it is recommended to annually check the climate control system, starting three years after initial vehicle registration, including:

- ☐ functionality and pressure test
- ☐ heating functionality
- ☐ leakage check

- ☐ check of drive belts
- ☐ cleaning of condenser and evaporator drainage
- ☐ performance check

ACCESSORIES AND VEHICLE MODIFICATIONS


We recommend the use of genuine parts and accessories and factory approved parts specific for your vehicle type. We cannot assess or guarantee reliability of other products - even if they have a regulatory or otherwise granted approval.

Any modification, conversion or other changes made to standard vehicle specifications (including, without limitation, software modifications, modifications of the electronic control units) may invalidate the warranty offered by the Manufacturer. Furthermore, such changes may affect driver assistance systems, may impact fuel consumption, CO₂ emissions and other emissions of the vehicle and cause the vehicle to no longer conform to the operating permit, impacting the validity of your vehicle registration.

⚠ 125)

PERFORMING WORK

⚠ 126) 127) 128)

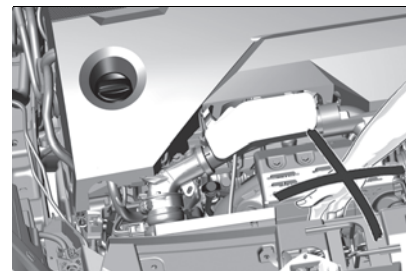

307

F6S0108

⚠ 298) 299) 300)



308

F6S0194



309

F6S0195



301)



129)

PRESCRIPTIONS FOR HYBRID VERSIONS

The electrical circuit of the hybrid system is identified by purple cables.

302) 303) 304) 305) 306) 307) 308)

PRESCRIPTIONS FOR FULL ELECTRIC VERSIONS



310

F6S0196

The electrical circuit of the Full Electric vehicle is identified by orange cables and its components are marked with the symbol fig. 310.

309) 310) 311) 312)

CHECKING LEVELS

Check all of the following levels regularly in accordance with the manufacturer's service schedule. Top them up if required, unless otherwise indicated.

If a level drops significantly, have the corresponding system checked by a dealer or a qualified workshop.

313) 314) 315) 316) 317) 318)

130) 131)

Used products

319)



9)

Engine oil




132)

Check the engine oil level manually on a regular basis to prevent damage to the engine. Ensure that the correct specification of engine oil is used.

The maximum engine oil consumption is 0.6 l per 1000 km.

Check with the vehicle on a level surface. The engine must be at operating temperature and switched off for at least 5 min.

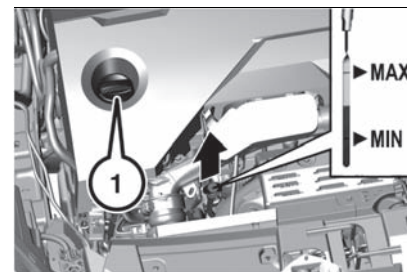

311

F6S0109

Pull out the dipstick, wipe it clean, reinsert it fully, pull out and read the engine oil level fig. 311.

Check that the oil level is between the MIN and MAX references on the dipstick. When the engine oil level has dropped to the MIN mark, top up



the engine oil through the oil filler (1) fig. 311.

We recommend the use of the same grade of engine oil that was used at last change.

The engine oil level must not exceed the MAX mark on the dipstick.



Fit the cap on straight and tighten it.

Engine coolant (1.2 100 hp Hybrid FWD version)

It is normal to top up this fluid between two services.

The check and top-up must only be done with the engine cold.

A level of coolant that is too low risks causing major damage to the engine. Open the cap (2) fig. 312. The coolant level must be close to the "MAX" mark without ever going above it.

If the level is close to or below the "MIN" mark, it is essential to top it up.


When the engine is hot, the temperature of the coolant is regulated by the fan.

As the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

In order to avoid the risk of scalding if you need to top up in an emergency, wrap a cloth around the cap and

unscrew the cap by two turns to allow the pressure to drop.

Once the pressure has dropped, remove the cap and top up to the required level.

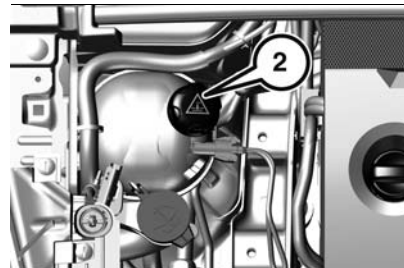


312

F6S0236

Engine coolant (Electric version)


The traction system coolant level must be checked when the motor is cold and must range between the MIN and MAX marks on the reservoir. If the level is under the MIN level, go to a Fiat Dealership. Do not attempt to open the cap yourself (fig. 313) to avoid burns and/or damage to the cooling system and electronic components. Topping up and filling operations must be carried out by qualified personnel at Fiat Dealership.

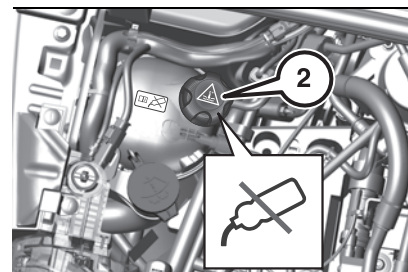

313

F6S0233

Washer fluid

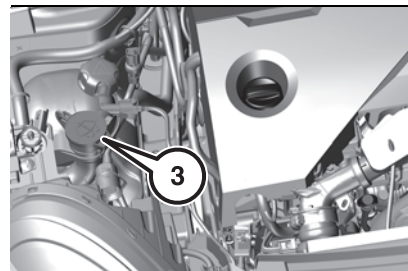

314

F6S0111

Open the cap (3) fig. 314 fill the reservoir with clean water mixed with a suitable quantity of approved windscreen washer fluid which contains antifreeze.

The fluid must be topped up with a pre-mixed product.

In winter (temperatures below zero), a fluid containing an anti-freeze agent which is appropriate for the

temperature conditions must be used in order to protect the system's components (pump, tank, ducts, jets).



Brakes

Depending on the driving style, the brake wear may vary significantly. The brake wear may increase when the vehicle is driven over short distances, e.g. in the city.

It may be necessary to have the condition of the brakes checked, even between vehicle services.


Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Once new brake linings are installed, do not brake unnecessarily hard for the first few journeys.

WARNING After washing the vehicle, moisture, or in wintry conditions, ice can form on the brake discs and pads: braking efficiency may be reduced. Gently dab the brakes to dry and defrost them.

For information on checking brake disc wear, contact a Fiat Dealership.

Brake fluid (4) fig. 315

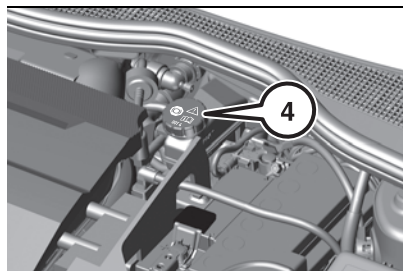

315

F6S0112

The brake fluid level must be between the **MIN** and **MAX** marks.

If fluid level is below **MIN** seek the assistance of a Fiat Dealership.

Conventional battery

The conventional battery is maintenance-free provided that the driving profile allows sufficient charging of the battery. Short-distance-driving and frequent engine starts can discharge the battery. Avoid the use of unnecessary electrical consumers. Check regularly that the terminals are correctly tightened (versions without quick-release terminals) and that the connections are clean.

WARNING Versions equipped with Stop-Start are fitted with a conventional lead-acid battery of specific technology and specification. Its replacement

should be carried out only by a Fiat Dealership.



316

JJ000005_2

Batteries do not belong in household waste. They must be disposed of at an appropriate recycling collection point. Laying up the vehicle for more than four weeks can lead to battery discharge. Disconnect the clamp from the negative terminal of the conventional battery.

Ensure the ignition is switched off before connecting or disconnecting the conventional battery.

Useful advice for extending the life of your conventional battery

To avoid draining your conventional battery and make it last longer, observe the following instructions:

❑ when you park the car, ensure that the doors, tailgate and bonnet are closed properly, to prevent any ceiling



lights from remaining on inside the passenger compartment

❑ switch off all ceiling lights inside the car: the car is however equipped with a system which switches all internal lights off automatically

❑ do not keep accessories (e.g. radio, hazard warning lights, etc.) switched on for a long time when the engine is not running

❑ before performing any operation on the electrical system disconnect the cable from the negative conventional battery terminal. If, after purchasing the car, you wish to install electrical accessories which require permanent electrical supply (e.g. alarm, etc.) or accessories which influence the electrical supply requirements, contact a Fiat Dealership, whose qualified staff will evaluate the overall electrical consumption

WARNING After the battery is disconnected, the steering could be initialised. If so, the  warning light on the instrument panel switches on to indicate this. To carry out this procedure turn the steering wheel all the way from one end to the other or drive in a straight line for about a hundred metres.

WARNING If the charge level remains under 50% for a long time, the conventional battery is damaged by sulphation, reducing its capacity and efficiency at start-up. The battery is also more prone to the risk of freezing (at temperatures of $-10^{\circ}\text{C}/14^{\circ}\text{F}$). Refer to the "Car inactivity" chapter this section if the car is left parked for a long time.

Replacing the conventional battery

WARNING Any deviation from the instructions given in this section may lead to temporary deactivation or disturbance of the Stop-Start system.

When the conventional battery is being replaced, please ensure that there are no open ventilation holes in the vicinity of the positive terminal. If a ventilation hole is open in this area, it must be closed off with a dummy cap, and the ventilation in the vicinity of the negative terminal must be opened.

Ensure that the battery is always replaced by the same type of battery. The conventional battery has to be replaced by a Fiat Dealership.

Charging the conventional battery



321)

WARNING After setting the ignition device to STOP and closing the driver's door, wait at least one minute before disconnecting the electrical supply from the conventional battery. When reconnecting the electrical supply to the conventional battery, make sure that the ignition device is in the STOP position and the driver's door is closed.

WARNING Charging should be slow at a low ampere rating for approximately 24 hours. Charging for a longer time may damage the conventional battery.

WARNING The cables of the electrical system must be correctly reconnected to the conventional battery, i.e. the positive cable (+) to the positive terminal and the negative cable (-) to the negative terminal.

The conventional battery terminals are marked with the positive (+) and negative (-) terminal symbols, and are shown on the cover of the battery itself. The battery terminals must also be corrosion-free and firmly secured to the terminals. If a "quick-type" conventional battery charger is used with the battery fitted on the car, before connecting it disconnect both cables of the conventional battery itself. Do not

use a "quick-type" battery charger to provide the starting voltage.

Discharge protection

Battery voltage

When the conventional battery voltage is running low, a warning message will appear in the instrument panel display. When the vehicle is being driven, the load reduction function temporarily deactivates certain functions, such as the air conditioning, the heated rear window, heated steering wheel, etc. The deactivated functions are reactivated automatically as soon as conditions permit.

Idle boost

If charging of the conventional battery is required due to battery condition, the power output of the generator must be increased. This will be achieved by an idle boost which may be audible.

A message appears in the instrument panel display.

Power outlet

The power outlets are deactivated in the event of low conventional battery voltage.

Power saving mode

This mode deactivates electrical consumers to avoid excessive discharging of the conventional battery. These consumers, such as

the Infotainment system, windscreen wipers, low beam headlights, courtesy light, etc. can be used for a total maximum time of about 40 minutes after ignition is switched off.

Changing into power saving mode

When power saving mode is activated, a message appears in the instrument panel display.

An active telephone call using the hands-free option will be maintained for around 10 minutes longer.

Deactivating power saving mode

Power saving mode is deactivated automatically when the engine is restarted. Run the engine for a sufficient charge:

- ☐ for less than 10 minutes to use the consumers for approx. 5 minutes
- ☐ for more than 10 minutes to use the consumers for up to approx. 30 minutes

Heating functionalities

NOTE Individual heating functionalities, such as heated seats or heated steering wheel, may be temporarily unavailable in the event of electrical loading constraints. Functions will be resumed after some minutes.

ELECTRIC PARKING BRAKE (EPB)

This system does not require any routine servicing. However, in the event of a problem, do not hesitate to have the system checked by a Fiat Dealership.

For more information on the Electric parking brake, refer to the "Parking brake" chapter in "Starting and driving" section.

SHOCK ABSORBERS

It is not easy for drivers to detect when shock absorbers are worn. Nevertheless, the shock absorbers have a major impact on road holding and braking performance. For your safety and driving comfort, it is important to have them regularly checked by a Fiat Dealership.

TIMING AND ACCESSORY KITS

The timing and accessory kits are used from the time the engine is started until it is switched off. It is normal for them to wear over time.

A faulty timing or accessory kit can damage the engine, rendering it unusable. Observe the recommended replacement frequency, stated in distance travelled or time elapsed, whichever is reached first.



AUTOMATIC TRANSMISSION/ ELECTRIC DRIVE UNIT



135j

Special additives

Do not use any type of additive for the automatic transmission/Electric Drive Unit fluid.

Avoid the use of transmission sealers, since they may compromise the efficiency of the automatic transmission/Electric Drive Unit seals.

WARNING Do not use chemicals to flush the transmission, since this may damage its components.

Frequency of oil changes

In normal car operating conditions, it is not necessary to change the transmission fluid.

If fluid leaks are noticed or irregular operation of the transmission is detected, have it checked immediately at a Fiat Dealership.


WARNING Driving the car with an insufficient oil level may cause serious damage to the transmission.

WIPER BLADE RUBBER REPLACEMENT

Windscreen

Switch off ignition.

Within 45 seconds after switching off ignition, rise or low the right control stalk to a stable position. The wiper blades will be put vertically on the windscreen.

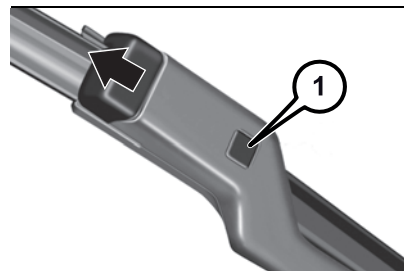

317


JJ000391

Lift the wiper arm until it stays in the raised position, press button (1) fig. 317 to disengage the wiper blade and remove.

Attach the new wiper blade to the wiper arm and push until it engages. Lower wiper arm carefully.

To return the wiper arms to their original position, switch on the ignition and operate the wiper lever.

Rear window

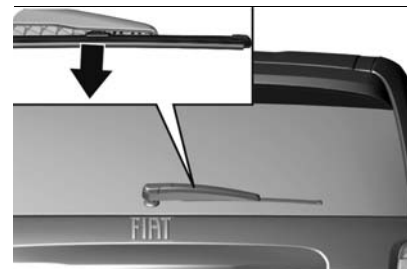

318

F6S0234

Lift the wiper arm only slightly until it engages. Disengage wiper blade and remove.



136j

Lower wiper arm carefully. Check that the wiper arm is not blocked while operating.

AIR CONDITIONING REGULAR OPERATION



137j 138j

In order to ensure continuously efficient performance, cooling must be operated for a few minutes once a month, irrespective of the weather and time of year. Operation with cooling is not possible when the outside temperature is too low.

Depending on the environment and the use of the vehicle (e.g. dusty atmosphere, city driving), change it twice as often, if necessary.

NOTE A clogged passenger compartment filter can adversely affect air conditioning system performance and generate undesirable odours.

EXHAUST SYSTEM

 322) 323)

 139)

Adequate maintenance of the engine exhaust system represents the best protection against leaks of carbon monoxide into the passenger compartment.



WARNING

296) Can cause burns or other injuries or even fatal electric shock. Since damage to components is not visible, the Manufacturer recommends that you: never touch the components, damaged or not, and never let your jewelry or other metallic objects come into contact with these components; never work on the purple cables.

297) The air intake system (air cleaner, rubber hoses, etc.) can be a protection in the case of blowbacks from the engine. DO NOT REMOVE this system unless you need to carry out repair or maintenance. Before starting the engine, ensure that the system has not been removed: failure to observe this precaution may result in serious injury.

298) Only perform engine compartment checks when the ignition is off. The cooling

fan may start operating even if the ignition is off.

299) The ignition system uses extremely high voltage. Do not touch.

300) Take care with objects or clothing that could be caught in the blades of the cooling fan or in certain moving components - risk of strangulation and serious injury! Before carrying out any work under the bonnet, you must switch off the ignition, check that the **READY** indicator lamp is off on the instrument panel and disconnect the charging nozzle if it is plugged in.

301) Electric versions: Never try to perform maintenance work on high voltage components yourself. You may be injured and the vehicle may be damaged. Service and repair of these high voltage components should only be performed by a trained service technician with proper knowledge and tools. Exposure to high voltage may cause shock, burns, and even death. The high voltage components in the vehicle can only be serviced by technicians with special training. High voltage components are identified by labels. Do not remove, open, take apart, or modify these components. High voltage cable or wiring has orange covering. Do not probe, tamper with, cut, or modify high voltage cable or wiring.

302) Can cause burns or other injuries or even fatal electric shock. Since damage to components is not visible, the Manufacturer recommends that you: never touch the components, damaged or not, and never let your jewelry or other metallic objects come into contact with these components; never work on the purple cables.

303) Any intervention on the system must be carried out by qualified persons in workshops qualified and approved to carry out this type of work; never damage, modify or remove the orange high voltage cables or disconnect them from the high voltage network; never open, modify or remove the cover of the traction battery; never work with cutting and forming tools or heat sources near high voltage components and cables.

304) The hybrid powertrain uses a voltage of 48 V. This system may be hot both when the ignition is on and after switching it off. Comply with the warning messages shown on the labels.

305) Any intervention on the system must be carried out by qualified persons in workshops qualified and approved to carry out this type of work. Damage to the vehicle or the traction battery could result in the leakage of toxic gases or fluids either immediately or later. The Manufacturer recommends that you: always inform the fire and emergency services in the event of an incident, warning that the vehicle is equipped with a auxiliary battery. Never touch the liquids leaking from the auxiliary battery. Do not inhale the gases emitted by the auxiliary battery which are toxic. Move away from the vehicle in the event of incident or accident, the gases emitted being flammable and could cause a fire.

306) In the event of an accident with an airbag deployment, the conventional battery is automatically disconnected from the electrical circuit to prevent the initiation of short circuits and/or fires.

307) In the event of an impact to the vehicle's underbody, the electrical circuit or the conventional battery can be



seriously damaged. Stop as soon as it is safe to do so and switch off the ignition. Move away from the vehicle. Contact a Jeep Dealership.

308) To avoid damaging the electrical components, it is expressly prohibited to use high-pressure washing in the engine compartment or under the body. Do not use a pressure greater than 80 bar when washing the bodywork.

309) High voltage system voltage is dangerous and can cause burns or other injuries or even fatal electric shock. Since damage to high voltage components is not visible, the Manufacturer recommends that you: never touch the components, damaged or not, and never let your jewelry or other metallic objects come into contact with these components; never work on the orange high voltage cables or on any other high voltage component marked with the label .

310) Any intervention on the high voltage system must be carried out by qualified persons in workshops qualified and approved to carry out this type of work; never damage, modify or remove the orange high voltage cables or disconnect them from the high voltage network; never open, modify or remove the cover of the traction battery; never work with cutting and forming tools or heat sources near high voltage components and cables.

311) The electric powertrain uses a voltage of 350 V. This system may be hot both when the ignition is on and after switching it off. Comply with the warning messages shown on the labels, particularly inside the charging flap.

312) In case of low level of fluid in the cooling tank, the refilling shall only be performed in a qualified and trained workshop to verify that the leakage is not in the traction battery. Any intervention on the high voltage system must be carried out by qualified persons in workshops qualified and approved to carry out this type of work.

313) Take care when working under the bonnet, as certain areas of the engine may be extremely hot (risk of burns) and the cooling fan could start at any time (even with the ignition off).

314) Never smoke while working in the engine compartment: gas and inflammable vapours may be present, with the risk of fire.

315) When working in the engine compartment pay special attention to mechanical components that can move suddenly, pressurized or very hot liquids and live electrical parts.

316) NEVER touch the high-voltage system components (identified by the orange colour), as this could result in serious injury or death from electric shock.

317) Do not pour water or any other type of liquid onto the high voltage system components inside the engine compartment. Risk of death by electric shock and/or damage to the system.

318) For electric versions: do not operate in the engine compartment while the vehicle is charging or when the connector on the charging port is plugged in.

319) Avoid prolonged contact of used oil or fluids with the skin. Most of these fluids are harmful to health and very corrosive.

320) Brake fluid is poisonous and corrosive. Avoid contact with eyes, skin, fabrics and painted surfaces. In the event of accidental contact, immediately wash the affected parts with water and mild soap. Then rinse thoroughly. Call a doctor immediately if swallowed.

321) On vehicles with Stop-Start system, ensure that the charging potential does not exceed 14.6 V when using a battery charger. Otherwise the conventional battery may be damaged.

322) Exhaust emissions are very dangerous, and may be lethal. They contain carbon monoxide, a colourless, odourless gas which can cause fainting and poisoning if inhaled.

323) The exhaust system may reach high temperatures and may cause a fire if the car is parked on flammable material. Dry grass or leaves can also catch fire if they come into contact with the exhaust system. Do not park or use the car in a place in which the exhaust system might come into contact with flammable material.



IMPORTANT

125) When transporting the vehicle on a train or on a recovery vehicle, the mud flaps might be damaged.

126) Incorrect servicing of the car or failure to carry out operations or repairs (when necessary) may lead to more expensive repairs, damage to other components or have a negative impact on the car performance. Have any malfunction inspected immediately by a Fiat Dealership.

127) The car is filled with fluids which are optimised or protecting its performance and life and extending service intervals. Do not use chemicals for washing these components since they may damage the engine, the transmission or the climate control system. This damage is not covered by the car's warranty. If any component needs to be washed due to malfunctioning, use only the specific liquid for that procedure.

128) It is recommended to have the car serviced by a Fiat Dealership. When carrying out normal periodic operations and small servicing interventions personally on the vehicle, it is recommended to use suitable equipment, genuine spare parts and the necessary fluids. Do not carry out any interventions if you don't have the necessary experience.

129) Even small amounts of contamination to the liquids can cause damage to vehicle systems. Do not allow contaminants to contact the fluids, reservoir caps, or dipsticks.

130) Before topping up or changing the engine oil, check that the oil is suitable for your engine and complies with the recommendations in the service schedule supplied with the vehicle (or available from your Fiat Dealership). Use of non-recommended oil may invalidate your warranty in the event of engine failure.

131) Be careful not to confuse the various types of fluids while topping up: they are not compatible with one another! Topping up with an unsuitable fluid could severely damage your vehicle.

132) An excessive or insufficient amount of oil inside the base is extremely damaging

to the engine. Make sure it is always at an adequate level.

133) Overfilled engine oil must be drained or suctioned out. If the oil exceeds the maximum level, do not start the vehicle and contact a Fiat Dealership.

134) Filling with pure water is prohibited in all circumstances (risk of freezing, limescale, etc.). Only washer fluid with a sufficient antifreeze concentration provides protection at low temperatures or a sudden drop in temperature.

135) Using transmission fluid different from that approved may compromise the quality of gear changes and/or cause vibration of the transmission.

136) Attach the wiper blade to the inner position of the wiper arm and push until it engages.

137) Always require the use of only compressor coolants and lubricants approved and suitable for the specific air conditioning system fitted on the car. Some non-approved coolants are flammable and may explode, with the risk of injuries. The use of non-approved coolants or lubricants may adversely affect system efficiency, leading to expensive repairs.

138) The air conditioner system contains coolant under high pressure: to avoid injuries to people or damage to the system, any coolant addition or repair that requires to disconnect the cables must be carried out by a Fiat Dealership.

139) Vehicles equipped with catalytic converter must be fuelled only with unleaded petrol. Leaded petrol would permanently damage the catalytic converter and eliminate its ability to

reduce polluting emissions, seriously compromising the engine performance, which would be irreparably damaged. If the engine does not work correctly, especially if it starts irregularly or if there is a reduction of its performance, immediately go to a Fiat Dealership. Prolonged and faulty operation of the engine may cause overheating of the converter and, as a consequence, possible damage to the converter and the vehicle.




IMPORTANT

9) Do not discard used oil or fluids into sewers or onto the ground. Empty used oil into the containers reserved for this purpose at a dealer or a qualified workshop.



JACKING POSITIONS


The jacking positions shown refer to the use of lifting arms and accessory jacks used for changing winter / summer tyres.

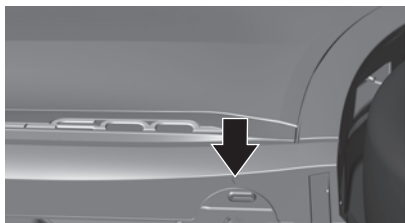

319

F6S0075

Rear arm position of the lifting platform centrically under the relevant vehicle jacking point fig. 319 indicated by the symbol ▼ on the underdoor trim.

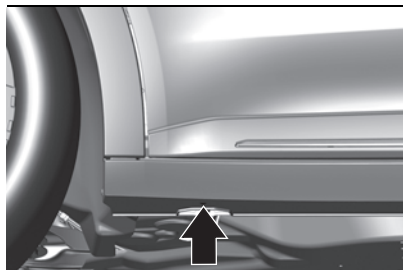

320

F6S0076

Front arm position of the lifting platform centrically under the relevant vehicle jacking point indicated by the symbol ▼ on the underdoor trim fig. 320.

WHEELS AND TYRES

⚠ 324) 325) 326) 327) 328)

⚠ 140) 141) 142)



WARNING

324) The road holding qualities of the car also depend on the correct inflation pressure of the tyres.

325) If the tyres are "unidirectional", do not switch tyres from the right-hand side of the car to the left-hand side, and vice versa. This type of tyres can only be switched from the front axle to the rear axle and vice versa, keeping them on the same side of the vehicle.

326) Travelling with partially or completely deflated tyres can cause safety problems and irremediably damage the tyre.

327) Do not cross switch the tyres if they are "unidirectional" type. In this case, always take care not to fit the tyres with a direction of rotation that is opposite to that indicated: you would risk losing grip and control of the car.

328) Keep your speed down when snow chains are fitted; do not exceed 50 km/h (or the equivalent in miles). Avoid potholes, do not drive over steps or pavements and do not drive long distances over roads without snow, to avoid damaging both your vehicle and the road surface.



IMPORTANT

140) If tyre pressure is too low, the tyre may overheat and be severely damaged as a result.

141) Do not switch tyres from the right-hand side of the vehicle to the left-hand side, and vice versa.

142) Never submit alloy rims to repainting treatments requiring the use of temperatures exceeding 150°C. The mechanical properties of the wheels could be impaired.

VEHICLE STORAGE

STORAGE FOR A LONG PERIOD OF TIME

If the vehicle is to be stored for several months:

- ❑ Wash and wax the vehicle.
- ❑ Have the wax in the engine compartment and underbody checked.
- ❑ Clean and protect the shiny metal parts using special compounds available commercially.
- ❑ Sprinkle talcum powder on the windscreen and rear window wiper rubber blades and lift them off the glass.
- ❑ Clean and preserve the rubber seals.
- ❑ Cover the car with a fabric or perforated plastic sheet, paying particular care not to damage the painted surface by dragging any dust that may have accumulated on it. Do not use compact plastic sheets which do not allow humidity to evaporate from the surface of the car.
- ❑ disconnect the negative conventional battery terminal and check the battery state of charge. Repeat this check once every three months during storage.
- ❑ Disable the alarm system of the car (where provided).
- ❑ Fill up fuel tank completely.

- ❑ Change the engine oil.
- ❑ Drain the washer fluid reservoir.
- ❑ Check the coolant antifreeze and corrosion protection. Do not drain the cooling system.
- ❑ Check the state of charge of the conventional battery every 30 days.
- ❑ Adjust tyre pressure to the value specified for full load.
- ❑ Operate the climate control system for at least 5 minutes, setting external air and with fan set to maximum speed. This operation will ensure appropriate lubrication for the system, thus minimising the possibility of damage to the compressor when the system is operated again.
- ❑ Park the vehicle in a dry, well ventilated place and slightly open the windows. Set the PRND command to (P). Prevent the vehicle from rolling.
- ❑ Do not apply the parking brake.
- ❑ Open the bonnet, close all doors and lock the vehicle.

STORAGE FOR A LONG PERIOD OF TIME (ELECTRIC VEHICLE)

If the vehicle is to be stored for several months:

- ❑ Wash and wax the vehicle.
- ❑ Have the wax in the engine compartment and underbody checked.

- ❑ Clean and protect the shiny metal parts using special compounds available commercially.
- ❑ Sprinkle talcum powder on the windscreen and rear window wiper rubber blades and lift them off the glass.
- ❑ Clean and preserve the rubber seals.
- ❑ Cover the car with a fabric or perforated plastic sheet, paying particular care not to damage the painted surface by dragging any dust that may have accumulated on it. Do not use compact plastic sheets which do not allow humidity to evaporate from the surface of the car.
- ❑ Disable the alarm system of the car (where provided).
- ❑ Drain the washer fluid reservoir.
- ❑ Check the coolant antifreeze and corrosion protection. Do not drain the cooling system.
- ❑ Check the state of charge of the conventional battery every 30 days. The amount of charge of the high-voltage battery may gradually decrease when the car is not used. Therefore, avoid long stays with a charge state close to zero. If possible, monitor the state of charge and prevent it from reaching excessively low levels. Follow these warnings even for longer stays of less than a month (a few weeks).



- ❑ Take the high-voltage battery to a charge level close to 100%.
- ❑ Adjust tyre pressure to the value specified for full load.
- ❑ Operate the climate control system for at least 5 minutes, setting external air and with fan set to maximum speed. This operation will ensure appropriate lubrication for the system, thus minimising the possibility of damage to the compressor when the system is operated again.
- ❑ Park the vehicle in a dry, well ventilated place and slightly open the windows. Set the PRND command to **P**. Prevent the vehicle from rolling.
- ❑ Do not apply the parking brake.
- ❑ Open the bonnet, close all doors and lock the vehicle.

Up to four weeks

Plug in the charging cable.

Four weeks to twelve months

- ❑ Discharge the high voltage battery until 30 percent remain on the battery range indicator (battery symbol) on the instrument panel display.
- ❑ Do not plug in the charging cable.
- ❑ Always store the vehicle in a place with temperatures between -10°C and 30°C .
- ❑ Vehicle storage at extreme temperatures may cause damage to the high voltage battery.

- ❑ Remove the black negative (–) cable from the 12 V conventional battery and attach a trickle charger to the conventional battery terminals or keep the 12 V conventional battery cables connected and trickle charge from the positive (+) and negative (–) terminals in the engine compartment.
- ❑ Every three months, check the battery's state of charge. If the state of charge is below 30 percent, recharge the battery to 30 percent.

PUTTING BACK INTO OPERATION

When the vehicle is to be put back into operation:

- ❑ Connect the clamp to the negative terminal of the conventional battery. Initialise the power windows.
- ❑ Check tyre pressure.
- ❑ Fill up the washer fluid reservoir.
- ❑ Check the engine oil level.
- ❑ Check the coolant level.
- ❑ Fit the number plate if necessary.

PUTTING BACK INTO OPERATION (ELECTRIC VEHICLE)

When the vehicle is to be put back into operation:

- ❑ Connect the clamp to the negative terminal of the conventional battery. Initialise the power windows.

- ❑ Check tyre pressure.
- ❑ Fill up the washer fluid reservoir.
- ❑ Check the coolant level.
- ❑ Fit the number plate if necessary.

EXTERIOR CARE



143

LOCKS

The locks are lubricated at the factory using a high quality lock cylinder grease. Use a de-icing agent only when absolutely necessary, as this has a degreasing effect and impairs lock function. After using a de-icing agent, have the locks regreased by a Fiat Dealership.

WASHING

The paintwork of your vehicle is exposed to environmental influences. Bird droppings, dead insects, resin, pollen and the like should be cleaned off immediately, as they contain aggressive constituents which can cause paint damage.

Depending on the environment, clean the vehicle frequently to remove salty deposits (in coastal areas), soot (in industrial areas) and mud/salts (in wet or cold areas). These substances can be highly corrosive.

Contact a Fiat Dealership for advice on removing stubborn stains requiring

special products (such as tar or insect removers).

Preferably, have paint touch-ups performed by a Fiat Dealership.

If using a vehicle wash, comply with the vehicle wash manufacturer's instructions. The windscreen wiper and rear window wiper must be switched off. Remove external accessories such as roof racks etc. Be sure to lock the doors and, depending on version, move the electronic key away and deactivate the "Hands Free boot opening".

If you wash your vehicle by hand, make sure that the insides of the wheel housings are also thoroughly rinsed out.

Clean edges and folds on opened doors and the bonnet as well as the areas they cover.

Clean bright metal mouldings with a cleaning solution approved for aluminium to avoid damages.

Do not wash the vehicle in bright sunshine or extremely cold conditions.



144)

The image engraved on the fuses cover fig. 321 reminds to not clean the engine compartment with a steam-jet or high-pressure jet cleaner.



321

JJ000579

Thoroughly rinse and leather-off the vehicle. Rinse leather frequently. Use separate leathers for painted and glass surfaces: remnants of wax on the windows will impair vision.

Have the door hinges of all doors greased by a Fiat Dealership.

Do not use hard objects to remove spots of tar. Use tar removal spray on painted surfaces.

Take care not to direct the water jet directly onto the electronic control units, connectors and orange cables, including the areas adjacent to them (high-voltage circuit) and venting valves. Have this operation performed by a specialised workshop. After washing, check that the various protective components (e.g. rubber guards and caps) have not been removed or damaged.

When using a pressure washer, keep the jet nozzle at a minimum distance

of 30 cm from the vehicle (particularly when cleaning areas containing chipped paint, sensors or seals).

329) 330) 331)

145) 146)

10)

EXTERIOR LIGHTS

Headlight and other light covers are made of plastic. Do not use any abrasive or caustic agents, do not use an ice scraper, and do not clean them dry.

147)

POLISHING AND WAXING

Polishing is necessary only if the paint has become dull or if solid deposits have become attached to it.

Plastic body parts must not be treated with wax or polishing agents.

WINDOWS AND WIPER BLADES

Switch off wipers before handling in their areas.

Use a soft lint-free cloth or chamois leather together with window cleaner and insect remover.

When cleaning the rear window from inside, always wipe in parallel to the heating element to prevent damage.

For mechanical removal of ice, use a sharp-edged ice scraper. Press the scraper firmly against the glass so that



no dirt can get under it and scratch the glass.

Clean smearing wiper blades with a soft cloth and window cleaner. Also make sure to remove any residues such as wax, insect residues and similar from the window.

Ice residues, pollution and continuous wiping on dry windows will damage or even destroy the wiper blades.

WHEELS AND TYRES

Do not use high-pressure jet cleaners. Clean rims with a pH-neutral wheel cleaner.

Rims are painted and can be treated with the same agents as the body.

PAINTING

(Electrified versions)

When painting the car in the oven, take care not to exceed:

- 30 minutes at 70°C
- 20 minutes at 80°C

PAINTWORK DAMAGE

Rectify minor paintwork damage with a touch-up pen before rust forms. Have more extensive damage or rust areas repaired by a Fiat Dealership.

HIGH-GLOSS PAINT



148)

Use a soft cloth and soapy water or a pH neutral product.

Gently wipe the bodywork with a clean microfibre cloth.

Apply polish with the vehicle clean and dry. Comply with the instructions for use stated on the product.

UNDERBODY

Some areas of the vehicle underbody have a PVC undercoating while other critical areas have a durable protective wax coating.

After the underbody is washed, check the underbody and have it waxed if necessary.

Bitumen / rubber materials could damage the PVC coating. Have underbody work carried out by a Fiat Dealership.

Before and after winter, wash the underbody and have the protective wax coating checked.

TOWING EQUIPMENT

Do not clean the coupling ball bar with a steam-jet or high-pressure jet cleaner.



WARNING

329) For electric versions: before washing the vehicle, always check that the charging flap is closed correctly. Never wash the vehicle while the battery is on charge

330) To avoid damaging the electrical components, it is expressly prohibited to use high-pressure washing in the engine compartment or under the body. Do not use a pressure greater than 80 bar when washing the bodywork.

331) Never allow water or dust to enter the connector or charging nozzle - risk of electrocution or fire! Never connect / disconnect the charging nozzle or cable with wet hands - risk of electrocution!



IMPORTANT

143) Abrasive products and/or polishes should not be used for cleaning the car. Bird droppings must be washed off immediately and thoroughly as the acid they contain is particularly aggressive. Avoid parking the vehicle under trees (unless it is absolutely necessary). Remove any resinous plant matter immediately because, once it has dried, it may require the use of abrasive and/or polishing products to be removed, which are strongly discouraged as they could potentially alter the characteristics of the paintwork. Do not use pure windscreen washer fluid for cleaning the front windscreen and rear window; dilute it min. 50% with water. Only use pure screen washer fluid when strictly necessary due to outside temperature conditions. Do not use chemicals/acids to defrost windows/vehicle glass as they can damage the paint.

144) Always use a cleaning agent with a pH value of 4 to 9. Do not use cleaning agents on hot surfaces. Dry the car with

a wet chamois leather. Abrasive products and/or polishes should not be used for cleaning the car. Bird droppings must be washed off immediately and thoroughly as the acid they contain is particularly aggressive. Avoid (if at all possible) parking the car under trees; remove vegetable resins immediately as, when dried, it may only be possible to remove them with abrasive products and/or polishes, which is highly inadvisable as they could alter the typical opacity of the paint.

145) Do not use a high pressure jet cleaner to clean the motor compartment. The appropriate precautions have been taken to protect all parts and connections, but the pressures generated by these devices are so high that complete protection against water seepages cannot be guaranteed.

146) If it is necessary to wash the car from the outside, take care not to insist directly with the water jet onto the charging flap.

147) The headlamps have polycarbonate lenses with a protective coating: do not clean them with a dry or abrasive cloth, nor with detergent or solvent products; use a sponge and soapy water or a pH neutral product; when using a high-pressure washer on persistent marks, do not keep the lance directed towards the headlamps, lamps or their edges for too long, so as not to damage their protective coating and seals.

148) Do not use abrasive products, solvents, petrol or oil to clean the bodywork. Never use an abrasive sponge to clean stubborn stains - risk of scratching the paintwork! Do not apply polish in strong sunshine, or to plastic or rubber parts.



IMPORTANT

10) Detergents pollute the water. The vehicle should be washed in areas equipped for collecting and purifying the liquid used in the washing process.

INTERIOR CARE

 **332) 333) 334)**

 **149) 150)**

Periodically check the cleanliness of the interior, beneath the mats, which could cause oxidation of the sheet metal.

INTERIOR AND UPHOLSTERY

Only clean the vehicle interior, including the instrument panel fascia and panelling, with a dry cloth or interior cleaner.

Clean the leather upholstery with clear water and a soft cloth. In case of heavy soiling, use leather care.

The instrument panel display and the displays should only be cleaned using a soft damp cloth. If necessary use a weak soap solution.

Use a specific product to clean carpets and fabric upholstery.

Clean fabric upholstery with a vacuum cleaner and brush.

Clothing fabrics may not be colourfast. This could cause visible

discolourations, especially on lightcoloured upholstery. Removable stains and discolourations should be cleaned as soon as possible.

It is advisable to use a moist brush on velvet upholstery. Rub the seats using a soft microfibre cloth moistened with a solution of water and neutral detergent. Clean seat belts with lukewarm water or interior cleaner.

 **151)**

TEXTILE

The dashboard, door panels and seats may contain parts made of textile material.

Maintenance

 **152)**

Remove dust from the textile parts regularly with a dry cloth, soft brush or vacuum cleaner.

Rub down the textile parts once per year with a clean, damp cloth. After leaving overnight to dry, brush with a soft-bristled brush.

Stain removal

 **153)**

Act quickly by reducing the stain from its edges inwards.

Remove as much substance or solids as possible using a spoon or spatula, and remove as much liquid as possible using absorbent paper.



Products and procedure to use depending on the type of stain:

- ❑ grease, oil and ink: clean with a pH-neutral detergent
- ❑ vomit: clean with sparkling mineral water
- ❑ blood: spread flour over the stain and allow to dry; remove with a slightly damp cloth
- ❑ mud: allow to dry and then remove with a slightly damp cloth
- ❑ cake, chocolate, ice cream: clean with lukewarm water
- ❑ sugary and/or alcoholic drinks: clean with lukewarm water, or lemon juice if the stain is persistent
- ❑ hair gel, coffee, tomato sauce, vinegar: clean with lukewarm water and lemon juice

For solid substances, then use a soft brush or vacuum cleaner.

For liquid substances, then use a damp microfibre cloth and then dry with another cloth.

PLASTIC AND RUBBER PARTS

Plastic and rubber parts can be cleaned with the same cleaner as used to clean the body. Use interior cleaner if necessary. Do not use any other agent. Avoid solvents and petrol in particular. Do not use high pressure jet cleaners.

FLOOR MATS

(where provided)



Use the following guidelines for proper floor mat usage.


- ❑ The original equipment floor mats were designed for your vehicle. If the floor mats need replacing, it is recommended that certified floor mats be purchased. Always check that the floor mats do not interfere with the pedals.
- ❑ Use the floor mat with the correct side up. Do not turn it over.
- ❑ Do not place anything on top of the driver side floor mat.
- ❑ Use only a single floor mat on the driver side.

Inserting and removing the floor mats

The driver side floor mat is held in place by two retainers.

To install the floor mat:

- ❑ move the seat backwards as far as possible

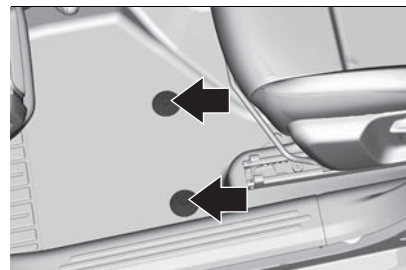

322

JJ000536

- ❑ align slots in the mat with the retainers, fig. 322
- ❑ push the mat to the floor

Removing

1. Move the seat backwards as far as possible.
2. Remove the mat.



WARNING

332) *Ever use flammable products, such as petrol ether or rectified petrol to clean the inside of the car. The electrostatic charges which are generated by rubbing during the cleaning operation may cause a fire.*

333) *Do not keep aerosol cans in the car: they might explode. Aerosol cans must not be exposed to temperatures above 50°C. Temperatures may greatly exceed this value inside a car exposed to direct sunlight.*

334) *There must be no obstacles on the floor under the pedals. Make sure that mat are always flat and do not interfere with the pedals.*

335) *If a floor mat has the wrong size or is not properly installed, it can interfere with the accelerator pedal and/or brake pedal, what can cause unintended acceleration and/or increased stopping distance which can cause a crash and injury.*



IMPORTANT

149) *Never use alcohol, petrols and derivatives to clean the dashboard and instrument panel lens.*

150) *When washing the vehicle, never use a water hose or high-pressure jet to clean the interior. Liquids carried in cups or other open containers can spill, presenting a risk of damage to the instruments and controls and the controls located on the centre console. Be vigilant! To clean instrument panels, touch screens or other displays, wipe gently with a soft, dry cloth. Do not use products (e.g. alcohol, disinfectant) or soapy water directly on these surfaces - risk of damage!*

151) *Close Velcro fasteners as open Velcro fasteners on clothing could damage seat upholstery. The same applies to clothing with sharp-edged objects, like zips or belts or studded jeans.*

152) *Do not use aggressive cleaning products (e.g. alcohol, solvent or ammonia). Do not use steam-cleaning systems - risk of affecting the adhesion of the fabrics!*

153) *Do not rub the stain or it may spread or you may cause the substance to penetrate the surface.*




TECHNICAL SPECIFICATIONS

Everything you may find useful for understanding how your vehicle is made and works is contained in this section and illustrated with data, tables and graphics. For the enthusiasts and the technician, but also just for those who want to know every detail of their car.

VEHICLE IDENTIFICATION	257
ENGINE DATA	258
HIGH-VOLTAGE BATTERY	259
WHEELS AND TYRES.....	260
DIMENSIONS	264
WEIGHTS AND LOADS.....	267
REFILLING	269
FLUIDS AND LUBRICANTS	271
PERFORMANCE	273
FUEL CONSUMPTION AND CO ₂ EMISSIONS	274
PRESCRIPTIONS FOR HANDLING THE CAR AT THE END OF ITS LIFE.....	275

VEHICLE IDENTIFICATION

VEHICLE IDENTIFICATION NUMBER

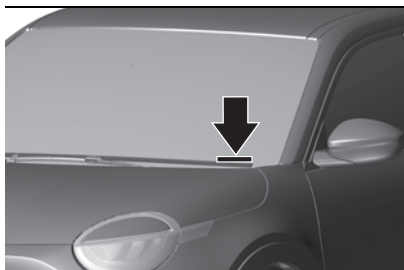

323

F6S0077

The Vehicle Identification Number may be embossed on the instrument panel, visible through the windscreen fig. 323, in the engine compartment on the right body panel or on the passenger compartment floor, in front of the front right seat.

IDENTIFICATION PLATE



324

F6S0200

The identification plate fig. 324 is located on the front left door frame. Information on identification label:

- ☐ **A** Name of Manufacturer
- ☐ **B** Vehicle identification number
- ☐ **C** Technically allowed max. weight with full load
- ☐ **D** Technically allowed max. weight for combined car
- ☐ **E** Technically allowed max. weight on axle 1
- ☐ **F** Technically allowed max. weight on axle 2
- ☐ **G** Engine identification
- ☐ **H** Type variant version
- ☐ **I** Paintwork colour code
- ☐ **L** Code for spare parts

The combined total of front and rear axle loads must not exceed the permissible gross vehicle weight.

Vehicle's kerb weight depends on the specification of the vehicle, e.g. optional equipment and accessories. Refer to the EEC Certificate of Conformity provided with your vehicle or other national registration documents.

The technical data is determined in accordance with European Community standards. We reserve the right to make modifications. Specifications in the vehicle documents always have priority over those given in this manual.

ENGINE IDENTIFICATION

The technical data tables show the engine identifier code.

To identify the respective engine, refer to the engine power in the EEC Certificate of Conformity provided with your vehicle or other national registration documents.

Tire Information Label (Australia and New Zealand market)

The label is fitted on the rear driver door's ledge.



ENGINE DATA

Sales designation	1.2 100 hp Hybrid FWD (where provided)	e Full Electric 50 kWh battery capacity
Engine identifier code	EB2LTEDH2	–
Piston displacement (cm ³)	1199	–
Engine power (kW)/(HP)	74/100	115/156
at rpm	5500	–
Maximum torque (Nm)	205	260
at rpm	1750	–
Fuel type	Petrol	–
Octane rating RON (1) (2)		
recommended	95	–
possible	98	–
possible	91	–
Additional fuel type	–	–

(1) A country specific label at the fuel filler flap can supersede the engine specific requirement.

(2) In certain countries, the use of a particular fuel, e.g. a specific octane rating, may be required to ensure proper engine operation.

HIGH-VOLTAGE BATTERY

(electric vehicle)

Technical data	
Type	Lithium Ion (Li-ion)
Cooling / Heating	Fluid
Rated voltage	350 V
Gross battery capacity	54 kWh
Net battery capacity	51 kWh
Battery operating temperature	-30 / 60°C (*)

(*) The temperature of 60°C is to be understood as the temperature that the battery can reach, it is not to be understood as the operating temperature of the car.



WHEELS AND TYRES

TYRE CONDITION, WHEEL CONDITION

Drive over edges slowly and at right angles if possible. Driving over sharp edges can cause tyre and wheel damage. Do not trap tyres on the kerb when parking.

Driving with worn or damaged tyres reduces the braking and road holding performance of the vehicle. Regularly check the condition of the tyres (tread and sidewalls) and rims as well as the presence of the valve caps. Seek the assistance of a Fiat Dealership in the event of damage or unusual wear.

Always mark the direction of rotation on the tyres that will be stored when fitting winter or summer tyres. Store them in a cool, dry place and away from direct exposure to the sun's rays.

WINTER TYRES

Winter tyres improve driving safety at temperatures below 7 °C and should therefore be fitted on all wheels.

In accordance with country-specific regulations, affix the speed sticker in the driver's field of view.

All tyre sizes are permitted as winter tyres.

Winter or 4-seasons tyres can be identified by the symbol  on their sidewalls.



TYRE DESIGNATIONS

E.g. **225/55 R 18 98 V**

225: tyre width, mm

55: cross-section ratio (tyre height to tyre width), %

R: belt type: Radial

RF: type: RunFlat

18: wheel diameter, inches

98: load index e.g. 98 is equivalent to 750 kg

V: speed code letter

Speed code letter:

Q: up to 160 km/h

S: up to 180 km/h

T: up to 190 km/h

H: up to 210 km/h

V: up to 240 km/h

W: up to 270 km/h

Choose a tyre appropriate for the maximum speed of your vehicle.

The maximum speed is achievable at kerb weight with driver (75 kg) plus 125 kg payload. Optional equipment could reduce the maximum speed of the vehicle.


Directional tyres

Directional tyres should be mounted so that they rotate in the correct direction. The proper rotation direction is indicated by a symbol (e.g. an arrow) on the sidewall.

TYRE PRESSURE

Check the pressure of cold tyres at least every 14 days and before any long journey. Do not forget the spare wheel. This also applies to vehicles with Tyre Underinflation Detection System.

WARNING Under-inflation increases energy consumption. Non-compliant tyre pressures cause tyres to wear prematurely and have an adverse effect on the vehicle's road holding - risk of accident!

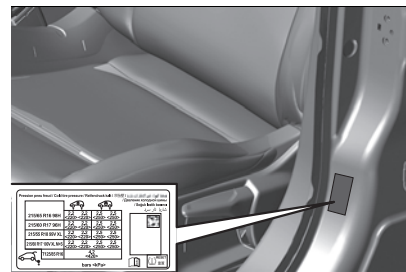

325

F6S0201

The tyre pressure information label on the left B-pillar fig. 325 indicates

the original equipment tyres and the correspondent tyre pressures. The tyre pressure data refers to cold tyres. It applies to summer and winter tyres.

If you have driven for more than 10 minutes or more than 6 miles (10 kilometres) at over 31 mph (50 km/h), add 0.3 bar (30 kPa) to the values indicated on the label.

Always inflate the spare tyre to the pressure specified for full load.

Incorrect tyre pressures will impair safety, vehicle handling, comfort and fuel economy and will increase tyre wear.

Tyre pressures differ depending on various options. For the correct tyre pressure value, follow the procedure below:

1. Identify the engine identifier code.
2. Identify the respective tyre.

The tyre pressure tables show all possible tyre combinations.

For the tyres approved for your vehicle, refer to the EEC Certificate of Conformity provided with your vehicle or other national registration documents.

The driver is responsible for correct adjustment of tyre pressure.



Temperature dependency

The tyre pressure depends on the temperature of the tyre. During driving, tyre temperature and pressure increase. Tyre pressure values provided on the tyre information label and tyre pressure chart are valid for cold tyres, which means at 20 °C.

The pressure increases by nearly 10 kPa for a 10 °C temperature increase. This must be considered when warm tyres are checked.

TREAD DEPTH

Check tread depth at regular intervals. For safety reasons, it is recommended that the tread depth of the tyres on one axle should not vary by more than 2 mm.



326

JJ000314

The legally permissible minimum tread depth (1.6 mm) has been reached

when the tread has worn down as far as one of the tread wear indicators (TWI). Their position is indicated by markings on the sidewall.

If there is more wear at the front than the rear, swap round front wheels and rear wheels periodically. Ensure that the direction of rotation of the wheels remains the same.

Tyres age, even if they are not used. We recommend tyre replacement every 6 years.

CHANGING TYRE AND WHEEL SIZE

If tyres of a different size than those fitted at the factory are used, it may be necessary to reprogramme the Tyre Underinflation Detection System and make other vehicle modifications.

Using different size wheels and tyres from those specified can affect the lifetime of tyres, wheel rotation, ground clearance, the speedometer reading and have an adverse effect on road holding.

Fitting different tyres on the front and rear axles can cause the ESC to mistime.

Have the label with tyre pressures replaced.



WHEEL COVERS

Wheel covers and tyres that are factory approved for the respective vehicle and comply with all of the relevant wheel and tyre combination requirements must be used.

If the wheel covers and tyres used are not factory approved, the tyres must not have a rim protection ridge.

Wheel covers must not impair brake cooling.



Spare wheels: Do not use wheel covers.

TYRE CHAINS



327

JJ000315

Tyre chains are only permitted on the front wheels.

Only use tyre chains designed to be used with tyre type of the vehicle. For 16 inch and 17 inch tyres (M+S and

All Seasons excluded), only use 120 (9mm) tyre chains.

WARNING The use of tyre chains and the maximum allowed speed is regulated by country-specific legislation.



When fitting the tyre chains follow the instructions provided by the manufacturer of the tyre chains.

After having fitted the tyre chains, stop the vehicle after having driven a short distance and make sure that the tyre chains are correctly tightened.

Fiat has tested and approved the Polaire XP9 tyre chains to increase traction in snowy condition.

WARNING Using non-recommended tyre chains or using tyre chains on other sized tyres can damage the suspensions, body, wheels and/or brakes lines. Damages caused by using non-recommended tyre chains or incorrectly installing tyre chains, are not covered by the warranty.

Temporary spare wheel

The use of tyre chains is not permitted on the temporary spare wheel.



WARNING

336) If winter tyres with a lower speed rating than that indicated in the Registration Document are used, do not exceed the maximum speed corresponding to the speed rating of the tyres used.

337) If the pressure is too low, this can result in considerable tyre warmup and internal damage, leading to tread separation and even to tyre blow-out at high speeds.

338) For specific tyres the recommended tyre pressure as shown in the tyre pressure table may exceed the maximum tyre pressure as indicated on the tyre. Never exceed the maximum tyre pressure as indicated on the tyre.

339) The use of unsuitable tyres or wheels may lead to accidents and will invalidate the vehicle operating permit.

340) Use of unsuitable tyres or wheel covers could lead to sudden pressure loss and thereby accidents.

341) Damage may lead to tyre blowout.


TYRE PRESSURE

Engine	Tyres	Vehicle with up to 3 people		With full load	
		front (kPa/bar/psi)	rear (kPa/bar/psi)	front (kPa/bar/psi)	rear (kPa/bar/psi)
1.2 100 hp Hybrid FWD (where provided)	215/65 R16, 215/60 R17, 215/55 R18	220/2.2/32	220/2.2/32	250/2.5/36	250/2.5/36
e Full Electric 54 kWh battery capacity	215/65 R16, 215/60 R17, 215/55 R18	250/2.5/36	250/2.5/36	250/2.5/36	280/2.8/40
1.2 100 hp Hybrid FWD (where provided) e Full Electric 50 kWh battery capacity	125/85 R16 Temporary spare wheel	420/4.2/60	420/4.2/60	420/4.2/60	420/4.2/60



DIMENSIONS

Dimensions are expressed in mm and refer to the car equipped with its original tyres. Height is measured with car unladen.

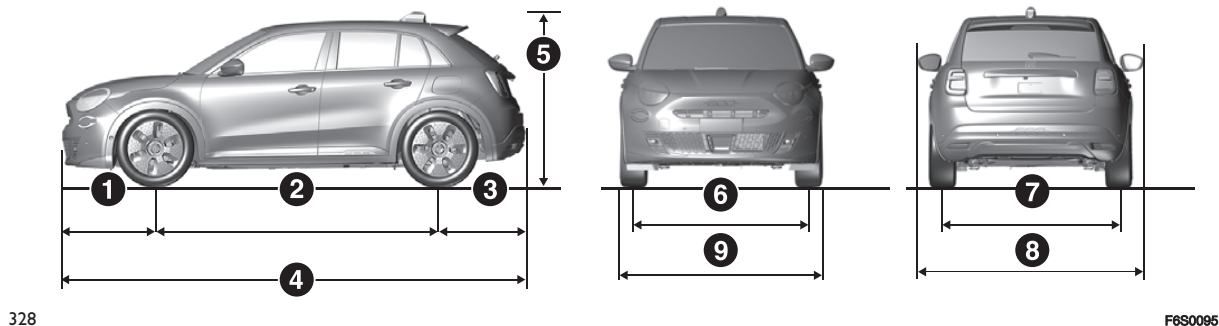

Version	1	2	3	4	5	6	7	8	9
1.2 100 hp Hybrid FWD (where provided)	846	2557	768	4171	1536 (*)/ 1592 (**)	1541(*)/ 1535(°°)	1530(*)/ 1524(°°)	1981	1781
e Full Electric 54 kWh battery capacity	846	2562	763	4171	1523 (*)/ 1577 (**)	1541(*)/ 1535(°°)	1530(*)/ 1524(°°)	1981	1781

(*) Height measured without antenna

(**) Height measured with antenna

(°) With 16"/17" wheels

(°°) With 18" wheels


Length of load compartment floor: 700 mm (without adjustable cargo floor)

Length of load compartment floor with folded second row: 1388 mm (without adjustable cargo floor)

Volume of load compartment: 360 litres for e Full Electric 54 kWh battery capacity version/ 385 litres for 1.2 100 hp Hybrid FWD

NOTE Small variations with respect to the reported values are possible depending on the dimensions of the rims and/or trim level.

MINIMUM GROUND CLEARANCE/TYPICAL ANGLES

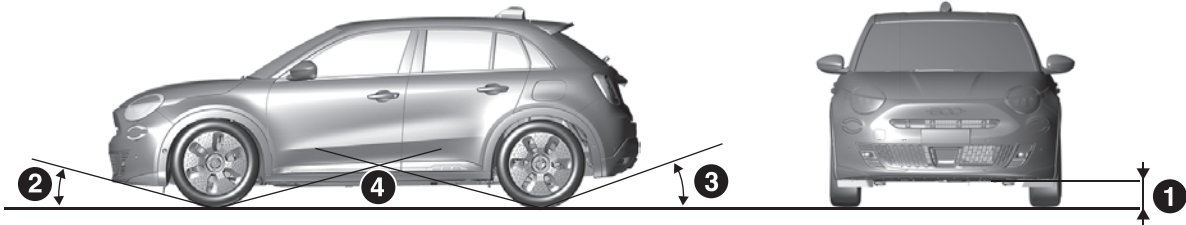

329

F6S0096

Minimum ground clearance / typical angles				
	Minimum ground clearance (mm) (1)	Approach angle (2)	Departure angle (3)	Breakover angle (4)
1.2 100 hp Hybrid FWD (where provided)	205	18.6°	29.6°	20.1°
e Full Electric 54 kWh battery capacity	199	18.4°	28.9°	19.4°

"Minimum ground clearance" (reference 1)

The clearance value is measured next to the lower edge of the differential. This value also defines those for the "Approach angle" the "Departure angle" and the "Breakover angle". Dimensions are expressed in mm and refer to the car equipped with its original tyres.

"Approach angle" (reference 2)

The approach angle is determined by the horizontal line of the road surface and by the tangent line passing between the front wheel and the most projecting low point of the car. The wider the angle, the lower the chance to hit an obstacle with the body or chassis, climbing a steep slope or overcoming an obstacle.



"Departure angle" (reference 3)

The departure angle is determined by the same lines of the "Approach angle", and refers to the rear part of the car.

"Breakover angle" (reference 4)

The value of the "Breakover angle" is linked to the ride height of the car and indicates the attitude of the car to overcome a wedge, more or less steep, preventing the car from resting on the ground with the body or chassis after touching the wedge with its lowest and most projecting parts (usually the underbody), because this would highly reduce wheel grip which, lacking adequate grip to the ground would not have sufficient grip to make the car move and slip. The higher the ride height, the wider the breakover angle. Always bear in mind that the higher the ride height, the lower the stability, due to a higher centre of gravity which reduces the side rollover angle.

WEIGHTS AND LOADS




154) 155)

To identify the weights and loads for your car, refer to the plate shown in fig. 330 and described in the "Vehicle identification number (VIN) plate" chapter or refer to the car registration certificate showing the type-approved weights (for markets, where provided).
C: maximum authorised weight of car fully laden (GVW).

D: maximum authorised weight of fully laden car (GVW) plus trailer. If there is no value in the field or if there is a dash, it means that the car cannot tow.

E: maximum permitted weight on first front axle.

F: maximum permitted weight on second rear axle.

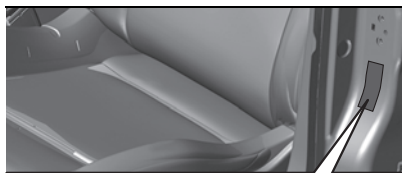

CHASSIS COUNTRY #8	XXX ZACAJAVPOPJXXXXX	MOTORE-ENGINE VERSIONE-VERSION	COCCO COLORE PART CODE
VERIFICARE	kg kg kg	N° PER RICAMBI N° FOR SPARE	111
	3000032	MADE IN POLAND	

330

F6S0202

To calculate the towable weight with a braked trailer, take the difference

between values (D) and (C) shown on the plate.

E.g.: D=2882 kg - C= 1682 kg

Braked trailer = 1200 kg + 250 kg SAE towing (*)

WARNING Do not exceed the indicated trailer and towable weights.

WARNING Respect the vehicle towing capacities.

WARNING Never exceed the maximum permitted load indicated on the plate .

(*) SAE towing: taking care never to exceed the maximum permissible load as indicated on the plate (D) for all versions, an increase of up to 250 kg is permitted.



IMPORTANT

154) Do not load your car any heavier than the gross vehicle weight rating or the front and rear gross axle weight rating. If you do, parts on your car can break, or it can change the way your car handles. This could cause you to lose control. Also overloading can shorten the life of your car. Do not exceed the maximum load

for the car and trailer combination. The maximum towable load is only permitted if it does not exceed the maximum load of the combination.

155) When exterior temperatures are high, the vehicle performance may be limited in order to protect the engine. When the exterior temperature is higher than 37°C, reduce the towed weight. Towing even with a lightly loaded vehicle can adversely affect its road holding. Braking distances are increased when towing a trailer. When using a vehicle to tow, never exceed a speed of 100 km/h (62 mph) (observe the local legislation in force).



TOWABLE WEIGHTS (kg)

Versions	GVW	A	B	C	D
1.2 100 hp Hybrid FWD (where provided)	(°)	1100	(°)	(°)	(°)
e Full Electric 54 kWh battery capacity	(°)	N.A.	N.A.	N.A.	(°)

A = Towable weight (including SAE tow hitch, where provided)
B = Unbraked trailer
C = Load on tow hook
D = Load on the roof (versions with roof rack bars)
GVW = Maximum authorised weight of car fully laden
(°) = Not available at printing time
N.A. = not available
 (*) For Israel, Japan, Morocco, Palestine, Turkey, French Guiana, Guadeloupe, Martinique and Reunion the towable weight is 500 kg.

REFILLING

	1.2 100 hp Hybrid FWD (where provided)	Prescribed fuels and original lubricants
Fuel tank (litres):	44	Unleaded petrol with at least 95 R.O.N. (EN228 specifications)
Including a reserve of (litres):	5	
Engine cooling system (litres):	7.3	Mixture of demineralised water and 50% PARAFLU ^{UP}
Engine sump (litres):	2.08 (MIN) ÷ 3.15 (MAX)	SELENIA ECO2 PLUS
Engine sump and filter (litres):	2.55 (MIN) ÷ 3.63 (MAX)	
Gearbox/differential casing (litres)	4,5	N.A. (*)
Hydraulic brake circuit (litres):	0.81	TUTELA BRAKE FLUID DOT 4 LV
Windscreen and rear window washer fluid reservoir (litres):	4.5	Mixture of water and liquid PETRONAS DURANCE SC 35

(*) Not available at time of printing.



	e Full Electric 54 kWh battery capacity	Prescribed fuels and original lubricants
High-voltage cooling system (litres):	9.8	Mixture of demineralised water and 50% PARAFLU ^{UP} (*)
Hydraulic brake circuit (litres):	0.81	TUTELA BRAKE FLUID DOT 4 LV
Windscreen and rear window washer fluid reservoir (litres):	4.5	Mixture of water and liquid PETRONAS DURANCE SC 35

FLUIDS AND LUBRICANTS

The engine oil used in your vehicle has been carefully developed and tested to meet the requirements of the Scheduled Servicing Plan. Always using the lubricants specified will ensure that the vehicle meets the stated consumption and emissions performances. The quality of the lubricant is a key factor in the operation and life of the engine.

If lubricants conforming to the specific request are not available, products that meet the indicated specifications can be used to top up; in this case optimal performance of the engine is not guaranteed.

PRODUCT SPECIFICATIONS

Use	Features	Specification	Original fluids and lubricants	Replacement frequency
Lubricants for 1.2 100 HP Hybrid engine	SAE 0W-20 ACEA C6	PSA B71 2010	SELENIA ECO2 PLUS Contractual Technical Reference N° F216.L22	Replacement according to Service Schedule

Use	Features	Specification	Original fluids and lubricants	Applications
Brake fluid	Synthetic fluid for brake systems. Exceeds specifications: FMVSS n° 116 DOT 4, ISO 4925 Class 6, SAE J1704.	MS.90039 or PSA S71 2114	TUTELA BRAKE FLUID DOT 4 LV Contractual Technical Reference N° F003.L22	Hydraulic brakes
Protective agent for radiators	Protective fluid with antifreeze action, based on inhibited monoethyl glycol with organic formula.	MS.90032 or PSA B71 5110	PARAFU UP Contractual Technical Reference N° F101.M01	Cooling circuits proportions of use: 50% water 50% protective fluid
Windscreen/rear window washer fluid	Mixture of spirits and surfactants. Exceeds CUNA NC 956-11 specifications.	MS.90043	PETRONAS DURANCE SC 35 Contractual Technical Reference N° F001.D16	To be used diluted or undiluted in windscreen washer/wiper systems



1569



**IMPORTANT**

156) *The use of products with specifications other than those indicated above could cause damage to the engine not covered by the warranty.*

PERFORMANCE

Top speeds after the initial period of usage of the vehicle.

Versions	kph
1.2 100 hp Hybrid FWD (where provided)	185
e Full Electric 54 kWh battery capacity	150



FUEL CONSUMPTION AND CO₂ EMISSIONS

The fuel consumption and CO₂ emission figures declared by the manufacturer are determined on the basis of the type-approval tests laid down by the applicable standards in the country where the vehicle is registered.

Type of route, traffic, weather conditions, driving style, general condition of the vehicle, level of equipment/accessories, use of the climate control system, vehicle load, presence of roof rack, and other situations that negatively affect the aerodynamics or resistance will lead to different consumption values. Only after the first 3,000 km of driving will you establish more even fuel consumption.

To find the specific fuel consumption and CO₂ emission figures for this car, please refer to the data in the Certificate of Conformity, and the related documentation that accompanies the vehicle.

PRESCRIPTIONS FOR HANDLING THE CAR AT THE END OF ITS LIFE

(where present)

The manufacturer has been committed for many years to safeguarding the environment through the constant improvement of its production processes and manufacturing products that are increasingly "eco-compatible". To grant customers the best possible service in terms of respecting environmental laws and in response to European Directive 2000/53/EC governing vehicles at the end of their life, the manufacturer is offering its customers the chance to hand over their vehicle at the end of its life without incurring any additional costs. The European Directive sets out that when the vehicle is handed over, the last keeper or owner should not incur any expenses as a result of it having a zero or negative market value.

To hand your vehicle over at the end of its life without extra cost, contact one of our dealerships if you are purchasing another vehicle or a collection and scrapping centre authorised by the Manufacturer. These centres have been carefully chosen to offer high quality service for the collection, treatment and recycling of vehicles at their end of life, respecting the surrounding environment.

Similarly, to meet its obligations under European Directive 2006/66/EC on batteries, the Manufacturer requires you to comply with the national regulations on handling both low-voltage (12 V and 48 V) and high-voltage lithium ion batteries at all times. This includes consigning vehicles complete with their batteries to one of the collection and demolition centers authorized by the Manufacturer to handle such batteries, and not disposing of them improperly, which could lead to personal injuries and/or harm to the environment.

You can find further information on these collection and scrapping centers either from an Stellantis dealership or by calling the number in the Warranty Booklet or by consulting the websites of the various the Manufacturer brands.



This section describes the main functions of the Uconnect™ 10.25"/10.25" NAV infotainment systems installed on the car.

MULTIMEDIA

TIPS, CONTROLS AND GENERAL INFO	277
Uconnect™ 10.25"/10.25" NAV	280
CONNECTED SERVICES - UCONNECT SERVICES	313
RECORDING EVENT DATA	317
SOFTWARE UPDATE	320
REGISTERED TRADEMARKS	321
RADIO FREQUENCY IDENTIFICATION (RFID).....	321
OFFICIAL TYPE APPROVALS	322

TIPS, CONTROLS AND GENERAL INFO

TIPS

Road safety

Learn how to use the various system functions before setting off.

Read the instructions for the system carefully before starting to drive.

 342) 343) 344) 345)

Reception conditions

Reception conditions change constantly while driving. Reception may be interfered with by the presence of mountains, buildings or bridges, especially when you are far away from the broadcaster.

WARNING The volume may be increased when receiving traffic bulletins.

NOTE The DAB frequency can be used in countries where digital transmission technology is available. The device will tune to any frequency if the DAB button is pressed in a country where the service is not provided.

Care and maintenance

 157) 158)

Observe the following precautions to ensure the system is fully operational:

❑ avoid hitting the display lens with pointed or hard objects that could damage its surface

❑ clean with a damp cloth (microfibre if possible). If necessary, you can use a delicate mild soap and water solution, then dry with a soft, dry cloth. Do not apply pressure on the display lens

❑ do not use alcohol, petrol and derived products to clean the display lens and make sure that the **Uconnect™ 10.25"/10.25" NAV** system is switched off during cleaning

❑ prevent any liquid from entering the system: this could damage it beyond repair

❑ do not touch the touch screen with wet hands

Warnings

In the event of an anomaly, the system must only be checked and repaired by a Fiat Dealership.

If the temperature is particularly low, the display may take a while to reach optimum brightness.

If the car is stopped for a while and the external temperature is very high, the system may go into "thermal protection" mode, suspending operation until the radio temperature returns to acceptable levels.

Look at the screen only and when it is necessary and safe. If you need to look at the screen for a long time, pull over to a safe place so as not to be distracted while driving. Immediately stop using the system in the event of

a fault. Otherwise the system might be damaged. Contact a Fiat Dealership as soon as possible to have the system repaired.

MULTIMEDIA DEVICES: SUPPORTED AUDIO FILES AND FORMATS

For the USB source the system can play files with the following extensions and formats:

- ❑ .MP3 (32 – 320Kbps)
- ❑ .WAV (8/16 bit, 8-48 kHz)
- ❑ .AAC (8 – 96KHz) mono and stereo
- ❑ .M4A (8 – 96KHz) mono and stereo
- ❑ .MP4 (8 – 96KHz) mono and stereo

For all sources, the system can also play the following Playlist formats:

- ❑ .M3U
- ❑ .WPL

For devices that support the MTP (Media Transfer Protocol), the system can play back all file and playlist extensions and formats supported by the device itself.

NOTE It makes no difference whether the suffixes are written in capital or small letters.

NOTE It is recommended to load only unprotected music files, with supported extensions. If the external audio device has other formats (e.g. .exe, .cab, .inf, etc.) problems might arise during playing of tracks.



WARNING Some multimedia playing devices may not be compatible with the **Uconnect™ 10.25"/10.25" NAV** system.

Only use devices (e.g. USB flash drives) from safe sources on the car. Devices from unknown sources could contain software infected by viruses which, if installed on the car, could increase the vulnerability of the car's electric/electronic systems to hacking.

EXTERNAL AUDIO SOURCES

Other electronic devices (e.g. PDA, etc.) can be used on the car.

Some of them may cause electromagnetic interference however. Disconnect these devices if the system performance worsens

NOTE The system supports only FAT32 and EX FAT formatted USB devices. The system does not support devices with a capacity higher than 64 GB.

NOTE The system does not support USB hubs connected to the USB port of the car. Connect your multimedia device directly to the USB port, using the specific connection cable for the device if necessary.

ANTI-THEFT PROTECTION

The system is equipped with an anti-theft protection system based on the exchange of information with the electronic control unit (Body Computer) on the vehicle.

This guarantees maximum security and prevents the system from being used on other cars in the event of theft. In case of need, contact a Fiat Dealership.

GPS RECEPTION (Global Positioning System)

The GPS is a satellite system which provides worldwide information about time and position. The GPS is exclusively controlled by the government of the United States of America, the only body responsible for the availability and accuracy of this system.


The operation of this navigation system can be influenced by any change made to the availability and precision of the GPS or by specific environmental conditions.

When navigation is started for the first time, the system may require several minutes to determine the GPS position and display the current position on the map. Afterwards the position will be found much more quickly (usually a few seconds are needed).

The presence of big buildings (or similar obstacles) may sometimes interfere with the GPS signal reception.

AUDIO SYSTEM

(according to version)

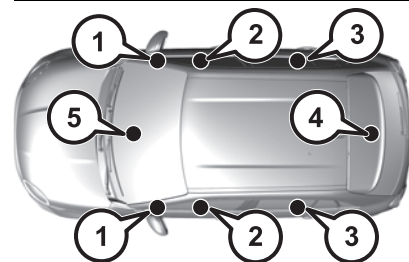

The vehicle can be equipped with one of the following audio systems.

Basic

- (1) 2 front tweeters (19 mm diameter)
- (2) 2 front mid-woofers (160 mm diameter)

Medium

- (1) 2 front tweeters (19 mm diameter)
- (2) 2 front mid-woofers (160 mm diameter)
- (3) 2 rear full-range speakers (130 mm diameter)

Premium Sound System

- (1) 2 front tweeters (19 mm diameter)
- (2) 2 front mid-woofers (160 mm diameter)

(3) 2 rear full-range speakers (130 mm diameter)

(4) 1 subwoofer (160 mm diameter)

(5) 1 center-fill speaker (80 mm diameter).

A 12-channel amplifier in the load compartment.



WARNING

342) Follow the safety rules here below: otherwise serious injuries may occur to the occupants or the system may be damaged. For safety reasons, always stop the vehicle before performing operations that require sustained attention. Some functions are not accessible while driving.

343) If the volume is too loud this can be dangerous. Adjust the volume so that you can still hear background noises (e.g. horns, ambulances, police vehicles, etc.)

344) Always follow the highway code of the country in which you are driving, and concentrate on the road. Always drive safely with your hands on the steering wheel. Only use the **Uconnect™ 10.25"/10.25" NAV** system functions when you are sure that it is safe to do so. The customer is liable for all risks associated with using the functions and applications of the car. Failure to follow these rules may cause serious accidents and/or death.

345) For safety reasons, always stop the vehicle before performing operations that require sustained attention. Some functions are not accessible while driving



IMPORTANT

157) Only clean the front panel and the display with a soft, clean, dry, antistatic cloth. Cleaning and polishing products may damage the surface. Do not use alcohol or similar products to clean the control panel or the display.

158) Do not use the display as a base for supports with suction pads or adhesives for external navigators or smartphones or similar devices.



Uconnect™ 10.25"/10.25" NAV

DISPLAY



332

F6S0118

1. External temperature, climate system settings - 2. Pages - 3. Bluetooth® status, mobile phone signal status, geolocation and data transfer status - 4. Popup - 5. Customizable areas

This system gives access to the following elements:

- ❑ Time and exterior temperature.
- ❑ Heating/air conditioning system controls and reminders of settings.
- ❑ Settings for driving aid functions, comfort and safety functions, audio equipment and digital instrument panel.
- ❑ Settings of functions specific to electric vehicles.
- ❑ Display of visual manoeuvring aid functions.
- ❑ Audio equipment and telephone controls with display of associated information.
- ❑ Connected services and display of associated information.
- ❑ Navigation system controls and display of associated information (depending on equipment).
- ❑ Voice recognition (depending on equipment).

UPPER BANNER

Certain information is displayed permanently in the upper banner of the touch screen:

- ❑ outside temperature from the vehicle's sensors (associated with a blue symbol if there is a risk of ice)
- ❑ temperature setting reminder for the air conditioning

- ❑ charge level of the connected smartphone
- ❑ system connection status (Bluetooth®, Wi-Fi, mobile telephone network)
- ❑ time
- ❑ quick access to the Mirror Screen® functions (associated with a connected smartphone)

STEERING-MOUNTED CONTROLS



333

JJ000425

-  Voice Assistant:
- ❑ Short press, system voice commands (depending on equipment).
- ❑ Long press, voice commands of the smartphone connected using Bluetooth® or Mirror Screen® (Apple CarPlay/Android Auto) via the system.
-  Increase volume.
-  Decrease volume. A long press mute the sound.

Restore the sound by pressing one of the two volume buttons.




- ❑ Incoming call (short press): accept the call Call in progress (short press): hang up.
- ❑ Incoming call (long press): refuse the incoming call.
- ❑ Out of call (short press): access the call log of the telephone connected via Bluetooth®.
- ❑ Mirror Screen® connected (short press): access the projected view of the telephone application of your Mirror Screen® equipment.



- ❑ Radio: automatic search for the previous/next station (in the list of radio stations sorted by name or by frequencies).
- ❑ Media: previous/next track, movement in the lists.
- ❑ Phone: browse the telephone's call log.
- ❑ Short press: validation of a selection. Out of selection, display the lists.



QUICK ACCESS

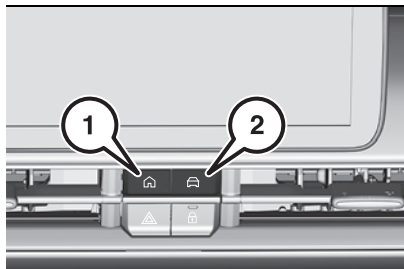

334

JJ000539

Under the **Uconnect™ 10.25"/10.25" NAV** system two buttons fig.4 are available for a quick access to:

- (1) Home
- (2) Advanced Driving Assistance System settings (i.e. Speed Limiter, Cruise Control, Adaptive Cruise Control, etc.)

GPS NAVIGATION-APPLICATIONS-MULTIMEDIA AUDIO SYSTEM- BLUETOOTH® TELEPHONE

NOTE The functions and settings described vary according to the version and configuration of the vehicle, and according to the country of sale.



346)

NOTE A dedicated message is displayed when the system is about to go into standby. For more information

on Energy economy mode, refer to the "Practical information" paragraph.

WARNING The AM radio selection mode may be not available on all vehicles.



347)



WARNING

346) For safety reasons and because they require sustained attention by the driver, the following operations must be carried out with the vehicle stationary and the ignition on: pairing the smartphone with the system via Bluetooth®, using the smartphone, connecting to Mirror Screen® functions (Apple CarPlay or Android Auto), changing the system settings and configuration.

347) Navigation is a driving aid. It cannot replace the driver. All guidance instructions should be carefully checked by the user. By using the navigation, you accept the following terms and conditions: <https://www.tomtom.com/legal/eula-automotive/?388448#>

FIRST STEPS



335

F6S0207

The system starts when the ignition is switched on. With the ignition off, a press on the  button (1) fig. 335 turns the system on. With the engine running, a press on the  button mutes the sound. A long press launches standby mode: the sound cuts off, the screens go off and the clock is displayed on the central screen. Volume control: rotate the  knob.

INFORMATION


This system gives access to the following elements:

- ☐ audio equipment and telephone controls with display of associated information
- ☐ connected services and display of associated information
- ☐ navigation system controls

- ❑ voice recognition
- ❑ time and exterior temperature
- ❑ heating/air conditioning system controls and reminders of settings
- ❑ settings for driving aid functions, comfort and safety functions, audio equipment and digital instrument panel
- ❑ settings for functions specific to the Electric vehicles
- ❑ display of visual manoeuvring aid functions
- ❑ video tutorials via QR codes (e.g. screen management, driving aids, voice recognition).

NOTIFICATIONS

Swipe down from the upper edge of the touch screen fig. 336, to access the notifications centre and display a list of quick settings: Guest, Privacy, Brightness, My Devices, Wi-Fi, fig. 337

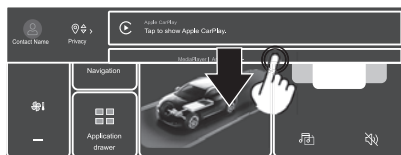

336

F6S0119



337

F6S0120


PRINCIPLES

Use the HOME button to display the last used home page, a second press displays the first home page. Scroll through the home pages, by sliding your finger on the screen to the right or to the left.

PRINCIPLE OF MOVEMENT IN THE SYSTEM:

depending on the pages displayed on the screen, scroll through the text or the menu (on the left side of the screen) by sliding your finger, as with a smartphone.

Page browsing

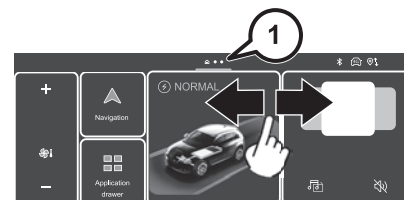

338

F6S0121

To browse between pages swipe on the screen toward right/left. Dots (1) fig. 338 show that more than one page is available.

Touch buttons

- ☰ Display/hide the context menu.
- ← Return to the previous page.

To change the status of a function, press the description for the corresponding line (change confirmed by the slider moving to the right/left: function activated/ deactivated).

❗ Access additional information on the function.

⚙ Access to a function's settings.

📌 Add/delete shortcuts.

PROFILES

Press the ⚙ "Settings" application In the list, select the "Profile" tab.

The screen display presents a "Guest" profile built into the system and allows



for the creation and personalisation of several new profiles associated or not with mobile devices.


The "Guest" profile has a default display with the possibility of adding to it and/or returning it to its initial configuration.

This profile is built into the system and cannot be deleted.

Each profile created can be associated with a mobile device of your choice connected via Bluetooth®; the Bluetooth® function of the mobile device must first be activated. This association allows the system to detect your presence in the vehicle when it starts and to propose the activation of your personalised profile.

If a profile is not connected to the mobile device, the last profile used will be highlighted.

Select (+) "Create Profile", fig. 339 to follow the procedure.

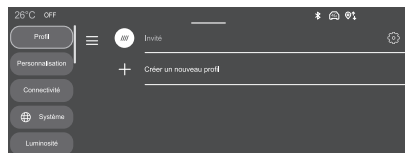

339

F6S0122

Creation of a new profile allows you to personalise:


- ☐ name
- ☐ avatar
- ☐ privacy settings

The benefit of creating a new profile is that you can personalize:

- ☐ the language, the units, the Privacy Settings
 - ☐ the screen configuration, the appearance, the My shortcuts (depending on equipment)
 - ☐ the audio settings, the favourite radio stations
 - ☐ the lighting, the interior ambiance
- some driving aids, the list of favourites
- To edit and delete a profile press on the graphic button

SHORTCUTS

Swipe on the screen from left to right or viceversa to open the shortcuts, fig. 340

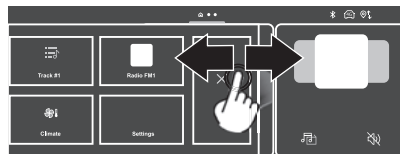

340

F6S0130

A shortcut is a link to a favourite contact, a favourite radio stations, climate settings, etc.

Tap on a shortcut to open the related app.

SHORTCUT CREATION

Custom shortcuts can be created by the user. To do so:

- ☐ go to the desired destination (i.e. list of destinations in the navigation app, contacts list, climate settings, etc.)
- ☐ swipe the screen from left to right or viceversa to open the shortcut page
- ☐ push and hold an empty space for shortcuts or the shortcut to be substituted. The shortcut page will disappear
- ☐ select the desired destination by tapping on it.

POP-UPS



341

F6S0131

In case of notifications (e.g. incoming calls, messages, etc.) a pop-up, (1) fig. 341 could appear on the screen.

MEDIA CHANGING SOURCE


Press the "Media" application

Press the button to change source (radio, audio streaming via a USB socket, Bluetooth® or Mirror Screen®).

SELECTING A RADIO STATION

Press the "Media" application

In the list, select the "Player" tab
fig. 342.

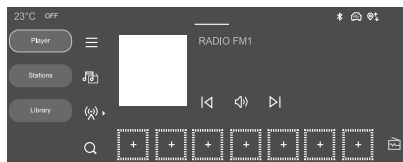

342

F6S0123

□ Press or perform an automatic search for radio stations.

Or

□ Press the button

□ Enter the frequency values using the virtual keypad.

□ Press the

□ A list of stations is available by pressing the "Stations" tab.

□ Press "Mute" to activate/deactivate the sound.

NOTE Radio reception may be affected by the use of electrical equipment not approved by the Brand, such as a charger with USB socket connected to the 12 V socket. The exterior environment (hills, buildings, tunnels, basement car parks, etc.) may block reception, including in RDS mode. This phenomenon is normal in the propagation of radio waves and does

not indicate any malfunction of the system.

STORING A RADIO STATION PRESET

□ Select a station.

□ Press the "Media" application

□ In the list, select the "Player" tab.

□ Storing takes place via a short or long press on one of the buttons, or a long press on an existing favourite radio station, which will be replaced.

□ Press the button to return to the previous page.

In alternative:

□ Select "Stations"

□ Scroll the list for searching the desired station

□ Select add a station as a preset

□ Press "Media" to return to the previous page

AUTOMATIC SEARCH FOR RADIO STATIONS

Using the "Media" application.

□ Press the "Media" application

□ In the list, select the "Stations" tab.

The search is carried out automatically.

□ Using the steering-mounted controls, press the button . The search is carried out automatically.

ACTIVATING RADIO STATION TRACKING

The system changes frequency automatically to obtain better reception.



- ❑ Press the  "Media" application
- ❑ In the list, select the "Settings" tab.
- ❑ Activate "Radio Station Tracking".
- ❑ The lighting of the slider confirms that the function is activated.

CHANGING THE RADIO WAVEBAND


- ❑ Press the  "Media" application
- ❑ In the list, select the "Player" tab
- ❑ Press the  button to change the waveband between FM, AM (where provided), DAB (where provided), according to the country of sale.

ACTIVATING TRAFFIC ANNOUNCEMENTS AND NEWS ANNOUNCEMENTS

This function gives priority to listening to "Traffic announcements" and "News announcements" alert messages.

To be active, this function needs good reception of a radio station that transmits this type of message. While traffic information is being broadcast, the current radio station is automatically interrupted so that the message can be heard. Normal radio listening resumes as soon as the message is finished.

- ❑ Press the  "Media" application
- ❑ In the list, select the "Settings" tab.
- ❑ Activate "Traffic Announcement (TA)" and "News Announcement" fig. 343

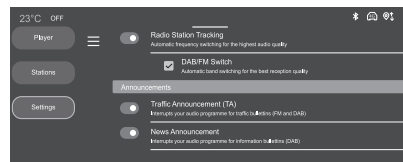

343

F6S0124

The lighting of the slider confirms that the function is activated.

AUDIO STREAMING

The streaming function allows you to listen to the audio stream coming from the smartphone(s) connected via Bluetooth®, USB (iPod® type) or Mirror Screen®.

First adjust the volume on the portable device (to a high level). Then adjust the volume of the system.

If playback does not start, it may be necessary to start the audio playback from the smartphone. Control is from the portable device or by using the system's touch buttons.


NOTE Once connected in streaming mode, the smartphone is considered to be a media source.

PLAYING A TRACK

Press the  "Media" application

If several devices are connected, press the  button to select one.

Once the device is connected, browsing through the files is possible by pressing the "Playlist" or "Library" button.

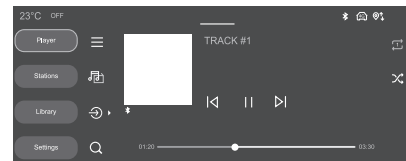

344

F6S0125

Short press  go to the previous/next track. Long press: fast forward/rewind in a track.

Press  repeat the current title or the list of selected titles.

Press  random track playback.

Press  Sound deactivation/reactivation

PLAYING A VIDEO



345

F6S0132

□ press the "Media" application

□ if several devices are connected, press the button to select one

□ once the device is connected, browsing through the files is possible by pressing the "Playlist" or "Library" button

□ press to play/pause the video

□ press to reverse the video

CONFIGURING SOUND AND RADIO SETTINGS

Sound settings can be accessed in 2 different ways.

Using the Media application:

□ Press the "Media" application


□ In the list, select the "Updates" tab.

Or using the Updates application:

□ Press the "Updates" button.

It is possible to configure:

- Sound Settings fig. 346
Ambiance sound (sound adapted to environmental noise), Equalizer (bass and treble adaptation)
- Radio Settings.
- Volume Settings.

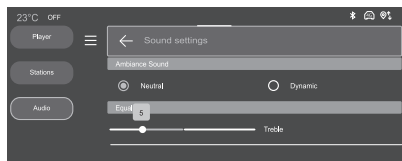

346

F6S0126

INFORMATION AND ADVICE

The system supports USB Mass Storage devices or Apple devices via the USB sockets. The adapter cable is not supplied.

Devices are managed using the audio system controls.

The system will only play audio files with ".wma", ".aac", ".flac", ".ogg", ".mp3" file extensions, at bit rates between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode.

No other file types (".mp4", etc.) can be read. ".wma" files must be of the WMA 9 standard. The supported sampling rates are 32, 44 and 48 KHz.

To avoid reading and display problems, we recommend choosing file names less than 20 characters long that do not contain any special characters (e.g. " ? . ; ù).

Use only USB memory sticks in FAT32 format (File Allocation Table).

NOTE We recommend using the original USB cable for the portable device.

CONNECTIVITY

CONNECTING A WIRED DEVICE BY USB

The USB connection of a portable device allows it to be recharged. It makes its authorised media content available to the system (Media content of iPod® type).

A single USB socket allows the Mirror Screen connection (Apple CarPlay or Android Auto) for compatible connected portable devices and to use certain applications from the device on the touch screen.

The portable device is in charging mode when connected with the USB cable.

NOTE It is recommended that you use the original USB cables of your devices, preferably with a minimal cable length to ensure optimum performance.



159)



Bluetooth® CONNECTION

The Bluetooth® connection of a portable device to the vehicle's system provides access to its contents and "Media" broadcasts. It also enables the Phone function to be activated.

The connection can be initiated either from the portable device's Bluetooth® menu or from the vehicle's system, which requires opening the "My Devices" menu for the first connection.

NOTE In some cases, you may need to unlock your device as well as check authorization when synchronizing contacts and recent calls.

NOTE Some features may not be supported by your device. For information on the partial or full compatibility of device models or smartphones, please connect to the Brand's national website.

Pairing procedure from a device

❑ From the Bluetooth® menu on your portable device, select the system's name from the list of detected devices.

WARNING In order to make your system's Bluetooth® visible, first open the "My Devices" menu on the system.

❑ Continue the first connection procedure proposed by the system and


on the device. For example: validations of the pairing codes

PAIRING PROCEDURE FROM THE SYSTEM

❑ Press the  "Settings" application.

❑ In the list, select the "Connectivity" tab.

❑ Select "CONNECT DEVICE" fig. 347
Selecting "Connect device" it's possible to connect a phone, access to the last calls, contacts and use the dialpad to start a call

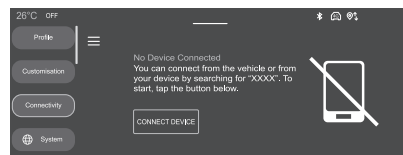

347

F6S0127


❑ Select the name of the portable device you want to connect from the list of known devices (if the device has already been connected to the system) or the list of detected devices (if the device has never been connected to the system or previously deleted from the system).

NOTE A portable device already connected to the system will be able to reconnect automatically when

the vehicle is started once the user profile has been selected. Automatic reconnection is put on hold as soon as the "My Devices" menu is opened. This is to allow the system to make its Bluetooth® visible for the connection of a new device.

The system is disconnected when the driver's door is opened and the ignition is switched off.

If no phone is connected, while accessing to a phone function the system shows the following screen fig. 348

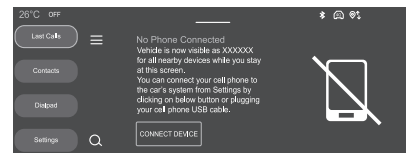

348


F6S0128

AUTOMATIC RECONNECTION

The system allows automatic reconnection of devices already connected and detected when a user profile is selected.

The priority reconnected devices are those which have been linked to the selected user profile or, failing this, the last connected devices

WI-FI CONNECTION

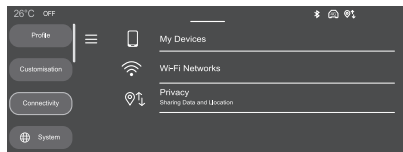

349

F6S0129

The system has an external Wi-Fi connection mode for performing system updates.

- ❑ Press the "Connectivity" application.
- ❑ In the list, select the "My Device" tab.
- ❑ Select "Wi-Fi".
- ❑ Activate/Deactivate "Wi-Fi". The system starts a search for nearby Wi-Fi networks. This may take a few seconds.
- ❑ Select the Wi-Fi network to connect to and enter its password.



WARNING Any network already connected to the system will reconnect automatically as soon as it is detected by the system and after having previously activated the Wi-Fi function.

WARNING The Wi-Fi connection of the system to a device already connected

using a Mirror Screen® wireless connection is not possible. In this case, favour a Mirror Screen® connection using the USB socket.

DEVICE MANAGEMENT

For each device already connected to the system using a wireless connection (Bluetooth® or wireless Mirror Screen® connection), it is possible to determine a preferred connection mode (depending on the functions the device can support).

It is therefore possible to determine whether the device should be connected using a wireless Bluetooth® connection or a wireless Mirror Screen® connection each time the system is started once the profile is chosen.

- ❑ Press the "Settings" application
- ❑ In the list, select the "Connectivity".
- ❑ Select "My Devices" to display the list of paired devices.
- ❑ Press the button to manage the connection of a device.
- ❑ Choose a connection type then confirm this choice by pressing "APPLY".

DELETING A DEVICE

- ❑ Press the "Settings" application.
- ❑ In the list, select the "Connectivity".

❑ Select "My Devices" to display the list of paired devices.

❑ Press the "Settings" button

❑ Press "DELETE".

❑ Confirm by pressing "YES".

NOTE Some devices that have just been deleted from the system request a connection, refuse this request.



IMPORTANT

159) To protect the system, do not use a USB hub.

160) To protect your system, only networks with a sufficient level of security are allowed to connect. WPA2 encryption level, equivalent to a domestic level, is required.

USB PORTS FRONT USB PORTS

The car is equipped with USB-A (charge only) (1) fig. 350 and USB-C (data and charge) (2) fig. 350 sockets for charging the connected device and playing multimedia content through the **Uconnect™ 10.25"/10.25" NAV** system.

Refer to the "Multimedia" section
NOTE The sockets must always be kept clean and dry.





350


JJ000491

The car can be equipped with an USB-C (charge only) socket for charging the connected device.

NOTE The sockets must always be kept clean and dry.

REAR USB PORT

(where provided)

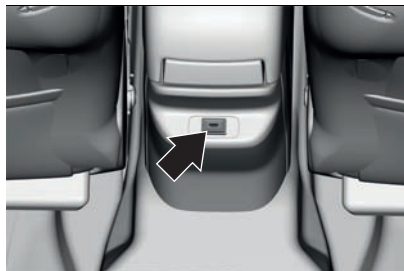


351

JJ000494

The car can be equipped with an USB-C (charge only) socket fig. 351 for charging the connected device.

NOTE The sockets must always be kept clean and dry.

MIRROR SCREEN APPLE CARPLAY SMARTPHONE CONNECTION

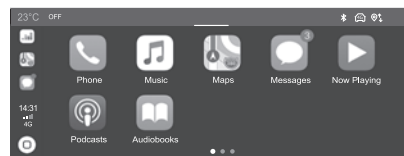

352

F6S0133

Connecting only one Apple CarPlay smartphone can be carried out either by USB cable or using a wireless connection.

To check the compatibility of your smartphone, refer to the indications on the websites:
<http://www.apple.com/it/ios/carplay/>.

NOTE First activate the CarPlay function on your Apple smartphone. Refer to the Apple website in case of a connection failure of the device to assess the device's compatibility with this function. If the problem persists, delete all traces of connections on the smartphone and on the system before making a new connection.

Connect the smartphone to the system using the USB socket compatible with Mirror Screen.

Apple CarPlay is automatically launched a few seconds after the USB connection has been established. In some cases, it may be necessary to unlock your device.

The smartphone charges when connected by the USB cable.

NOTE It is recommended that you use devices' original USB cables, preferably with a minimal cable length to ensure optimum performance.

The wireless connection of a Apple CarPlay device can be initiated from the "My Devices" menu.

- ❑ First activate the smartphone's Bluetooth® function.
- ❑ Press the  "Settings" button.
- ❑ In the list, select the "Connectivity" tab.
- ❑ Select "My Devices" to display the device to be connected to Apple CarPlay.

If the device has already been connected to the system via Bluetooth®, select the device settings from the list of known devices and choose Apple CarPlay as the wireless connection mode.

If the device has never been connected to the system before, it will have to

be paired; refer to the "Bluetooth® connection" section.

The system detects if the smartphone is compatible with Apple CarPlay and offers to connect to it following the pairing process. Subsequent automatic connection of the smartphone requires activation of the Bluetooth® on your device.

- ❑ As soon as the connection is established, press the  button to display the "Apple CarPlay" interface.
- ❑ Press and hold the steering-mounted control button , say "Siri" to initiate the smartphone voice commands.

ANDROID AUTO SMARTPHONE CONNECTION

Connecting only one Android Auto smartphone can be carried out either by USB cable or using a wireless connection.

To check the compatibility of your smartphone, refer to the indications on the websites:
https://www.android.com/intl/it_it/auto/.

NOTE Install the "Android Auto" application on the smartphone via "Play Store". The "Android Auto" function requires a compatible smartphone. Refer to the Android Auto website in case of a connection failure of the device to assess the device's compatibility with this function. If the problem persists, delete all traces of

connections on the smartphone and on the system before making a new connection.

- ❑ Connect the smartphone to the system using the USB socket compatible with Mirror Screen®.
- ❑ Android Auto is automatically launched a few seconds after the USB connection has been established.

A validation procedure on the smartphone has to be followed for the first connection, with the vehicle stationary.

- ❑ The smartphone charges when connected by the USB cable.
- NOTE It is recommended that you use devices' official USB cables, preferably with a minimal cable length to ensure optimum performance.

The wireless connection of a Android Auto device can be initiated from the "My Devices" menu.

- ❑ First activate the smartphone's Bluetooth® function.
- ❑ Press the  "Settings" button.
- ❑ In the list, select the "Connectivity" tab.
- ❑ Select "My Devices" to display the device to be connected to Android Auto. If the device has already been connected to the system via Bluetooth®, select the device settings from the list of known devices and choose Android Auto as the wireless

connection mode. If the device has never been connected to the system before, it will have to be paired; refer to the "Bluetooth® connection" paragraph. The system detects if the smartphone is compatible with Android Auto and offers to connect to it following the pairing process. Subsequent automatic connection of the smartphone requires activation of the Bluetooth® on your device.

- ❑ As soon as the connection is established, press the  button to display the "Android Auto" interface.
- ❑ Press and hold the steering-mounted control button , say "OK Google" to initiate the smartphone voice commands.

PHONE

NOTE To consult the list of supported phones and supported features contact Customer Service at the number listed in the Warranty Booklet or visit www.uconnectphone.com

RECEIVING A CALL

An incoming call is announced by a ring and a display overlaid on the screen.

Accepting the call:

- ❑ briefly press the  button on the steering-mounted controls to accept an incoming call



- ❑ or press the  touch screen button
- Ending the call:
 - ❑ press and hold for at least 2 seconds the telephone button  on the steering mounted controls to refuse the call
 - ❑ or press the  touch screen button.
 - ❑ Press the  button on the touch screen to send an automatic message indicating that you are driving.

MAKING A CALL



MAKING A CALL USING THE NUMERIC KEYPAD

- ❑ Press the  "Phone" application.
- ❑ In the list, select the "Keypad" tab then dial the number.
- ❑ Press the  button to make the call.

MAKING A CALL USING THE LIST OF RECENT CALLS

- ❑ Press the  "Phone" application. In the list, select the "Calls" tab.
- ❑ Or briefly press the telephone button  on the steering mounted controls. Select one of the last calls in the list, and make the call.



CALLING A CONTACT

- ❑ Press the  "Phone" application.
- ❑ In the list, select the "Contacts" tab.

- ❑ Select the desired contact in the displayed list.
- ❑ Call the contact by selecting one of the contact's phone numbers pressing  the button.

ORGANISING THE CONTACT LIST

- ❑ Press the  "Phone" application
- ❑ In the list, select the "Settings" tab to display the telephone-related settings.
- ❑ Choose to list the contacts starting with their first or last name.

CONNECTING TWO PHONES

NOTE The system allows two phones to be connected simultaneously: 2 via Bluetooth® connection or 1 via Bluetooth® connection and 1 via Mirror Screen® connection. Display and content priority is given to the last phone used.

To change the priority of the phone:

- ❑ Press the  "Phone" application.
- ❑ Press the  button to change the priority of the phone.



WARNING

348) Using the telephone is strongly discouraged while driving. Park the vehicle.
349) It is always possible to make a call directly from the telephone; as a safety measure, first park the vehicle.

VOICE COMMANDS

First steps

(depending on equipment)

The voice recognition language is in line with the language chosen and previously configured in the system.

The system supports two languages for cases where the area in which the vehicle is travelling is not covered by the cellular network.

These languages, referred to as on-board languages, are downloaded into the system.

If the chosen language has not been downloaded, a message on the screen appears as soon as the cellular network is not connected for the first time and offers to download it. To use this new language in all areas, download it beforehand (ignition on without starting the engine) via the Wi-Fi network. Apply the download procedure displayed on the screen. Downloading this new language removes the least used on-board language

INFORMATION - USING THE SYSTEM

When voice commands are activated, say your command after the audible signal.

For commands in several stages, interaction takes place with the system to complete the initial request. Some commands self-validate after 7 seconds. If the system has not taken your command into account, it will indicate this by a voice message and an on-screen display. If the command has been accepted by the system, a visual feedback appears on the display.

OPENING VOICE RECOGNITION

Voice commands can be used on any screen page, provided there are no other sources which take priority in use (reverse, emergency or assistance call, telephone call, other smartphone voice recognition already launched).

The voice recognition can be activated by pressing the button  located on the steering wheel or on the touch screen or by saying "Hey Fiat".

To ensure that voice commands are always recognised by the system, please follow these recommendations: **use natural language in a normal tone without breaking up words or raising your voice.** After opening voice recognition with the button on the steering wheel or the touch screen button, always wait for the "beep" (sound signal) before speaking. For optimal operation, it is recommended that you close the windows and the

sunroof (depending on equipment) to avoid any external interference, and switch the ventilation off. Before speaking the voice commands, ask the other passengers not to speak.

Voice command example for air conditioning:

- "Raise the fan speed"
- "Turn on air conditioning"
- "I'm too hot"

Voice command example for radio and media:

- "I want to listen to <singer name>"
- "Switch to radio"
- "Tune to 88.5"

NOTE Media voice commands are only available with a USB connection.

Voice command example for navigation:

- "Navigate home"
- "Navigate me to Gabrielle's house"
- "Search for public parking nearby"

NOTE Depending on the country, give destination (address) instructions in the language configured for the system.

Voice command example for telephone:


- "Call Matthew's mobile"
- "Call" <phone number>
- "Call Jonathan"

NOTE If there is no telephone connected by **Bluetooth®**, a voice message announces: "Connect a

telephone by **Bluetooth®**, and the voice session will be closed. Voice command example for the weather:

- "Do I need a raincoat"
- "How is the weather tonight"
- "What is today's humidity level"

Activating voice commands with "Hey Fiat"

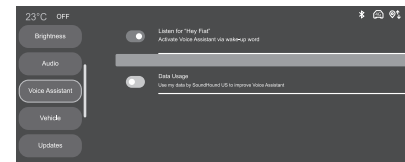

353

F6S0097

In the menu fig. 353 it is possible to activate/deactivate voice recognition by saying "Hey Fiat".

You can allow the re-use of voice data to improve the voice recognition service, fig. 353.


WIDGET

From the home page, press the button  to access the applications wall.

NOTE From any page, press the touch screen with three or more fingers to display the applications wall.



Press an app to open it in fullscreen mode, fig. 354.

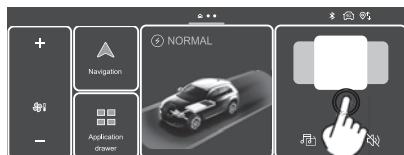

354

F6S0134

 **ADAS:** Advanced Driving Assistance System settings (i.e. Cruise Control, Adaptive Cruise Control, Speed Limiter, etc.).

 **Climate:** access to on-screen climate controls.

 **Date/time:** access to date and time settings.

 **Energy (Electric versions):** shows the statistics of usage of the high-voltage battery.

 **Hey Fiat** (depending on equipment): use the system Voice Assistant or the smartphone Voice Assistant via the system.

 **Settings:** main settings for the audio system, touch screen and digital instrument panel.

 **Media:** select an audio source or radio station.

 **Mirror Screen®:** access the projected view of Apple CarPlay or Android Auto. Smartphone not connected: access the menu allowing you to connect a smartphone.

 **Navigation** (depending on equipment): enter navigation settings and choose a destination. Use services available in real time, depending on equipment.

 **Telephone:** access the menu allowing you to connect a telephone. Telephone connected: access the call log, contacts and telephone settings. Two connected telephones: access the contents of the priority telephone with the possibility of changing the priority of the telephone.

 **Help** (where provided): access the handbook through QR code available on the display.

"ENERGY" WIDGET


(where provided)
The "Energy" widget shows the following information:

 **Energy Flow:** energy fluxes from the high voltage battery to the electric motor and regeneration

 **Statistics:** energy consumption/recharged

 **Charging:** to set the time for the scheduled charging

The "Statistics" page fig. 355 shows the energy consumption (light blue)/recharged (green) in the last 30, 60 and 180 minutes and since the last start.

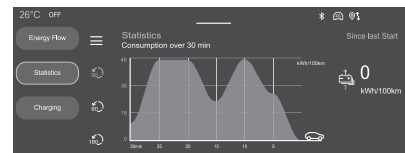


355

F6S0135

The "Energy Flow" page fig. 356 shows the energy fluxes from the high-voltage battery to the electric motor and regeneration:

 **Electric motor (1):** in light blue if power is requested from the high voltage battery (traction), in green when the vehicle decelerates or brakes and the high-voltage battery is recharged (regeneration). Same colours are used to highlight the high-voltage battery (2) and the front wheels (3) in the same conditions.


 **High-voltage battery (2):** the high-voltage battery charge level is indicated by set of 8 green bars. The more coloured bars there are, the greater the battery charge state.

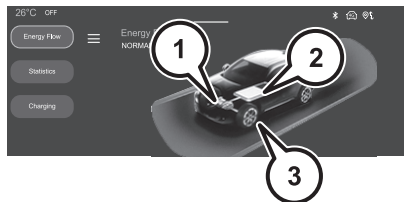

356

F6S0136

The "Charging" page fig. 357 shows the time set for the scheduled charging. The time can be set through the FIAT® app. Once the time is set and the recharging cable is connected to the charging port, the scheduled charging feature must be activated through the FIAT® app or pushing the button next to the charging port.

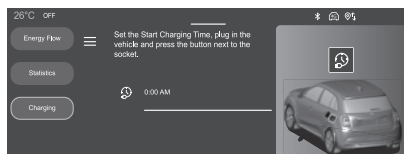

357


F6S0137



NAVIGATION

NAVIGATION HOME SCREEN

(depending on equipment)

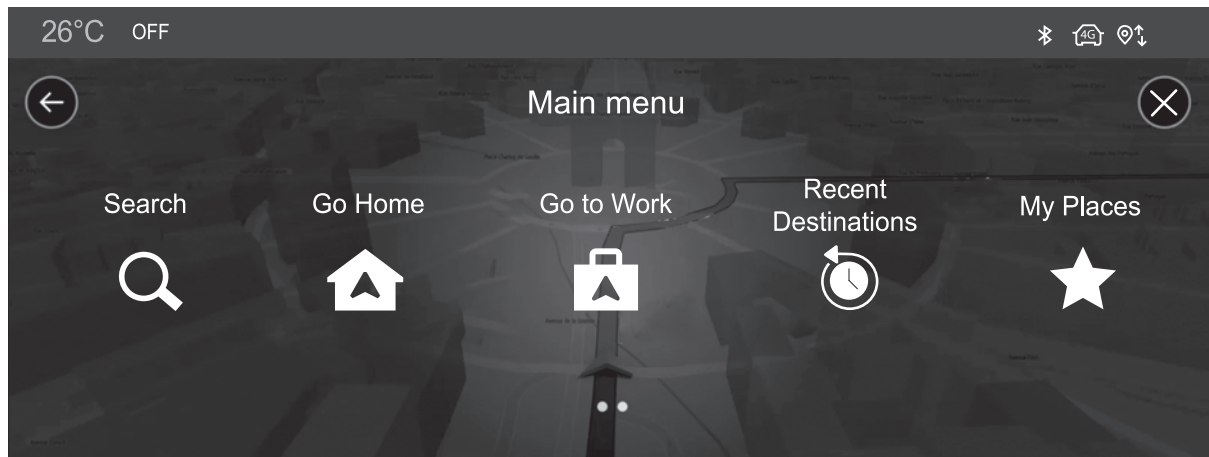

358

F6S0138

You can use map view in the same way as you might look at a traditional paper map. You can move around the map using gestures, and zoom using the zoom buttons.

Important: Everything on the map is interactive including the route and the map symbols. Try selecting something and see what it does.

You can find your destination by selecting it on the map, by choosing a saved destination (e.g. "Home" or "Work") or by searching for an address using the "Search" button in the main menu.

After selecting the destination, a route is planned and displayed on the "Map View" screen. On the right-hand side of the display is the route bar, which provides an additional indication of events along the route, such as accidents and speed cameras. The arrival time and remaining distance are also available.


You can choose to view the route via a 3D image in the "Guidance view".

NOTE The navigation system volume can be adjusted during navigation when the system provides voice indications or using the "Volume adjustment" function "Audio settings" menu.

NOTE Using the graphic keypad is only allowed when the car is stationary in some countries. If an attempt is made to enter text (e.g. an address) with the car in motion or if driving is resumed without having completed engagement, a specific warning message will appear on the display and the operation will be ended. You can also drive more safely by using voice commands to control navigation.

PERSONAL INFORMATION & PRIVACY

At the first startup of the navigation system or after a change of profile and/ or system language, a request of saving information sent by TomTom on the **Uconnect™** system is shown fig. 359 . Some services/option provided by the navigation system need the activation of the "Save journey history on your device" function. Activate the function "Save journey history on your device", sliding the graphic cursor (1) fig. 359 to the right to activate the function and then press on the graphic button "OK".

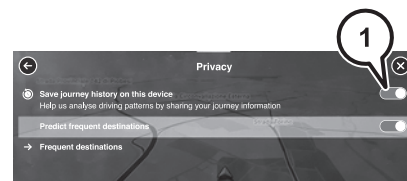


359

F6S0139

By pressing on the graphic button "Learn more" it's possible to visualize on the display the detailed information related to:

- ☐ "General"
- ☐ "TomTom Services"
- ☐ "Other uses of your data"
- ☐ "Journey history"

Press on the graphic button (1) fig. 360 on the right side of the display to show the information.

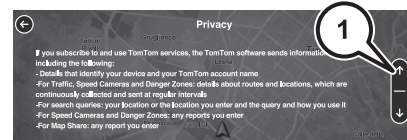

360

F6S0140



MAIN MENU

Press the  "Navigation" application to display the navigation home screen fig. 358.

Press the  button to display the main menu of the various options.

Press  "Search" to enter an address, name or certain points of interest.

Select  "Go home" using an address previously saved in "Add home".

Select  "Go to work" using an address previously saved in "My places".

Select  "Recent destinations" to display the latest destinations searched.

Select  "Current trip" (if navigation is ongoing) to open another menu and perform various actions on the current route planned.

Select  "My places" for quick access to saved places as well as favourite destinations.

Select  "My trips" to display the preferred routes

Select  "Weather" (present when navigation is connected and when no trip guidance ongoing) to display the daily and hourly weather forecast for 5 days around the vehicle and for chosen cities.

Select  "Settings" to enter the vehicle type and to personalise the display, voice instructions, map options, trip planning, sounds and alerts, and system information.

NOTE Regular connection to a Wi-Fi terminal automatically updates the map.

The mapping update can also be carried out via a cellular network, depending on version, depending on country of sale, depending on the level of equipment of the vehicle, as well as the subscription to connected services and options.

NAVIGATION MAP VIEW

Push the "Navigation"  graphic button to show the navigation map on the display

DESTINATION RESEARCH

To search a destination, press the graphic button "Search" on the navigation map.

ATTENTION in the interest of safety and to avoid distractions while driving, you must always plan the route before you start driving.

On the screen, fig. 361 are shown the following graphic buttons:

1: Back button. Select this button to return to the previous screen.

2: Search input box. Enter your search term here. As you type,

matching addresses and POIs are shown.


2: Destination entry box. Enter here through the graphic keyboard the destination (address, city or country)

3: Type of search. By default, the whole of the current map is searched. Once you have used search, the last search type you selected is used. Select this button to change the type of search

4: Cancel search button. Select this button to return to the map view or guidance view

5: Keypad switch button. Select this button to switch between a keypad with letters and numbers, and a keypad with numbers and symbols.


6: Confirmation button. Select this button to confirm the destination data entered.

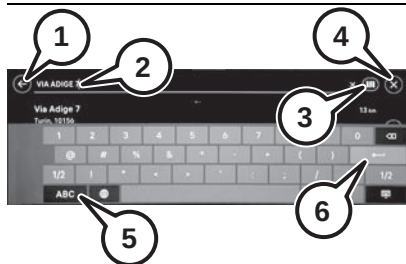

361

F6S0141

To hide the keyboard press (7)
fig. 362

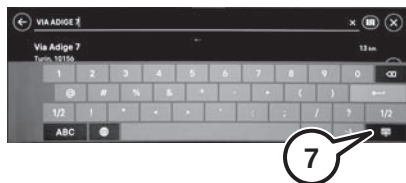

362

F6S0142

NAVIGATION STARTING

When you have chosen a destination, it appears on the display (1) fig. 363. Pressing on the destination will be possible to show the related information (address and expected time of arrival) and start the navigation (by pressing the graphic button (2) fig. 364



363

F6S0144



364

F6S0143

Route selection

When a destination is chosen and the graphic button (2) fig. 364 is pressed, the route selection screen appears fig. 365

From here, you can select your preferred route from the three options that are given to you.

1: Destination

2: Your route. If more than one route is available, all the possible routes are shown. The fastest route is highlighted.

3: Destination address.

4: Drive button. Click on this button to choose your route and go to the guidance view. The shading of this button also represents the time left to choose another route. If you get to this screen and do not choose another route, the first route will automatically be chosen after few seconds.

5: Current location.

6: Route details panel. This panel gives you, for the chosen route:

- ☐ The arrival time
- ☐ The distance
- ☐ Any delay on the route (such as traffic jams, roadworks) that affect your arrival time
- ☐ Icons that represent specific features of the route, such as tolls, or motorway, or tunnels, that may affect your journey.

It's possible to choose any one of the three routes shown. As you do this, the route is highlighted on the map.



365


F6S0145



The guidance view

The guidance view is the default view for your TomTom Navigation.

The guidance view is shown when you have selected a route from the route selection screen. You see your current location and details along your route, including 3D buildings in some cities. The guidance view is normally in 3D direction up. Use the switch view button (5) fig. 366 to change between 3D direction up, 2D direction up, and 2D north up.

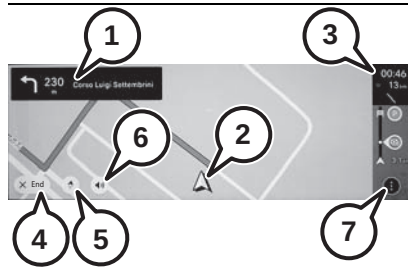

366

F6S0146

1: Next instruction. This gives details of your next junction, the name of the next road, and the distance to the junction or manoeuvre.

2: Current location. This symbol shows your current location. Select it to add it to My Places or search near your current location.

3: Route bar. The route bar is shown when you have planned a route. It has

an arrival information panel at the top, and a bar with symbols underneath. It is possible to hide the route bar in the guidance view, see Settings.

4: End route button. Use this button to cancel your route.

5: Mute button. Select this button to choose between audio instructions, warning only or no sound.

6: Switch view button. Select the switch view button to change between the 3D direction up, 2D direction up, and 2D north up.

7: The Options button. Click on this button to go to the route options panel, where you can modify and get an overview of your current route

Dynamic range mapping

Dynamic range mapping visualises the vehicles realtime range on the Route bar (3), as well as the nearest charging station/fuel station.

The driver will be prompted to search for a charging station if battery is running low or for a fuel station if fuel is running low.


Map graphic settings

On the lower zone the following graphic buttons are shown fig. 367

□ (1): graphic button "Options". Press the button to show the Navigation options.

□ (2): graphic button "Navigation map". Push this graphic button to change the visualization of the navigation map.

□ (3): graphic button activation/deactivation navigation vocal instructions. Press the graphic button to activate/deactivate the instructions provided by the vocal assistant during the navigation.

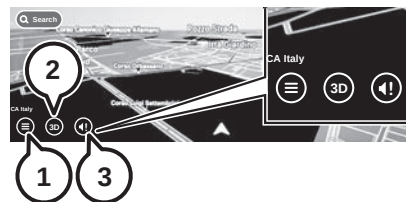


367

F6S0147

Navigation Map centering

To re-center the navigation map in the middle of the screen press the graphic button "Re-centre", fig. 368

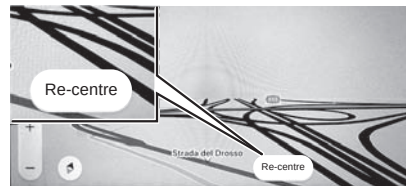

368

F6S0148

Navigation stop/resume

To stop the navigation press the graphic button “End” on the display and confirm by pressing the “OK” button on the screen.

To not confirm and resume the navigation press “Resume”.

By checking the message “Don’t show this message again” the message won’t be shown the next times a navigation is cancelled.

ROUTE PLANNING VIA POI (Point Of Interest)

This function allows to reach or add to the route one or more Points of Interest, choosing from the list shown on the display.

Points Of Interest (POI) categories

On the screen are shown the following Points of Interest (POI) categories:

- ☐ Parking
- ☐ Charging stations (where provided)
- ☐ Restaurants
- ☐ Bar
- ☐ Hotel/Motels
- ☐ Hospitals
- ☐ Tourist attractions
- ☐ Commercial centres
- ☐ Cash dispensers
- ☐ Airports
- ☐ Car dealers
- ☐ Pharmacies

Use a Point Of Interest as a destination

Type the name or category of POI in the Destination entry box (2) fig. 361 and press the Confirmation button.

Add a Point Of Interest as a stop on the route

When a route is selected, press on the route to open the side menu shown in fig. 369

Press one of the quick buttons (1) or the  button to search for the desired POI.



369

F6S0149

Once the desired POI is selected, on the screen will be shown the details (fig. 370).

Press “Add Stop”.



370

F6S0150

ROUTE PLANNING ON THE MAP

To plan a route through the map, open the map and do a long press on the destination you want to select.

To switch from list to map view, press  on the screen.

RECENT DESTINATIONS

To plan a route to a recent destination, proceed as following:

- ☐ Press the graphic button (1) fig. 371: on the screen will be shown the list of the last destinations
- ☐ Select the desired destination: pressing on it the navigation will start





371

F6S0151

NOTE By pressing on the graphic button “Edit list”, placed on the lower part of the display, it’s possible to modify the list of the recent destinations.

CHANGING DESTINATION

During the navigation touch the route. On the side menu select “Change Route”fig. 372



372

F6S0152

The function allows to select the following option (shown on the right side of the display), fig. 373:

- ☐ “Show Alternatives”: allows to search for an alternative for the selected route
- ☐ “Avoid Part of Route”: allows to avoid part of the selected route




373

F6S0153

FAVOURITES (My Places)

Through the menu “My places” it’s possible to select one of the following options,fig. 374

- ☐ “Add Home”: adds to “My places” list the home address
- ☐ “Add Work”: adds to “My places” list the working place address
- ☐ “Recent destinations”: adds to “My places” list the recent destinations
- ☐ “Current Location”: adds to “My places” list the current location address

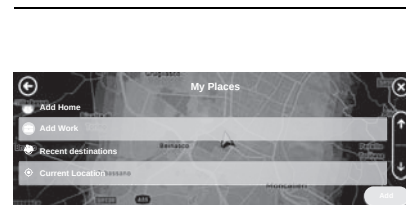

374

F6S0154


Current Location

- ☐ City
- ☐ Country
- ☐ Zip Code
- ☐ Geographical coordinates

Adding of a POI to “My Places”

Proceed as follows:

- ☐ Select the category of the desired POI: the POI will be shown on the screen, fig. 375
 - ☐ Select “Add to My Places”
- NOTE Selecting “More” it’s possible to visualize on the screen the information related to the selected POI (i.e. name, city, address, phone number - where available, web address - where available, email – where available).

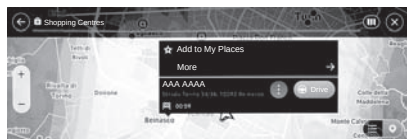

375

F6S0155

CAR PARK SEARCH

Important: in the interest of safety and to avoid distractions while driving, you must always plan the route before you start driving.

To find a car park, do the following:

1: Select the POI “Parking” symbol. The map opens showing the locations of car parks fig. 376



376

F6S0156

If a route is planned, the map shows car parks near your destination. If a

route isn't planned, the map shows car parks near your current location.

To see a list of car parks near your destination, click on the search bar at the top of the screen.

You can select a car park from the list to locate it on the map.

Tip: You can scroll down the list of results using the scroll bar on the right side of the screen.

If you want to change how the search is done, select the button to the right of the search box. You can then change where the search is carried out, for example, to search near you or the whole map.

2: Select a car park from the map or the list. A pop-up menu opens on the map showing the name of the car park.

To plan a route to your chosen car park, select the “Drive” button. A route is planned and then guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically.

FINDING A PUBLIC CHARGING STATION

(Electric versions)

WARNING In the interest of safety and to avoid being distracted while you are driving, you should always plan a route before you start driving.

To find a charging station, type “Electric Vehicle Charging Station” in the Search input box (2)fig. 361 or select the “Electric Vehicle Charging Station” POI from the POI list. The list with the charging stations found is shown fig. 377 and it can be displayed on the map by clicking on the icon



377

F6S0157

If a route is planned, the map shows charging stations near your destination. If a route isn't planned, the map shows charging stations near your current location.

It's possible to change the screen to show a list of charging stations by pressing the button (1).

It's possible to select a charging station from the list to find it on the map.

Tip: It's possible to scroll down the list of results using the scroll bar on the right side of the screen.



❑ Select a charging station from the map or list, (1) fig. 378. A pop-up menu opens on the map showing the name of the charging station

❑ To plan a route towards the selected charging station, select the "Drive" button. A route is planned and then guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically



378


F6S0158

Tip: It's possible to add a charging station as a stop on your route by using the popup menu. The charging stations that are set as a stop on your route have a blue icon.

Recharge to reach the destination

If the vehicle high-voltage battery is almost discharged it may not be possible to reach the destination. In this case on the screen is shown a dedicated message: on the right side

is shown an alert that suggests to the driver to stop for a recharge, fig. 379. Press the graphic button "Search" to search for a recharge station or the graphic button "Cancel" to cancel the search.

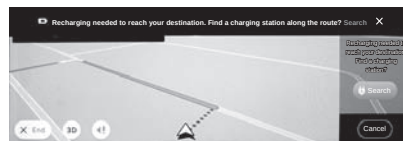

379

F6S0159

CHARGING CONNECTOR

(Electric versions)

Select "Settings" and then "Vehicle Profile" in the Main Menu, then select "Charging connectors", fig. 380.

It's possible to choose the correct charging connector to be used when searching for a charging station. The charging connector supplied with the car is already selected.



380

F6S0160

FINDING A PETROL STATION

WARNING In the interest of safety and to avoid distractions while driving, you must always plan the route before you start driving.

To find a petrol station, do the following:

1: Select "Petrol Station" POI symbol. The map opens showing the locations of petrol stations. You will also see the fuel price, if the navigation is connected and if available. If a route is planned, the map shows petrol stations along your route. If a route isn't planned, the map shows petrol stations near your current location.

To see a list of petrol stations near your destination, click on the search bar at the top of the screen.

You can select a petrol station from the list to locate it on the map.

Tip: It's possible to scroll down the list of results using the scroll bar on the right side of the screen.

If you want to change how the search is done, select the button to the right of the search box. You can then change where the search is carried out, for example, to search near you or the whole map.

2: Select a petrol station from the map or the list. A pop-up menu opens on the map showing the name of the petrol station.

To plan a route to your chosen petrol station, select the "Drive" button.


A route is planned and then guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically.

Tip: You can add a petrol station as a stop on your route by using the pop-up menu. A petrol station that is a stop on your route has a blue icon.

SETTINGS

The "Settings" menu, fig. 381 allows to define the following settings:

- ☐ Map & display"
- ☐ Routing"
- ☐ "Alerts & sounds"
- ☐ "Vehicle profile"
- ☐ "Other"

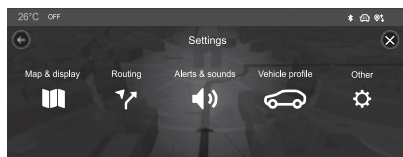

381

F6S0161

Map & display

It allows to select the downloaded maps and choose the contents shown on the screen:

- ☐ Downloaded maps: for choosing which map to show on the screen
- ☐ Day & night colours: for choosing the colours of the display (day/night/ switch automatically)
- ☐ Show on map: for choosing the contents shown on the map, like POI, 3D buildings, junction details, etc.
- ☐ Arrival info: for choosing the details of the destination (arrival time, remaining distance, etc.)
- ☐ Side bar: for choosing the information shown on the side bar (parkings, charging stations, rest areas, etc.)
- ☐ Zoom & orientation: for choosing the type of dynamic zoom during the navigation (at instruction, based on road type, no auto zoom, etc.)

In this Map & Display menu it is also possible to activate/deactivate the autonomy radius view on the map, that shows the reachable distance depending on the fuel amount or high-voltage battery charge level. The view show also the nearest fuel station/charging station.

Routing

It allows to select the preferred route type (assorted, fast, short or Eco-friendly), the kind of road to avoid (toll roads, unpaved, motorways, etc.) and the rerouting options (automatic, manual, never reroute, etc.).

Preferred route types:

- ☐ Fastest route: the fastest route to your destination. Your route is constantly checked taking into account the traffic conditions.
- ☐ Shortest route: the shortest route to your destination. This may take much longer than the fastest route
- ☐ Most eco-friendly route: the most fuel-efficient route

Rerouting options:

- ☐ Automatic. Always take the fastest route - the fastest route will always be chosen for you.
- ☐ Manual. Ask me so I can choose - you will be asked if you want to take the faster route. You can manually select the faster route or you can select the route by steering towards it.



☐ Never. Don't reroute me – your device will not find faster routes for you

Alerts & sounds

It allows to define what kind of acoustic information are given during the navigation (street names and numbers, traffic guidance, road signs, etc.) and what kind of alerts are given (visual, visual and sound, etc.).

Vehicle profile

(Electric vehicles)

It allows to set the type of charging connector installed on the vehicle to find the right charging station during the navigation.

Other

It allows to set the privacy options and read about the copyright and legal information.

Privacy settings:

- ☐ Record trip history: select this setting to choose if your trip history stays in the navigation system.
- ☐ Predict frequent destinations: select this setting to choose if your navigation system suggests frequent destinations when you are planning a route.
- ☐ Frequent destinations: select this to see a list of your stored frequent destinations. You can then choose which ones you want the navigation system to forget.

About

This screen gives you information about your navigation system, including:

- ☐ Software version
- ☐ Installed map
- ☐ Legal information.

THE ROUTE BAR

The route bar is shown when you have planned a route. It has an arrival information panel at the top, and a bar with symbols underneath

WARNING the remaining distance shown by the route bar depends on the overall length of the route.



382

F6S0162

The arrival information panel shows the following information:

- ☐ The estimated time that you will arrive at your destination.
 - ☐ The length of time to drive to the destination from your current location
- The bar uses symbols to show the following information:
- ☐ The stops on your route.
 - ☐ The next petrol stations that are directly on your route (depending on navigation settings)

- ❑ Traffic incidents
- ❑ Speed cameras (where this service is available)

You can choose the information you see on your route through the navigation settings.

The symbols are in the order that they occur on your route.

The total time delay due to traffic jams, weather, and other incidents on your route, is shown above the symbols.

The bottom of the route bar represents your current location and shows the distance to the next item, such as a traffic incident or petrol station, on your route.

TomTom SERVICES

(where provided)

Depending on country, TomTom offers a selection of services that helps the driver during the route planning and driving.

Fuel prices

Search and display fuel stations on the road or on the entire map. The information shown includes prices, location, brand and opening hours.

TomTom Alert Service and Speedcams

The service warns drivers about what's coming ahead, reducing stress and increasing safety.

- ❑ Receive alerts that signal fixed camera zones
- ❑ Receive updated alerts, sent by a unique community of drivers in Europe
- ❑ Community input, share and report real time Speedcams on your road ahead. Availability depends on country legislation.

Online traffic

Data is updated every 30 seconds. It guarantees access to the most up-to-date and accurate traffic information to help drivers arrive at their destinations faster, more safely and more reliably, regardless of their location.

The navigation system regularly receives information about the changing traffic conditions. If traffic jams, heavy rain, snow or other incidents are found on your current route, the navigation will offer to re-plan your route and avoid any delays.

Charging station finder and real time availability

(Electric versions)

The function finds available locations and make informed decisions about when and where to charge. The system will prompt automatically with a list of charging stations compatible to your car. For each charging station is shown:

- ❑ Availability
- ❑ Brand
- ❑ Address information, opening hours, payment method

Online search address and Points Of Interests (POI)

- ❑ Millions of useful Points Of Interest (POI) globally can be searched:
- ❑ Search by a nearby address, zip code or a destination

The database is updated in real time.

Off street parking

The feature shows parking lot locations nearby, along the route or near the destination, including:

- ❑ Real-time availability
- ❑ Opening hours
- ❑ Available services
- ❑ Prices

Local weather

Drivers have access to daily and hourly weather information at their fingertips, including:

- ❑ Five-day weather forecasts for towns and cities
- ❑ Daily high and low temperatures, wind speed direction and amount of precipitation

Over-The-Air map updates

The vehicle's map of the region in which you drive is continually updated through a seamless over the air connection.



This ensures the system is always up-to-date and responsive for the best navigation experience.

Drivers receive the most up-to-date information available automatically, eliminating manual map updates.

Access to additional information regarding the connected navigation services



https://www.tomtom.com/en_gb/stellantis-connected-nav/

NAVIGATION WITH VOICE COMMANDS

The voice recognition can be activated by pressing the button  located on the steering wheel or on the touch screen or by saying "Hey Fiat". Then say the command.

NOTE To ensure that voice commands are always recognized by the system, please follow these recommendations: use natural language in a normal tone without breaking up words or raising your voice. After opening voice recognition with the button on the steering wheel or the touch screen button, always wait for the "beep" (sound signal) before speaking.


For optimal operation, it is recommended that you close the windows and the sunroof (depending on equipment) to avoid any external interference, and switch the ventilation off. Before speaking the voice commands, ask the other passengers not to speak.

Voice command example for navigation:

- "Navigate home"
- "Navigate me to Gabrielle's house"
- "Search for public parking nearby"

NOTE Depending on the country, give destination (address) instructions in the language configured for the system.

For example, by saying "Search for a nearby petrol station", the navigation system will show the following screen, fig. 383

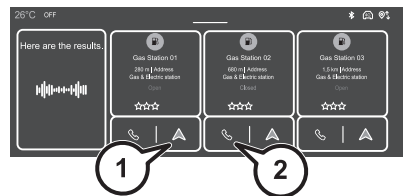

383

F6S0163

Touch the symbol (1) fig. 383 to navigate directly to the selected destination. In alternative, it's possible

to navigate to one of the destinations by saying "Hey Fiat, navigate to" followed by one of the destinations shown on the screen (e.g.: "Hey Fiat, navigate to petrol station nearby"). The command will be confirmed by a popup and the navigation will start. If available, it's possible to call the phone number associated to the destination by touching the symbol (2) fig. 383.



WARNING

350) *Death or serious injury could result from failure or partial failure to follow these warnings and instructions. Failure to properly set up, use, and care for this device can increase the risk of serious injury or death, or damage to the device.*


351) *It is your responsibility to use best judgment, due care and attention when using this device. Don't allow interaction with this device to distract you while driving. Minimise the time spent looking at the device screen while driving. You are responsible for observing laws that limit or prohibit the use of mobile phones or other electronic devices, for example, the requirement to use hands-free options for making calls when driving. Always obey applicable laws and road signs, especially those relating to your vehicle's dimensions, weight and payload type. TomTom does not guarantee the error-free operation of this device nor the accuracy of route suggestions provided and shall not be liable for any penalties arising from your*

failure to comply with applicable laws and regulations.

352) Devices without a truck or camper map installed will not provide appropriate routes for oversized/ commercial vehicles. If your vehicle is subject to weight, dimension, speed, route, or other restrictions on a public road then you must only use a device that has a truck or camper map installed. Your vehicle specifications must be entered accurately on the device. Use this device as a navigation aid only. Do not follow navigation instructions which may put you or other road users in danger. TomTom accepts no liability for damages resulting from your failure to observe this notice.

SETTINGS

The "Settings" widget, fig. 384 allows to define the main system settings.

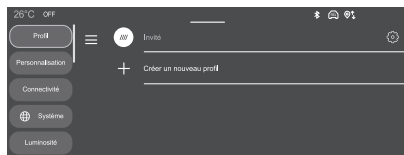

384

F6S0122

Select a page on the left side to define settings regarding:

- ☐ Profiles: edit/create a profile
- ☐ Customisation: ambient lighting, sound ambience, screen animations
- ☐ Connectivity: pair new device, connect to Wi-Fi, privacy settings
- ☐ System settings: general settings regarding language, units, etc.
- ☐ Screen brightness
- ☐ Audio settings
- ☐ Vehicle settings: internal/external lighting, vehicle access, safety, etc.
- ☐ Updates: check for existing system updates and start updating

PROFILE

Each profile created can be associated with a mobile device of your choice connected via Bluetooth®; the Bluetooth® function of the mobile device must first be activated. This association allows the system to detect your presence in the vehicle when it starts and to propose the activation of your personalised profile.

NOTE Depending of the conditions of the vehicle, it may occur that in some specific cases the privacy settings previously linked to a profile could not be loaded. Please always check the "geolocation and data transfer status" icon screened in the upper banner of the **Uconnect™ 10.25"/10.25" NAV** (see (3) fig. 332) when changing profile and at the end of each profile creation

(see the meaning of the "Privacy" icons in the "Privacy Settings" paragraph). Press  to edit an existing Profile. Press "+ Create a new profile" to create a new Profile.

CUSTOMISATION

It's possible to customize:

- ☐ the screen colour:
 - select "Screen colour"
 - browse through the available colour palettes and chose one by pressing on it
 - a "tick" sign  confirms the selection
 - press on  to return to "Customisation" menu
- ☐ the ambient lighting (where provided):
 - select "Interior colour"
 - browse through the available interior lights colours and chose one by pressing on it
 - the preview on the screen confirms the selection
 - press on  to return to "Customisation" menu
- ☐ the sound ambience
- ☐ the visual welcome and goodbye animations
- ☐ the screen transition animations

CONNECTIVITY

It is possible to manage:

- ☐ My Device: pair a new device (see "Connectivity" section)



- ☐ Wi-Fi: connect to a near Wi-Fi network
- ☐ Privacy: define the privacy settings for sharing data and location

SYSTEM

It is possible to configure:

- ☐ the language
- ☐ the date and time
- ☐ the unit of distance and consumption (kWh/100 miles - miles, mi/kWh - miles, km/kWh - km)
- ☐ the temperature unit (Fahrenheit, Celsius)

It is also possible to reset the system configuration and view the system version.

Selecting the language

- ☐ Select "Language" to change the language.
- ☐ Press the desired language.
- ☐ Press the back arrow to return to the previous page.

Setting the date and time

- ☐ Select "Date and Time" to modify the date and time. "Automatic Date and Time" is activated by default, so that the setting is made automatically according to your geolocation.
- ☐ To adjust manually, deactivate "Automatic Date and Time".
- ☐ Press the "Select Time Zone" field then define a time zone.

- ☐ Press the back arrow to return to the previous page.
 - ☐ Press the "Time Settings" line then set the time.
 - ☐ Press "OK" to confirm.
 - ☐ Press the "Date" line then set the date.
 - ☐ Press "OK" to confirm.
 - ☐ Select the Time Format (12h/24h).
 - ☐ Select the Date Format.
- NOTE The system does not automatically change between winter and summer time (depending on the country of sale).

BRIGHTNESS

Slide the cursor to increase/decrease the brightness.

Slide the slider to increase/decrease the brightness or switch off the Ambient lighting (where provided).

AUDIO

It is possible to configure:

- ☐ Sound settings:
 - Ambiance sound
 - Equaliser: increase/decrease Treble, Mid and Bass acoustic level
 - Balance: change the sound balance right/left/front/back by sliding the central dot
 - Reset: reset audio settings to factory settings

- ☐ Radio settings:
 - FM radio list order: alphabetical/by frequency
 - Radio station tracking for searching the best frequency
 - Traffic announcements settings and type of announcements allowed
- ☐ Volume settings:
 - Volume of the voice speech
 - Volume of telephone ringtone and voice volume
 - Volume of acoustic notifications from the system
 - Volume of navigation information (where provided)

VOICE ASSISTANT (HEY FIAT)

It is possible to configure:

- ☐ The activation of the Voice Assistant via the wake-up word "Hey Fiat"
- ☐ The authorization to share with the Voice Assistant service provider the personal data stored in the system to improve the Voice Assistant

VEHICLE

It is possible to configure:

- ☐ Vehicle lighting:
 - Welcome light at the door opening: enabling/disabling and duration
 - Cornering light enabling/disabling


- Automatic Main Beam enabling/disabling
- ❑ Vehicle access:
 - Door unlock only on driver side: enabling/disabling
 - Boot opening on doors unlock: enabling/disabling
- ❑ Safety settings:
 - Rear wiper in reverse gear: enabling/disabling
 - Diagnostic: starts a diagnostic process to shows the vehicle status (i.e. presence of faults)
 - Tyre Pressure Setup: shows for each tyre if it's inflated at the correct pressure
 - Volume of navigation information (where provided)

UPDATES

It is possible to allow automatic Over The Air updates and start an update already downloaded but not installed (refer to "Software updates" section).

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

The Advanced Driver Assistance Systems (ADAS) groups different driving aid systems that play an important role in safety. On the screen fig. 385 you can scroll through the drop-down menu in "Functions" section to activate/deactivate ADAS.

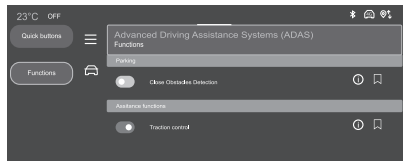

385

F6S0164


The ADAS available are (depending on the vehicle):

- ❑ Attention Alert
- ❑ Lane Keeping Assist
- ❑ Advance Lane Keep Assist
- ❑ Traffic Sign Recognition
- ❑ Close Obstacles Detection
- ❑ Advanced Parking Assist
- ❑ Blind Spot Alert
- ❑ Automatic Braking System

Selecting ⓘ on a service will bring up a page with a brief description of it.

Selecting ⓘ the shortcut to the related settings is added in the "Quick buttons" section

PERSONALISATION

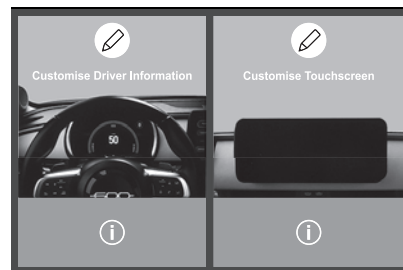

386

F6S0165

❑ Press and hold the screen for at least 3 seconds from one of the system's home pages or press the ⚙️ "Settings" application.

❑ In the list, select the "Customisation" tab

❑ Press the "Displays" field. A page divided into 2 parts is displayed fig. 386.

❑ Press the "HOME" button at any time to leave this page.

PERSONALISING THE SCREEN

Press the pencil icon ✎ in the "Customise Touchscreen" part.

A representation of the organisation of the different home page (HOME) Widgets is displayed.

NOTE A Widget is a reduced window of an application or a service.



ADDING A WIDGET

□ To add a Widget, press  "Add Widget" on the left of the screen or press one of the "+" buttons on the screen.

□ Select the desired Widget.

□ Press the back arrow  to return to the previous page and confirm pressing "SAVE".

ORGANISING THE WIDGETS ON A HOME PAGE (HOME)

To move a Widget, press and hold it, then drag it to the desired location.

ADDING A PAGE

□ To add a page, press  "Page" on the left of the screen.

□ Press the back arrow  to return to the previous page.

DELETING A WIDGET

To move a Widget to the bin, press and hold it, then drag it to the bin .

PERSONALISING THE INSTRUMENT PANEL

Press the pencil icon  in the "Customise Driver Information" section.

The modification of the organisation of the different Widget is displayed on the instrument panel in real time.

NOTE A Widget is a reduced window of an application or a service.

ADDING A WIDGET

□ To add a Widget, press  "Add Widget" on the left of the screen or

press one of the "+" buttons on the screen.

□ Select the desired Widget.

□ Press the back arrow to return to the previous page and confirm pressing "SAVE".

DELETING A WIDGET

To move a Widget to the bin, press and hold it, then drag it to the bin .

PRIVACY SETTINGS

The "Privacy Settings" management is associated with each profile. This function is used with a "Guest" profile configured by default in "Private Mode" or a profile to be created in the system, with or without connection with a mobile device.

For each profile (even "Guest"), the last privacy mode saved value will be restored.

During the Profile creation, if there is no connection with a mobile device, the mode value will be set to "Private Mode".

NOTE Depending of the conditions of the vehicle, it may occur that in some specific cases the privacy settings previously linked to a profile could not be loaded. Please always check the "geolocation and data transfer status" icon screened in the upper banner of the **Uconnect™ 10.25"/10.25" NAV**

(see (3) fig. 332) when changing profile and at the end of each profile creation.

□  "Sharing Data and Location": this mode allows the vehicle to externally transmit all the personal data needed for each valid available connected service

NOTE The personal data required to use the connected services is sent to the providers of these services.

□  "Sharing Data": this mode allows the vehicle to externally transmit all the data needed for each valid available connected service, with the exception of vehicle location data (e.g. GPS coordinates).

NOTE Some connected services may not function without the vehicle location data.

NOTE This mode will not be applied to the emergency call function or to specific services to which the user has consented under the terms of commercial contracts (e.g. Connected alarm).

□  "Private Mode": this mode does not allow the vehicle to transmit personal data outside the vehicle.

NOTE Connected services will only perform local processing inside the vehicle with limited functions.

NOTE This mode will not be applied to the emergency call function or to specific services with given user's

consent on business contracts (Connected alarm). When the vehicle is in professional use or in use under specific contracts subscribed (connect fleet, public delegation...), some privacy modes won't be available to the user depending on services data sharing needs.

NOTE Professional purposes If the vehicle is used for professional purposes or under the terms of specific contracts (e.g. corporate fleet, government assignment), some privacy modes will not be available for the user on the screen, depending on the data sharing needs of the services.

To change the mode, swipe down from the upper edge of the touch screen, to display all the quick settings.

❑ Press the button  and select the chosen mode. The mode is highlighted. Or,

❑ Press the  "Settings" application.

❑ In the list, select the "Connectivity" tab.

❑ Select  "Privacy Settings".

❑ Choose the mode

INTERNET PORTAL

During the first use, upon acquisition of the vehicle, the user is invited to select the country of residence for the use of the Internet portal. If the country is not selected, the notification is stored in the notification centre and disappears

once the country is selected. Slide a finger on the touch screen from top to bottom to display all the notifications. The selection of a country is necessary to use the available internet applications.

❑ Press the  "Settings" application.

❑ In the list, select the "Connected Services" tab.

❑ Choose the country.

The first time you use it, via a connected mobile device, the system links to your profile. The connected mobile device serves as an access key to saved personal information.

First activate the mobile device's

Bluetooth® function.

Select the desired application, authentication will be requested if necessary. This authentication will be saved for future uses via the mobile device connected to the current profile.

An authentication will be requested at each use if the mobile device is not connected to the current profile or if the Guest profile is used

With the use of the  "Guest" profile, an identification will be requested for each use.

CONNECTED SERVICES - UCONNECT SERVICES

(where provided)



Uconnect Services connected services enrich the experience of use of the car by connecting it to the network.

The services (where provided) allow you to receive timely assistance in case of need and emergency, to obtain information about the status of your car, its location, control it remotely and to improve the navigation experience (where provided) thanks to real-time updates

You can access the Uconnect Services through the dedicated FIAT® app for smartphones or smartwatches, a web portal, or the **Uconnect™ 10.25"/10.25" NAV** system of your car.

The availability of services requires a Uconnect Services contract.

Read more about the Uconnect Services – applicability, availability, compatibility, packages and specifications – on the Fiat website.

GENERAL DISCLAIMER

Personal data & privacy

❑ The Manufacturer collects, processes and uses the personal data of the car in accordance with legal



requirements. Read more about the general conditions of service and data protection policies on the Fiat official website.

❑ The Customer is solely responsible for using the services in the car, even if by other people, and shall inform all users and occupants of the car about the services and the functions and limits of the system.

Operating prerequisites

❑ To use some of the Uconnect Services, you need to register on the dedicated portal which can be accessed from the official Fiat website, and activate and login to your devices.

❑ Uconnect Services are not available in all markets and is subject to limitations depending on **Uconnect™ 10.25"/10.25"** NAV system type, location and duration of the services.

❑ The full operation of the Uconnect Services, including the Assistance call, is subject to mobile network and GPS geolocation coverage, without which the proper provision of services is not guaranteed. Coverage may not be guaranteed in places such as tunnels, garages, multistorey car parks, mountains.

❑ In case of mobile network overload or problems related to the power supply of the car (e.g. low battery), the services may not be available.

❑ When using the services, customers shall keep their passwords secret for strictly personal use and not to disclose them to third parties.

SERVICES

WARNING Some of the services listed below may not be available if the car is left with the motor off for more than 20 days. Start the motor to reactivate these services.

NOTE The date and time shown on the **Uconnect™ 10.25"/10.25" NAV**

system display must match the actual date and time, even after disconnecting the battery. Adjust it from the "Settings" menu of the **Uconnect™ 10.25"/10.25" NAV** system. Any discrepancy between the date and time on the display and the actual date and time may be due to a malfunction in the Connected Services.

According on the equipment of the car and of the country, different services may be available for different durations. For further information about your car, go to the personal page on the official Fiat website.

Some of the packages made available to the customer are:

❑ **My Assistant:** Customer care and safety alert service, which includes:

● "eCall (SOS)" and "Assistance call" (see "In an emergency" section): Customer Care and Roadside Assistance.

● "Vehicle Health Report": information on the status and condition of the car, notifying potential maintenance needs to the customer via periodic e-mails. This service is provided on condition that the Customer has previously provided the Stellantis network with a valid e-mail address.

❑ **My eCharge** (Electric versions): is a service that allows you to find, use and pay for charging at public charging stations and keep track of your charging history via FIAT® app. The service also allows you to manage recharges with your private wallbox charging station directly from your smartphone.

❑ **My Car:** vehicle status monitoring service:

● "Vehicle Information": informs the customer on real-time vehicle status related to fuel level, battery level, odometer, etc. Logging in the FIAT® app and Web Portal, it's possible see the Vehicle Information updated at the last time the engine was switched off. Moreover, when a fault is

detected, a specific warning lamp/ alert is sent through push notification on FIAT® app and smartwatch.

● "In-Vehicle Alerts": possibility to receive messages and/ or notifications related to the provision of services and reminder messages about the execution of service and/or recall campaigns on **Uconnect™ 10.25"/10.25" NAV** system display. You can contact the Manufacturer Customer Service for further information regarding the messages received.

□ **My Remote:** this can be used to manage remote operations (switching on lights, door lock/unlock, find vehicle, etc.) from the FIAT® app or smartwatch. My Remote includes: "E-Control" services: they allow to manage, remotely, all the functions related to the of the high-voltage battery charging, such as immediate charging, charging programming and climate schedule. When a high-voltage battery charge session is planned using the **Uconnect™ 10.25"/10.25" NAV** system display of the car, via the FIAT® app or smartwatch, and charging is taking place using devices/ charging points which have their own planning solutions, make sure that the

programming functions are compatible with those of the car itself, as otherwise charging might not take place.

"At-Home Digital Assistant": it allows voice assistant systems to be to use as additional touchpoint to perform available **Uconnect™ 10.25"/10.25" NAV** features enhancing the ownership and the connected services experience. A voice activated digital assistant allows the user to perform vehicle remote operations, access vehicle info, search for POI and much more. At-Home Digital Assistant requires connectivity and active connected services subscription for full functionality (remote operations/ status/ etc).

"Vehicle Finder": it allows the user to visualize on smartphone, smartwatch and website, the vehicle position and shows the distance between user position (device's position) and vehicle position. In addition the user may also launch a pedestrian navigation on Google Maps / Apple Maps from user position to vehicle one. From Vehicle Finder function the customer is able to launch Remote Light, to find the vehicle in case of crowded parking or low visibility.

□ **My Navigation:** connected navigation service (subject to availability according to version/market). My

Navigation includes: "POI Search": it allows customers with Navigation systems to find the latest database for local businesses, Points Of Interest and much more, using the most up-to-date information. POI search is also available on FIAT® app by leveraging Google's maps and Points Of Interest. The full details (telephone number and address) as well as the email address/website of the place can also be shown. "Live weather, speedcams and traffic": real-time traffic flow, incidents, road closure information is provided with graphical representation. Speed camera location is provided based on the customer's location, as well as local weather information including severe weather alerts delivered within the navigation systems. Live traffic, weather and speed camera are available on the **Uconnect™ 10.25"/10.25" NAV**. "Parking Finder": displays a real-time indicator of available parking spots and rates (availability depending on Country). The address of the parking and the itinerary to reach the destination can be displayed. "Fuel Finder" (Hybrid versions): shows the stations located near the route directly on the **Uconnect™ 10.25"/10.25" NAV** system. The fuel prices are also shown (availability depending on the Country). It's



possible to display the details of the service station and the route to reach the destination.

"Charging station Finder" (Electric versions): display a real-time indicator of available public charging station located near the route.

Can be displayed the address, the itinerary to reach the destination and additional information directly on the **Uconnect™ 10.25"/10.25" NAV** system

❑ "Map update Over The Air": the navigation system will recognize the home area of the user and will keep the local map updated automatically, with no need for customer input. When on a trip outside the user's home location, the **Uconnect™ 10.25"/10.25" NAV** will update the passing and destination regions automatically. Maps are updated up to once per month.

❑ "On Street Parking": helps customers to find a parking place "on the street" (not a payment parking, which is covered by the Parking Finder feature). When searching an address or POI, it indicates on the **Uconnect™ 10.25"/10.25" NAV** a level of probability of success to find a free parking slot.

"Natural Speech Voice Recognition": lets you control various functions inside your car without leaving your hands off

the steering wheel and your eyes from road. Functions that can be managed are, for instance: the choice of own profile, airconditioning settings, radio, telephone, etc. This Service allows the customer to use a language that is more natural and easy. To activate the Natural Speech Voice Recognition press the button  on the steering wheel.

❑ **My Fleet Manager** (where provided): allows business customers to manage company fleets with maximum efficiency and safety. The data from the vehicles are collected and shown via the dedicated web portal for fleet management to improve efficiency, reduce costs, prevent risks and guarantee the safety both for vehicles and drivers.

DEACTIVATION OF GEOLOCATION MODE

(only for **Uconnect™ 10.25" NAV**)

If you wish to deactivate geolocation mode, simply do so from the **Uconnect™ 10.25" NAV** system (see the "Settings" menu of the **Uconnect™ 10.25" NAV** system for more details).

When geolocation mode is deactivated some of the services on mobile apps and web that use the location of the car will not be available.

WARNING The icon at the top of the **Uconnect™ 10.25" NAV** display indicates that the geolocation function is active (ON). When geolocation is on, the car position is tracked to enable the functions that require it. When geolocation is off, the car position is only tracked by the navigation, safety, insurance and driver assistance systems (where provided). See the **Uconnect™ 10.25" NAV** system "Settings" chapter to deactivate the function.

WARNING If the "default settings are restored", turn off the engine (ignition device to STOP) and wait a few minutes before restarting it (ignition device to ENGINE). The incorrect performance of the operation and the short period of time passed between turning off the engine and turning it back on may cause the Privacy settings to not be maintained. In this case, repeat the operation, extending the wait time between turning off the engine and turning it back on.


UPDATING THE SYSTEM

Uconnect Services and the **Uconnect™ 10.25" NAV** system application software are updated remotely in order to provide the customer with newer software

versions that include new features or enhancements/enrichments of features already offered.

Updates are made at the Manufacturer's discretion.

The availability of updates can be checked via Settings>Updates,fig. 387

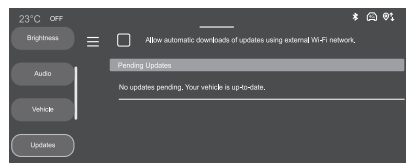

387

F6S0166

Some system updates will be managed automatically, others will be communicated to the Customer by showing messages on the display of the **Uconnect™ 10.25" NAV**, allowing the customer to confirm or postpone the update itself.

The customer will be notified by the **Uconnect™ 10.25" NAV** system if the system is unavailable.

To read more about services, features, specifications, availability and any updates please always refer to the content included in the official Fiat website.

DEACTIVATING UCONNECT SERVICES

If you sell your car on which the Uconnect Services are still active, you will be responsible for logging off your profile from the services on the page on the official Fiat website, by contacting the Customer Care or by going to a Fiat Dealership

You will also be responsible for informing the new owner of any services which have not yet expired associated with a new Uconnect Services account.



WARNING

353) *Always follow the highway code of the country in which you are driving, and concentrate on the road. Always drive safely with your hands on the steering wheel. Only use the **Uconnect™ 10.25"/10.25" NAV** system functions when you are sure that it is safe to do so. The customer is liable for all risks associated with using the functions and applications of the car. Failure to follow these rules may cause serious accidents and/or death.*

RECORDING EVENT DATA

Electronic control units are installed in your vehicle. These control units process data received from the vehicle's sensors, for example, or data they generate themselves or exchange with each other.

Some of these control units are required for the correct operation of your vehicle, some others assist you while driving (driving or manoeuvring aids), while others provide comfort or infotainment functions.

The following contains general information about how data is processed within the vehicle. You will find additional information about the specific data which is downloaded, stored and transmitted to third parties and what it is used for in your vehicle under the keyword "Data protection". This information is directly associated with the references for the functions in question contained in the corresponding vehicle handbook, or in the general terms and conditions of sale.

This information is also available online.

VEHICLE OPERATING DATA

The control units process the data used for the operation of the vehicle. This data includes, for example:



❑ Information about the state of the vehicle (e.g. speed, travel time, lateral acceleration, wheel rotation rate, fastened seat belts display).

❑ Environmental conditions (e.g. temperature, rain sensor, distance sensor).

As a general rule, this data is temporary, is not stored for longer than one operating cycle and is only used within the vehicle itself. The control units often record this data (including the vehicle's key). This function allows either the temporary or permanent storage of information about the state of the vehicle, stresses on components, servicing requirements, as well as events and technical errors. Depending on the vehicle's equipment level, the data stored is as follows:

❑ Operating state of system components (e.g. filling level, tyre pressures, battery charge status).

❑ Faults and malfunctions in important system components (e.g. lamps, brakes).

❑ System reactions in specific driving situations (e.g. deployment of an airbag, triggering of stability control and braking systems).

❑ Information about events which have damaged the vehicle.

❑ For Electric vehicles, the traction battery charge level and the estimated driving range.

In particular circumstances (e.g. if the vehicle has detected a malfunction), it may be necessary to record data which would otherwise simply not be stored.

When taking your vehicle in for servicing (e.g. repairs, maintenance), the stored operating data may be read along with the vehicle's identification number and used if necessary.

The personnel working for the servicing network (e.g. garages, manufacturers) or third parties (e.g. roadside assistance agents) may read the vehicle's data.

This also applies to work carried out under warranty and quality assurance measures.

This data is generally read via the OBD (On-Board Diagnostics) port fitted by law to the vehicle. It is used to report on the technical state of the vehicle or its components and facilitates the diagnosis of malfunctions, in compliance with warranty obligations and for quality improvement. This data, in particular the information relating to stress on components, technical events, operator errors and other malfunctions, is sent to the Manufacturer, if necessary, along with the vehicle's identification number.

The Manufacturer's liability may also be engaged. The Manufacturer may also use the operating data taken from the vehicle for product recalls. This data may also be used to check the customer's warranty and any claims made under warranty.

Any malfunctions stored in the vehicle may be reset by an after-sales service company during servicing or repair work, or at your request.

COMFORT AND INFOTAINMENT FUNCTIONS

Comfort settings and personalised settings may be saved in the vehicle and modified or reinitialised at any time. Depending on the vehicle's equipment level, this may include:

❑ Seat and steering wheel position settings.

❑ Chassis and air conditioning settings.

❑ Personalised settings such as the interior lighting.

❑ You can enter your own data into the functions of your vehicle's audio and telematic system, as part of the selected functionalities.

Depending on the vehicle's equipment level, this may include:

❑ Multimedia data such as music, videos or photos to be read by an integrated multimedia system.

- ❑ Address book data to be used with an integrated hands-free system or with an integrated navigation system.
- ❑ Entered destinations
- ❑ Data regarding the use of online services.

This data for the comfort and infotainment functions may be stored locally in the vehicle or saved to a device that you have connected to the vehicle (e.g. smartphone, USB memory stick or MP3 player). Data that you have entered yourself may be deleted at any time.

This data may also be transmitted outside the vehicle at your request, particularly when using online services in line with the settings that you have selected.

SMARTPHONE INTEGRATION (E.G. ANDROID AUTO® OR APPLE CARPLAY)

If your vehicle is equipped accordingly, you can connect your smartphone or another mobile device to the vehicle in order to operate it using the vehicle's integrated controls. Images and sounds from the smartphone can be transmitted through the audio and telematics system.

Specific information is simultaneously sent to your smartphone. Depending on the type of integration, this includes data such as location, day/night mode

and other general information about the vehicle. For more information, please refer to the user instructions for the vehicle or the audio and telematics system.

Integrating a smartphone allows you to use its applications, such as a navigation app or music player. No other integration between the smartphone and the vehicle is possible, in particular active access to vehicle data. How the data is processed subsequently is determined by the supplier of the application being used. The ability to change settings depends on the application in question and on the operating system installed on your smartphone.

ONLINE SERVICES

If your vehicle is connected to a wireless network, data can be exchanged between your vehicle and other systems.

Connection to a wireless network is made possible via a transmitter located in your vehicle or a mobile device that you have provided (e.g. smartphone). The online services can be used via this wireless connection. These include online services and applications (apps) provided to you by the Manufacturer or other suppliers.

EXCLUSIVE SERVICES

As regards the Manufacturer's online services, the corresponding functions are described by the Manufacturer in an appropriate medium (e.g. handbook, Manufacturer's website) and the information about data protection is provided.

Personal data may be used for online services.

The exchange of data for this purpose takes place over a secure connection, using for example the Manufacturer's dedicated computer systems. The collection, processing and use of personal data for the development of services are carried out solely on the basis of a legal authorisation, for example in the case of a legal emergency call system or a contractual agreement or else under a consent agreement.

You can activate or deactivate the services and functions (some may be chargeable) and, in some cases, the vehicle's entire connection to the wireless network. This does not include the statutory functions and services such as the emergency or assistance call system.

THIRD-PARTY SERVICES

If you use online services provided by other (third-party) suppliers, these services are subject to the



responsibility, the data protection and the terms and conditions of use of the supplier in question. The Manufacturer often has no influence over the content exchanged in this regard.

Please therefore ensure that you are aware of the nature, extent and purpose of the collection and use of personal data as part of the third party services provided by the service provider in question.

SOFTWARE UPDATE

The Infotainment system can download and install selected software updates over a wireless connection.

NOTE The availability of these over the air vehicle software updates varies by vehicle and country. Find more information on our website.

REMOTE DEVICE MANAGEMENT AND REMOTE SOFTWARE AND FIRMWARE UPDATES

As an integral part of the service related to the performance of subscribed connected service contracts, necessary device management and necessary software and firmware updates related to the software and firmware for the named connected service will be performed remotely, in particular by using over the air technology.

For this, a secure radio network connection between the vehicle and the device management server will be established when ignition is switched on and a mobile network is available. Depending on the equipment of the vehicle, connection configuration must be set to "Connected vehicle" to allow the establishment of the radio network connection.

Irrespective of a valid connected service subscription, remote product security or product safety related device management and software and firmware updates will be performed when the processing is necessary for the compliance with a legal obligation to which the manufacturer is subject (e.g. applicable product liability law, emergency call regulation) or when the processing is necessary in order to protect the vital interests of the respective vehicle users and passengers.

The establishment of a secure radio network connection and the related remote updates are not affected by privacy settings and will be performed in principal after an initiation by the vehicle user following a respective notification.

The system is able to notify receipt of an update as soon as it is connected to an exterior Wi-Fi network or a

mobile network. Large updates are downloaded only via the Wi-Fi network. The availability of an update is notified on the Info Display at the end of a trip with an option of immediate installation or postponement of installation.

The installation time is variable and can take several minutes with a maximum of about 30 minutes. A notification will give an estimate of the duration and a description of the update.

Update information is available through the "Settings" application.

□ press the  "Settings" application
□ in the list, select the "Updates" tab
□ press the button . It allows you to change the authorisation for automatic downloading of updates via an external Wi-Fi network.



354

NOTE Steps for downloading and installing updates may vary by vehicle. For safety reasons and because it requires sustained attention by the driver, the installation must be carried out with the ignition on without starting the engine. The installation cannot be carried out in the following cases:

- engine running
- emergency call in progress
- insufficient vehicle battery charge
- charging the vehicle's high voltage battery

NOTE During the installation process, the vehicle may not be operational. If the update has failed, seek the assistance of a Fiat Dealership.

NOTE The use of this service is not charged by the Contractor. On the other hand, the use of the WI-FI and/or cellular networks of your smartphone can generate additional fees if your data plan is exceeded. These possible costs are reflected in the bill of your telephone operator.



WARNING

354) *For safety reasons and because it requires sustained attention by the driver, the installation must be carried out with the ignition on without starting the engine. The installation cannot be carried out in the following cases: engine running, emergency call in progress, insufficient conventional battery level, when charging highvoltage battery (electric vehicles).*

REGISTERED TRADEMARKS

Apple Inc.

Apple CarPlay is a trademark of Apple Inc.

App Store and iTunes Store are trademarks of Apple Inc.

iPhone, iPod, iPod touch, iPod nano, iPad and Siri are trademarks of Apple Inc.

All the other trademarks belong to their respective owners.

Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Bluetooth SIG, Inc.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

DivX, LLC

DivX® and DivX Certified® are registered trademarks of DivX, LLC.

Google Inc.

Android™ and Google Play™ Store are trademarks of Google LLC.

Velcro Companies

Velcro® is a registered trademark of Velcro Companies.

RADIO FREQUENCY IDENTIFICATION (RFID)

RFID technology is used in some vehicles for functions such as tyre pressure monitoring and immobiliser. It is also used in connection with conveniences such as radio remote controls for door locking / unlocking and starting. RFID technology in Fiat vehicles does not use or record personal information or link with any other Fiat system containing personal information.



OFFICIAL TYPE APPROVALS

All radio equipment provided with the car complies with Directive 2014/53/EU, UA.RED.TR, the French SAR Decree Law of 15/11/2019 and the UKCA (UK Conformity Assessed) Certification in force in the United Kingdom.

For further information visit the www.mopar.eu/eu/owner or <http://aftersales.fiat.com/elum/> websites

For more information about certifications and open source lists available for in-car components use the following link: <http://aftersales.fiat.com/elum/>

Radio frequency devices

All radio frequency devices comply with the regulations in force in the countries in which they are sold.

For further information visit the www.mopar.eu/eu/owner or <http://aftersales.fiat.com/elum/> websites

BORN TO BE TOGETHER



SELENIA





Oil change? The experts recommend Selenia

*The engine of your car is factory filled with **Selenia**. This is an engine oil range which satisfies the most advanced international specifications. Its superior characteristics allow **Selenia** to guarantee the highest performance and protection of your engine.*

The Selenia range includes a number of technologically advanced products:

Selenia ECO2 PLUS

Selenia ECO2 PLUS is a synthetic lubricant developed in collaboration with STELLANTIS for passenger car engines that is formulated to have low ash characteristics and provides very high energy saving fluid.

Selenia WR FORWARD 0W-20

Selenia WR FORWARD 0W-20 is a fully synthetic lubricant developed in collaboration with STELLANTIS specifically designed for latest generation passenger cars with diesel engines (Euro 6 Standards with UREA) and for high-performance engines in the luxury and sport cars segments.

Selenia WR FORWARD 0W-30


Selenia WR FORWARD 0W-30 is a fully synthetic lubricant developed in collaboration with FCA for Euro 6 diesel engines without urea. Its viscosity grade permits to increase the fuel economy characteristics and consequently the reduction of CO₂ produced.

Selenia DIGITEK PURE ENERGY

Selenia DIGITEK PURE ENERGY 0W-30 is a fully synthetic lubricant developed in collaboration with STELLANTIS formulated for modern passenger car petrol Euro 6 engines. Its particular viscosity grade and specific formulation are able to increase the fuel economy characteristics and consequently the reduction of CO₂ produced.

Selenia MULTIPOWER GAS

Selenia MULTIPOWER GAS 5W-40 is a fully synthetic lubricant developed in collaboration with STELLANTIS designed for passenger cars with petrol engines, as well as turbocharged, powered with methane or LPG.

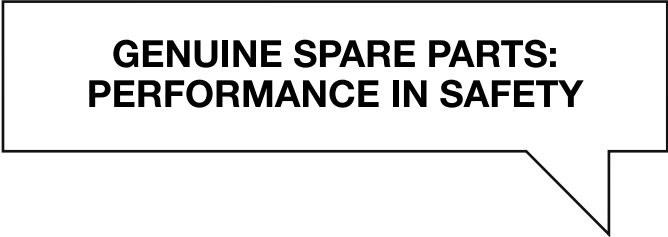

GENUINE SPARE PARTS: PERFORMANCE IN SAFETY

Our **genuine spare parts** are subject to **strict tests**, carried out by specialists that check the use of **cutting-edge materials** and **their reliability** both in the design and manufacturing stages.

This guarantees long term **performance and safety** to the advantage of the driver and passengers travelling on the vehicle.

Always insist on getting **genuine spare parts** and check they are actually used.




FLEXCARE - SUBSCRIBE TO PEACE OF MIND

A collection of extended warranty and service plans (where and which provided) to match the way you drive



PROTECTION

Protect yourself from the unexpected.

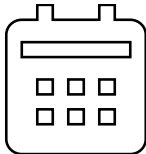

PREDICTABILITY

Anticipate the costs, with no surprises.



FLEXIBILITY

Tailor your FlexCare plan to your needs



EXPERTISE

Benefit from Brand Parts and the unique expertise of our network.

The extended warranty, called Extended Care Premium, lets you extend the manufacture warranty beyond its stand duration, allowing you to benefit from the same vehicle protection as the original manufacturer warranty for up to three more years. You can subscribe to an extended warranty contract any time before the original manufacturer's warranty expires.

The Service Plan, on other hand, doesn't just help the maintenance costs of your vehicle, but also gives you valuable additional services to make life with your vehicle easier. There are various levels of service plans available, from basic scheduled servicing operations to more complete packages such as "Complete Care Plus" which combines extended warranty, schedule maintenance, wear items & roadside assistance all in one exclusive plan.

You can discover more and purchase directly on line by visiting the Brand website or speak to your local dealership to see which one is more suitable for your vehicle.

NOTES

NOTES

CONTENTS

7" Digital instrument panel 71

Active emergency braking 94

Active safety systems 92

Adaptive Cruise Control 155

Adjustable storage compartment 64

Advanced Driver Assistance Systems recommendations (ADAS) 149

Advanced Lane Keep Assist 165

Advanced parking assist 179

Air diffusers 48

Air intake 236

Anti-dazzle 38

Antilock brake system (ABS) 92

Assistance call 208

Auto Dim High Beams 40

Automatic climate control system 48

Automatic headlight activation 40

Automatic light control 40

Auxiliary battery (Hybrid version) 19

Brake assist 92

BS (Belt Starter) (Mild Hybrid versions) 16

Bulb replacement 212

Central locking system 20

Centre console storage 64

Charging 184

Charging functions 199

Charging port 184

Charging procedure from domestic power socket (AC) 193

Charging procedure from public charging station (AC/DC) 197

Charging procedure from wallbox charging station 195

Charging the 12 V battery using a battery charger 232

Charging the 48 V battery using a 12 V battery charger 232

Charging the conventional battery 232

Charging types 186

Child restraints 109

Climate control system maintenance 236

Climate control systems 48

Close Obstacle Detection 174

CO₂ emissions 274

Coasting 147

Cruise Control 152

Dimensions 264

Door panel storage 64

Doors 29

Drive Mode 147

Driver Alert 94

Driver Attention Alert 94

Driving assistance systems 94

Driving hints and recommendations 201

Driving Time Alert 94

Dynamic Stability Control (DSC) 92

e-Auto mode 183

eCall (SOS) 208

Electric Drive Unit 145

Electric version operating principle 12

Electrified dual Clutch automatic Transmission 141

Electronic key system 20

e-machine 16

Emergency call 208

Engine compartment 236

Engine data 258

Exhaust system 236

Exterior care 250

Exterior lighting 40

External mirrors 38

Fluids and lubricants 271

Folding mirrors 38

Forward collision alert 94

Free-wheeling 230

Front fog lights 40

Front pedestrian protection 94



Front-rear Close Obstacle Detection (versions with 12 sensors)	174		
Fuel	199		
Fuel consumption	274		
Fuses	216		
G lovebox	64		
H azard warning flashers	208		
Head restraints	36		
Headlight	40		
High beam	40		
High beam assist	40		
High-voltage battery	12, 14, 259		
High-voltage battery disposal	12		
Highway Driver Assist (level 2 autonomous driving)	172		
Hybrid system equipment	16		
I gnition device	27		
Ignition switch positions	27		
In case of accident	210		
Interior care	253		
Interior fittings	64		
Interior lights	45		
Internal mirrors	38		
J acking positions	248		
Jump starting	224		
K eys, locks	20		
		L ane departure warning	162
		Lane Keeping Assist	163
		M aintenance	236
		Manual climate control system	48
		Mild Hybrid version operating principle	16
		Mirrors	38
		Mode 2 charging cable	186
		Mode 3 charging cable	186
		Mode 4 charging cable	186
		O ccupant protection systems	104
		Official type approvals	322
		Operating Mode	14
		P anoramic Camera	173
		Parking	138
		Parking brake	139
		Parking lights	40
		Pedestrian safety alert	104
		Power sources	186
		Precautions relating to the high voltage system	91
		Prescriptions for handling the car at the end of its life	275
		Programmable charging	199
		Puddle light	40
		R adio Frequency Identification (RFID)	321
		Radio remote control	20
		Rear Close Obstacle Detection (versions with 4 sensors)	174
		Rear fog lights	40
		Recording event data	317
		Refilling	269
		Registered trademarks	321
		Remotely operable additional functions (Electric versions)	77
		Replacement keys	20
		Replacing battery in keys	20
		Roof rack system	68
		S eat belt reminder	108
		Seat belts	104
		Seats	32
		Select Terrain Selector	92
		Service information	232
		Shark fin antenna	64
		Shortcuts for Advanced Driver Assistance System (ADAS)	150
		Side blind spot alert	94
		Side protection (versions with 12 sensors)	174
		Speed Limit Recognition	167
		Speed limiter	150
		Starting and operating	136
		Steering wheel	37
		Steering wheel adjustment	37
		STOP START ENGINE button	27

Stop-Start system	147
Sun visors	64
T owing	228
Traction Control system (TC)	92
Traffic Sign Recognition	167
Trailer hitch	205
Trip computer	75
Tunnel detection	40
Turn lights	40
Turtle mode	12
Tyre repair kit	222
Tyre Underinflation Detection System	94

Uconnect™ 10.25"/10.25" NAV

Advanced Driver Assistance Systems (ADAS)	311
Connectivity	287
Display	280
Media	285
Mirror Screen	290
Personalisation	311
Phone	291
Pop-ups	285
Profiles	283
Settings	309

V ehicle identification	257
Vehicle security	28
Vehicle storage	249

W arning indicator lamps	78
Warning triangle	208
Weights and loads	267
Wheel changing	217
Wheels and tyres	248, 260
Widgets	74
Windscreen wiper/washer	46
Wiper blade replacement	236



WHY CHOOSE ORIGINAL SPARE PARTS

We who designed, engineered and built your car,
we really know it in every single detail and component. **At authorized Fiat Service workshops**
you will find technicians trained directly by us who offer you quality and professionalism in all servicing operations. Fiat
workshops are always by your side for periodic maintenance, seasonal checks and practical advice from our experts.

**With Genuine Parts distributed by MOPAR®, you will maintain over time the reliability,
comfort and performance characteristics for which you chose your new car.**

Always ask for Genuine Parts for the components we use to build our cars and that we recommend because
they are the result of our ongoing commitment to research and development
of ever more innovative technologies.

For all these reasons, **rely on Genuine Parts:
the only parts specifically designed for your car.**

SAFETY:
BRAKING SYSTEM

**ECOLOGY: PARTICULATE FILTERS,
CLIMATE CONTROL SYSTEM
MAINTENANCE**

COMFORT:
SUSPENSION AND WINDSHIELD
WIPERS

PERFORMANCE:
SPARK PLUGS, INJECTORS AND
BATTERIES

ACCESSORIES LINE:
ROOF RACK BARS, RIMS



Thank you