




BEAT
DIESEL

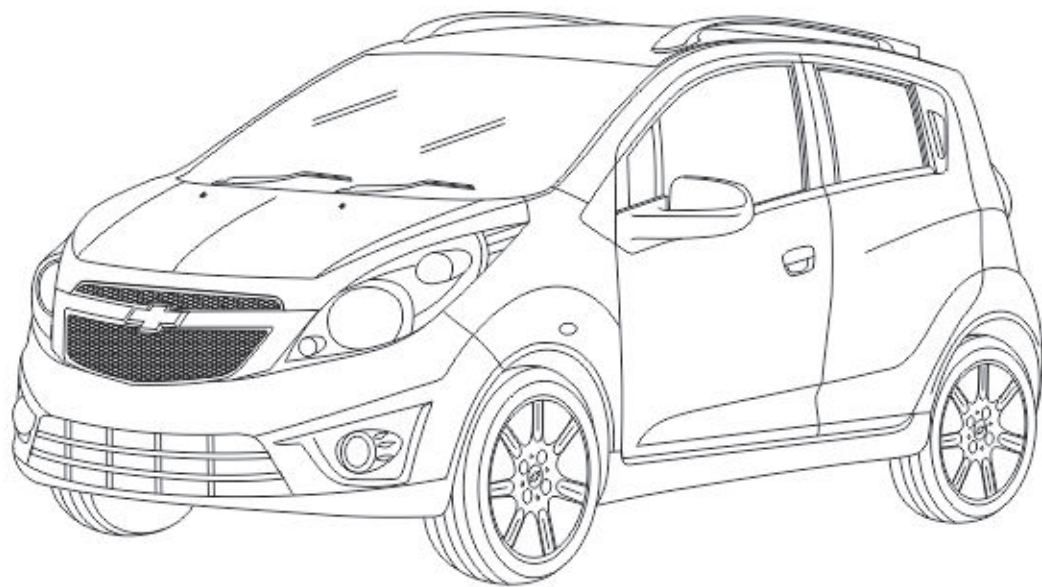

Owner's Manual

Operation, Safety and Maintenance

VEHICLE RECORD SHEET

[illegible]

Dear Customer,

Welcome to the Chevrolet family. We wish to thank you for choosing Chevrolet car.

It is our constant endeavor to provide you with products that offer excellent performance through out their ownership period. Which is why, in addition to offering great cars, we have also set up an extensive, and very well equipped network of retailers and authorized service centers across the country.

Naturally, these Chevrolet retailer know everything about your car and provides you with the best service possible. In fact, every retailer is equipped with the most advanced technology, technicians specially trained by us and genuine spares. Needless to say, they are also committed to ensure your complete satisfaction.

So, please contact a Chevrolet retailer for any servicing need and make sure that only genuine spares are used for your car.

This manual will familiarize you with the operation and maintenance of your new vehicle. It will also provide you with important safety information. Please do read it carefully and follow the recommendations. In fact, the manual is like a permanent part of your car. And it would go a long way in ensuring a safe and trouble-free operation for your car.

Should you have any query please feel free to call our 24 hr. Helpline at 30308080 (Prefix local STD code when dialing from mobile phone) or email us at : gmi.cac@gm.com.

Happy Motoring

CONTENTS

Introduction	2
Key, doors and windows	13
Seats, restraints	21
Storage	43
Instruments and controls	49
Lighting	61
Infotainment system	67
Climate control	77
Driving and operating	89
Vehicle care	99
Service and maintenance	135
Technical data	141
Service and warranty	145
Service network	175

INTRODUCTION

Introduction	2
Using this manual	2
Danger, warning and cautions.....	3
Seat adjustment	4
Safety belt	5
Mirror adjustment	5
Steering wheel adjustment	6
Instrument panel overview	7
Exterior lighting	8
Horn	9
Washer and wiper systems	10
Climate control	10
Transmission	11
Getting started	11
Parking	12

INTRODUCTION

Your vehicle is a designed combination of advanced technology, safety, environmental friendliness and economy.

This Owner's Manual provides you with all the necessary information to enable you to drive your vehicle safely and efficiently.

Make sure your passengers are aware of the possible risk of accident and injury which may result from improper use of the vehicle.

You must always comply with the specific laws and regulations of the country that you are in. These laws may differ from the information in this Owner's Manual.

When this Owner's Manual refers to a workshop visit, we recommend your Chevrolet Service Partner.

All Chevrolet Service Partners provide first-class service at reasonable prices. Experienced mechanics trained by Chevrolet according to specific Chevrolet instructions.

The customer literature pack should always be kept ready to hand in the vehicle.

USING THIS MANUAL

- This manual describes all options and features available for this model. **Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant, country specifications, special equipment or accessories.**
- In this section will give you an initial overview.
- The table of contents at the beginning of this manual and within each chapter shows where the information is located.
- The index will enable you to search for specific information.
- The Owner's Manual uses the factory engine designations. The corresponding sales designations can be found in the chapter "Technical data".

- Directional data e.g. left or right, or front or back, always relate to the direction of travel.
- The vehicle display screens may not support your specific language.
- Display messages and interior labelling are written in **bold** letters.

DANGER, WARNINGS AND CAUTIONS

Danger

Text marked **▲ Danger** provides information on risk of fatal injury. Disregarding this information may endanger life.

Warning

Text marked **▲ Warning** provides information on risk of accident or injury. Disregarding this information may lead to injury.

Caution

Text marked Caution provides information on possible damage to the vehicle. Disregarding this information may lead to vehicle damage.

We wish you many hours of pleasurable driving Chevrolet.

* or (Option) : The asterisk and (Option) in this manual signify an item of equipment that is not included on all vehicles. Such items include engine options, model variations specific to one country, and optional equipment.

All information, illustrations, and specifications in this manual are based on the latest product information available at the time of publication.

General Motors India Pvt. Ltd. reserves the right to change specifications or designs at any time without notice and without incurring obligation.

This vehicle may not comply with the standards or regulations of other countries. Before attempting to register

this vehicle in any other country, check all applicable regulations and make any necessary modifications.

This manual describes the options and trims available at the time of publication. Some of the items covered may not apply to your vehicle. Contact your CHEVROLET retailer for information on option and trim availability.

Non-General Motors India Pvt. Ltd. genuine parts and accessories have not been examined or approved by General Motors India Pvt. Ltd. We can certify neither the suitability nor the safety of Non-General Motors India Pvt. Ltd. genuine parts and accessories and are not liable for damage caused by their use.

Warning : Tampering of wiring harness or fitment of non genuine accessories in your vehicle may lead to short circuit resulting in fire.

INITIAL DRIVE INFORMATION

SEAT ADJUSTMENT

Seat Positioning



Pull handle, slide seat, release handle.

See *Seat adjustment* on page 31.

See *Seat position* on Page 31.


Seat Backrests



Pull lever, adjust inclination and release lever. Allow the seat to engage audibly.

Do not lean on backrest when adjusting.

Head Restraint Adjustment

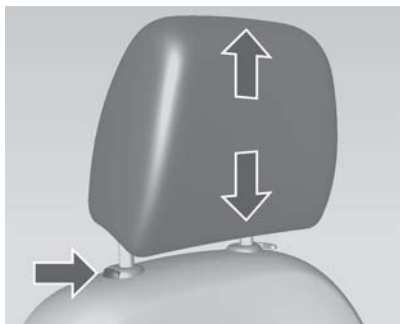

Pull the head restraint upwards.

To move down press the catch and push the head restraint downwards.

See *Head restraints* on page 29.

SAFETY BELT



Withdraw belt from reel, guide it untwisted across the body and engage the latch plate in the buckle.

To release the belt, press the red button on the belt buckle.


See *Safety belts* on page 32,

See *Airbag system* on page 33,

See *Seat position* on page 31.

MIRROR ADJUSTMENT

Interior Mirror

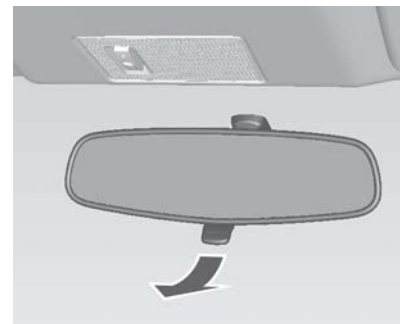

To reduce dazzle, pull the lever on the underside of the mirror housing.

See *Manual rearview mirror* on page 16.

Exterior Mirrors



Simply move the adjusting lever in the desired direction to adjust the mirror angles.

See *Convex mirrors* on page 16,

See *Folding mirrors* on page 16.

STEERING WHEEL ADJUSTMENT (OPTION)




Unlock lever, adjust steering wheel, then engage lever and ensure it is fully locked. Do not adjust steering wheel unless vehicle is stationary.

See *Airbag system* on page 33.

See *Ignition positions* on page 90.


INSTRUMENT PANEL OVERVIEW

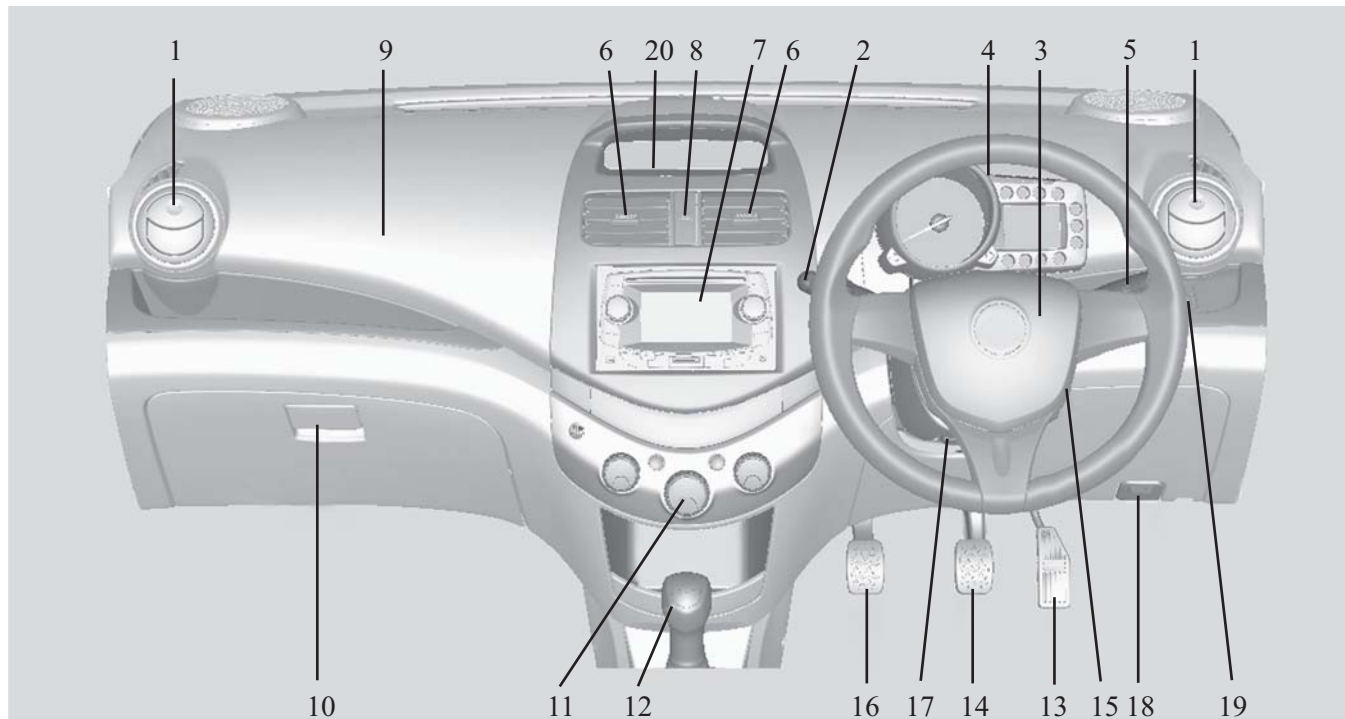

8 Introduction

1. Side air vents
2. Wiper and washer lever
3. Horn, Driver's airbag
4. Cluster
5. Exterior lamp lever
6. Center air vents
7. Infotainment system
8. Hazard warning flasher
9. Passenger airbag
10. Glove box
11. Climate control system
12. Shift lever
13. Accelerator pedal
14. Brake pedal
15. Ignition switch
16. Clutch pedal
17. Steering wheel adjustment
18. Hood release lever
19. Headlamp range adjustment
20. Telltale IP display unit

EXTERIOR LIGHTING

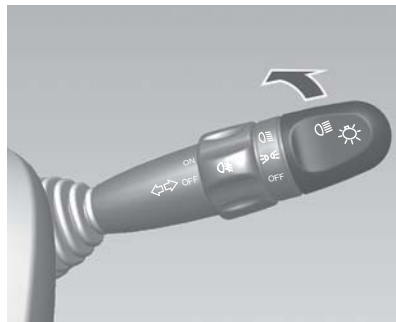

Turn light switch


OFF : All the lamps are off.

☞ : The tail lamps, number plate lamps, and instrument panel lamps are illuminated.

☞D : The low-beam headlamps and all of the above lamps are illuminated.

See *Exterior lamp controls* on page 61.

Headlight High/Low-Beam Change

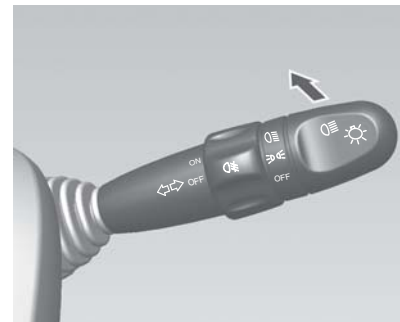


To switch from low to high beam, push lever.

To switch to low beam, push lever again or pull.

See *Headlamp high/low-beam changer* on page 62,

See *Flash-to-pass* on page 62.


Hazard Warning Flashers

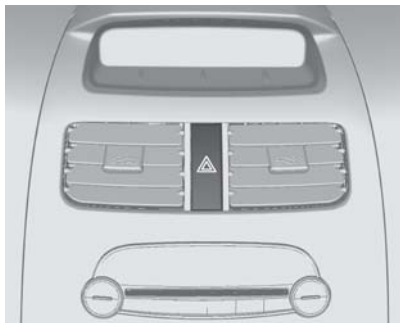

Operated with the  button.

See *Hazard warning flashers* on page 63.

Turn And Lane-change Signals

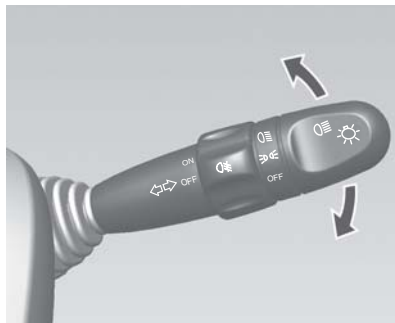

lever up = left indicator

lever down = right indicator

See *Turn and lane-change signals* on page 64,

See *Parking lamps* on page 64.


HORN



Press  .

WASHER AND WIPER SYSTEMS

Windshield Wipers

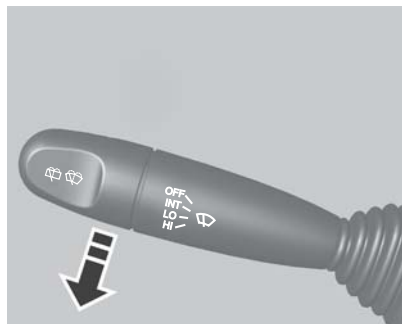

OFF : System off.

INT : Intermittent operation.

LO : Continuous wipe, slow speed.

HI : Continuous wipe, fast speed

For a single swipe when the windscreen wipers are off, lightly move the lever toward the INT position and release it.

See *Windshield wiper/washer* on page 50.

Windshield Wiper



Pull lever.

See "*Windshield washer*" under *Windshield wiper/washer* on page 50,

See *Washer fluid* on page 108.

CLIMATE CONTROL

Heated Rear Window



Heating is operated by pressing the  button.

See *Heated rear window*, *Windshield wiper de-icer* on page 19.

Demisting And Defrosting The Windows



Press button .

See *"Demisting windshield"* under *Air conditioning system* on page 78,
See *"Demisting and defrosting window"* under *Electronic climate control system* on page 83.

TRANSMISSION

Manual Transmission



Reverse: with the vehicle stationary, depress the clutch pedal and engage the gear.

If the gear does not engage, set the lever to neutral, release the clutch pedal and depress again; then repeat gear selection.


See *Manual transmission* on page 92.

GETTING STARTED

Check Before Starting Off

- Tyre pressure and condition.
- Engine oil level and fluid levels.
- All windows, mirrors, exterior lighting and number plates are free from dirt, snow and ice and operational.
- Proper position of seats, seat belts and mirrors.
- Check brake function at low speed, particularly if the brakes are wet.

Starting Engine With The Ignition Switch

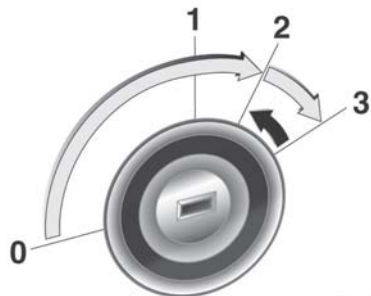

30047

- Turn key to position 1, move the steering wheel slightly to release the steering wheel lock.
- Manual transmission: operate clutch;
- Do not press accelerator pedal.
- Turn key to position 3 depressing the clutch pedal and foot brake then release when engine is running

Before restarting or to switch off the engine, turn key back to 0.

PARKING

- Do not park the vehicle on an easily flammable surface. The high temperature of the exhaust system could ignite the surface.
- Always apply parking brake without pressing release button. Apply as firmly as possible on downhill or uphill slopes. Depress the footbrake at the same time to reduce operating force.
- Switch off the engine and ignition. Turn the steering wheel until the steering wheel lock engages.
- If the vehicle is on a level surface or uphill slope, engage first gear before switching off the ignition. On an uphill slope, turn the front wheels away from the kerb. If the vehicle is on a downhill slope, engage reverse gear before switching off the ignition. Turn the front wheels towards the kerb.
- Close windows.
- After running at high engine speeds or with high engine loads, operate the diesel engine briefly at a low

load or run in neutral for about one to two minutes at idle speed before switching off in order to protect the turbo charger.

- Lock the vehicle.
- See *Keys* on page 13.

KEYS, DOORS AND WINDOWS

Keys, locks	13
Doors	15
Exterior mirrors	16
Interior mirror	17
Windows	18
Sun visors	20

KEYS, LOCKS

Keys

Replacement keys

The key number is specified on a detachable tag.

The key number must be quoted when ordering replacement keys.

Two keys are provided with your new vehicle.

Keep one of the two keys as a spare.

See "Lock" under *Exterior care* on page 132.

Warning

Do not leave the key in the vehicle.

- Lock the vehicle.
- Take the key with you.

Note

In case of loss, replacement keys are available from Chevrolet retailers workshop.

Central Locking System*

You can activate the central door locking system from the driver's door.

This system allows you to lock and unlock all the doors from the driver's door, using either the key or the door lock button (from inside).

If the driver's door is not closed properly, the central locking system will not work.

Fault in central locking system


Unlocking

Both the front doors can be manually unlocked by turning the key in the lock. The other doors can be opened by using the interior handle.

Locking

Push inside locking knob of all doors except driver's door. Then close the driver's door and lock it from the outside with the key.

Safety locks

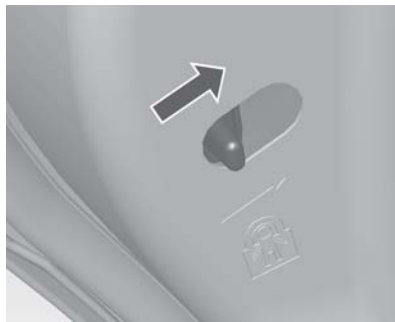

To close the child security door lock, move the lever up to the lock position.

To open a rear door when the child security door lock is activated, unlock the door from the inside and open the door from the outside.

To cancel the child security door lock, move the lever down to the unlock position.

Caution

Do not pull the inside door handle while the child security door lock is set to LOCK position. Doing so can damage the inside door handle.

⚠ Warning

Use the child security door locks whenever children are occupying the rear seats.

DOORS

Tailgate Opening



To open the tailgate, insert the key into the key slot and turn it clockwise.

Lift the tailgate.



You can also open the tailgate by pulling up the tailgate release lever located near the driver's seat.

Warning

Do not drive with the tailgate open or ajar, e.g. when transporting bulky objects, since toxic exhaust gases could enter the vehicle.

Caution

Before opening the tailgate check overhead obstructions, such as a garage door, to avoid damage of the tailgate. Always check the moving area above and behind the tailgate.

Note

The installation of certain heavy accessories onto the tailgate may affect its ability to remain open.

Closing

To close tailgate, push it down so it latches securely. It locks automatically.

Make sure your hands and any other body parts, as well as those of other persons are completely away from the tailgate closure area.

EXTERIOR MIRRORS

Convex Mirrors

The convex exterior mirror reduces blind spots. The shape of the mirror makes objects appear smaller, which will affect the ability to estimate distances.

Both outside mirrors are convex and is labelled with a notice that reads as follows:

**OBJECTS IN THE MIRROR
ARE CLOSER THAN THEY
APPEAR.**

Manual Mirrors



Adjust the outside rearview mirrors so you can see each side of your vehicle, as well as each side of the road behind you.

Simply move the adjusting lever in the desired direction to adjust the mirror angles.


Folding Mirrors



For pedestrian safety, the exterior mirrors will swing out of their normal mounting position if they are struck with sufficient force. Reposition the mirror by applying slight pressure to the mirror housing.

⚠ Warning

Always keep your mirrors properly adjusted, and use them while driving to increase your visibility of objects and other vehicles around you. Do not drive while either outside rearview mirror is folded back.

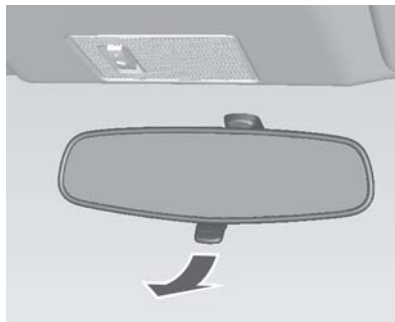INTERIOR MIRROR**Manual Rearview Mirror**

To reduce dazzle, pull the lever on the underside of the mirror housing.

⚠ Warning

Your view through the mirror may lose some clarity when it is adjusted for night vision.

Take special care while using your inside rearview mirror when it is adjusted for night vision.

Failure to ensure a clear rear view while driving may result in a collision causing damage to your vehicle or other property, and/or personal injury.

WINDOWS

Manual Windows (Option)



The door windows can be opened or closed with the window winders.

Power Windows (Option)

Warning

Take care when operating the power windows. There is risk of injury, particularly to children.

If there are children on the rear seat, switch on the child safety system for the power windows.

Keep a close watch on the windows when closing them.

Ensure that nothing becomes trapped in them as they move.



Power windows can be operated with ignition on.

Operate the switch for the respective window by pushing to open or pulling to close.

Operation

You may operate the power windows when the ignition switch is ON by using the power window switches on each door panel.

To raise the window, lift up the switch.

To lower the window, press down the switch.

Release the switch when the window reaches the desired position.

⚠ Warning

Body parts outside vehicle can be struck by passing objects. Please keep all parts of the body inside vehicle.

Children can operate and become entrapped in power windows.

Do not leave your keys or unattended children in your car.

Serious injury or death can occur from misuse of power windows.

Child Safety System For Rear Windows



Press switch  to deactivate rear door power windows. To activate press  again.

Heated Rear Window / Windshield Wiper de-icer



Operated by pressing the  button.

Heating works with the engine running and is switched off automatically after approximately 16 minutes or by pressing the button again.

Caution

Do not use sharp instruments or abrasive window cleaners on your vehicle's windshield or rear window. Do not scratch or damage the defroster wires when you clean or work around the windshield or rear window.

SUN VISORS

The sun visors can be folded down or swivelled to the side to prevent dazzling.

If the sun visors have integral mirrors, the mirror covers should be closed when driving.

Warning

Do not place the sun visor in such a manner that it obscures visibility of the roadway, traffic or other objects.

Assist Handles

Your vehicle has assist handles above the front seat passenger door & the rear doors. The handle above the rear doors include a coat hook.

Caution

Hanging items on the assist handles can obstruct the driver's view. Do not hang anything on the assist handle unless the handle is equipped with a coat hook.

SEATS & RESTRAINTS

Always wear your safety belts	21
Front seat occupants	26
Rear seat occupants	26
Three-point safety belts	26
Center rear lap belt	28
Pregnant women & safety belts	29
Head restraints	29
Front seats	31
Safety belts	32
Air bag system	33

ALWAYS WEAR YOUR SAFETY BELTS*

Occupant protection has been the focus of much private and public research and development for many years. The seat belts are incorporated into the vehicle solely for the protection of the occupants. The safety belts can protect you and your passengers only if they are used.

The safety belt information included here is intended for vehicle occupants of adult size and for older children who have outgrown booster seats.

Be sure that if children are too small to be well restrained by the safety belt system, that they are secured in an appropriate child restraint.



Why Wear Safety Belts?

Safety belts are helpful for several distinct reasons:

- 1) Safety belts attach the occupants to the vehicle so that they will not be ejected during an accident.
- 2) Safety belts attach the occupant to the vehicle so that they can use the space between their pre-crash seating position and the front of the vehicle to slow down to a stop more gradually, as their safety belts stretch and the front end of the vehicle absorbs the energy of the crash by crumpling.
- 3) Safety belts keep the driver in his seat, so that the driver might have a chance to regain control in certain accident situations.
- 4) Safety belts keep occupants from being catapulted into and injuring the driver and other occupants.

Warning

- Safety belts have been shown to be the single most effective protection against injury or death in a vehicular accident!
- As the owner and driver of your vehicle, you must make certain that each occupant is properly wearing the safety belt provided at the seating position.
- Pregnant women, injured, and physically impaired persons should also wear safety belts. Like all other occupants, they are more likely to suffer serious injury or death, if they do not do so.
- The best way to protect the foetus is to protect the mother.

Warning

- Why safety belts work, how to wear them, and how to adjust your seat position properly, is explained in this section. Read all of the information provided and always observe these instructions and warnings in order to gain the full benefit of these safety systems.

How Safety Belts Work*

Safety belts cannot work unless they are worn and worn properly.

Vehicle occupants are injured if the forces applied to the body's structures are greater than the body can tolerate without being injured. If a person's body is stopped abruptly, the forces applied to the body will be high, whereas if the body is slowed down gradually over some distance, the forces will be much lower. Thus, in order to protect an occupant from injury in a crash, the idea is to give the person as much time and distance as possible in coming to a stop.

Imagine a person running at 15 miles per hour (25 km/h) head first into a concrete wall. Imagine a second person running at 15 miles per hour into a wall covered by a 3-foot (90 cm) thick deformable cushion. In the first instance the person could be seriously injured or even killed. In the second, the runner could expect to walk away

uninjured. Why? In the first instance, the body hit the non-yielding concrete surface and stopped immediately. All of the energy the sprinter built up was absorbed by the structures of the body, not by the non-yielding concrete surface. In the second example, the body had exactly the same amount of energy that had to be absorbed as in the first example, but it continued to move into the padding, giving the body additional time and distance to slow down to a complete stop as the padding absorbed the sprinter's energy by deforming.

If a car crashes into a concrete wall at 30 miles per hour (50 km/h), the front bumper of the car stops immediately, but the passenger compartment stops more gradually as the front structure of the vehicle crumples. The belted occupant is held to the seat and gains the advantage of the cushion provided by the crumpling of the front of the vehicle and the stretching of the safety belt webbing. That belted occupant's body slows down from 50 km/h (30

mph) to zero over a distance of 90-120 cm (3-4 feet). That belted occupant also remains properly positioned so that, if the air bag (if provided) deploys in a frontal collision, the occupant might never strike any rigid structures in the vehicle. The unbelted occupant receives no such benefit. The unbelted person is not attached to the vehicle and so that person continues to travel at the vehicle's pre-crash speed of 30 miles per hour (50 km/h) until striking a hard object at approximately 30 miles per hour (50 km/h) and stopping abruptly. Even in a frontal collision in which the air bag (if provided) deploys, the unbelted front seat occupant remains at greater risk of serious injury or death than the properly restrained front seat occupant.

Warning

SAFETYBELTS PROTECT

Accident statistics show that drivers and passengers properly wearing safety belts have a lower risk of being injured and a higher chance of surviving an accident. For this reason, wearing a safety belt is legally required in most countries.

WEARING THE SAFETYBELT

Each front seat and each outboard rear seat of your CHEVROLET vehicle is equipped with a three-point safety belt system that is anchored at three locations. All front and rear seat belts are stored and locked by a retractor mechanism. When set in its normal emergency locking mode, the three-point safety belt requires no length adjustment and allows freedom of movement when the vehicle moves at constant speeds.

(Continued)

Warning

However in a sudden or strong stop, or during heavy acceleration or deceleration, the safety belt will lock automatically to restrain the body.

In order to gain the full benefit of a safety belt, you must wear it correctly and position yourself correctly within your seat, as follows:

- Seatback upright (not reclined, to prevent you from “submarining” or slipping out from under the safety belt, and injuring vulnerable body parts in a crash.)
- Occupant sitting upright (not slouched, to properly position the lap and shoulder portions of the safety belt for maximum restraint and minimum injury to soft and vulnerable parts of your body in a crash)

(Continued)

Warning

- Safety belt latch plate and buckle securely fastened with a “click” (if the safety belt is not securely latched, it cannot provide any protection; pull on the belt to make sure it is secure)
- Lap portion of safety belt snug and low on hips and bony pelvis (not abdomen where the restraining belt could cause serious injury in a crash – THIS IS PARTICULARLY IMPORTANT FOR PREGNANT WOMEN)
- Shoulder portion of the safety belts over your outside shoulder and snug against the chest (not under an arm, around your neck, over an inside shoulder or behind your back, and not loose with slack allowing excessive forward movement and injury in a crash)

(Continued)

Warning

- Only one occupant per one safety belt (do not allow more than one person in a safety belt; multiple people in a single safety belt can exceed the capacity of the safety belts and people sharing a safety belt can cause crushing and other injuries to each other in a crash)
- Children in secure child seats (in a crash the forces are too great for an adult to hold onto a child and the adult will crush the child if they share the same safety belt)
- No unbelted occupants (occupants not wearing a safety belt are an injury threat to themselves and to other occupants in the vehicle because in a crash they become a free-flying body that will strike other persons in their path)

(Continued)

⚠ Warning

- No twisted safety belts (twisted safety belts will not move freely and restrain properly and can cut into the occupants rather than spread the force, thus increasing the risk of injury and death)
- Lock doors (unlocked doors increase the risk of injury and death from external impacts and ejection in a crash)

⚠ Warning

- Make periodic checks (while riding in the vehicle, check from time to time to be sure that the lap portion of the belt is snugly across the hips and has not ridden up around the waist and that the shoulder portion is midway over the shoulder and across the chest; properly positioned belts allow the stronger structures of the hips and shoulders to absorb the forces of the belt against the body, while improperly positioned belts may cause neck injury or injury to the vulnerable organs in the abdominal area).
- No hard or breakable objects, between safety belts and body parts (objects such as pens, glasses, etc. in the occupant's pocket or on the cloth can cause injury in the event of a collision)

(Continued)

⚠ Warning

- Improper use of a safety belt can cause serious injury. Do not modify the safety belt. Do not add any device which would affect the operation of the safety belt.
- Before you close the door, make sure the safety belt is out of the way. Otherwise, the belt and/or the vehicle body could be damaged.

⚠ Warning

If the safety belt goes over an armrest (if so equipped), lap portion of the safety belt could force the occupant's abdomen, not the bony pelvis, in a collision.

- Be sure that the safety belt goes under the armrests.

Failure to follow this can result in injuries or even death in case of a collision.

FRONT SEAT OCCUPANTS

Each front seat is equipped with adjustable seat and seatback with height-adjustable head restraint and three point lap-and-shoulder safety belts.

REAR SEAT OCCUPANTS

The rear seat is equipped with two outboard seating positions featuring three-point lap-and-shoulder safety belts and a center seat equipped with a lap safety belt.

THREE-POINT SAFETY BELTS

To help reduce the risk of personal injury in collisions or sudden manoeuvres, your CHEVROLET vehicle is equipped with three-point safety belts. The two front seats and the two outboard rear seating positions are each equipped with three-point safety belts. These safety belts are each anchored in three locations to restrain passengers who are properly positioned and wearing the safety belt.


A three-point safety belt set in the ELR / WLR (Emergency Locking Retractor / Webbing Locking Retractor) mode requires no length adjustment and allows the freedom of body movement when the vehicle moves at a constant speed.

However, in the event of a sudden or strong stop, or during heavy acceleration or deceleration, the safety belt will lock automatically to restrain the body.




Always fasten your safety belts correctly:

1. Close and lock the doors.
2. Make sure seatback is upright.
3. Pick up the safety belt latch plate and use it to pull the belt across your body. Make sure the belt is not twisted. If the safety belt locks as you are pulling it out, allow it to rewind into the retractor. Pull the safety belt out again to a comfortable and secure length.

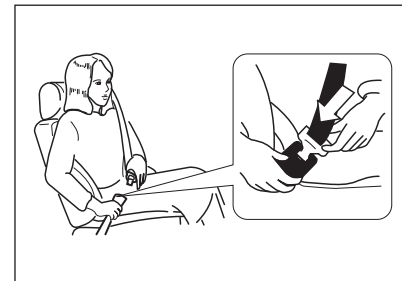


4. Position the shoulder belt midway over the shoulder and across the chest. Never place the shoulder belt across the neck. This assures that in the case of a collision, the belt applies force to the shoulder bones and keeps the impact away from ribs or neck, helping to avoid serious internal injuries.
5. Wear the lap belt low and snug on the hips, not the waist. This assures that in the case of a collision, the belt applies force to the pelvic bones and not the abdomen, helping to avoid serious injuries.

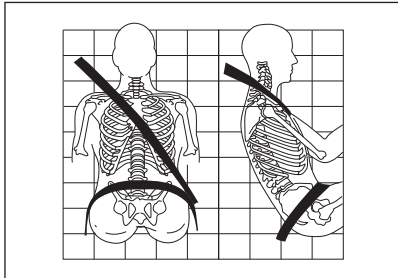

6. Push the latch plate firmly into the buckle until the mechanism clicks. Make sure you are using the proper buckle. Be sure to position the release button on the buckle so you can unbuckle the safety belt quickly if necessary.
7. Pull up on the latch plate to make sure it is secure.

To remove the safety belt, press the release button on the buckle. The belt will retract automatically. Guide the safety belt as it retracts to prevent the latch plate from damaging interior surfaces or injuring occupants.

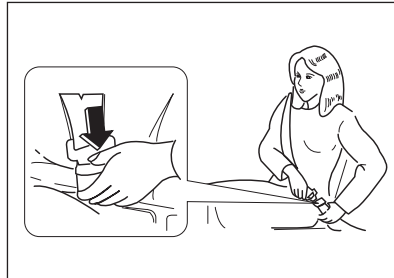

Maintain your safety belts:


1. Periodically inspect all safety belts, related parts, and assemblies. Have these replaced by your CHEVROLET retailer if any safety belts, assemblies or related parts are damaged.
2. You must replace any safety belt or related part that has been stretched or damaged in an accident, even if the stretching or damage is not obvious or visible. Stretched belts and damaged parts do not perform effectively. Replacement of safety belts must be with new belts only.
3. CHEVROLET recommends replacing the entire safety belt assembly after your vehicle has been in a collision. If your CHEVROLET retailer finds that no safety belt damage has occurred and that everything is in proper working order, you need not make any replacement.

4. It is dangerous to operate your vehicle with damaged safety belts or other parts.

CENTER REAR LAP BELT

To fasten the center rear lap belt:


1. Hold the metal latch plate 90-degrees to the belt and pull belt low across hips.
2. Insert the latch plate into the buckle.

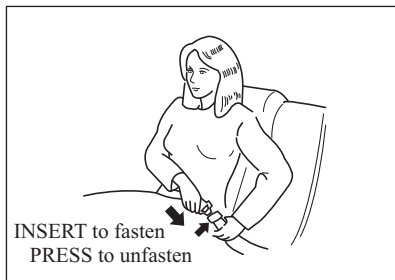

3. Pull free end of belt away from latch plate to tighten belt.

4. Pull on belt clip to take up slack.

To remove the lap belt, press the release button on the buckle.

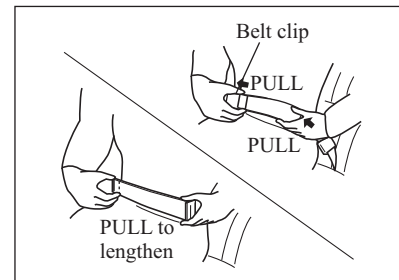

⚠ Warning

- After a collision, inspect all safety belts and related parts for fraying or other damage. Ask your CHEVROLET retailer to replace any damaged parts.
- It is dangerous to operate your vehicle with damaged safety belts or other parts.


Failure to make appropriate repairs may result in additional damage to your vehicle or personal injuries.

PREGNANT WOMEN AND SAFETY BELTS

Safety belts work for everyone, including pregnant women.


Like all occupants, pregnant women are more likely to be seriously injured if they do not wear safety belts. In addition, when a safety belt is worn properly, it is more likely that the unborn child will be safe in a crash.

To provide maximum protection, a pregnant woman should wear a three-point safety belt. She should wear the lap portion of the belt as low as possible throughout her pregnancy.

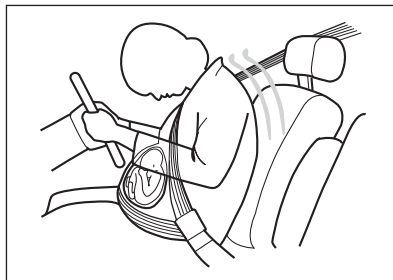**HEAD RESTRAINTS****Position****⚠ Warning**

Only drive with the head restraint set to the proper position.


Removed or improperly adjusted head restraints can result in serious head and neck injuries in case of a collision.

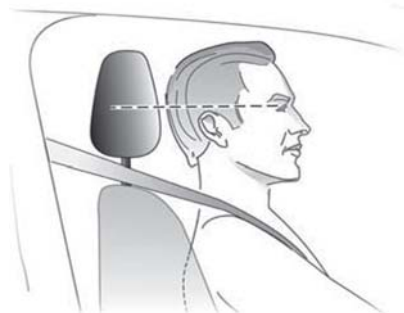

The middle of the head restraint should be at eye level. If this is not possible for extremely tall persons, set to highest position, and set to lowest position for short people.

Head Restraints on Front Seats

Height adjustment

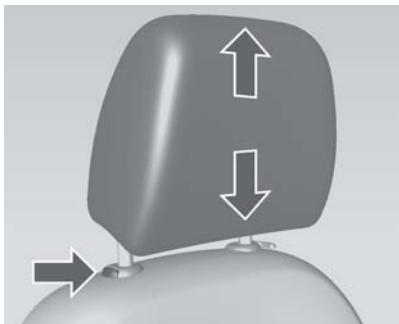

Pull the head restraint upwards.


To move down press the catch and push the head restraint downwards.

Removing

Press the catches and pull up the head restraint.

Head Restraints on Rear Seats

Height adjustment

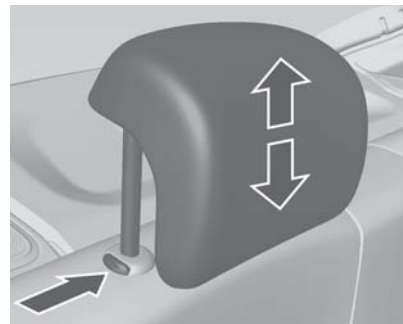

Pull the head restraint upwards.

To move down press the catch and push the head restraint downwards.

Removing

Press the catches and pull up the head restraint.

FRONT SEATS

Seat Position

⚠ Warning

Only drive with the seat correctly adjusted.



- Sit with your buttocks as far back against the backrest as possible. Adjust the distance between the seat and the pedals so that your legs are slightly angled when tromping the pedals. Slide the passenger seat as far back as possible.
- Sit with your shoulders as far back against the backrest as possible. Set

the backrest angle so that you can easily reach the steering wheel with your arms slightly bent. Maintain contact between your shoulders and the backrest when turning the steering wheel. Do not tilt the backrest too far back. We recommend a maximum angle of approx. 25°.

- Adjust the steering wheel. See *Steering wheel adjustment* on page 49.
- Set the seat high enough to have a clear field of vision on all sides and on all display instruments. There should be at least one hand of clearance between your head and the headlining. Your thighs should rest lightly on the seat without pressing into it.
- Adjust the head restraint. See *Head restraints* on page 29.
- Adjust the height of the seat belt. See 'Driver's height adjustment' under *Three-point safety belts* on page 26.

Seat Adjustment

⚠ Danger

Do not sit nearer than 25 cm from the steering wheel, to permit safe airbag deployment.

⚠ Warning

Never adjust driver's while driving. Driver could loss control of the vehicle and it result in injury or property damage.

Seat positioning



Pull handle, slide seat, release handle.

Seat backrests



Pull lever, adjust inclination and release lever. Allow the seat to engage audibly. Do not lean on seat when adjusting.

SAFETY BELTS



The belts are locked during heavy acceleration or deceleration of the vehicle for the safety of the occupants.

⚠ Warning

Fasten safety belt before each trip.

In the event of an accident, people not wearing safety belts endanger their fellow occupants and themselves.

Safety belts are only designed for use by one person at a time. They are not suitable for people younger than 12 years of age or smaller than 150 cm (5 ft).

Periodically check all parts of the belt system for damage and proper functionality.

Have damaged components replaced. After an accident, have the belts and triggered belt tensioners replaced by CHEVROLET retailer workshop.

Note

Make sure that the belts are not damaged by shoes or sharp-edged objects or trapped. Prevent dirt from getting into the belt retractors.

Safety belt reminder⁴. See *Safety belt reminders* on page 57.

AIR BAG SYSTEM (OPTION)

Your vehicle is equipped with an air bag supplemental restraint system (SRS) designed to protect properly seated and restrained front seat occupants. Both the driver and front passenger seating positions are equipped with driver and passenger air bags and side air bags (if so equipped), in addition to three-point safety belts and other safety features. Each air bag is specially packed in a module, from which the air bag is designed to inflate and deploy at extremely high speed and force in the event your vehicle is involved in certain types of collisions which pose a high risk of serious injury or death to the driver and passengers.

Warning

If handled improperly the airbag systems can be triggered in an explosive manner.

The driver should sit back as far as possible while still maintaining control of the vehicle. If you are sitting too close to the airbag, it can cause death or serious injury when it inflates.

For maximum safety protection in all types of crashes, all occupants including the driver should always wear their safety belts to minimize the risk of severe injury or death in the event of a crash. Do not sit or lean unnecessarily close to the airbag while the vehicle is in motion.

The air bag may cause facial or body scratch, injury by broken glasses or getting a burn by explosion while air bag is deployed.

Warning

The airbag systems and belt tensioner control electronics are located in the center console area. Do not put any magnetic objects in this area.

Do not stick anything on the airbag covers and do not cover them with other materials.

Each airbag is triggered only once. Have deployed airbags replaced by CHEVROLET retailer workshop.

Do not make any modifications to the airbag system as this will invalidate the vehicle type approval.

In the event of airbag deployment have the steering wheel, the instrument panel, all paneling parts, the door seals, the handles and the seats removed by CHEVROLET retailer workshop.

When an air bag deploys, there may be a loud noise and smoke. These conditions are normal and are not dangerous but in case it may irritate skin of the passenger. If the irritation is continued, contact a doctor.

⚠ Danger

Never allow children or infants and pregnant women and the old and the weak sit in the front passenger seats fitted with airbags.

Furthermore, do not drive with a baby seat fitted thereon. In case of an accident, the impact from the inflated airbag can cause facial injury or death.

Caution

If the vehicle is impacted by bumps or objects on unpaved roads or sidewalks, the air bag may inflate. Drive slowly on the surfaces not designed for vehicle traffic to prevent unintended air bag deployment.

Control indicator  for airbag systems.
See **Airbag and safety belt tensioner light** on page 57.


Driver's And Front Passenger's Air Bag (option)

Driver's air bag (option)

The driver's air bag module is located in the center of the steering wheel.

Front passenger's air bag (option)

The passenger's air bag module is located in the instrument panel, above the glove box.

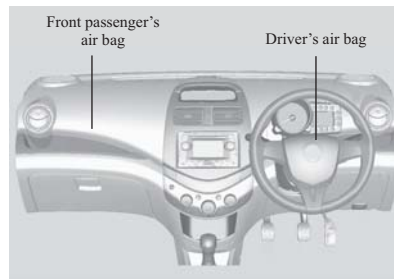

⚠ Warning

Air bags are only a supplemental restraint, and are most effective in combination with safety belts.


All occupants, including the driver, should always wear their safety belts, whether or not an air bag is also provided at their seating position, to minimize the risk of severe injury or death in the event of a crash.

- Air bags do not deploy in side or rear collisions. Occupants not wearing their safety belts will not be protected by any restraint system, resulting in severe injuries or death in these types of collisions.
- Occupants who are not properly wearing their safety belts may be thrown forward by braking before impact, placing their bodies near or against the air bag modules. This can cause severe injury from the force of an air bag's deployment.

How air bags work

Air bags are designed to keep your head, neck, and chest from slamming into the instrument panel, steering wheel or windshield in a front-end crash. They are not designed to inflate in rear-end or rollover crashes or in most side-impact crashes. Your air bags are designed to deploy in crashes that are equivalent to, or exceed the force of a vehicle traveling at a speed of 15 to 23 km/h (9.3 ~ 14.3 mph) crashing into a solid immovable wall.

The air bag system activates during a severe collision which is either frontal or when the impact angle is up to 30° from straight ahead.

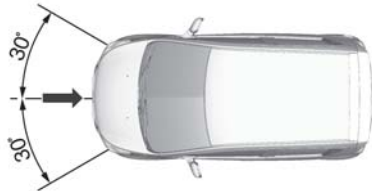

This crash severity level at which the air bag will deploy was selected to assure inflation of air bags in our vehicles at or below the crash severity at which a statistical risk of death begins for frontal collisions.

In the real world, cars rarely crash squarely into immovable walls; air bags most often deploy when a vehicle collides with another vehicle. The actual speed at which the air bags will inflate may be higher in the real world, because real-world accidents usually involve more complicated multi-vehicle impacts, angled impacts, and incomplete frontal impacts (e.g. sideswipes), and because the object struck is usually not immovable.

Note

An air bag can also inflate in moderate to severe non-collision situations (e.g., slamming the undercarriage or other solid component of the vehicle in a dip in the driving surface) where the crash sensors generate a signal equivalent to a crash into a solid immovable barrier at 15 to 23 km/h (9.3 ~ 14.3 mph).

Air bags inflate when a sensor detects a front-end crash of a severity sufficient for air bag deployment. The crash sensor sends an electric signal to initiate the air bag's inflation. A propellant is ignited which rapidly burns inside the air bag module, producing enough nitrogen gas to fully inflate the air bag. The chemical process and nitrogen gas are harmless to the vehicle's occupants. Within 0.045 seconds of the crash detection, the pressure of the inflating air bag splits open the plastic trim covering on the module, which is scored on the inside surface to allow the trim of the steering wheel hub or passenger-side instrument panel to split open under force.

The air bag fully inflates to create a surface that can catch the forward movement of the front occupant's head and upper torso. As the occupant comes into contact with the air bag, the gas in the bag empties through holes at the base of the bag to soak up the force from the occupant's forward movement.


Note

Air bags cannot smother you and they don't restrict your movement. Air bags have vents, so they deflate immediately after cushioning you.

The entire process, from initial contact through the air bag's inflation and deflation, occurs within 0.2 seconds, faster than the blink of an eye. Because the collision is over in a fraction of a second, and vehicles involved in an accident usually come to the final point of rest only one or two seconds after initial contact, the supplemental restraint system must sense the crash and cause the air bags to deploy nearly instantaneously to protect the vehicle's occupants.

After The Air Bag Deploys

After the air bag deflates, you may notice a burning smell, smoke, and white powder in the interior of the vehicle. This is normal. The burning smell is from the propellant that was ignited to inflate the airbag. The white powder is cornstarch or talcum or sodium compounds which lubricate the air bag to reduce friction on the air bag during storage and inflation. Although they may cause some skin or eye irritation, these substances are not toxic.

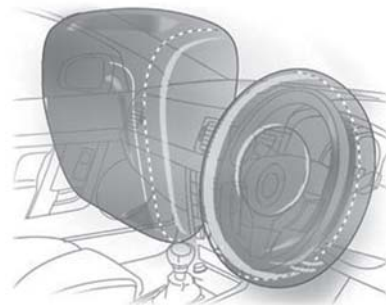

SRS Servicing

Your Supplemental Restraint System (SRS) is virtually maintenance free.

However, if any of the following occurs, have your SRS serviced immediately by an authorized dealer.

- Any of your air bags have deployed.
- The air bag warning lamp indicates malfunction.


Warning

- Do not drive your vehicle after one or more air bags have deployed.
- Do not try to repair, alter, or dispose of the air bag yourself.
- Air bags are installed under high pressure with sophisticated crash sensing and air bag inflating systems. Allowing an untrained and unauthorized person to handle an air bag can lead to serious injuries and death.
- Contact your dealer immediately if either of your vehicle's air bag has deployed, if damage occurs to your vehicle at or near either of the air bag modules, or if you believe for any reason that the operating condition of either air bag has been impaired.

Driving a vehicle after an air bag has deployed without authorized service can result in severe injuries and death.

How Air Bags Protect Front Occupants

Vehicle occupants are usually injured in a collision because their bodies are thrown into a stationary object, either inside the vehicle, such as the steering wheel, instrument panel or windshield, or outside the vehicle, such as the driving surface or a tree, when the occupant is thrown from the vehicle. Severe injuries also occur by occupants being jolted by the forces of the crash, even without body contact with a stationary object or surface

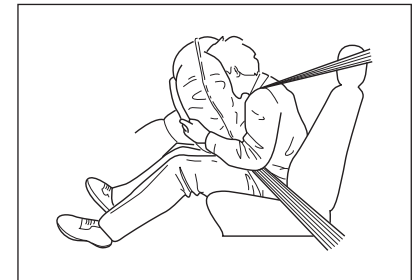

All of these injuries are caused by the force created by the collision as the vehicle is brought to a sudden stop. The time and distance which a vehicle is allowed in slowing or stopping in great part determines the severity of a collision's effect on vehicle occupants. For example, when a vehicle brakes to a stop at a red light, the occupant's bodies are forced forward. This is because both the vehicle and its occupants are initially traveling at the same speed. The brakes slow the vehicle, and the occupants continue to move forward somewhat inside the vehicle. However, properly positioned and restrained occupants are rarely injured when a vehicle comes to a stop by even sudden and hard braking. This is because even hard braking allows a comparatively long time and distance for the vehicle to stop. The safety belts and the occupants' strength are generally sufficient to safely counteract the force of a braking stop.

In a crash, a vehicle may go from highway speed to a full stop in a fraction of a second and in a distance of less than one foot. This extremely short stopping time and distance greatly increases the force placed upon the occupants. No person has the strength or reflexes to counteract this force. Even occupants properly positioned and wearing their safety belts will find their head, upper torso, arms, and hips thrown forward at the speed the vehicle was traveling before impact. In moderate to severe frontal collisions, even occupants wearing safety belts can sustain internal brain and organ injuries without the occupant's head or torso hitting any stationary objects or surfaces.

Air bags provide additional stopping time and distance for the head and upper torsos of front occupants in moderate to severe frontal or near-frontal collisions. This additional time and distance can save lives and prevent serious injuries.

Help Your Air Bags To Protect You*

Besides their lifesaving benefits, the air bag system also poses some moderate risks.

Because an air bag inflates with considerable force, speed and suddenness, the air bag supplemental restraint system will be safer and more effective if the occupants are properly positioned in the vehicle.

Warning

Essential Air Bag Safety Rules:

- Never place a rear-facing child seat in the front seat.
- Children age 12 years and under should ride in the back seat whenever possible.
- Always wear your safety belts, even if your vehicle is not equipped with an air bag.
- Move your seatback rearward as far as is comfortable and safe, tilt the seatback slightly and sit against the back of the seat.
- Do not place objects on, over or near the air bag modules. They can become projectiles during inflation, causing severe injury.
- Do not lean forward or rest any part of your body on the trim covering the air bag modules.
- Do not drive with the steering column tilt adjusted fully upward.

Severe injury and death can result from failing to observe these air bag safety rules.

Always secure any rear-facing child seat in the back seat.

Child restraint systems in which the child faces the rear of the seat must never be placed in the front seat. The deployment of an air bag risks severe injury or death to a child in a rear-facing child seat placed in the front seat.

Children should be seated in the back seat.

According to accident statistics, children age 12 years and under are safer when properly restrained in the back seat than in the front seat, and should ride in the back seat whenever possible. Children are safer in the back seat only because of the risks of injury by air bags. Studies have shown that children are also safer in the back seat than in a front seat without an air bag.

Proper positioning of adults and teenagers.

Adults and teenagers seated in the front driver and passenger seats can also improve their safety and the effectiveness of the air bags by using proper seating positions.

For the best seating position of adults and teenagers:

- **Wear the three-point safety belts at all times.**

All occupants, including the driver, should always wear their safety belts whether or not an air bag is also provided at their seating position to minimize the risk of severe injury or death in the event of a crash.

Air bags do not deploy in rear and side-impact collisions. Occupants not wearing their safety belts will not be protected by any restraint system, resulting in severe injuries or death in these types of collisions.

Occupants who are not properly wearing their safety belts may be thrown forward by braking before impact, placing their bodies near or against the air bag modules. This can cause severe injury from the force of air bag's deployment.

- Move the back of the seat rearward as far back as is comfortable and safe.

Positioning your seat farther away from the air bag module will not decrease the effectiveness of the air bag. Greater distance from the module means greater protection from the air bag's forceful and sudden deployment. Never move the driver's seatback so far as to impair the driver's ability to comfortably reach the steering wheel, pedals and other instrument and controls.

- Tilt the safety belt slightly and do not lean forward.

Tilt the seatback slightly, and sit with your back against the back of

the seat. Do not lean or otherwise position your body close - within 15 cm(6 inch) - to the air bag module. Do not rest any part of your body on or near the plastic trim covering the air bag module (the hub of the steering wheel or the passenger side of the instrument panel above the glove box). Try to keep your head and body more than 25 to 30 cm (10 to 12 inches) away from the air bag. More distance is safer.

Warning

To perform well, an air bag must deploy quickly. The force is greatest in the first 5-8 cm (2-3 inches) after the air bag bursts through its cover and begins to inflate. Those 2 to 3 inches immediately after the air bag bursts through its module cover and begins to inflate are the risk zone.

- If an occupant's body is in this risk zone when the air bag deploys, severe injury or even death could result.
- The force decreases as the air bag inflates farther from the module cover.
- Greater distance from the air bag module means greater safety when the air bag deploys.

- Do not place objects, children or pets between you and the air bag module.

Your vehicle's air bag modules are located on the steering wheel and on the instrument panel above the glove box. Placing objects on, over or near the plastic trim covering these air bag modules could cause those objects to be propelled by the inflating air bag into your face and torso causing serious injury.

Children and pets should never ride on another occupant's lap. Do not place objects which could cause injury during deployment on an occupant's lap.

- Tilt the steering wheel downward (if so equipped), pointing the air bag toward your chest instead of your head and neck.

Never position the steering wheel at the highest position. This position should only be used to allow easy entry and exit from the driver's seat. Lower the steering before starting

to drive. This will aim the air bag at the driver's chest, rather than the more easily injured head and neck.

Note

The fact that your vehicle may be severely damaged and the air bags did not inflate or the fact that the vehicle is relatively undamaged and the air bag did inflate does not necessarily mean that there is something wrong with your air bag system. The crash sensors detect the severity of the crash, not the amount of damage to the vehicle.


STORAGE

Storage compartments	43
Luggage / load locations	45
Additional storage features	47
Information on loading the vehicle ..	47

STORAGE COMPARTMENTS

Instrument Panel Storage

Storage on top of the instrument panel

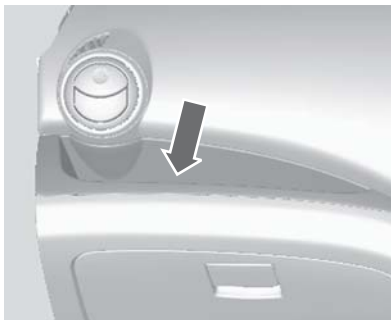

The storage is used for small articles, etc.

Coin Box



Store your coins in a place.

Glovebox




To open pull the grip.

Warning

To reduce the risk of injury in an accident or a sudden stop, always keep the glovebox door closed while driving.

Cupholder

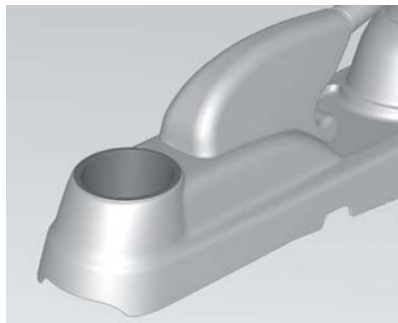

The cup holders are located in the front console and rear part of the center console.

Warning

Do not place uncovered cups of hot liquid in the cup holder while the vehicle is in motion. If the hot liquid spills, you burn yourself. Such a burn to the driver could lead to loss of control of the vehicle.

To reduce the risk of personal injury in the event of sudden stop or collision, do not place uncovered or unsecured bottles, glasses, cans, etc., in the cup holder while the vehicle is in motion.

Sunglasses Storage*



Fold down to open.
Do not use for storing heavy objects.

LUGGAGE/LOAD LOCATIONS

Luggage Compartment

Folding down rear seat backrests

Warning

Do not stack luggage or other cargo higher than the front seats.

Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion.

Unrestrained luggage or passengers on a folded seatback can be thrown about within or ejected from the vehicle in a sudden stop or accident. Serious injuries or death can result.




To fold down the rear seat backs separately:


1. Pull up the strap (1 or 2) under the front of the rear seat cushion to release it. If your vehicle is equipped with the rear seat head restraints, it must be removed.
2. Guide the released rear seat cushion to an upright position.

Note

To ensure enough room for rear seat cushion operation, slide the front seat forward and adjust the front seatback upright.

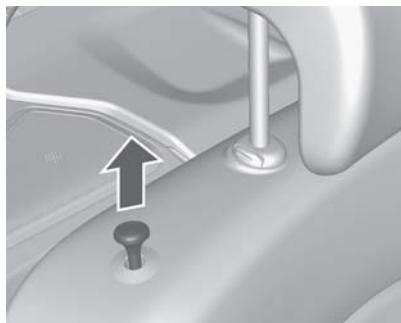

3. Pull up the release knob on top of the rear seatback and fold it forward and down.

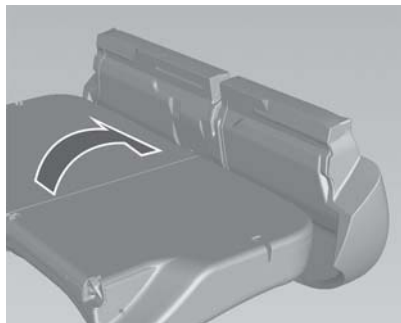

4. Adjust the front seats to the desired position.

To return the seatback to the upright position, lift it up and push it firmly into place.

To return the rear seat cushion, put the rear part of the seat cushion in its original position, then push the front part of the seat cushion firmly down until it latches.

Caution

When returning rear seatback to the upright position, place the rear safety belt and buckles between the rear seatback and one cushion. Make sure the rear safety belt and buckles are not to be pinched under the rear seat cushion.

Make sure the safety belts are not twisted or caught in the seatback and are arranged in their proper position.

Warning

Ensure that the rear seatbacks are all the way back and locked in position before operating the vehicle with passengers in the back seat.

Do not pull the release knobs on the top of the seatback while the vehicle is moving.

It can cause injuries or damage to the occupants.

Caution

Folding a rear seat with the safety belts still fastened may cause damage to the seat or the safety belts.

Always unbuckle the safety belts and return them to their normal stowed position before folding a rear seat.

⚠ Warning

Never allow passengers to sit on top of the folded down seatback, while the car is moving as this is not a proper seating position and no seat belts are available for use.

This could result in serious injury or death in case of an accident or sudden stop.

Objects carried on the folded down seatback should not extend higher than the top of the front seats. This could allow cargo to slide forward and cause injury or damage during sudden stops.

**ADDITIONAL STORAGE
FEATURES*
Convenience Net**

You can carry small loads with your optional convenience net.

To install the net, hang each loop in the upper corner of the net to both anchors of the back panel.

Caution

The convenience net is designed for small loads. Do not carry heavy objects in your convenience net.

**INFORMATION ON
LOADING THE VEHICLE**

- Heavy objects in the load compartment should be placed against the seat backrests. Ensure the backrests are securely engaged. If objects can be stacked, the heavier objects should be placed at the bottom.
- Secure objects in load compartment to prevent sliding.
- When transporting objects in the load compartment, the backrests of the rear seats must not be angled forward.
- Do not allow the load to protrude above the upper edge of the backrests.
- Do not place any objects on the load compartment cover or the instrument panel, do not cover the sensor on top of the instrument panel.
- The load must not obstruct the operation of the pedals, parking brake and gear selector, or hinder the freedom of movement of the driver. Do not place any unsecured objects in the interior.

- Do not drive with an open load compartment.
- The payload is the difference between the permitted gross vehicle weight (see *Identification plate* on page 139) and the kerb weight. For the kerb weight in detail, refer to the technical data section. The kerb weight includes weights for the driver (68 kg), luggage (7 kg) and all fluids (tank 90 % full). Optional equipment and accessories increase the kerb weight.
- Driving with a roof load increases the sensitivity of the vehicle to cross-winds and has a detrimental effect on vehicle handling due to the vehicle's higher center of gravity. Distribute the load evenly and secure it properly with retaining straps. Adjust the tyre pressure and vehicle speed according to the load conditions. Check and retighten the straps frequently.

INSTRUMENTS AND CONTROLS

Controls	49
Windscreen wiper/washer	50
Clock	52
Power outlets	52
Cigarette lighter	52
Warning lights, gauges and indicators.....	54
Service display	55
Trip computer	60
Telltale IP display unit	60

CONTROLS

Steering Wheel Adjustment (Option)



Unlock lever, adjust steering wheel, then engage lever and ensure it is fully locked.

Do not adjust steering wheel unless vehicle is stationary.

Caution

If strong impact delivers to steering column axle direction when the steering wheel is adjusted or the lever is locked, it may cause damage to the parts related to steering wheel.


Horn



Press  .

WINDSHIELD WIPER/ WASHER

Windshield Wiper

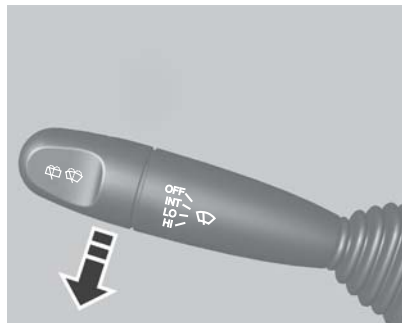

To operate the windshield wipers, turn the ignition ON and move the windshield wiper / washer lever upward.

OFF : System off.

INT : Intermittent operation.

LO : Continuous wipe, slow speed.

HI : Continuous wipe, fast speed

For a single swipe when the windshield wipers are off, lightly move the windshield wiper lever toward the INT position and release it. The lever will return automatically to its normal position when released. The wipers will operate through one cycle.

Misting function

To operate the windshield wipers once in case of light rain or mist, lightly move the windshield wiper /washer lever toward the INT position and release it.

The lever will return automatically to its normal position when released. The wipers will operate through one cycle.


Caution

Less than clear vision for the driver can lead to an accident resulting in personal injury and damage to your vehicle or other property.

Do not operate the windshield wipers when the windshield is dry or obstructed, as with snow or ice. Using the wipers on an obstructed windshield can damage the wiper blades, wiper motor, and glass.

Check blades are not frozen to windows before operating in cold weather. Wiper operation while blade is frozen can damage wiper motor.

Windshield Washer

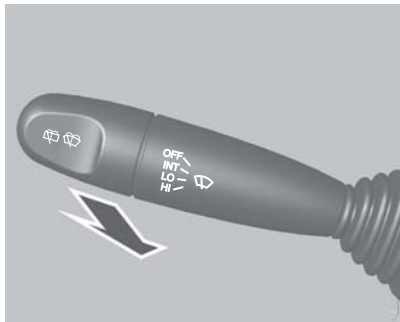

Pull lever. Washer fluid is sprayed onto the windshield and the wiper swipes for a few strokes.

Caution

Washer fluid can form ice on a frozen tailgate window and obstruct your vision.


Do not operate the tailgate window washer continuously for more than some seconds, or when the washer fluid tank is empty. This can cause the washer motor to overheat resulting in costly repairs.

⚠ Warning

Do not spray washer fluid on the windshield in freezing weather.

Using washer fluid and wipers may cause an accident in freezing weather because washer fluid can form ice on a frozen windshield and obstruct your vision.

Rear Window Wiper/Washer

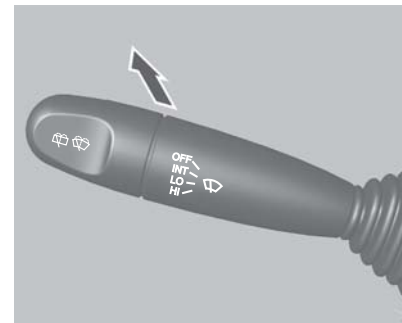

To operate the tailgate wiper and washer, push the lever toward the instrument panel. Pushing once, wiper will operate continuously at slow speed. To spray the washer fluid, push the lever once more.

CLOCK



Time is shown in the cluster.

Set time

Push the **CLOCK** button of the cluster for more than 1 second. When the hour is flashed, adjust the current hour using the **CLOCK** button.

After for a second, the minute will flash automatically then adjust the current minute using the **CLOCK** button.

The setting will be finished without any operation after adjusting in few seconds.

POWER OUTLETS*



A 12V power outlet is located in the front console.

Do not exceed the maximum power consumption of 120 watts.

With ignition off the power outlet is deactivated.

Additionally the power outlet is deactivated in case of low battery voltage.

Do not connect any current delivering accessories, e.g. electrical charging devices or batteries.

Do not damage the sockets by using unsuitable plugs.

CIGARETTE LIGHTER*



To operate the cigar lighter, turn the ignition switch to **ACC** or **ON** and push the lighter in all the way.

The cigar lighter will pop out automatically when it is ready to use.

Caution

Overheating the cigarette lighter can damage the heating element and the lighter itself.

Do not hold the lighter in while it is heating. This can cause the lighter to overheat.

Trying to operate a malfunctioning cigarette lighter can be dangerous. If the heated cigarette lighter does not pop out within 25 seconds, pull it out and consult a Chevrolet retailer to have it repaired. We recommend that you consult your authorised repairer. It can cause injuries and damage to your vehicle.

 Warning

If you leave the vehicle with an inflammable explosive substance, such as a disposable lighter, inside the car in summer, it can explode and cause fire due to an increase of temperature in the passenger compartment and the boot.

Please ensure that no inflammable explosive substances are left or kept inside the car.

Caution

The cigarette socket should only be used with the cigarette lighter. If other 12V power adapters are installed into the cigarette socket, fuse failure or a potential thermal incident may occur.

Caution

The barrel of an operating cigarette lighter can become very hot.

Do not touch the barrel of the cigarette lighter and do not allow children to operate or play with the cigarette lighter.

This hot metal can cause personal injuries and damage to your vehicle or other property.

WARNING LIGHTS, GAUGES AND INDICATORS

Speedometer



Indicates vehicle speed.

Odometer



The odometer shows how far your car has been driven in kilometres or miles.

There are two independent trip odometers, which measure the distances your vehicle has travelled since you last reset this function.

The odometer, trip A and trip B can be switched by pressing the TRIP button.

Note

To reset each trip odometre to zero, press the TRIP button of the cluster more than 2 seconds.

Tachometer



Displays the engine revolutions per minute.

Drive in a low engine speed range for each gear as much as possible.

Fuel Gauge



Displays the fuel level in the tank.

Because of the fuel remaining in the tank, the top-up quantity may be less than the specified tank capacity.

Movement of the fuel within the fuel tank causes the fuel gauge pointer to move when you brake, accelerate or turn.

Danger

Before refueling, stop vehicle and switch off the engine. Never run the tank dry.

SERVICE DISPLAY


Control indicators

The control indicators described are not present in all vehicles. The description applies to all instrument versions. When the ignition is switched on, most control indicators will illuminate briefly as a functionality test.

The control indicator colours mean:

- red = danger, important reminder
- yellow = warning, information, fault
- green = confirmation of activation
- blue = confirmation of activation

Control Indicators In The Instrument Panel

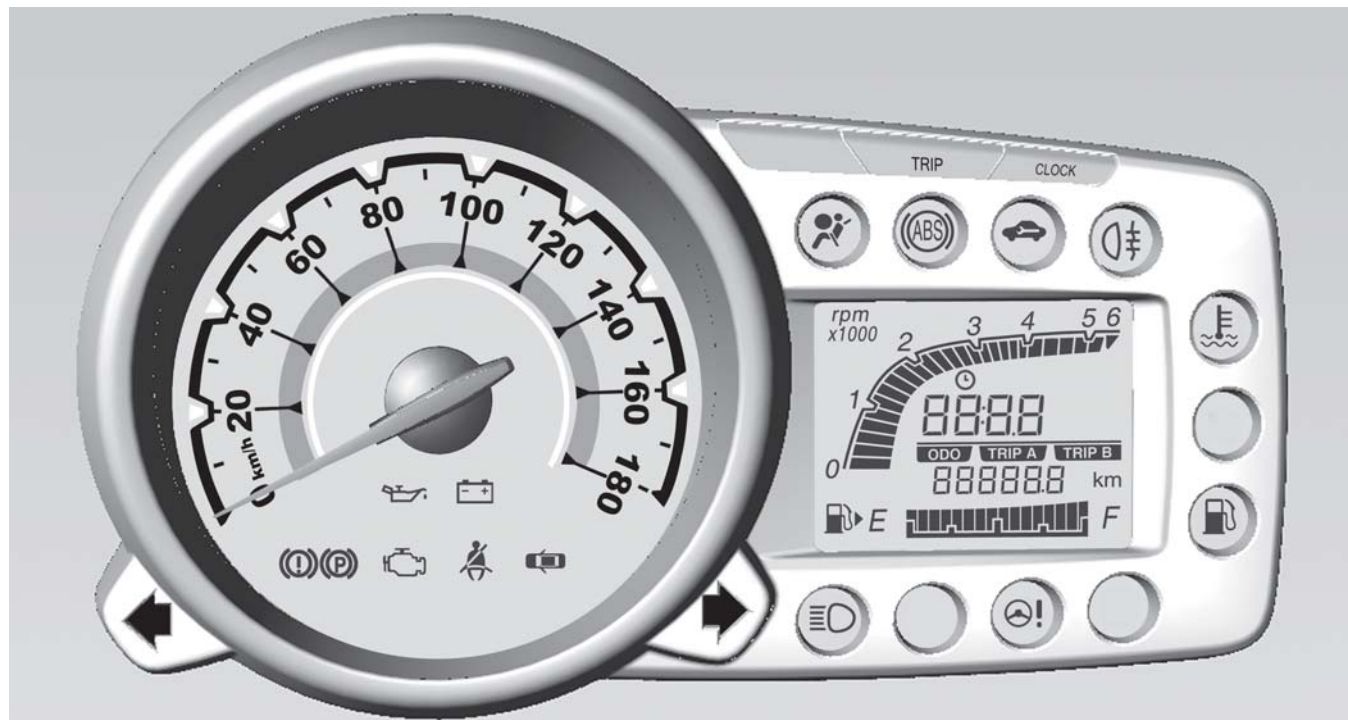

Turn Signal

 illuminates or flashes green.

Flashes

The control indicator flashes if a turn signal or the hazard warning flashers are activated.

Fast flashing

Failure of a turn signal light or associated fuse.

See *Bulb replacement* on page 111.

See *Fuses* on page 117.

See *Turn and Lane-Change Signals* on page 64.

Seat Belt Reminders (Option)

Safety belt reminders on front seats

 for driver's seat illuminates or flashes red.

₂ for front passenger seat illuminates or flashes red, when seat is occupied.

1. After the ignition switched ON, the control indicator illuminates until the safety belt is fastened.
2. After the engine is running, the

control indicator flashes for 100 seconds and then illuminates until the safety belt is fastened.

3. If the vehicle moves more than 250m (0.15 mile) or the speed is over 22km/h (14 mph) with unfastened safety belt, the control indicator will flash and the chime will sound for 100 seconds.

After 100 seconds, the indicator will illuminate until the safety belt is fastened, and the chime will go off.

Airbag And Safety Belt Tensioner Light

 illuminates red.

When the ignition is switched on, the control indicator illuminates for about few seconds. If it does not illuminate, does not go out after few seconds or illuminates whilst driving, there is a fault in the belt tensioner or in the airbag system. The systems may fail to trigger in the event of an accident.

Vehicle trouble or deployment of the belt tensioners or airbags may be

indicated by continuous illumination of .

Warning

Have the cause of the fault eliminated immediately by CHEVROLET retailer workshop.

See *Airbag system* on page 33,

See “Belt tensioners” *under Safety belts* on page 32.

Service Vehicle Soon

 illuminates yellow when the vehicle needs a service.

It illuminates in combination with a warning code.

Charging System Light

 illuminates red.

It illuminates when the ignition is switched on and goes out shortly after the engine starts.

Illuminates when the engine is running

Stop, switch off the engine. Battery is not charging. Engine cooling may be interrupted.

In diesel engines, power to the brake servo unit may be cut.

Seek the assistance of a authorised CHEVROLET retailer workshop.

Malfunction Indicator Light

 illuminates yellow.

It illuminates when the ignition is switched on and goes out shortly after the engine starts.

Brake System Warning Light

 illuminates red.

Illuminates when the parking brake is released, if the brake fluid level is too low or if there is a brake system fault.

See *Brake fluid* on page 108.

Warning

Do not drive with the brake system warning lamp on.

This may mean your brakes are not working properly.

Driving with malfunctioning brakes can lead to a collision resulting in personal injuries and damage to your vehicle and other property.

Illuminates after the ignition is switched on if the manual parking brake is applied.

See *Parking brake* on page 95.

Antilock Brake System (ABS) Warning Light

 illuminates yellow.

Illuminates for a few seconds after the ignition is switched on. The system is ready for operation when the control indicator goes out.

If the control indicator does not go out after a few seconds, or if it illuminates while driving, there is a fault in the

ABS. The brake system remains operational but without ABS regulation.

See *Antilock brake system (ABS)* on page 94.

Engine Coolant Temperature Warning Light

 illuminates red.

This lamp tells you that the engine coolant has overheated.

If you have been operating your vehicle under normal driving conditions, you should pull off the road, stop your vehicle and let the engine idle for a few minutes.

If the lamp does not go out, you should switch the engine off and consult CHEVROLET retailer workshop as soon as possible.

Engine Oil Pressure Light

 illuminates red.

It illuminates when the ignition is switched on and goes out shortly after the engine starts.

Illuminates when the engine is running

Caution

Engine lubrication may be interrupted. This may result in damage to the engine and/or locking of the drive wheels.

If the engine oil pressure warning lamp comes on while driving, Pull off the road, stop the engine and check the oil level.

⚠ Warning

When the engine is off, considerably more force is needed to brake and steer.

Do not remove key until vehicle has come to a standstill, otherwise the steering column lock could engage unexpectedly.

Check oil level before seeking.

See *Engine oil* on page 104.

Low Fuel Warning Light

 illuminates yellow.

Illuminates when level in fuel tank is too low.

Caution

Do not let your vehicle run out of fuel. This can damage the catalytic converter.

See *Catalytic converter* on page 93.

Bleeding the diesel fuel system Page 109.

High - Beam on Light

 illuminates blue.

Illuminated when high beam is on and during headlight flash.

See *Headlamp high/low-beam changer* on page 62.

Fog Lamp Light*

 illuminates green.

Illuminated when the front fog lamps are on.

See *Front fog lamps* on page 64.

Door Ajar Light

 illuminates red.

It illuminates when a door or the tailgate is open.

Electric Power Steering (EPS) Indicator Light:

! illuminates yellow.

Illuminates with power steering disabled

Failure in the power steering system. Consult a work shop / consult your retailer

Illuminates after interruption of power supply.

The steering angle sensor must be calibrated to make the power steering system operational again. For calibration turn the steering wheel from limit position to limit position.

The control indicator goes out when the power steering system is operational again.

TRIP COMPUTER



Trip computer provides the driver with driving information such as driving distance.

TELLTALE IP DISPLAY UNIT Water in Fuel Indicator Light



Illuminates, when the water level, in the water separator (separated from the diesel fuel) reaches to the maximum.

If the light comes on and remains on with the engine running, it indicated the need for draining of the water separator. Please visit the nearest CHEVROLET retailer workshop for the water draining.

Glow Plug Indicator Light



Illuminates when the ignition is ON and stays on for a short time or may go off right away. The waiting time will vary according to the engine coolant temperature.

When the glow plugs are sufficiently heated for cold starting, the light will go out. Then the engine should be started.

LIGHTING

Exterior lighting	61
Interior lighting	65
Lighting features	66

EXTERIOR LIGHTING

Exterior Lamp Controls




To turn the head and tail lamps on or off, twist the end of the combination switch lever. The light switch has three positions which activate various lamp functions as follows:

- OFF** : All the lamps are off.
-  : The tail lamps, number plate lamps, and instrument panel lamps are illuminated.
-  : The low-beam headlamps and all of the above lamps are illuminated.

The headlamps will turn off automatically when the driver's door is opened after the ignition switch is turned to LOCK.

Headlamp High/Low-Beam Changer

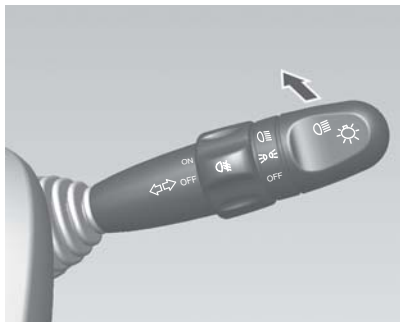

To switch from low to high beam, push lever.

To switch to low beam, push lever again or pull.


Note

The headlamp high-beam indicator illuminates when headlamps are on high beam.

Warning

Always switch the high beam headlamps to low beam when you approach oncoming vehicles. High beam headlamps can temporarily blind other drivers, which could result in a collision.

Flash - To - Pass

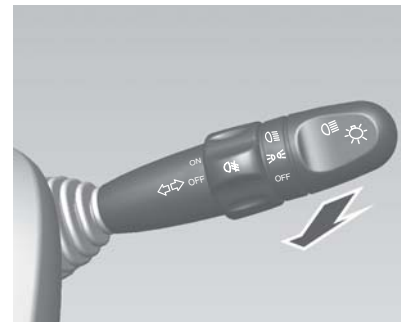

The lever will return to its normal position when you release it. The high-beam headlamps will stay on as long as you hold the combination switch lever towards you.

Headlamp Range Adjustment



To adapt headlamp range to the vehicle load to prevent dazzling: turn knob to required position.

- 0 = front seats occupied
- 1 = all seats occupied
- 2 = all seats occupied and load compartment laden.
- 3 = driver's seat occupied and load compartment laden.


Headlamps when driving abroad

The asymmetrical headlamp beam extends visibility at the edge of the road at the passenger side.

However, when driving in countries where traffic drives on the opposite side of the road, adjust the headlamp to prevent dazzling of oncoming traffic.

Have the headlamp adjusted by CHEVROLET retailer workshop.

Hazard Warning Flashers

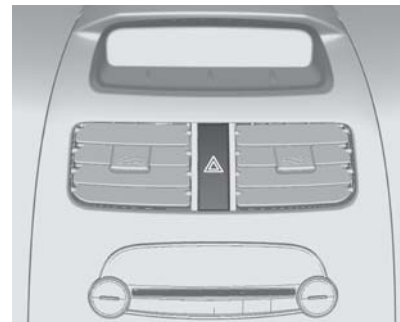


Operated with the  button.

To activate the hazard warning flashers, push the button.

To turn off the flashers, push the button again.


Turn and Lane-Change Signals

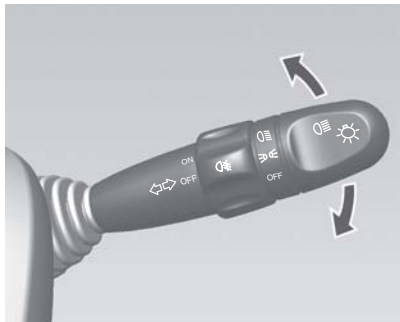

lever up = left indicator
lever down = right indicator

If the lever is moved past the resistance point, the indicator is switched on constantly. When the steering wheel moves back, the indicator is automatically deactivated.

Front Fog Lamp*

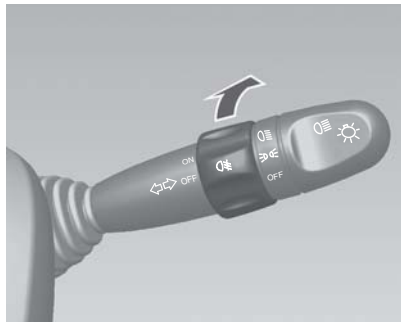


To turn the fog lamps on, make sure the low-beam headlamps are on.

And turn the ring on the middle of the combination switch lever to ON position.

To turn the fog lamps off, turn the ring to the OFF position.

Parking Lamps

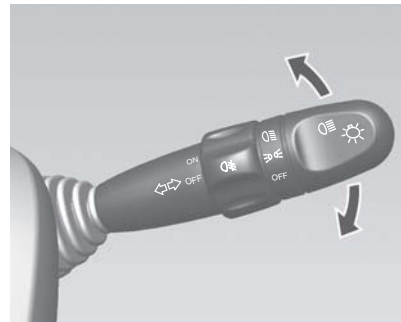

When the vehicle is parked, the position lamp front and rear on one side can be activated:

1. Switch off ignition.
2. Move turn signal lever all the way up (left parking lamp) or down (right parking lamp).

Confirmed by a signal and the corresponding turn signal control indicator.

Reversing Lamps

The reversing lamp come on when the ignition is on and reverse gear is selected.

Misted Lamp Covers

The inside of the lamp housing may mist up briefly in poor, wet and cold weather conditions, in heavy rain or after washing. The mist disappears quickly by itself; to help switch on the headlamps.

INTERIOR LIGHTING

Courtesy Light



Operate rocker switch:

- : always on until shut off manually.
- ☐ : automatic switching on when you open a door and off after doors are closed.
- : always off, even when doors are open.

Note

The battery can be discharged if the lights keep turning on for a long time

Warning

Avoid using the courtesy light while driving in the dark.

A lit passenger compartment reduces visibility in the dark, and could cause a collision.

LIGHTING FEATURES

Battery Power Protection

Switching off electric lights

Battery saver is to prevent the battery from being discharged.

If you open the driver's door, parking and headlamps lights are turned off automatically when the ignition is switched to LOCK or ACC position.

The courtesy lights will not be applied with this function.

INFOTAINMENT SYSTEM (OPTION)

Introduction 67
Radio 71
Audio players 73

INTRODUCTION

Theft-Deterrent Feature (Option)

Setting the security lock (registering the ID code)

Turn off the radio.

- ⇒ Press [POWER] simultaneously holding down [INFO] and [4].
- ⇒ The ID code registration mode will be established.
- ⇒ Press [1]~[6] to enter the four digit codes.
- ⇒ Press [1]~[6] to confirm the code again.
- ⇒ The radio shows "security on".

The ID code will be registered and the radio will be turned off.

Releasing The Security Lock

Turn off the radio.

- ⇒ Press [POWER] simultaneously holding down [INFO] and [4].
- ⇒ The ID code registration mode will be established.
- ⇒ Press [1]~[6] to enter the four digit codes.


⇒ The radio shows "security off".

If the code entry agrees with the registered code, the security lock is released and the radio is turned off.

Note

If you have a problem, contact your CHEVROLET retailer workshop.

Overview

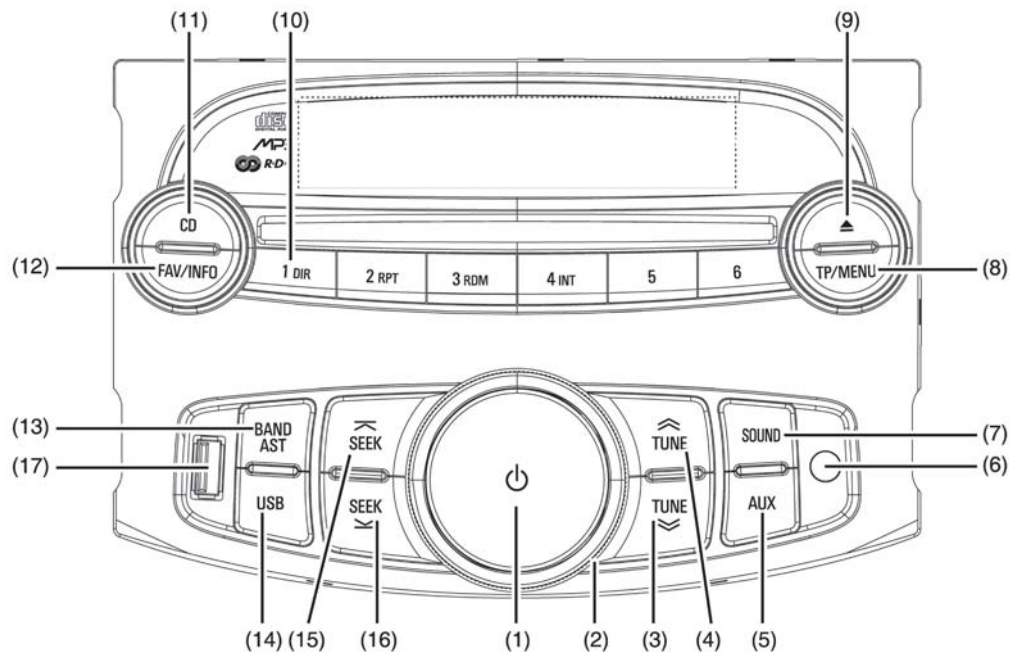

1. [POWER]

- When the power is ON:
 - Short press: Audio mute on/off.
 - Long press: Turns on/off the radio.
- When the power is OFF:
 - Pressing the power button turns the power ON.

2. [VOLUME]

- Volume adjustment
- Tone adjustment in the tone control mode.

3. [TUNE DOWN]

- Radio mode
 - Short Press: 1 step tune-down
 - Long Press: Continuous tune-down
- CD mode
 - Short Press: previous track or file playback
 - Long Press: Fast-forward playback

4. [TUNE UP]

- Radio mode
 - Short Press: 1 step tune-up
 - Long Press: Continuous tune-up
- CD mode
 - Short Press: Next track or file playback
 - Long Press: Fast-reverse playback

5. [AUX]

- Auxiliary mode selection

6. [Aux Socket]

- Socket of Auxiliary Jack

7. [SOUND]

- Bass/Middle/Treble/Fader/Balance/Preset EQ adjustment

8. [SCAN/AST*]

- Short Press: Traffic announcement reception setting.
- Long Press: Configuration setting
 - AF On/Off: RDS AF switching

function enable/disable

- REG On/Off: RDS regional function enable/disable
- PTY none: RDS program type selection
- Fav. Page 1~6: Favorite page setting
- AST. Page On/Off: Autostore page enable/disable

9. [EJECT]

- Eject the disc from the CD deck.

10. [PRESET] #1~#6

- Radio Mode
 - Short Press: Recall the pre-memorized station in the preset memory
 - Long Press: Store to preset memory
- CD Mode
 - [#1 DIR]: enable or disable directory playback mode.
 - [#2 RPT]: enable or disable repeat playback mode.

- [#3 RDM]: enable or disable random playback mode.
- [#4 INT]: enable or disable intro-scan playback mode.

11. [CD]

- Compact Disc playback mode selection
- CD pause function when CD playback

12. [FAV/INFO]

- Radio Mode
 - Short Press: Selection favorite page
 - Long Press: Information display of the current station.
- CD Mode
 - Short Press: Information display of the current track.

13. [BAND/AST]

- Radio Mode selection
- Radio mode
 - Short press: AM or FM radio band selection

- Long Press: Auto-store function, Search and memory the best 12 stations.

14. [USB]

- USB mode selection
- USB Pause function when USB playback

15. [SEEK UP]

- Radio mode
 - Short Press: next broadcasting station search upward
 - Long Press: PTY search upward
- CD mode
 - Next folder when CD playback

16. [SEEK DOWN]

- Radio mode
 - Short Press: previous broadcasting station search downward
 - Long Press: PTY search downward

- CD mode
 - Previous folder when CD playback

17. [USB SOCKET]

- Socket of USB

Operation

Power On/Off

Power On

- ⇒ Press [POWER] to turn on the radio.

Power off

- ⇒ Press [POWER] and hold more than 1 second to turn off the radio.

Audio Mute

Press [POWER] to make audio mute when the power is on.

Volume Adjustment

Turn the volume clockwise to increase the audio volume.

Turn the volume counter-clockwise to decrease the audio volume.

Audio Adjustment

Bass Tone Adjustment

Press the [AUDIO] repeatedly until radio show "Bass" and turn the [VOLUME] knob clockwise or counter-clockwise to increase or decrease the bass effect.

Midrange, Treble, Balance, & Fader Adjustment

Almost same with above "Bass Tone Adjustment" but select each tone mode.

Preset EQ Selection

Almost same with above "Bass Tone Adjustment" but select preset EQ mode
The kinds of preset EQ Mode are

...→OFF→POP→Rock→Country→
Voice→Jazz→Classic→OFF→...

RADIO

AM - FM Radio

Radio Mode Selection

Press the [BAND/AST] to listen the radio from other mode.

Band Change

The band changes from AM to FM or FM to AM all times [BAND/AST] pressed.

Manual Tune Up/Down

Press [TUNE UP]/[TUNE DOWN] to increase/decrease the frequency.

The frequency increase or decrease 1 step all times [TUNE UP]/[TUNE DOWN] pressed.

If this button is pressed continuously, then the frequency increase or decrease continuously.

Seek Up/Down

Press [SEEK UP]/[SEEK DOWN] to find next/previous station automatically.

Favorite preset memory

It have 6 favorite pages and store up to 48 stations regardless of AM or FM band.

It can store current station by the following procedure

Step 1: Seek station or tune station manually you want.

Step 2: Select the favorite page by pressing [FAV/INFO].

Step 3: Press and hold [PRESET #] more than 1 second

By above procedure, the 48 stations are stored in the favorite preset memory.

Recall favorite preset

You can listen to the station stored in the favorite preset by the following procedure.

Step 1: Select the favorite page by pressing [FAV/INFO].

Step 2: press [PRESET #] which store the station you want to listen to.

Auto-store Function

Auto-store

Press [SCAN/AST*] more than 1 second, then radio starts auto-store function.

Delete Auto-store Page

After the auto-store function is operated, the radio has auto-store pages.

To delete the auto-store page, press [FAV/INFO] until radio shows


"AST.PAGE On" and turn [VOLUME] knob to make "AST.PAGE Off".

Radio Reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to

- changes in distance from the transmitter,
- multi-path reception due to reflection and
- shadowing.

Fixed Mast Antenna

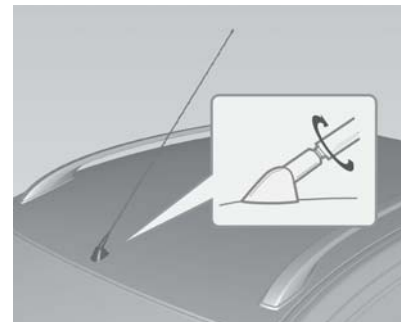

To remove the roof antenna, rotate it counterclockwise. To install the roof antenna, rotate it clockwise.

Caution

Be sure to remove the antenna before entering a place with a low ceiling or it may be damaged.

Entering the automatic car wash with the antenna installed may result in damage to the antenna or the roof panel. Be sure to remove your antenna before entering the automatic car wash.

Install the antenna fully tightened and adjusted to the upright position to ensure proper reception.

AUDIO PLAYER

CD Player

As the CD is inserted, the radio will appear on the display and as the CD is loading, File check will appear on the display.

Once playback begins, the track and track number will appear on the display.

If the ignition or radio is turned off with a CD in the player, it will stay in the player. When the ignition and radio are turned on, the CD will start playing where it stopped, if it was the last selected audio source.

If playing a CD-R, the sound quality may be reduced due to CD-R quality, the method of recording, the quality of the music that has been recorded, and the way the CD-R has been handled. There may be an increase in skipping, difficulty in finding tracks, and/or difficulty in loading and ejecting. If these problems occur, check the bottom surface of the CD. If the surface of the CD is damaged, such as cracked, broken, or scratched, the CD will not

play properly. If the surface of the CD is soiled, see Care of Your CDs for more information.

If there is no apparent damage, try a known good CD.

Do not add any label to a CD, it could get caught in the CD player. If a CD is recorded on a personal computer and a description label is needed, try labeling the top of the recorded CD with a marking pen instead.

Caution

If you add any label to a CD, insert more than one CD into the slot at a time, or attempt to play scratched or damaged CD's, you could damage the CD player. When using the CD player, use only CD's in good condition without any label, load one CD at a time, and keep the CD player and the loading slot free of foreign materials, liquids, and debris.

If an error appears on the display, see "CD Messages" later in this section.

Disc Insert

Insert a CD into a CD slot with CD label up.

CD Playback Mode Selection

Insert a CD into CD deck, then the CD goes to the playback mode.

CD EJECT

Press the [EJECT], then the disc will be ejected from the radio.

Pull out the disc out of the radio.

Pause

Press [CD] to pause playback while a CD is playing back.

"PAUSE" will flash on the display.

Press [CD] again to start playback.

Next/Previous Track

Press [TUNE UP/TUNE DOWN], then the CD starts playback of the next/previous track.

Fast forward/Fast reverse

Press and hold [TUNE UP/TUNE DOWN], then the CD plays back fast forward/fast reverse.

Next/Previous Folder - only Mp3*

Press [SEEK UP/SEEK DOWN], then the radio start playback of the next/previous track.

RPT (Repeat)

Press [2RPT], then CD plays back current track repeatedly.

To cancel this function, press [2RPT] again.

RDM (Random):

Press [3RDM], then CD plays back tracks randomly.

To cancel this function, press [3RDM] again.

INT (Intro-Scan):

Press [4 INT], then CD plays back just 10 seconds of the current track, jump to next track and do this action repeatedly.

To cancel this function, press [4 INT] again.

To cancel this function, press [1 DIR] again.

Auxiliary Devices

USB playback mode*

USB Playback Mode Selection

Press the [USB] to change to play back the USB files from other mode.

USB memory insertion

Insert a USB memory into the USB socket, so the radio plays back the USB files automatically.

USB Extraction

Pull the USB memory from the USB socket by hand.

*** Other functions are same with CD mode.**

AUX Mode*

The radio has one auxiliary input jack(diameter 3.5mm) located on the lower right side of the faceplate.

This is not an audio output; do not plug the headphone set into the front auxiliary input jack.

You can however, connect an external audio device such as an iPod, laptop computer, MP3 player, CD changer, receiver, etc. to the auxiliary input jack for use as another source for audio listening.

AUX In Mode Selection*

Press [AUX] in the other playback mode.

If the auxiliary jack isn't detected for the presence of an output jack, the aux mode will be prevented.

Steering wheel audio controls*

1. [POWER]

Power on: Press this button.

Power off: Press this button more than 1 second.

Audio mute: Press this button when the power is on.

2. [Volume Up]

Press [VOLUME UP] Button to increase the audio volume. Press this button, then the radio increases the audio level. If this button is pressed more than 1 second, then the radio increases the audio volume step by step.

3. Volume Down Button

Press [VOLUME DOWN] to decrease the audio volume. Press this button, then the radio increases the audio volume. If this button is pressed more than 1 second, then the radio decrease the audio volume step by step.

4. Seek

4-1. **RADIO MODE** : Press this button to move to next preset

station. (Favorite preset #1→#2→#3→#4...)

Press this button more than 1 second to search for the next station.

4-2. **CDP MODE** : Press this button to jump to the next track.

(Track01→Track02→...)

Press this button more than 1 second to play back the track fast forward.

5. Mode

The play mode will be change by following order whenever this button is pressed.

FM→ AM→ (CDP)→ (USB)→ (AUX)→FM...

The radio skips the CDP mode if there is no disc in the radio.

The radio skips the USB mode if

there is no USB memory on the radio.

The radio skips the AUX mode if there is aux jack in the socket on the radio.

CLIMATE CONTROL

Climate control systems	77
Air vents	85
Maintenance	86

CLIMATE CONTROL SYSTEMS

Air Conditioning System

⚠ Warning

Do not sleep in a vehicle with the air conditioning or heating system on. It may cause serious harm or death due to a drop in the oxygen level and/or body temperature.



Controls for:

- Temperature
- Air distribution
- Fan speed
- Heating

- Demisting and Defrosting
- Air recirculation
- Heated rear window

Temperature

Adjust the temperature by turning the knob.

red : warm

blue : cold

Air distribution

Select air outlet by turning the centered knob.

- ↕ : Bi-level mode: To the face and foot
- ↕ : to the foot well, with a small amount of the air being directed to windshield, front door windows and side air vents.
- ↕ : Face mode: to the face area
- ☼ : Demist/Defrost mode
- ↕ : Demist/Foot mode: To the windshield and foot well .

Fan speed

Adjust the air flow by switching the fan to the desired speed.

Demisting windshield



1. Set the recirculation mode to outside air mode and turn the air distribution knob to DEFROST.
2. Switch on cooling.
3. Select desired temperature.
4. Adjust the fan control knob to desired speed.

Air Recirculation System



The air recirculation mode is operated with the lever.

Warning

Driving with recirculation mode for prolonged period of time can make you sleepy. Periodically turn to the outside air mode for fresh air.

The exchange of fresh air is reduced in air recirculation mode. In operation without cooling the air humidity increases, so the windows may mist up. The quality of the passenger compartment air deteriorates, which may cause the vehicle occupants to feel drowsy.

Cooling ❄️

Operated with the ❄️ button and is functional only when the engine and fan are running.

The air conditioning system cools and dehumidifies (dries) when outside temperature is a little above the freezing point. Therefore condensation may form and drip from under the vehicle.

If no cooling or drying is required, switch the cooling system off to save fuel.

The air conditioning will not operate when the fan control knob is in the off position.

If the temperature knob is switched the red area, the air from the air vent will be warm unless the air condition is operating.

To turn off the air conditioning system, turn the fan knob to 0.

Caution

Use only R-134a refrigerant

⚠️ Warning

Climate control systems are serviced by qualified personnel only. Improper service methods may cause personal injury.

Normal cooling

1. Operate the air conditioning system.
2. Turn temperature control knob to blue area for cooling.
3. Turn the air distribution knob face mode.
4. Adjust the fan control knob to the desired speed.

Maximum cooling



To achieve maximum cooling during hot weather and when your vehicle has been exposed to the sun for a long time:

1. Keep the window open for some time or, run the blower at maximum speed in fresh air mode for 2 min.
2. Move recirculation lever to the left for the recirculation mode.
3. Turn temperature control knob all the way to the blue area for cooling.
4. Turn fan control knob to highest speed.

Electronic Climate Control System (Option)

⚠ Warning

Do not sleep in a vehicle with the air conditioning or heating system on. It may cause serious harm or death due to a drop in the oxygen level and/or body temperature.



Controls for automatic mode:

AUTO: automatic mode, all settings except temperature are chosen automatically by the system

Temperature: preselection of the

desired temperature

The following functions can be adapted manually, disabling automatic mode:

Fan speed: selectable air flow

MODE: selectable air distribution

 : demisting and defrosting

0 : switching system on or off

 : switching cooling on or off

 : air recirculation

Heated rear window


In the automatic mode the fan speed and air distribution automatically regulate the air flow.



The electronic climate control system is only fully operational when the engine is running.

Note

When the MODE knob switched more than 3 types of air distribution with pushing the AUTO button in 3 seconds, the temperature degree can be changed between Centigrade and Fahrenheit.

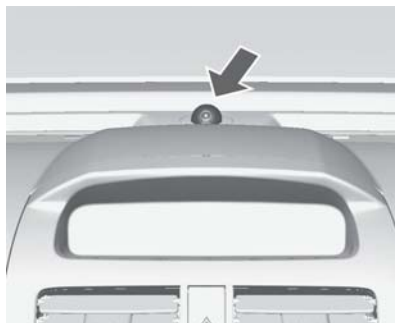Sunlight Sensor*

Sunlight sensor is located in front of the windshield defroster vents. This sensor detects sunlight when operating in AUTO mode.

Note

Do not cover the sunlight sensor in order not to get wrong information.

Temperature Sensor

Temperature information sampled from the interior of your car is used in establishing ventilation system requirements when operating in AUTO mode.

Caution

Do not place stickers over the temperature sensor as this will impair its function.

Automatic Mode AUTO



Basic setting for maximum comfort:

1. Press AUTO button, the air conditioning is activated automatically.
2. Open all air vents.
3. Set pre-selected temperature using right rotary knob.

All air vents are actuated automatically in automatic mode. The air vents should therefore always be open.

Temperature preselection



Set temperature to the desired value by turning the knob.

red : warm

blue : cold

If the minimum temperature is set, the climate control system runs at maximum cooling.

If the maximum temperature is set, the climate control system runs at maximum heating.

To operate the maximum cooling, push

the AUTO button and adjust the temperature to "LO". Then the recirculation mode is selected and the air distribution is switched to  automatically with the maximum fan speed of cooling.

To operate the maximum heating, push the AUTO button and adjust the temperature to "HI". Then the recirculation mode is changed to be drawn outside air and the distribution is switched to  automatically with the Auto Hi (7 of 8 steps) fan speed of heating.

Demisting and defrosting the windows

1. Press button 
2. Temperature and air distribution are set automatically and the fan runs to the minimum 6 of 8 steps speed and keep the maximum hot.
3. To return to automatic mode: press button  or AUTO.

Note

The air conditioning system may not operate automatically in winter.

Manual settings

Climate control system settings can be changed by activating the buttons and rotary knobs as follows.

Changing a setting will deactivate the automatic mode.

Fan Speed



Turn left rotary knob. Clockwise is to increase the fan speed and counter-clockwise is to decrease.

To return to automatic mode: Press AUTO button.

Air Distribution MODE



Turn the MODE knob once or more for desired adjustment. The air distribution is indicated on the display.

-  : Bi-level mode: To the face and foot
-  : to the foot well, with a small amount of the air being directed to windshield, front door windows and side air vents.
-  : Face mode: to the face area
-  : Demist/Defrost mode.

 : To head area via adjustable air vents.

Demist/Foot mode: To the windshield and foot well.

To return to automatic air distribution press button AUTO.

Cooling

Activate or deactivate with the  button.

The air conditioning system cools and dehumidifies (dries) when outside temperature is above a specific level. Therefore condensation may form and drip from under the vehicle.

If no cooling or drying is required, switch the cooling system off to save fuel.

Caution

Use only R-134a refrigerant

Warning

Climate control systems are serviced by qualified personnel only. Improper service methods may cause personal injury.

Manual air recirculation mode

The manual air recirculation mode is operated with the  button.

Warning

The exchange of fresh air is reduced in air recirculation mode. In operation without cooling the air humidity increases, so the windows may mist up. The quality of the passenger compartment air deteriorates, which may cause the vehicle occupants to feel drowsy.


System switching off

Turning the left rotary knob to 0 switches all functions of heating, ventilation and cooling system off.

AIR VENTS


Adjustable Air Vents

At least one air vent must be open while cooling is on in order to prevent the evaporator from icing up due to lack of air movement.

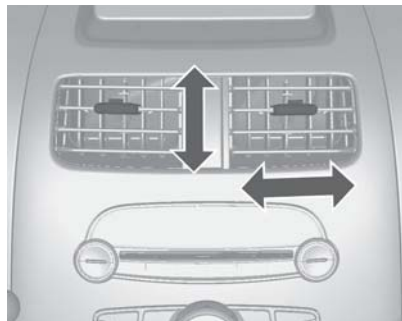

The center vent is not closed completely.

Direct the flow of air by tilting and swiveling the slats.

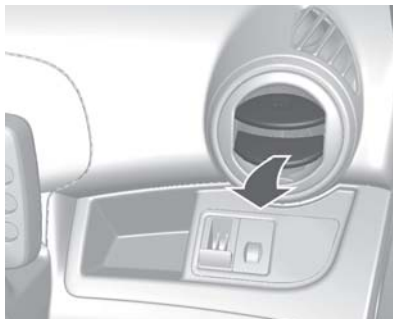

Press the cover of each vent to open the side vents, and rotate it to the direction you want.

If you do not want the flow, close the cover of the vent.

Warning


Do not attach any objects to the slats of the air vents. There is a risk of damage and injury in case of an accident.

Fixed Air Vents

Additional air vents are located beneath the windshield and front door windows and in the foot wells.

MAINTENANCE


Air Intake

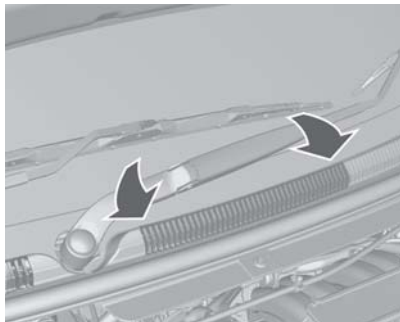

The air intake in front of the windshield in the engine compartment must be kept clear to allow air intake. Remove any leaves, dirt or snow.

Passenger Compartment Air Filter


The filter cleans dust, soot, pollen, spore from the air entering the vehicle through the air intake.

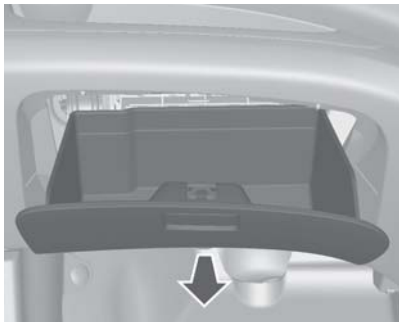

Filter replacement:

1. Remove the glove box.

To remove the glove box, open and pull it up by each side.

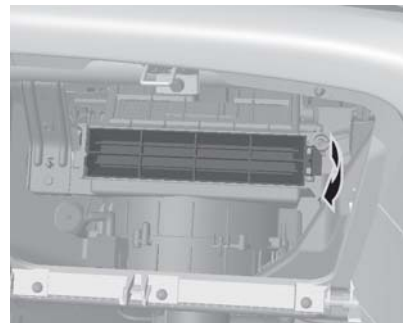

2. Remove the filter cover by pulling right side of the cover.
3. Replace the air conditioner filter.
4. Assemble the filter cover and glove box in reverse order

Note

We recommend that you consult your authorised CHEVROLET retailer workshop to replace the filter.

Caution

More frequent maintenance of the air filter is required if the driving circumstances are dusty roads, air pollution areas, and frequent unpaved roads.

It makes the filter efficiency to be decreased and the bronchus to be bad effected.

Air Conditioning Regular Operation

In order to ensure continuously efficient performance, cooling must be operated for a few minutes once a month, irrespective of the weather and time of year. Operation with cooling is not possible when outside temperature is low.

Service

For optimal cooling performance, it is recommended to annually check the climate control system.

- Functionality and pressure test
- Heating functionality
- Leakage check
- Check of drive belts
- Cleaning of condenser and evaporator drainage
- Performance check

Caution

Use only R-134a refrigerant

⚠ Warning

Climate control systems are serviced by qualified personnel only. Improper service methods may cause personal injury.

DRIVING AND OPERATING

Driving information 89

Starting and operating 90

Starting the engine91

Manual transmission 92

Brakes 92

Engine exhaust 93

Fuel 95

DRIVING INFORMATION

Control of A Vehicle

Never coast with engine not running

Many systems will not function in this situation (e.g. brake servo unit, power steering). Driving in this manner is a danger to yourself and others.

Pedals

To ensure the pedal travel is uninhibited, there must be no mats in the area of the pedals.

Driving with diesel – engine vehicle

The turbocharger element rotate very fast. If the oil supply to running parts stops, the turbocharger system may be seriously damaged. The owner should be encouraged to observe the following precautions to ensure maximum turbocharger service life.

- After starting the engine, let it run for about 1 to 2 minutes with idle speed (avoid acceleration or driving off the vehicle).
- Do not stop the engine immediately after coming back from the highload driving (such as high speed driving or driving down a long slope). Let the engine run for about 1 to 2 minutes at idle speed to cool it down.
- After changing the engine oil and oil filter, start the engine and let it run for about 1 to 2 minutes with idle speed (avoid acceleration or driving off the vehicle).

- Operate the engine above idle only after normal engine oil pressure has been established. Forcing the turbocharger to operate before the bearings are adequately lubricated creates unnecessary friction.
- Use only the specified engine oil and observe inspection and replacement intervals.
- At low ambient temperature, or when the vehicle has not been used for a long period, normal engine oil pressure and flow is affected. Under these conditions the engine should be started and allowed to idle for a few minutes before operating at higher rpm.


STARTING AND OPERATING

New Vehicle Brake - IN

Use the following precautions for the first few hundred kilometres to improve the performance and economy of your vehicle and add to its long life:

- Avoid full-throttle starts.
- Do not race the engine.
- Avoid hard stops except in emergencies. This will allow your brakes to bed in properly.
- Avoid quick starts, sudden accelerations, and prolonged highspeed driving in order to avoid damage to the engine and to conserve fuel.
- Avoid full-throttle acceleration in low gear.
- Do not tow any other vehicle.

Ignition Switch Positions

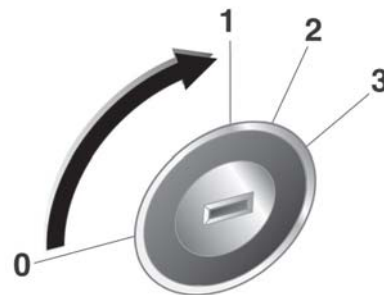

0 (LOCK) : Ignition off

1 (ACC) : Ignition off, steering wheel lock released

2 (ON) : Ignition on, for diesel engine: preheating

3 (START) : Starting

Warning


Do not turn the key to 0 or 1 position while driving.

Vehicle and brake assistance would not operate, causing vehicle damage, personal injury or possibly death.

Caution

Do not leave the key in 1 or 2 position for extended periods while the engine is not running.

This will discharge the battery.

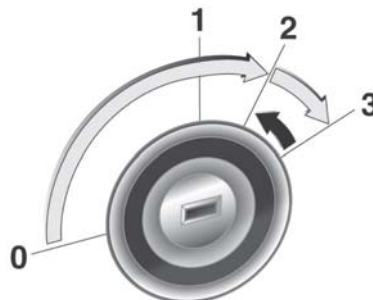STARTING THE ENGINE**Starting Engine With The Ignition Switch**

- Turn key to position 1, move the steering wheel slightly to release the steering wheel lock
- Manual transmission: operate clutch
- Do not accelerate
- Turn the key to position 3, depressing the clutch pedal and footbrake then release when engine is running

Before restarting or to switch off the engine, turn key back to 0.

Caution

Do not operate starter motor for more than 10 seconds at a time.

If the engine does not start, wait 10 seconds before trying again.

This will prevent starter motor damage.

MANUAL TRANSMISSION



If the gear does not engage, set the lever in neutral, release the clutch pedal and depress again; then repeat gear selection.

Do not grind the clutch unnecessarily. When operating, depress the clutch pedal completely. Do not use the pedal as a foot rest.

Caution

It is inadvisable to drive with hand resting on the selector lever.

BRAKES

The brake system comprises two independent brake circuits.

If a brake circuit fails, the vehicle can still be braked using the other brake circuit. However, braking effect is achieved only when the brake pedal is depressed firmly. Considerably more force is needed for this. The braking distance is extended. Seek the assistance of a CHEVROLET retailer workshop before continuing your journey.

Caution

If one of the circuits fail, the brake pedal must be pressed with greater pressure and the braking distance may be increased. Have the brake system checked and repaired by CHEVROLET retailer workshop immediately.

If the brake pedal can be pressed further than normal, the brakes may be in need of repair.

Consult CHEVROLET retailer workshop immediately.

Parking

- Do not park the vehicle on an easily ignitable surface. The high temperature of the exhaust system could ignite the surface.
- Always apply parking brake without pressing release button. Apply as firmly as possible on downhill or uphill slopes. Depress the footbrake at the same time to reduce operating force.
- Switch off the engine and ignition. Turn the steering wheel until the steering wheel lock engages.
- If the vehicle is on a level surface or uphill slope, engage first gear before switching off the ignition. On an uphill slope, turn the front wheels away from the kerb. If the vehicle is on a downhill slope, engage reverse gear before switching off the ignition. Turn the front wheels towards the kerb.
- Close the windows.
- Lock the vehicle.

ENGINE EXHAUST

 Danger

Engine exhaust gases contain poisonous carbon monoxide, which is colourless and odourless and could be fatal if inhaled.

If exhaust gases enter the interior of the vehicle, open the windows. Have the cause of the fault rectified by CHEVROLET retailer workshop.

Avoid driving with an open load compartment, otherwise exhaust gases could enter the vehicle.

Diesel Catalytic Converter

Diesel catalytic converter is a device used to reduce the array of emissions from an internal combustion engine. Catalytic converter works by using a catalyst to stimulate a chemical reaction in which the by-products of combustion are converted to produce less harmful substances, such as the very poisonous carbon monoxide to carbon dioxide, hydrocarbons into less harmful gases.

Caution

Fuel grades other than those listed on pages *Fuel for diesel engines* on page 95, could damage the catalytic converter or electronic components.

Unburnt diesel will overheat and damage the catalytic converter. Therefore avoid excessive use of the starter, running the fuel tank dry and starting the engine by pushing or towing.

In the event of misfiring, uneven engine running, a reduction in engine performance or other unusual problems, have the cause of the fault rectified by CHEVROLET retailer workshop as soon as possible. In an emergency, driving can be continued for a short period, keeping vehicle speed and engine speed low.

Caution

Do not drive with your foot resting on the brake pedal. Doing so will accelerate wear of the brake components. The brakes may also become overheated, resulting in longer braking distance and an unsafe condition.

Warning

After driving through deep water, washing the vehicle, or using the brakes excessively when going down a steep hill, the brakes can temporarily lose their stopping power. This may be due to wet brake components or overheating.

If your brakes temporarily lose their stopping power because of overheating: Shift to a lower gear when going down hills. Do not continuously apply the brakes.

Warning

If your brakes temporarily lose their power because of wet brake components, the following procedure will help restore their normal performance:

1. Check behind you for other vehicles.
2. Keep a safe forward speed with plenty of space to your rear and sides.
3. Gently apply the brakes until normal performance is restored.

Antilock Brake System (ABS) (Option)

Antilock brake system (ABS) prevents the wheels from locking.

ABS starts to regulate brake pressure as soon as a wheel shows a tendency to lock. The vehicle remains steerable, even during hard braking.

ABS control is made apparent through a pulse in the brake pedal and the noise of the regulation process.

For optimum braking, keep the brake pedal fully depressed throughout the braking process, despite the fact that the pedal is pulsating. Do not reduce the pressure on the pedal.

The ABS control can be known by vibration and noise of the ABS process.

When the vehicle ignition is turned on, a chime is heard which is normal and indicate the ABS is ready.

See *Antilock brake system (ABS) warning light* on page 58.


Fault

Warning

If there is a fault in the ABS, the wheels may be liable to lock due to braking that is heavier than normal. The advantages of ABS are no longer available. During hard braking, the vehicle can no longer be steered and may swerve.

Have the cause of the fault remedied by CHEVROLET retailer workshop.

Parking Brake

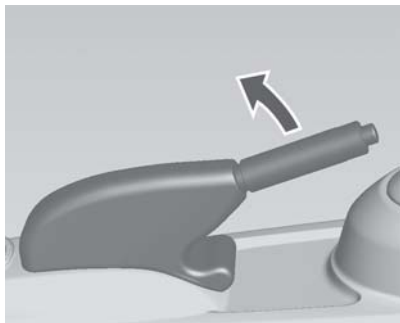

Always apply parking brake firmly without operating the release button, and apply as firmly as possible on a downhill or uphill slope.

To release the parking brake, pull the lever up slightly, press the release button and fully lower the lever.

To reduce the operating forces of the parking brake, depress the foot brake at the same time.

See *Brake system warning light* on page 58.

Brake Assist

If the brake pedal is depressed quickly and forcefully, maximum brake force is automatically applied (full braking).

Maintain steady pressure on the brake pedal for as long as full braking is required. Maximum brake force is automatically reduced when the brake pedal is released.

FUEL

Fuel for Diesel Engines

Only use diesel fuel that complies with DIN EN 590. The fuel must have low Sulphur content (max. 50ppm). Equivalent standardised fuels with a biodiesel (According to EN 14214) content of max. 7% by volume (like DIN 51628 or equivalent standards) may be used.

Do not use marine diesel oils, heating oils or entirely or partially plant-based diesel fuels, such as rape seed oil or bio diesel, Aquazole and similar diesel-water emulsions. Diesel fuels must not be diluted with fuels used on petrol engines.

The flow and filterability of diesel fuel are temperature-dependent. When temperatures are low, refuel with diesel fuel with guaranteed winter properties.

Caution

Use of fuel with too low cetane rating could lead to uncontrolled combustion and engine damage.

Filling The Tank



Caution

If you use inappropriate grade of fuel or put incorrect fuel additives into the fuel tank, the engine and catalytic converter may seriously be damaged.

Caution

Be sure to use the correct fuel (diesel) corresponding to your vehicle when refueling. If you fill petrol in your diesel powered vehicle, your vehicle can be seriously damaged. If your vehicle has diesel engine you can confirm the correct fuel by taking a look at information on the fuel filler cap.

For safety reasons, fuel containers, pumps and hoses must be properly earthed. Static electricity build up can ignite the fuel vapor. You can be burnt and your vehicle may get damaged.

Danger

Before refueling, switch off engine and any external heaters with combustion chambers. Switch off any mobile phone.

Vaporized fuel can be ignited by electromagnetic waves or currency of mobile phone.

Fuel is flammable and explosive. No smoking. No naked flames or sparks. Follow the operating and safety instructions of the filling station when refueling.

Remove static electricity on your hands by touching something able to release static electricity when touching or opening fuel cap or refueling nozzle.


Don't do any action making static electricity like getting on and off vehicle when refueling. Vaporized fuel can be ignited by static electricity.

⚠ Danger

If you can smell fuel in your vehicle, have the cause of this remedied immediately by CHEVROLET retailer workshop.



1. Stop the engine.
2. Pull up on fuel filler door release lever located on the floor, right front side of driver's seat.
3. Turn the fuel filler cap counterclockwise slowly. If a hissing sound is heard, wait for it to stop before completely unscrewing the cap. The fuel filler door is in the right rear quarter panel.

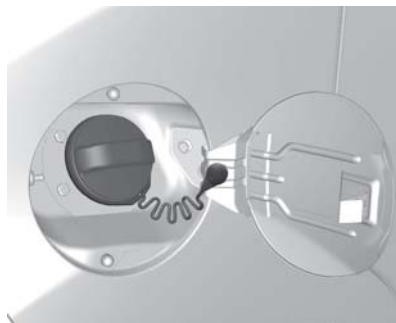

4. Remove the cap. The cap is tethered to the vehicle.
5. After refueling, refit cap. Turn it clockwise until you hear several clicks.
6. Push the fuel filler door closed until it latches.

Note

If, in cold weather, the fuel filler door does not open, tap the door lightly. Then try to open it again.

Caution

Wipe off any overflowing fuel immediately.

VEHICLE CARE

General information	99
Vehicle check	100
Engine compartment overview	103
Bulb replacement	111
Electrical system	117
Vehicle tools	121
Wheel and tires	122
Jump starting	129
Towing	130
Appearance care	132

GENERAL INFORMATION

Accessories And Modifications

We recommend to use genuine parts and accessories and factory approved parts specific for your vehicle type. We cannot assess or guarantee for other products - even if they have a regulatory or otherwise granted approval.

Do not make any modifications to the electrical system, e.g. changes of electronic control units (chip tuning).

Caution

Never modify your vehicle. It may affect the performance, durability and safety of the vehicle and the warrant may not cover any problems caused by the modification.

Vehicle Storage

Storage for a long period of time

If the vehicle is to be stored for several months:

- Wash and wax the vehicle.
- Have the wax in the engine compartment and underbody checked.
- Clean and preserve rubber seals.
- Change engine oil.
- Drain washer fluid reservoir.
- Check coolant anti-freeze and corrosion protection.
- Adjust tyre pressure to the value specified for full load.
- Park vehicle in dry, well ventilated place. Engage first or reverse gear. Prevent the vehicle from rolling.
- Do not apply parking brake.
- Open bonnet, close all doors and lock the vehicle.
- Disconnect the clamp from the negative terminal of the vehicle

battery. Beware that all systems are not functional, e.g. anti-theft alarm system.

- Close the hood.

Putting back into operation

When the vehicle is to be put back into operation:


- Connect the clamp to the negative terminal of the vehicle battery. Activate the electronic of the power windows.
- Check tyre pressure.
- Fill up the washer fluid reservoir.
- Check the engine oil level.
- Check the coolant level.
- Fit the number plate if necessary.

End-of-Life Vehicle Recovery

Information on end-of-life vehicle recovery centres and the recycling of end-of-life vehicles is available on our website. Only entrust this work to an authorised recycling centre.

VEHICLE CHECKS

Doing Your Own Service Work

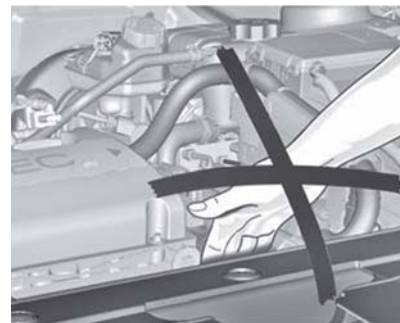

Warning

Only perform engine compartment checks when the ignition is off.

The cooling fan may start operating even if the ignition is off.


Warning

The ignition system uses extremely high voltage. Do not touch.

Hood Opening



1. Pull the release lever and return it to its original position.

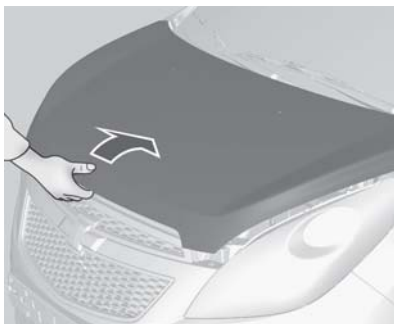

2. Push the safety catch to the up and open the hood.

Warning

When the engine is hot, only touch the foam padding of the hood support rod handle.



3. Pull up the support rod lightly from the holder.

And then secure it at the left side hook of the engine compartment.

Closing

Before closing the hood, press the support into the holder.

Lower the hood and allow it to drop into the catch. Check that the hood is engaged.

Warning

Always observe the following precautions: Pull on the front edge of the hood to make sure it is latched securely before you drive your vehicle.

Do not pull the hood release lever while your vehicle is moving.

Do not move your vehicle with the hood open. An open hood will obscure the driver's vision.

Operating your vehicle with the hood open can lead to a collision resulting in damage to your vehicle to other property, personal injury or even death.

Suggestions For More Economical Operation

Fuel economy is dependent largely on your style of driving.

How you drive, where you drive and when you drive affect how many kilometers you can get from a liter of fuel.

To obtain maximum fuel economy:

- Accelerate slowly
- Avoid unnecessary idling.
- Keep the engine properly tuned.
- Do not race the engine.
- Use the air conditioning only when necessary.
- Slow down when driving on rough roads.
- Keep the tyres inflated to the recommended pressure.
- Maintain a safe distance from other vehicles to avoid a collision in case of sudden stops. This will also reduce wear on the brake pads and linings.
- Do not carry unnecessary weight.
- Do not rest your foot on the brake pedal while driving and follow the maintenance schedule


Hazardous Driving

When hazardous driving is encountered due to water, snow, ice, mud, sand, or similar conditions:

- Slow down your vehicle and drive cautiously allowing extra distance for braking.
- Avoid sudden manoeuvres when braking, steering or accelerating.
- When braking, press the brake pedal with a light, up-and-down motion until the vehicle is stopped (Unless equipped with ABS).
- If stuck in snow, mud or sand, use second gear to avoid spinning of front wheels.

ENGINE COMPARTMENT OVERVIEW

Diesel Engine

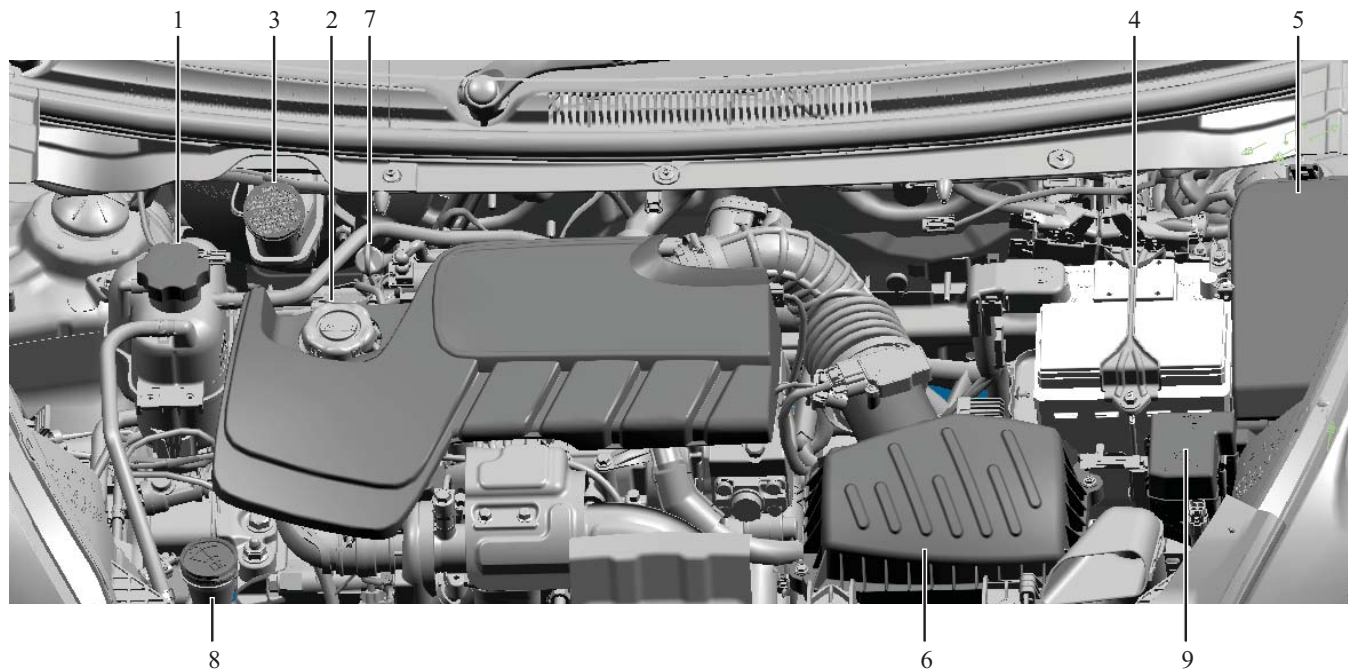

1. Engine coolant container
2. Engine oil cap
3. Brake fluid container
4. Battery
5. Fuse block
6. Engine air filter
7. Dipstick for engine oil level
8. Washer fluid container
9. Relay Assembly – Auxiliary Battery


Engine Oil

It is advisable to check the engine oil level manually before embarking on a long journey.


Check with the vehicle on a level surface. The engine must be at operating temperature and switched off for at least 5 minutes.

Pull out the dipstick, wipe it clean, insert it to the stop on the handle, pull out and read the engine oil level.

Insert dipstick to the stop on the handle and make half a turn.

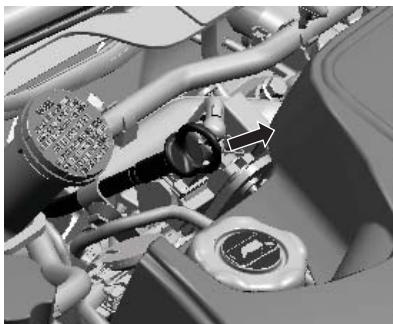

When the engine oil level has dropped to the MIN mark, top up engine oil.

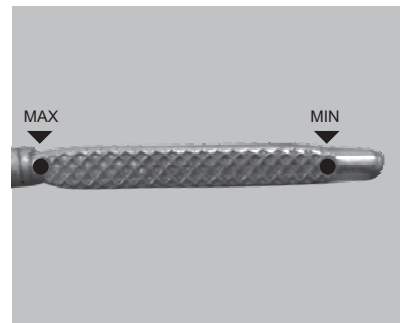

We recommend the use of the same grade of engine oil that was used at last change.

The engine oil level must not exceed the MAX mark on the dipstick.

**Caution**

Overfilled engine oil must be drained or suctioned out.

See *Capacities and Specifications* on page 144.

⚠ Warning


Engine oil is an irritant and, if ingested, can cause illness or death.

Keep out of reach of children.

Avoid repeated or prolonged contact with skin.

Wash exposed areas with soap and water or hand cleaner.

Be very careful when draining the engine oil as it may be hot enough to burn you!

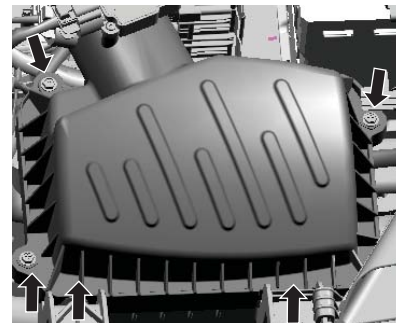Engine Air Filter

1. Loosen the air filter cover attaching clips and open the cover.
2. Replace the air filter.
3. Lock the cover with the cover attaching clips.

Caution

The engine needs clean air to operate properly.

Do not operate your vehicle without the air cleaner element installed.

Driving without the air cleaner element properly installed can damage your engine.

Engine Coolant

In countries with moderate climate the coolant provides freeze protection down to approx. -35°C .

In countries with cold climate the coolant provides freeze protection down to approx. -50°C .

Maintain a sufficient concentration of anti-freeze.

Caution

Only use approved anti-freeze.

Coolant level

Caution

Too low a coolant level can cause engine damage.



If the cooling system is cold, the coolant level should be above the filling line mark. Fill up if the level is low.

⚠ Warning

Allow the engine to cool before opening the cap. Carefully open the cap, relieving the pressure slowly.

Fill up with a mixture of demineralised water and anti-freeze approved for the vehicle. Install the cap tightly. Have the anti-freeze concentration checked and have the cause of the coolant loss remedied by CHEVROLET retailer workshop.

Note

If the coolant level falls below the line mark, refill the radiator with 50/50 mix of de-mineralized water and phosphate anti-freeze.

In order to protect your vehicle in extremely cold weather, use mix of 40 percent water and 60 percent anti-freeze.

Caution

Plain water or the wrong mixture can damage the cooling system.

Do not use plain water, alcohol or methanol anti-freeze in coolant system.

The engine may overheat or even catch fire.

Caution

Coolant can be hazardous material.

Avoid repeated or prolonged contact with coolant.

Clean your skin and nails with soap and water after coming in contact with coolant.

Keep out of reach of children.

Coolant can irritate the skin and can cause illness or death if swallowed.

Caution

It is not needed to add coolant more frequently than the recommended interval.

If you are adding coolant often, this may be a sign that your engine needs maintenance.

Contact CHEVROLET retailer workshop for a check of the cooling system.

Warning

An overflow of the fluid may cause the fluid to burn or discolor paintwork.

Do not overfill the reservoir.

An engine fire can cause personal injuries and damage your vehicle and other property.

Washer Fluid



Fill with windshield washer fluid that contains anti-freeze.


To refill windshield washer fluid reservoir:

- Use only commercially available ready-to-use washer fluid for that purpose.
- Do not use tap water. Minerals present in tap water may plug the windshield washer lines.
- If air temperature is likely to go below freezing, use windshield washer fluid which has sufficient anti-freezing property.

Brake Fluid

⚠ Warning

Brake fluid is poisonous and corrosive. Avoid contact with eyes, skin, fabrics and painted surfaces.

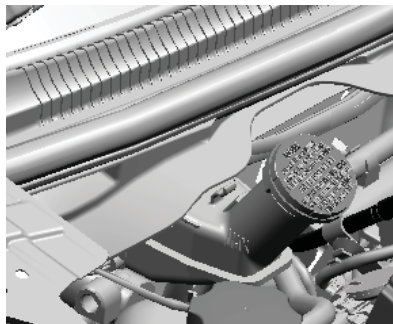

The brake fluid level must be between the MIN and the MAX marks.

When filling up, ensure maximum cleanliness as contamination of the brake fluid can lead to brake system malfunctions. Have the cause of the loss of brake fluid remedied by CHEVROLET retailer workshop.

Only use brake fluid approved for the vehicle.

See "Brake Fluid" under *Recommended fluids and lubricants* on page 140.

Caution

Make sure you thoroughly clean around the brake fluid reservoir cap before removing the cap.

Contamination of the brake fluid system can affect system performance, leading to costly repairs.

Caution

An overflow of brake fluid on the engine may cause the fluid to burn.

Do not overfill the reservoir.

An engine fire can cause personal injuries and damage your vehicle and other property.

Caution

Do not dispose of used brake fluid with your household waste.

Use your local, authorized waste management facility.

Used brake fluid and their containers are hazardous. They can damage your health and the environment.

Caution

Brake fluid is harsh and can irritate skin and eyes.

Do not allow the brake fluid to contact your skin or eyes. If it does, immediately wash the affected area thoroughly with soap and water, or hand cleaner.

Diesel fuel system bleeding

If the tank has been run dry, the diesel fuel system must be bled on ground level after fuelling at least 2 liters. Switch on the ignition three times for 15 seconds at a time. Then start the engine for a maximum of 40 seconds. Repeat this process after no less than 5 seconds. If the engine fails to start, seek the assistance of CHEVROLET retailer workshop.

Battery

The vehicle battery is maintenance free. Batteries do not belong in household waste. They must be disposed of at an appropriate recycling collection point.

Laying up the vehicle for more than 4 weeks can lead to battery discharge. Disconnect the clamp from the negative terminal of the vehicle battery.

Ensure the ignition is switched off before connecting or disconnecting the vehicle battery.

Warning

Keep smoking materials away from a battery to avoid flames or sparks when the battery is checked because the explosive gas could be occurred.

If the battery explodes, it can be result in damages of your vehicle and serious injury or death.

Avoid skin contact with battery acid because it can damage by contained highly corrosive and toxic sulfuric acid.

If you accidentally get it on your skin, flush the place with water and get medical help immediately.


Keep batteries out of the reach of children because it contains sulfuric acid and gas.

Do not allow battery acid to contact your skin, eyes, clothing or paint.

Do not open and tilt the battery.

Battery discharge protection 66.

Wiper Blade Replacement

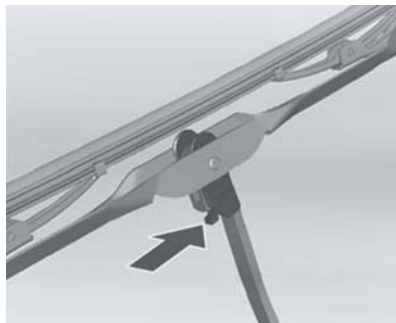

Lift wiper arm. Press release lever and detach wiper blade.

Properly functioning windshield wipers are essential for clear vision and safe driving. Regularly check the condition of the wiper blades.

Replace hard, brittle or cracked blades or those that smear dirt on the windshield.

Foreign material on the windshield or wiper blades can reduce the effectiveness of the wipers. If the blades are not wiping properly, clean both the windshield and the blades with a good cleaner or mild detergent. Rinse them thoroughly with water.

Repeat the process, if necessary. There is no way to remove traces of silicone from glass. Therefore, never apply polish with silicone to your vehicle's windshield or you will get streaks which will impair the driver's vision.

Do not use solvents, gasoline, kerosene, or paint thinner to clean wipers. These are harsh and can damage the blades and painted surfaces.

BULB REPLACEMENT

Switch off the ignition and switch off the relevant switch or close the doors.

Only hold a new bulb at the base! Do not touch the bulb glass with bare hands.

Use only the same bulb type for replacement.

Replace headlight bulbs from within the engine compartment.

Note

After driving in heavy rain or washing, some exterior lamp lenses could appear frosty.

This condition is caused by the temperature difference between the lamp inside and outside.


This is similar to the condensation on your windows inside your vehicle during the rain and doesn't indicate a problem with your vehicle.

If the water leaks into the lamp bulb circuitry, have the vehicle checked by your authorised repairer.


Headlamp and Parking Lamps

Low beam and high beam

1. Detach plug connector from bulb.

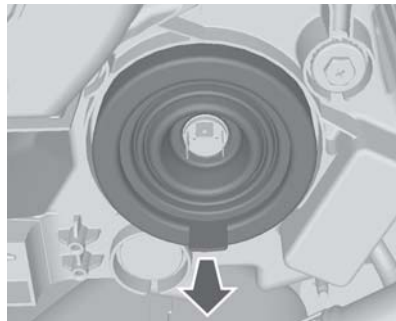

2. Remove protective cover.

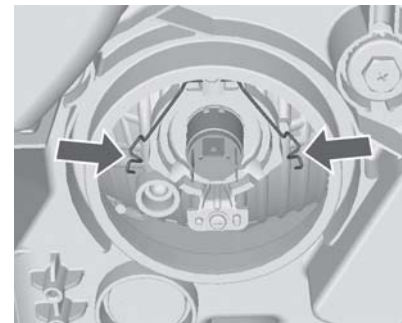

3. Press spring clip, disengage it.



4. Remove bulb from reflector housing.
5. When fitting a new bulb, engage the lugs in the recesses on the reflector.
6. Engage the spring clip.
7. Place headlamp protective cover in position and close.
8. Plug connector onto bulb.

Headlamp aiming


The screw located upper headlamp is to adjust low-beam headlamp aiming.

Caution


If the headlamps need to be re-aimed, it is recommended that the vehicle is taken to your authorised repairer for service because it is related with safety.

Parking lamps


1. Detach plug connector from bulb.

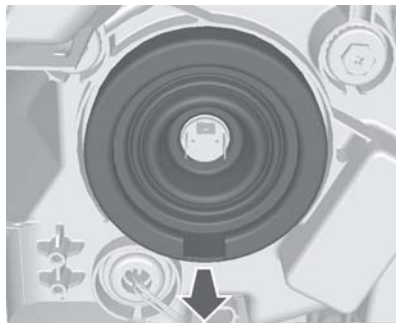

2. Remove protective cover.

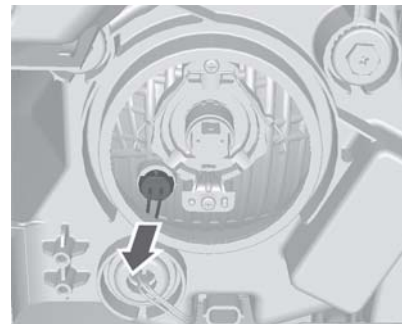

3. Remove side light bulb holder from reflector.

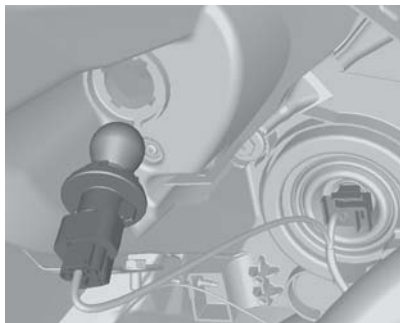

4. Remove bulb from socket.
5. Insert new bulb.
6. Insert holder in reflector.
7. Place headlamp protective cover in position and close.
8. Plug connector onto bulb.

Fog Lamps


Have bulbs replaced by CHEVROLET retailer workshop.

Foglamp Aiming


The screw located upper fog lamps is to adjust low-beam headlamp aiming.

Caution
If the fog lamps need to be re-aimed, it is recommended that the vehicle is taken to your authorised Chevrolet reatailer for service because it is related with safety.

Front Turn Signal Lamps

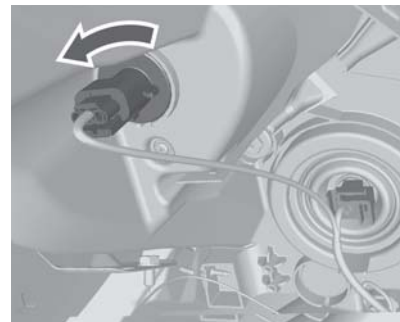

1. Rotate bulb holder anti-clockwise and disengage.

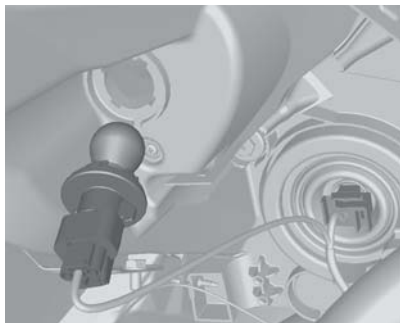


2. Push bulb into socket slightly, rotate anti-clockwise, remove and renew bulb.
3. Insert bulb holder in reflector, rotate clockwise to engage.

Taillamps, Turn Signal, Stoplamp and Back-Up Lamps




1. Unscrew both screws.
2. Remove tail light assembly. Take care that the cable duct remains in position.

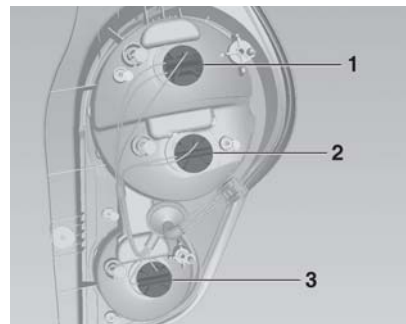

3. Taillamp/stoplamp (1), Turn signal lamp (2), Back-up lamp (Passenger's side) / Rear fog lamp (Driver's side) (3).




4. Rotate bulb holder anti-clockwise.

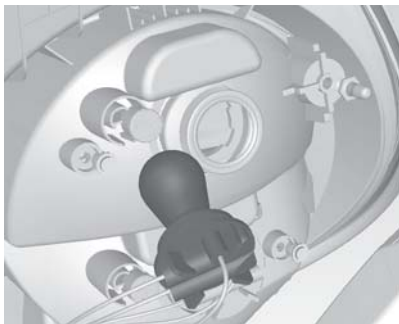

Side Turn Signal Lamps


1. Push light towards the back of the vehicle and remove.
2. Rotate bulb holder anti-clockwise.
3. Pull bulb out of the bulb holder and renew.
4. Reinstall in reverse order.

Center High-Mounted Stoplamp (CHMSL)

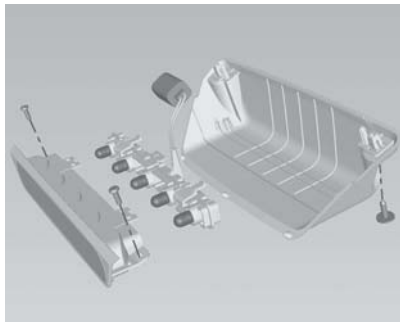

1. Open the tailgate.
2. Remove the two screws and the lamp housing. Disconnect the wiring harness connector before removing the lamp housing.
3. Remove the two screws and the reflector assembly.
4. Remove the bulb by pulling it straight out of the bulb holder.
5. Install a new bulb.
6. Reinstall the lamp housing.

License Plate Lamp

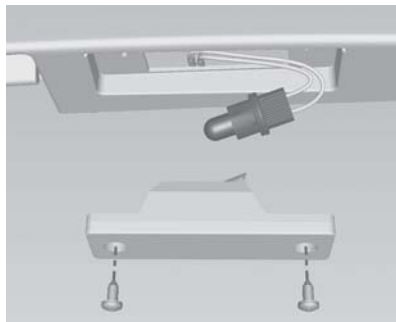


1. Unscrew both screws.
2. Remove bulb housing downward, taking care not to pull on the cable.
Rotate bulb holder anti-clockwise to disengage.
3. Remove bulb from holder and renew bulb.
4. Insert bulb holder in bulb housing and rotate clockwise.
5. Insert bulb housing and secure using a screwdriver.

Interior Lamps


Courtesy lamps

1. To remove it, prise the opposite side of the lamp switch using a flat-blade screwdriver. (Be careful not to make scratches.)
2. Remove the bulb.
3. Replace the bulb.
4. Reinstall the lamp assembly.

Load compartment lamps

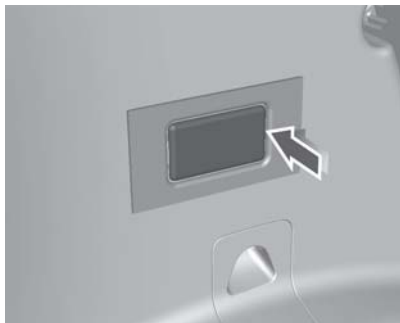

1. Press the lamp out with a screwdriver.

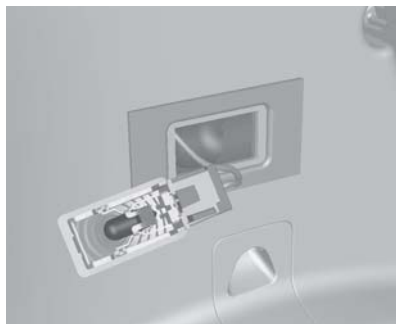

2. Remove bulb.
3. Insert new bulb.
4. Install lamp.

ELECTRICAL SYSTEM

Fuses

Data on the replacement fuse must match the data on the defective fuse.

In a box above the positive terminal of the battery are some main fuses. If necessary have them changed by CHEVROLET retailer workshop.

Before replacing a fuse, turn off the respective switch and the ignition.

A blown fuse can be recognised by its melted wire. Do not replace the fuse until the cause of the fault has been remedied.

Some functions are protected by several fuses.


Fuses may also be inserted without existence of a function.

Fuse extractor

A fuse extractor may be located in the fuse box in the engine compartment.

Place the fuse extractor on the various types of fuse from the top or side, and withdraw fuse.

Engine Compartment Fuse Block

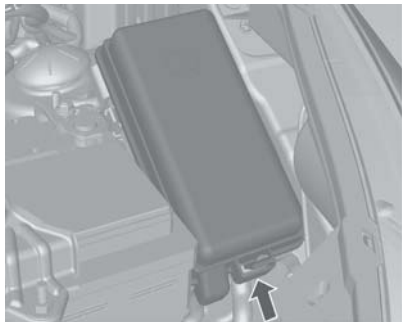

The fuse box is in the the engine compartment.


Disengage the cover, lift it upwards and remove.

Note


Not all fuse box descriptions in this manual may apply to your vehicle.

When inspecting the fuse box, refer to the fuse box label.

Relay Assembly – Auxiliary Battery

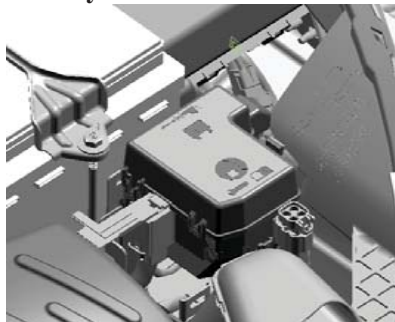


Fuse Box - Underhood

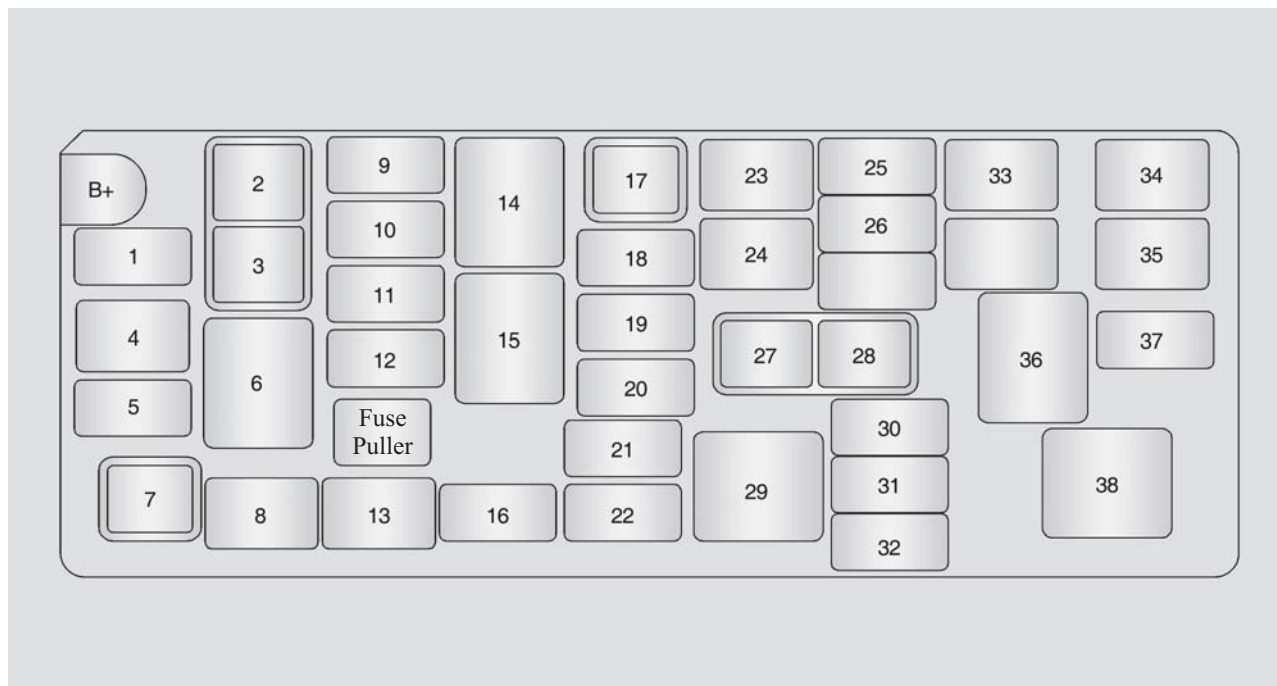


- | | |
|---|---|
| <ol style="list-style-type: none">1. Fuel pump2. Parking lamp relay3. Fan low relay4. Fan high5. Air condition6. Fan high relay7. Air condition relay8. ABS29. Park LH10. Park RH11. Front fog12. Fan low13. ABS114. Front fog relay15. Fuel pump relay16. Spare17. Headlamp high relay18. Headlamp high19. Headlamp low LH20. Headlamp low RH21. Spare | <ol style="list-style-type: none">22. Spare23. Ignition2/starter24. Ignition1/accessory25. Hazard lamps26. Horn27. Headlamp low relay28. Horn relay29. Engine main relay30. Ignition31. EMS132. EMS233. Instrument panel battery34. Spare35. Heated seat36. Heated seat relay37. Engine control module38. Spare39. Fuse Puller |
|---|---|

Instrument Panel Fuse Block

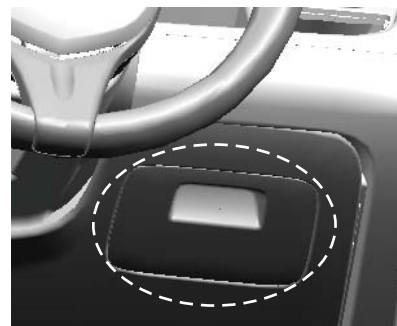

Interior fuse block is located on the underside of the driver's side instrument panel.

Fuse Box - I/P

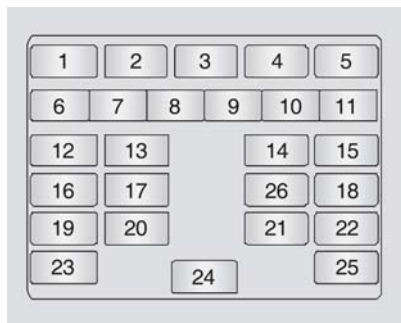


1. Rear wiper
2. Mirror/outside rear view mirror
3. Headlamp
4. Electric OSRVM
5. Door lock
6. Front wiper
7. Spare
8. Backup lamps
9. Turn signals
10. Rear defogger

11. Rear fog lamps
12. Instrument cluster
13. Blower motor control module
14. Airbag
15. Theft deterrent/data link connector
16. Transmission control module
17. Rear power windows
18. Radio/remote keyless entry/remote entry
19. Engine control module(ECM)/ theft deterrent
20. Front power windows
21. Cigarette lighter
22. Stop lamp
23. Starter
24. Radio/ clock/ remote keyless entry
25. Airbag
26. Cluster/Interior Lamp

VEHICLE TOOLS

Tools

Vehicle with tire repair kit*

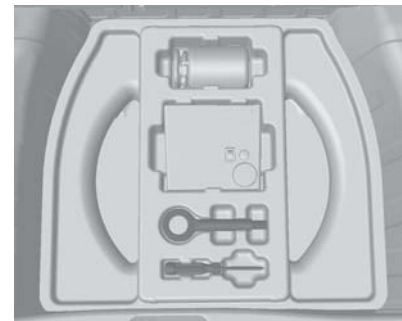


The tools and tire repair kit are in a storage compartment below the floor cover in the load compartment.

Vehicles with spare wheel

The jack and the tools are in a storage compartment in the load compartment above the spare wheel.

See *Compact spare tire* on page 127.

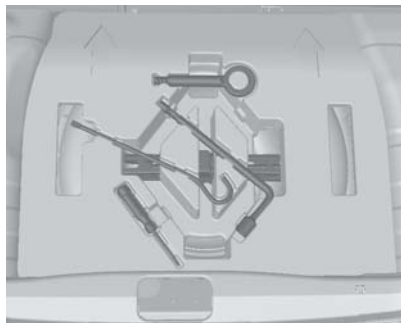

WHEELS AND TIRES

Tire condition, wheel condition

Drive over edges slowly and at right angles if possible. Driving over sharp edges can cause tire and wheel damage. Do not trap tires on the kerb when parking.

Regularly check the wheels for damage. Seek the assistance of CHEVROLET retailer workshop in the event of damage or unusual wear.

Winter tires

Winter tires improve driving safety at temperatures below 7°C and should therefore be fitted on all wheels.

Tire designations

E.g. **215/60 R 16 95 H**

215: Tire width, mm

60: Cross-section ratio (tire height to tire width), %

R: Belt type: Radial

RF: Type: RunFlat

16: Wheel diameter, inches

95: Load index e.g. 95 is equivalent to 690 kg

H: Speed code letter

Speed code letter:

Q: up to 160 km/h (100 mph)

S: up to 180 km/h (112 mph)

T: up to 190 km/h (118 mph)

H: up to 210 km/h (130 mph)

V: up to 240 km/h (150 mph)

W: up to 270 km/h (168 mph)

Tire pressure

Check the pressure of cold tires at least every 14 days and before any long journey. Do not forget the spare wheel.

Unscrew the valve cap.



Tire pressures label is on the driver's door frame.

The tire pressure data refers to cold tires. It applies to summer and winter tires.

Always inflate the spare tire to the pressure specified for full load.

The ECO tire pressure serves to achieve the smallest amount of fuel consumption possible.

Incorrect tire pressures will impair safety, vehicle handling, comfort and fuel economy and will increase tire wear.

Warning

If the pressure is too low, this can result in considerable tire warmup and internal damage, leading to tread separation and even to tire blow-out at high speeds.

Tread Depth

Check tread depth at regular intervals.

Tires should be replaced for safety reasons at a tread depth of 2-3 mm (4 mm for winter tires).



The legally permissible minimum tread depth (1.6 mm) has been reached when the tread has worn down as far as one of the tread wear indicators (TWI). Their position is indicated by markings on the sidewall.

If there is more wear at the front than the rear, swap round front wheels and rear

wheels. Ensure that the direction of rotation of the wheels is the same as before.

Tires age, even if they are not used. We recommend tire replacement every 6 years.

Warning

Use of unsuitable tires or wheels may lead to accidents and will invalidate the vehicle type approval.

Warning

Do not use different size and type of tires and wheels than those originally installed on the vehicle. It can affect safety and performance of the vehicle. It could lead to handling failure or rollover and serious injury. When replacing tires, be sure to install all four tires and wheels of the same size, type, tread, brand and load-carrying capacity. The use of any other tire size or type may seriously affect ride, handling, ground clearance, stopping distance, body clearance and speedometer reliability.

Wheels Covers

Wheel covers and tires that are factory approved for the respective vehicle and comply with all of the relevant wheel and tire combination requirements must be used.

If the wheel covers and tires used are not factory approved, the tires must not have a rim protection ridge.

Wheel covers must not impair brake cooling.

Warning

Use of unsuitable tires or wheel covers could lead to sudden pressure loss and thereby accidents.

Tire Changing

Mixing tires could cause you to lose control while driving.

If you mix tires of different sizes, brands, or types (radial and bias-belted tires), the vehicle may not handle properly, and you could have a crash. Using tires of different sizes, brands, or types may also cause damage to your vehicle. Be sure to use the correct size, brand, and type of tires on all wheels.

Make the following preparations and observe the following information:

- Pull over your vehicle to a safe place away from traffic.
- Park the vehicle on a level, firm and non-skid surface. The front wheels must be in the straight-ahead position.
- Applying the parking brake and engage first gear or reverse gear.

- Turn off the engine and remove key.
- Turn on the hazard flashers.
- Use a wedge, block of wood, or rocks in front of and behind the tire that is diagonal from the tire you plan to change.
- Have all passengers get out of the vehicle.
- Remove the spare wheel. See "Temporary spare wheel" under *Compact spare tire* on page 127.
- Never change more than one wheel at once.
- Use the jack only to change wheels in case of puncture, not for seasonal winter or summer tire change.
- If the ground on which the vehicle is standing is soft, a solid board (max. 1cm (0.4 inches) thick) should be placed under the jack.
- No people or animals may be in the vehicle when it is jacked-up.

- Never crawl under a jacked-up vehicle.
- Do not start the vehicle when it is raised on the jack.
- Clean wheel nuts and thread before mounting the wheel.



1. Disengage wheel nut caps with a screwdriver and remove.



2. Fold out the wheel wrench and install ensuring that it locates securely and loosen each wheel nut by half a turn.



3. Rotate the jack handle to raise the lift head slightly and place the jack vertically at the position marked with half circle.



4. Attach jack handle to the jack and attach wrench to the jack handle correctly.

Then raise the jack to join the lift head at the jacking position firmly.



5. Rotate the wrench checking the correct position of jack until wheel is clear of the ground.
6. Unscrew the wheel nuts.
7. Change the wheel.
8. Screw on the wheel nuts.
9. Lower vehicle.
10. Install the wheel wrench ensuring that it locates securely and tighten each nut in a crosswise sequence. Tightening torque is 120 N.m.

11. Align the valve hole in the wheel cover with the tire valve before installing.

Install wheel nut caps.

12. Stow the replaced wheel and the vehicle tools.

See *Tools* on page 121.

13. Check the tire pressure of the installed tire and also the wheel nut torque as soon as possible.

Have the defective tire renewed or repaired.

Compact spare tire

The spare wheel can be classified as a temporary spare wheel depending on the size compared to the other mounted wheels and country regulations.

The spare wheel has a steel rim.

Use of a spare wheel that is smaller than the other wheels or together with winter tires could affect driveability. Have the defective tire replaced as soon as possible.



The spare wheel is located in the load compartment beneath the floor covering. It is secured in the recess with a wing nut.

The spare wheel well is not designed for all permitted tire sizes. If a wheel wider than the spare must be stowed in the spare wheel well after changing wheels, the floor cover can be placed on the projecting wheel.

Caution

This spare wheel/tire assembly is for temporary emergency use only.

Replace with regular wheel/tire assembly as soon as possible.

Do not use tire chains.

Do not install any tire on this wheel which is not identical to the original.

Do not install on other vehicles.

Temporary spare wheel

Use of the temporary spare wheel could affect driveability. Have the defective tire renewed or repaired as soon as possible.

Only mount one temporary spare wheel. Do not drive faster than 80 km/h(50mph). Take curves slowly. Do not use for a long period of time.

Directional tires

Fit directional tires such that they roll in the direction of travel. The rolling direction is indicated by a symbol (e.g. an arrow) on the sidewall.

The following applies to tires fitted opposing the rolling direction:

- Driveability may be affected. Have the defective tire renewed or repaired as soon as possible.
- Do not drive faster than 80 km/h (50mph).
- Drive particularly carefully on wet and snow-covered road surfaces.

Do not start with quick charger.

A vehicle with a discharged battery can be started using jump leads and the battery of another vehicle.

⚠ Warning


Be extremely careful when starting with jump leads. Any deviation from the following instructions can lead to injuries or damage caused by battery explosion or damage to the electrical systems of both vehicles.

Avoid contact with eyes, skin, fabrics and painted surfaces. The fluid contains sulphuric acid which can cause injuries and damage in the event of direct contact.

- Never expose the battery to naked flames or sparks.
- A discharged battery can already freeze at temperatures of 0 °C. Defrost the frozen battery before connecting jump leads.

JUMP STARTING

- Wear eye protection and protective clothing when handling a battery.
- Use a booster battery with the same voltage (12 volts). Its capacity (Ah) must not be much less than that of the discharged battery.
- Use jump leads with insulated terminals and a cross section of at least 16 mm².
- Do not disconnect the discharged battery from the vehicle.
- Switch off all unnecessary electrical consumers.
- Do not lean over the battery during jump starting.
- Do not allow the terminals of one lead to touch those of the other lead.
- The vehicles must not come into contact with each other during the jump starting process.
- Apply the parking brake, transmission in neutral.

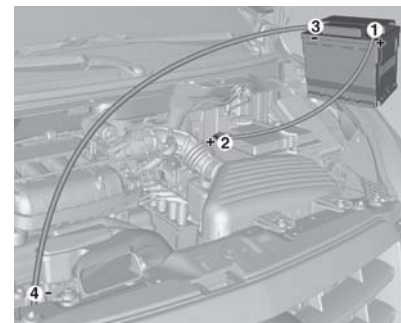

Lead connection order:

1. Connect the red lead to the positive terminal of the booster battery.
2. Connect the other end of the red lead to the positive terminal of the discharged battery.
3. Connect the black lead to the negative terminal of the booster battery.
4. Connect the other end of the black lead to a vehicle grounding point, such as the engine block or an engine mounting bolt.

Connect as far away from the discharged battery as possible, however at least 60 cm (24 inches).



Route the leads so that they cannot catch on rotating parts in the engine compartment.

To start the engine:

1. Start the engine of the vehicle providing the jump.
2. After 5 minutes, start the other engine. Start attempts should be made for no longer than 15 seconds at an interval of 1 minute.
3. Allow both engines to idle for approx. 3 minutes with the leads connected.
4. Switch on electrical consumers (e.g. headlights, heated rear window) of the vehicle receiving the jump start.
5. Reverse above sequence exactly when removing leads.

TOWING

Towing The Vehicle

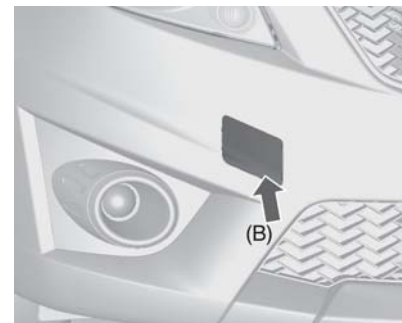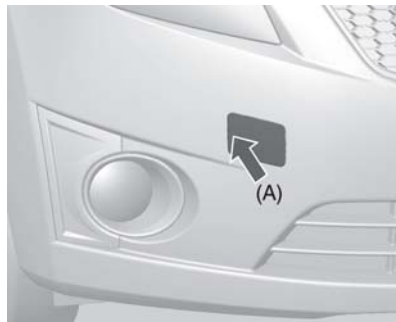

Disengage cap by pressing the arrow position (A - Base model / B - Special package model) and remove the cap.

The towing eye is stowed with the vehicle tools.

See *Tools* on page 121.



Screw in the towing eye as far as it will go until it stops in a horizontal position.

Attach a tow rope or better still a tow rod to the towing eye.

The towing eye must only be used for towing and not for recovering the vehicle.

Switch on ignition to release steering column lock and to permit operation of brake lights, horn and windshield wipers.

Transmission in neutral.

Caution

Drive slowly. Do not drive jerkily.
Excessive tractive force can damage the vehicle.

When the engine is not running, considerably more force is needed to brake and steer.

To prevent the entry of exhaust fumes from the towing vehicle, switch on the air recirculation and close the windows.


Seek the assistance of CHEVROLET retailer workshop. After towing, unscrew the towing eye.

A (Base model) : Insert cap left and close cap.

B (Special package model): Insert cap below and close cap.

The best method is to have the vehicle transported using a recovery vehicle.

Towing Another Vehicle

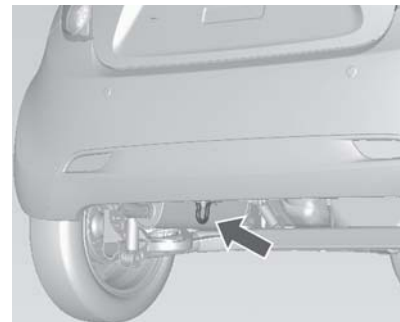

The rear towing eye is located under the rear bumper.

The towing eye must only be used for towing and not for recovering a vehicle.

Caution

Drive slowly. Do not drive jerkily.
Excessive tractive force can damage the vehicle.

APPEARANCE CARE

Exterior Care

Locks

The locks are lubricated at the factory using a high quality lock cylinder grease. Use de-icing agent only when absolutely necessary, as this has a degreasing effect and impairs lock function. After using de-icing agent, have the locks regreased by CHEVROLET retailer workshop.

Washing

The paintwork of your vehicle is exposed to environmental influences. Wash and wax your vehicle regularly. When using automatic vehicle washes, select a programme that includes waxing.

Bird droppings, dead insects, resin, pollen and the like should be cleaned off immediately, as they contain aggressive constituents which can cause paint damage.

If using a vehicle wash, comply with

the vehicle wash manufacturer's instructions. The windshield wipers and rear window wiper must be switched off. Lock the vehicle so that the fuel filler flap cannot be opened. Remove antenna and external accessories such as roof racks etc.

If you wash your vehicle by hand, make sure that the insides of the wheel housings are also thoroughly rinsed out.

Clean edges and folds on opened doors and the hood as well as the areas they cover.

Have the door hinges of all doors greased by CHEVROLET retailer workshop.

Do not clean the engine compartment with a steam-jet or high-pressure jet cleaner.

Thoroughly rinse and leather-off the vehicle. Rinse leather frequently. Use separate leathers for painted and glass surfaces: remnants of wax on the windows will impair vision.

Do not use hard objects to remove spots of tar. Use tar removal spray on painted surfaces.

Exterior lights

Headlight and other light covers are made of plastic. Do not use any abrasive or caustic agents, do not use an ice scraper, and do not clean them dry.

Polishing and waxing

Wax the vehicle regularly (at the latest when water no longer beads). Otherwise, the paintwork will dry out.

Polishing is necessary only if the paint has become dull or if solid deposits have become attached to it.

Paintwork polish with silicone forms a protective film, making waxing unnecessary.

Plastic body parts must not be treated with wax or polishing agents.

Windows and windshield wiper blades

Use a soft lint-free cloth or chamois leather together with window cleaner and insect remover.

When cleaning the rear window, make sure the heating element inside is not damaged.

For mechanical removal of ice, use a sharp-edged ice scraper. Press the scraper firmly against the glass so that no dirt can get under it and scratch the glass.

Clean smearing wiper blades with a soft cloth and window cleaner.

Wheels and tires

Do not use high-pressure jet cleaners.

Clean rims with a pH-neutral wheel cleaner.

Rims are painted and can be treated with the same agents as the body.

Paintwork damage

Rectify minor paintwork damage with a touch-up pen before rust forms.

Have more extensive damage or rust areas repaired by CHEVROLET retailer workshop.

Caution of special package vehicle and accessory body kit assembled vehicle

Take care below article in case of the special package vehicle and accessory body kit assembled vehicle

- Take care body damage and breakage by towing rope when car towed. Tow the car after detach bumper low cover, if you need.
- Take care body damage and breakage due to low ground line in the ramp for preventing over speed, hill road, sidewalk parking.
- Use support, when lifted, because breakage occurred by interference with body kit.

- Use safety loader of flat bed type for protecting body damage and breakage when towing the car.

Underbody

Corrosive materials used for ice and snow removal or dust control can collect on the underbody of your vehicle. Failure to remove these materials can accelerate corrosion and rust.

Periodically use plain water to flush these materials from the underbody of your vehicle.

Take care to clean any areas in which mud and other debris can collect. Loosen any sediment packed in closed area before flushing with water.

Interior care

Interior and upholstery

Only clean the vehicle interior, including the instrument panel fascia and panelling, with a dry cloth or interior cleaner.

The instrument panel should only be cleaned using a soft damp cloth.

Clean fabric upholstery with a vacuum cleaner and brush. Remove stains with an upholstery cleaner.

Clean seat belts with lukewarm water or interior cleaner.

Caution
Close Velcro fasteners as open Velcro fasteners on clothing could damage seat upholstery.

Plastic and rubber parts

Plastic and rubber parts can be cleaned with the same cleaner as used to clean the body. Use interior cleaner if necessary. Do not use any other agent. Avoid solvents and petrol in particular. Do not use highpressure jet cleaners.

SERVICE AND
MAINTENANCE

General information 135
Scheduled maintenance 136
Recommended fluids and
lubricants 139

GENERAL INFORMATION

Service Information

In order to ensure economical and safe vehicle operation and to maintain the value of your vehicle, it is of vital importance that all maintenance work is carried out at the proper intervals as specified.

Confirmations

Confirmation of service is recorded in the Service and Warranty Booklet.
The date and mileage is completed with the stamp and signature of the servicing CHEVROLET retailer workshop.
Make sure that the Service and Warranty Booklet is completed correctly as continuous proof of service is essential if any warranty or goodwill claims are to be met, and is also a benefit when selling the vehicle.

SCHEDULED MAINTENANCE

Service Schedules

Maintenance services and record retention are the owner's responsibility. You should retain evidence that proper maintenance has been performed on your vehicle in accordance with the scheduled maintenance services chart.

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL	Kilometers or time in months, whichever comes first																			
		6 months/5000	1 yr / 10000	1.5 yr / 15000	2yr / 20000	2.5 yr / 25000	3 yr / 30000	3.5 yr / 35000	4 yr / 40000	4.5 yr / 45000	5 yr / 50000	5.5 yr / 55000	6 yr / 60000	6.5 yr / 65000	7 yr / 70000	7.5 yr / 75000	8 yr / 80000	8.5 yr / 85000	9 yr / 90000	9.5 yr/ 95000	10 yr / 100000
ENGINE CONTROL SYSTEM																					
Drive Belt (alternator and A/C compressor)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine Oil and Engine Oil Filter (1) (3)		I	I	R	I	I	R	I	I	R	I	I	R	I	I	R	I	I	R	I	I
Cooling System and Hose Connections		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine Coolant (3)		I	I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	I	I	R
Fuel Filter		Replace every 30,000 kms or 2 years (Whichever is earlier)																			
Fuel Line and Connections		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Air Cleaner Element (2)		I	I	I	I	I	R	I	I	I	I	R	I	I	I	I	I	I	R	I	I
PCV System		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Timing Chain		Replace every 1,00,000 kms or 6 years (Whichever is earlier)																			

Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

- (1) If a vehicle is operated under severe conditions: short distance driving, extensive idling or driving in dusty conditions, change engine oil and the filter every 5,000 km or 6 months, whichever comes first.
- (2) Inspect the air cleaner element every 5,000 km or 6 months if vehicle is driven under dusty driving conditions. If necessary, correct, clean or replace.
- (3) Refer to "FLUID CHART".

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL		Kilometers or time in months, whichever comes first																	
	6 months/5000	1 yr / 10000	1.5 yr / 15000	2yr / 20000	2.5 yr / 25000	3 yr / 30000	3.5 yr / 35000	4 yr / 40000	4.5 yr / 45000	5 yr / 50000	5.5 yr / 55000	6 yr / 60000	6.5 yr / 65000	7 yr / 70000	7.5 yr / 75000	8 yr / 80000	8.5 yr / 85000	9 yr / 90000	9.5 yr / 95000	10 yr / 100000
CHASSIS AND BODY																				
Exhaust Pipe & Mountings	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Fluid (3) (4)	Change every 30,000 km or 2 years (whichever is earlier)																			
Front Brake Pads & Discs (5)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Rear Brake Drum & Linings (5)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Parking Brake	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Line & Connections (Including Booster)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Chassis & Underbody Bolts & Nuts Tight / Secure	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

Chart Symbols:

I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.

R- Replace or change

(3) Refer to "FLUID CHART".

(4) Change the brake fluid every 20,000 km or 2 years (whichever is earlier) if the vehicle is mainly driven under severe conditions:

- Driving in hilly or mountainous terrain, or
- Towing a trailer frequently.

(5) More frequent maintenance is required if under severe condition: short distance driving, extensive idling, frequent low-speed operation in stop-and go traffic or driving in dusty conditions.

138 Service & Maintenance

For vehicles with normal annual mileage.

MAINTENANCE ITEM	MAINTENANCE INTERVAL	Kilometers or time in months, whichever comes first																	
		6 months/5000	1 yr / 10000	1.5 yr / 15000	2yr / 20000	2.5 yr / 25000	3 yr / 30000	3.5 yr / 35000	4 yr / 40000	4.5 yr / 45000	5 yr / 50000	5.5 yr / 55000	6 yr / 60000	6.5 yr / 65000	7 yr / 70000	7.5 yr / 75000	8 yr / 80000	8.5 yr / 85000	9 yr / 90000

CHASSIS AND BODY

Tire Condition, Inflation Pressure & Rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Wheel Alignment (6)	As suggested by CHEVROLET retailer workshop																				
Wheel Balancing (6)	As suggested by CHEVROLET retailer workshop																				
Steering Wheel & Linkage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Manual Transmission Fluid	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Drive Shaft Boots	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Safety Belts, Buckles & Anchorages	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Lubricate Locks, Hinges & hood Latch	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
Pollen Filter	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I

Chart Symbols:

- I- Inspect these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.
- L- Lubricate these items and their related parts. If necessary, correct, clean, replenish, adjust, rotate or replace.
- R- Replace or change
 - (6) If necessary, rotate and balance wheels.

Additional Servicing

Extreme operating conditions

Extreme operating conditions are given when at least one of the following occurs frequently:

- Repeated short-distance driving less than 5 miles (10 Km).
- Extensive idling and/or slow-speed driving in stop-and-go traffic.
- Driving on dusty roads.
- Driving on hilly or mountainous terrain.
- Towing a trailer.
- Driving in heavy city traffic where the outside temperatures regularly reach 90° F (32°C) or higher.
- Driving as a taxi, police or delivery vehicle.
- Frequent driving when outside temperature remains below freezing.

Police vehicles, taxis and driving school vehicles are also classified as operating under extreme conditions.

Under extreme operating conditions, it may be necessary to have certain scheduled service work done more frequently than the scheduled intervals.

Seek technical advice on the servicing requirements dependent on the specific operating conditions.

RECOMMENDED FLUIDS, LUBRICANTS AND PARTS

Only use products that have been tested and approved. Damage resulting from the use of nonapproved materials will not be covered by the warranty.

Warning

Operating materials are hazardous and could be poisonous. Handle with care. Pay attention to information given on the containers.

Engine oil

Engine oil is identified by its quality and also its viscosity. Quality is more important than viscosity when selecting which engine oil to use.

Engine Oil :

5W30 ACEA A3/B4

Engine oil additives

The use of engine oil additives could cause damage and invalidate the warranty.

Coolant and antifreeze

Use only organic acid type-long life coolant(LLC)antifreeze.

In countries with moderate climate the coolant provides freeze protection down to approx. -35°C.

In countries with cold climate the coolant provides freeze protection down to approx. -50°C. This concentration should be maintained all year-round.

Maintain a sufficient concentration of anti-freeze.

Coolant additives intended to give additional corrosion protection or seal against minor leaks can cause function problems.

Coolant : Ethylene Glycol (organic acid type long life coolant)

Brake fluid

Only use our authorized brake fluid for this vehicle(DOT 4).

Over time, brake fluid absorbs moisture which will reduce braking effective-

ness. The brake fluid should therefore be replaced at the specified interval.

Brake fluid should be stored in a sealed container to avoid water absorption.

Ensure brake fluid does not become contaminated.

Manual transmission fluid

Only use XGPSAE75W85W fluid.


(Maker : Hankook Shell Oil Co. Ltd.).

TECHNICAL DATA

Vehicle identification	141
Vehicle data	142
Capacities and specifications	144


VEHICLE IDENTIFICATION

Vehicle Identification Number

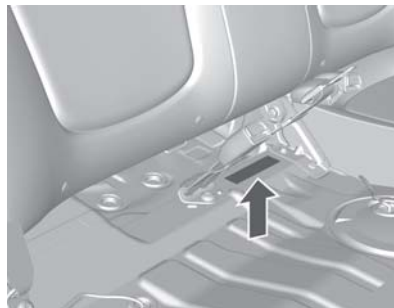

The vehicle identification number is located under the rear seat cushion.

Identification Plate

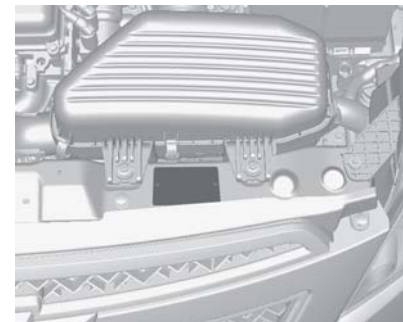

The identification plate is located in the engine compartment.

VEHICLE DATA

Engine Data

Engine identifier code	10AB5
Type	3-cylinder/in line, 4 stroke,DI, TCIC
Bore x stroke, mm	69.7 x 82
Number of cylinders	3
Piston displacement, cc	936
Engine Power [PS] at rpm	59 PS @ 4000 rpm
Torque [Nm] at rpm	150 Nm @ 1750 rpm

Brakes

Service brake (Brief description)	Hydraulic , vacuum assisted, diagonal circuit with auto slack adjuster
Auto Slack Adjuster	Rear brake
ABS	Optional
Front (Disc / Drum)	Disc
Rear (Disc / Drum)	Drum

Gear Box

Type / Model	Mechanical, tunnel mounted gear shift lever, manual transmission
No. of gears	5 forward 1 reverse
1st	3.667
2nd	1.960
3rd	1.243
4th	0.950
5th	0.761
Reverse	3.462
Drive axle	Front
Front axle ratio	3.895

Suspension

Type and brief description	Front: McPherson Strut type suspension Rear : Compound Crank type
Spring	Front : Side Load Compensation Spring, Rear : Linear Spring
Anti-roll bar	Front : Solid Bar Type Rear : N/A
Shock absorbers	Front : Twin tube Strut Type (Gas) Rear : Twin tube Shock Absorbers Type (Gas)

Chassis

Type	Monocoque
------	-----------

Steering

Type and brief description	Type : Rack & Pinion Steering System Description: Electric power assisted
----------------------------	--

Vehicle Dimensions

Length (mm)	3640
Width (mm)	1597
Height (mm) w/o roof rack	1520
Height (mm) with roof rack	1550
Wheel Base (mm)	2375
Front Wheel Track (mm)	1408
Rear Wheel Track (mm)	1403

Vehicle Weight

Kerb Weight (kg)	1027
Gross Vehicle Weight (kg)	1417

Wheels and Tyres

Wheel rim size	14 x 4.5J (Alloy) 14 x 4.5J (Steel)
----------------	--

CAPACITIES AND SPECIFICATIONS

Fluid Chart

Item	Classification	Capacity
Engine oil	5W30 ACEA A3/B4	3.7 L first factory fill & for engine overhaul 3.2 L - oil change with wet engine and oil filter change
Transmission oil	XGP SAE 75W85W	2.6 lt
Engine coolant	Ethylene Glycol (organic acid type long life coolant)	4.74 lt
Brake Fluid	GM India DOT 4	0.5 lt
Refrigerant	R-134a	0.5 kg (500gms)
Refrigerant oil	Refrigerant Oil	0.11 lt

Fuel Tank

Diesel, nominal capacity [lt]	35
-------------------------------	----

Tire Pressures

 Tire and Seating Information			
OCCUPANTS	TOTAL 5	FRONT 2	REAR 3
TIRE	SIZE	COLD TIRE PRESSURE	
FRONT	165/65R14	235 kpa, 34 psi, 2.3 bar	
REAR	165/65R14	235 kpa, 34 psi, 2.3 bar	

**SERVICE AND
WARRANTY**

Standard limited warranty
coverage 146

Pre-delivery inspection and
vehicle delivery 153

Owner's statement of
acceptance 155

Chevrolet service 157

Maintenance record sheet 163

Battery 165

Separate corrosion protection
service 166

Body inspection record 167

Emission warranty 169

Annexure 173

STANDARD LIMITED WARRANTY COVERAGE

1. SCOPE

General Motors India Private Limited, a private limited company incorporated under the companies Act 1956 and having its Works/Registered office at Chandrapura Industrial Estate, Halol, District Panchmahals, Gujarat 389351 (“General Motors India”) warrants that your new Chevrolet vehicle is free from defect in material or workmanship, subject to your compliance with the following terms and conditions mentioned hereunder and other vehicle maintenance norms as mentioned elsewhere in this service booklet. Only an authorized CHEVROLET retailer as mentioned in this booklet will make the necessary repairs, using new, re-conditioned or re-manufactured parts with a view to correcting any defect covered by this warranty.

2. WHAT IS COVERED

Time and distance limits for New Vehicle Warranty coverage.

Warranty Type	Warranty Limits	Other Warranties
A : General	Three (3) years or 1,00,000 kms (whichever is earlier) from the date of delivery by a CHEVROLET retailer or the date of first registration of the motor vehicle, whichever occurs first.	These parts are covered by other warranties : 1. Battery (one (1) year) (covered by the battery manufacturer**) 2. Tyres (one (1) year) (covered by the tyre manufacturer**) 3. Audio/Radio/Acc. (one (1) year) (covered by the Audio/Radio/Acc. manufacturer**) See clause 5.
B : Rust Through*	Three (3) years from the date of delivery of the motor vehicle or from the date of first registration of the motor vehicle, whichever occurs first.	The warranty covers exterior body metal except : 1. Items not covered by warranty listed in Clause 3 2. Exhaust pipe and fuel system rust

* A hole through a body panel caused by rust / corrosion from inside to outside.

** Service / warranty shall be provided by the concerned equipment manufacturer

- The obligation under this New Vehicle Warranty is limited to the repair of the new motor vehicle at no charge by the Chevrolet authorized retailer. For parts replaced during such repair the same warranty applies until the end of the New Vehicle Warranty period as stipulated herein. All warranty claims expire at the end of the warranty period as specified under Clause 2.
- Liability of **General Motors India Pvt. Ltd.** under this New Vehicle Warranty is limited to the value of the service, repairs/ replacement of parts found to be defective within the warranty period. Beyond servicing and/or repairing defective parts in the vehicle, **General Motors India Pvt. Ltd.** does not undertake to replace the vehicle / or reimburse the purchaser by payment of any money in respect of the vehicle purchased by them.
- Under the terms of New Vehicle Warranty, installation, free service will be provided only within the municipal limits of the cities/towns where **General Motors India Pvt. Ltd.** has its service network, *as elaborated elsewhere in this Owner's Manual*. This list of authorized retailers is subject to change/modification without prior notice. Service outside the municipal limits specified above will be provided after charging the actual to and fro traveling and incidental expenses, as prevailing from time to time.
- Necessary care and caution is taken in manufacturing of the vehicle, however, **General Motors India Pvt. Ltd.** shall not be liable for any loss or damage caused to any article, property, death or disability caused to any human life arising out of fire, electric fault, short circuit, accidental handling or negligent use of the vehicle. The maximum liability in monetary terms shall be restricted to the value of the defective parts and / or value of services rendered only. Furthermore, the New Vehicle Warranty, in no case, shall extend to the payment of any monetary consideration whatsoever, of the replacement or return of the vehicle as a whole.
- The decision of **General Motors India Pvt. Ltd.** will be final and binding on all matters arising out of this New Vehicle Warranty.
- The owner should preserve the original Invoice for necessary verification and produce the same, as and when required.
- The optimum performance of the vehicle is under standard test conditions.

This New Vehicle Warranty is issued at Talegaon, District Pune, Maharashtra and competent courts shall have exclusive jurisdiction over matters by or following from time to time.

3. WARRANTY LIMITATIONS

The warranty will cease to exist in following conditions:

- a. Failure to have the required periodic inspection and required service performed as per the Periodic Maintenance Schedule.
- b. Improper or wrong maintenance and in deviation with guidelines mentioned in this service booklet.
- c. Any modification, alterations made to the vehicle such as including but not restricted to adding lights, changing engine specifications to increase horsepower, or using wide tyres, and or any other modification in the vehicle that may likely to have an effect on the performance of the vehicle. (e.g. defects caused by the installation of non homologated wheels and tyres are not covered by the warranty.)
- d. Failure to use genuine parts / fluids (oil, coolant, brake fluid) and/or other accessories / consumables recommended or approved by General Motors India Pvt. Ltd.
- e. Use of the vehicle for purposes or in a manner other than the one mentioned in the Owner's Manual. Exceeding specified capacities such as loading weight, passenger, speed, use as a commercial vehicle and rpm limitations.
- f. Damage caused by driving the vehicle under severe conditions such as un-pliable or water-logged roads, in races or rallies.
- g. Damage caused by natural disasters including but not restricted to earthquakes, storms, floods, fire and accidents. The owners are recommended to keep their vehicle insurance valid at all times.
- h. Damage caused by smoke, chemicals, bird-droppings, salt, stone chipping, scratches, iron dust or any other extraneous circumstances like external mechanical or chemical influences (regarding paint or body damage, specially stone throw, air-borne rust, industrial fall out), damage to catalytic converter due to use of wrong/bad quality fuel acting on the vehicle
- i. Damage caused by normal wear (for instance brake-pad, etc.) or exposure to the elements such as discoloring or deformation of any interior, plastic, chrome or painted part or surface.
- j. Sensory complaint by the owner against symptoms such as noise, vibration or oil stains which do not effect performance.

- k. Damage which should have been detected during normal usage but became serious when left unattended to and/or the owner of the vehicle having failed to claim and having rectified a defect which was already apparent during vehicle delivery, immediately after delivery or a defect which becomes apparent at a later date immediately after it became apparent.
- l. Failure of the owner to adhere to the requirements outlined in Clause 4.
- m. Fuel system damage caused by water or other foreign matter in the fuel system.
- n. Damage caused by the installation of non genuine accessories or equipment after the vehicle has been purchased from the CHEVROLET retailer such as radio, car telephone, CD radio set, or cargo carrier and / or other activities of a similar nature.
- o. Damage caused by running vehicle on adulterated fuel/lubricants or fuel/lubricants other than those specified by General Motors India Pvt. Ltd.

WHAT IS NOT COVERED

- Adjustments, cleaning, inspection, or required periodic maintenance.
- Parts designated as requiring periodic replacement.
- Warranty repair not performed by a CHEVROLET retailer.
- Charges or fees for telephone, tow, transportation charges of the vehicle to the nearest CHEVROLET retailer, rental car, and so forth; compensation for inconvenience or commercial losses; all other consequential costs relating to the owner being unable to use the vehicle.
- Any accident, damage, loss or destruction due to negligent, careless use of vehicle.
- Damage to the engine while driving in water logged conditions or entry of water in to the engine.
- Consumptive parts and oil/grease and other fluids. (See the following tables of consumptive parts and oil/grease and other fluids.)

150 Service & Warranty

Consumptive Parts	Oil/Grease and other fluids
Drive Belts	Engine oil
Air cleaner element	Transmission oil
Fuel filter	Brake fluid
Oil filter	Coolant
Clutch disc, clutch parts	Grease
Brush holders	Washer fluid
Brake shoe and pads	Battery fluid
Brake discs	Diesel
Brake drums	Air conditioner refrigerant
Wiper blades	Other lubricants, etc.
Light bulbs	
Motor brushes	
Fuses, etc.	

No warranty repair shall be made if it is found that the vehicle Identification number like chassis / engine number, odometer or the warranty & service booklet, have been tampered with. This list is neither exclusive nor exhaustive and the decision of General Motors India Pvt. Ltd. shall be final and binding.

4. WHAT THE OWNER MUST DO

In order to keep this warranty valid you must:

- a. Use your vehicle as instructed in the owner's manual.
- b. Have your vehicle inspected according to this schedule.

The cost of the service is borne by the owner. If the services are not performed within the specified time limits, the general and the rust through warranty as referred to under Clause 2 above, shall be rendered null and void and shall not be reinstated by a subsequent service.

- c. Keep the warranty & service booklet (owner's manual) and all receipts in a safe place to present to the CHEVROLET retailer at regular maintenance visits and when repair work is required.

5. PARTS COVERED BY OTHER WARRANTY CONDITION

- a. Battery : The coverage period is 1 year from the date of new vehicle registration regardless of the distance traveled.
- b. Tyres : This warranty is covered by the tyre manufacturer. The coverage period is one year. Please check with your CHEVROLET retailer for details.
- c. Audio/Radio/Acc. : This warranty is covered by the audio/radio/Acc. manufacturer. The coverage period is one year. Please check with your CHEVROLET retailer for details.

6. MAKING THE WARRANTY EFFECTIVE

The warranty goes into effect after CHEVROLET authorized retailer fills in the appropriate information about your vehicle and places the retailer's official seal and signature in the warranty & service booklet (owner's manual).

7. REQUIREMENTS FOR WARRANTY WORK

To have warranty work carried out, present the warranty & service booklet to the authorized CHEVROLET retailer as mentioned in this booklet. If the warranty & service booklet is lost or incomplete, work to be carried out with respect to the standard warranty shall be refused.

8. CHANGE OF OWNERSHIP

If the vehicle is sold during the warranty period, please deliver the warranty & service booklet to the new owner.

The new owner will need to complete the change of address or subsequent ownership notification card located elsewhere in this booklet in order for the coverage to be transferred.

9. EXPENSES ASSOCIATED WITH WARRANTY WORK

The expenses of repair work and parts of your CHEVROLET vehicle will be covered by CHEVROLET standard limited warranty in accordance with the WARRANTY & SERVICE BOOKLET (OWNER'S MANUAL). Other expenses that are not covered by the CHEVROLET Standard Limited Warranty must be covered by the owner.

10. General Motors India Private Limited is launching the CHEVROLET Beat in different cities in a phased manner. The CHEVROLET retailer responsible for delivering your Beat is qualified to provide all Beat related services within the city where he is located. As other CHEVROLET retailers become operational to handle the Beat, they will also be able to provide similar Beat related services. **IN ORDER FOR THE WARRANTY ON YOUR VEHICLE TO APPLY, IT IS IMPERATIVE THAT YOUR BEAT BE SERVICED, HANDLED AND ATTENDED TO ONLY BY CHEVROLET RETAILER AS SET FORTH IN THIS BOOKLET.**
11. The following requisite document should be presented to the CHEVROLET retailer at the time of making a claim under New Vehicle Warranty:
- Original invoice issued by CHEVROLET retailer.
 - Warranty and service booklet / maintenance record.
 - Any other document deemed to be necessary by CHEVROLET retailer and/or General Motors India Pvt. Ltd.

**PREDELIVERY INSPECTION AND VEHICLE
DELIVERY**

Before delivering the vehicle we carried out a thorough predelivery inspection in order to ensure that your Chevrolet vehicle is in a fault-free condition. Accompanying this appropriately filled out service booklet (Owner's Manual) are the tool kit and your vehicle documents.

You have been informed of the service intervals and necessary service checks, including under extreme operating conditions and in particular with regard to oil changing of petrol engines.

City, date :

CHEVROLET Retailer's / ASO's Stamp and Signature

OWNER'S STATEMENT OF ACCEPTANCE

I hereby certify that the car has been delivered in an orderly and proper operating condition, including Keys, **Service booklet (Owner's Manual) and tool kit. I have read and understood the terms and conditions pertaining to the New Vehicle Warranty and agree to abide by the same.**

I have been informed of the service intervals and necessary service checks, including under extreme operating conditions.

Date of delivery :

City, date :

Name and signature of customer :

This sheet must be detached prior to vehicle delivery and placed with the vehicle file **after it has been signed** by the customer.



Dear Customer,

We are confident that you and your family would be enjoying the safe and comfortable drive of the Chevrolet Beat.

We would like to undertake a thorough check-up of the vehicle at 1000 kms or 30 days, whichever occurs earlier. This will also allow us to re-emphasize the salient features of the Beat to you.

In the unlikely event of an emergency assistance, please call your nearest CHEVROLET retailer as mentioned in this booklet or please feel free to call our 24 hr. helpline at 30308080.

1000 km/30 days reassurance check-up (whichever is earlier)

VIN no. _____

PDI no. _____

Date of service _____

Date of delivery _____

Retailer code _____

Customer's name _____

Customer's tel. no. _____

I confirm that the vehicle has been inspected and delivered to my satisfaction.

Retailer's Signature

Customer's Signature

1000 kms Reassurance check-up	
General Status review Check closing efforts of doors, keyless entry system & other functions Under hood Visually check routing, leaks & damage — Check fluid levels — Engine oil level — Brake/clutch oil level — Coolant level — M/T oil Windscreen washer level & add washer fluid Underbody, wheels Visually check routing, leaks & damage Check tyre pressure Electrical Checks Malfunction indicator lamp Engine check lamp Charging lamp Oil pressure lamp	Parking brake lamp/indicator High beam/Turn signal Hazard indicator & all other telltale lamp Cigarette lighter/rear defogger Check lighting system Horn/Radio/Outside Mirrors High/Low beam/Hazard signal Turn signal/Flash to pass signal Front/Rear fog lamps/Tail lamps Stop lamp/Reversing lamp/Trunk lamp Dynamic Evaluation Steering function/noise/abnormal drag Clutch & gear shifting function/noise Accelerating & braking function/noise Check tyres Any other abnormal noise

CHEVROLET inspection

2nd Service Check 1 year / 10000 kms whichever occurs earlier

VIN _____

Regn. No. _____

Delivery date _____

Date of service _____

Kms _____

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour free & Parts are chargeable
(Retain with job card)

CHEVROLET inspection

1st Service Check 6 months / 5000 kms whichever occurs earlier

VIN _____

Regn. No. _____

Delivery date _____

Date of service _____

Kms _____

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour free & Parts are chargeable
(Retain with job card)

160 Service & Warranty

Delivering Retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

Servicing Retailer's / ASO stamp & date

Delivering Retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

Servicing Retailer's / ASO stamp & date

CHEVROLET inspection

4th Service Check 2 years / 20000 kms whichever occurs earlier

VIN _____

Regn. No. _____

Delivery date _____

Date of service _____

Kms _____

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour & Parts are chargeable
(Retain with job card)

CHEVROLET inspection

3rd Service Check 1.5 years /15000 kms whichever occurs earlier

VIN _____

Regn. No. _____

Delivery date _____

Date of service _____

Kms _____

I confirm that the job has been attended to my satisfaction.

Customer's Signature

Labour & Parts are chargeable
(Retain with job card)

162 Service & Warranty

Delivering Retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

Servicing Retailer's / ASO stamp & date

Delivering Retailer's stamp & date

I hereby certify that the work has been carried out as per the schedule.

Servicing Retailer's / ASO stamp & date

MAINTENANCE RECORD SHEET

(Repair category - Free Service/Paid Service/Running Repair/Acc. Repair)

[illegible]

BATTERY

Battery type : _____

Battery make : _____

Battery batch code/ Sl. No. : _____

Important Instructions

- The battery must be fitted firmly in the cradle.
- Connecting cables and connectors must be fastened securely on to the battery.
- Connections must be made in the right polarity.
- Terminals must be kept coated with petroleum jelly/vaseline. DO NOT USE GREASE.
- Battery top & vent plugs must always be kept clean & dry .
- Electrolyte level must always be maintained in line with the bottom of the vent hole. In case of any drop in electrolyte level, add pure distilled water. NEVER ADD ACID.
- Battery is warranted for a period of one year only.
- Liability under this warranty is limited to defects arising out of faulty material or workmanship developing under proper use and NOT when the battery is merely discharged.

- Defects arising out of faulty vehicle electrical systems, negligent maintenance, incorrect charging or improper filling of the battery by unauthorised dealers/auto electricians are not covered by warranty.
- Consequent liabilities are not covered by this warranty policy.
- Get Battery checked every 3 months.

CHEVROLET retailer's
Stamp

**SEPARATE
CORROSION PROTECTION
SERVICE**

Body/ Underbody Corrosion Protection Service

General Motors India Pvt. Ltd. provides a three (3) years or 1,00,000 kms (whichever is earlier) warranty vehicle that no rust-through of the body/underbody will occur, provided that the directives from General Motors India Pvt. Ltd. concerning the treatment, maintenance, and care of the vehicle (Owner's Manual) and especially the inspection and checks prescribed in the service booklet have been carried out.

Furthermore, the body paintwork and the corrosion protection must be visually inspected for damage as part of the regular annual inspection or 10,000 kms service. The customer is informed of any damage detected and measures to rectify this damage. Any damage discovered is also indicated in the following corrosion protection diagram.


Confirmation of the inspection is indicated by a stamp and dated signature, accompanied by indication of the vehicle mileage on the following verification documents.

Make use of this possibility in order to avoid problems during warranty claims regarding rust- through of the body / underbody.

The rust through warranty is not applicable if areas damaged by any reason remain unattended and become the cause of corrosion.

All repairs when required should be carried out promptly and by the CHEVROLET retailer.

BODY INSPECTION RECORD

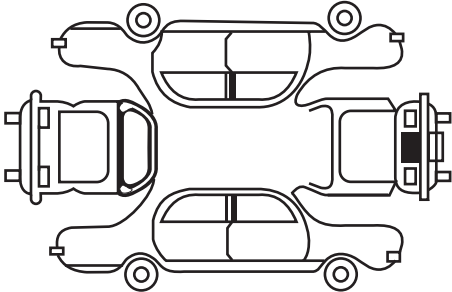
Vehicle identification number _____ Registration number _____ Name / address of owner _____ _____  Use the following symbols to indicate damage. <table><tr><td>● Chipping</td><td>× Dent / Bumpy</td></tr><tr><td>▲ Scratch</td><td>■ Other damage</td></tr><tr><td>↑ Antirust re-treatment necessary</td><td></td></tr></table>	● Chipping	× Dent / Bumpy	▲ Scratch	■ Other damage	↑ Antirust re-treatment necessary		In order to maintain the General Motors India Pvt. Ltd. rust-through warranty, the vehicle must be subjected to an inspection by Chevrolet retailer once a year. Any resulting work is subject to a charge. Check-up 1 year after initial registration. Check-up date _____ Odometer reading _____ Damage found <table><tr><td>1. Outer body</td><td>Yes ☐</td><td>No ☐</td></tr><tr><td>2. Under body</td><td>Yes ☐</td><td>No ☐</td></tr><tr><td>3. Engine compartment</td><td>Yes ☐</td><td>No ☐</td></tr></table> Retailer stamp / signature _____ Damage repaired Yes ☐ No ☐ Remarks : _____ _____ _____	1. Outer body	Yes ☐	No ☐	2. Under body	Yes ☐	No ☐	3. Engine compartment	Yes ☐	No ☐
● Chipping	× Dent / Bumpy															
▲ Scratch	■ Other damage															
↑ Antirust re-treatment necessary																
1. Outer body	Yes ☐	No ☐														
2. Under body	Yes ☐	No ☐														
3. Engine compartment	Yes ☐	No ☐														

BODY INSPECTION RECORD

Vehicle identification number _____

Registration number _____

Name / address of owner _____

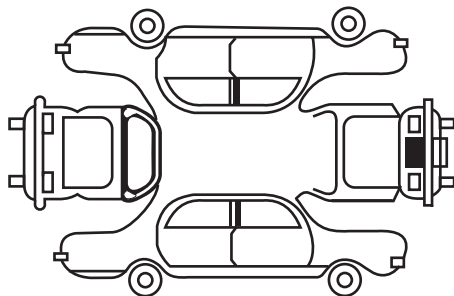

Use the following symbols to indicate damage.

- Chipping
- ▲ Scratch
- ↑ Antirust re-treatment necessary
- × Dent / Bumpy
- Other damage

In order to maintain the General Motors India Pvt. Ltd. rust-through warranty, the vehicle must be subjected to an inspection by Chevrolet retailer once a year. Any resulting work is subject to a charge.

Check-up 1 year after initial registration.

Check-up date _____

Odometer reading _____

Damage found	1. Outer body	Yes ☐	No ☐
	2. Under body	Yes ☐	No ☐
	3. Engine compartment	Yes ☐	No ☐

Retailer
stamp / signature _____

Damage repaired Yes ☐ No ☐

Remarks : _____

EMISSION WARRANTY

(Applicable in NCR Delhi, Chennai, Kolkata and Mumbai)

Subject to other terms of the warranty policy and the conditions and obligations laid down hereunder, General Motors India Pvt. Ltd., certifies that the components liable to affect the emission of the gaseous pollutants in the vehicle in the normal use despite the use to which it may be subjected, comply with the provisions of Rule 115 (2) of the central Motor Vehicle Rules, 1989, and further warrants that if on examination by a service center duly authorized by the General Motors India Pvt. Ltd., the vehicle is discovered to be failing to meet the emission standard as specified in the said rule, our authorized service center shall take such corrective measures as may be necessary and shall at its sole discretion either repair or replace free of charge such components of emission control system as are specified in Annexure II hereof.

The definitions of various terms used in Emission warranty proposal are given in Annexure –I. These definitions shall

be in line with the definition of the existing product Warranty definition.

Conditions :

1. This warranty will be in addition to and will run concurrently and parallel to the product warranty and will apply only in respect to components as mentioned in Annexure-II.
2. The period of the vehicle's warranty shall commence from the date of the vehicle sale.
 - 2.1 Warranty period - **1,00,000 kms or 3 years** whichever occurs earlier, from date of the vehicle sale.
- 3 The warranty claim will be accepted only after examination carried out by CHEVROLET retailers leading to a firm conclusion that none of the original settings /specifications have been tampered with and that the components (s) as mentioned in Annexure –II has/have a manufacturing defect, and /or, that the vehicle is unable to meet the In-use emission standards.
4. The methods of examination to determine the warrantable condition of the components will be at sole discretion of General Motors India Pvt. Ltd. and or its retailers and results of such examination will be final and binding. If, on examination, the warrantable condition is not established, General Motors India Pvt. Ltd. will have the right to charge full, or part, of the cost of such examination and resulting repairs /rectification
5. In case of acceptance of the warranty under Emission Warranty, General Motors India Pvt. Ltd. will replace, at retailers, free of charge, the components which are covered as mentioned in Annexure-II, but the consumables as mentioned in OM shall be charged as per actual applicable rates.
6. In case of a vehicle in which the components covered under Emission Warranty or the associated parts, are not independently

replaceable, on account of their being integral parts of a complete assembly, will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.

7. Any consequential repairs or replacement of parts which may be found necessary to establish compliance to In-use emission standards, in addition to the replacement of the components covered under Emission Warranty, will not be made free of cost unless such parts are also found to be in a warrantable condition within the scope and limit of the product Warranty (Chevrolet Beat -3 years/1,00,000 kms, whichever is earlier). The consumables and labour shall be charged per actual during such repairs or replacement of parts.
8. All the parts removed for replacement under warranty will be the

property of General Motors India Pvt. Ltd.

9. General Motors India Pvt. Ltd. will not be responsible for the cost of transportation of the vehicle to the nearest retailer or any loss due to non-availability of the vehicle during the period of a warranty claim and examination by CHEVROLET retailers.
10. General Motors India Pvt. Ltd. will not be responsible for any fines, penalties that may be charged by Statutory or Regulatory authorities on account of failure of the vehicle to comply with the in-use emission standards on the vehicle not meeting any such given legal/regulatory requirement, during inspection by such authorities.
11. Emission Warranty will be applicable irrespective of the change of ownership of the vehicle provided all the conditions as laid down in this document are met from

the date of original sale of the vehicle.

This Emission Warranty will be applicable only if the customer :

- (i) Observes all the important instructions and any other precautions listed in the OM for use of the vehicle.
- (ii) Under all circumstances uses lubricants and fuel as recommended by General Motors India Pvt. Ltd.
- (iii) Regularly obtains and carries out maintenance at CHEVROLET retailers as per the list in this booklet only, in accordance with General Motors India Pvt. Ltd. guidelines and enters the details in the Service Booklet.
- (iv) Immediately approaches the nearest Authorized Service Center as per the list in this booklet upon discovery of failure to comply with the In-use emission standard in spite of having maintained and used the

- vehicle in accordance with the instructions in the OM and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
- (v) Produces the 'Pollution Under Control (PUC)' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate, or pursuant upon being directed by an officer as referred to in sub – rule (2) of Rule 116 of the Central Motor Vehicles Rules.
 - (vi) Produces the service booklet (Owner's Manual) and all relevant bills for verification of details.
 - (vii) Produces receipts covering maintenance of the vehicle as specified in the OM from the date of original purchase of the vehicle.
 - (viii) Produces valid certificate of

insurance & RTO registration.

Conditions under which warranty is NOT applicable:

1. Non production/availability of a valid 'Pollution under Control' certificates as described in customer obligation (V).
2. In case the vehicle is not serviced by CHEVROLET retailers as per the list in this booklet as per the service schedule described in the maintenance chart given in the Owner's Manual.
3. A vehicle, which has been subjected to abnormal use, abuses, neglect and improper maintenance or has met with an accident.
4. Use of such replacement parts, which are not specified and approved by General Motors India Pvt. Ltd.
5. If the vehicle or parts thereof, have been altered, tampered with or modified or replaced in an unauthorized manner.

6. A vehicle on which the odometer is not functioning or the odometer has been changed or the reading of which has been changed / tampered with so that the actual mileage cannot be readily determined.
7. A vehicle, which has been used, for competitions, races, rallies or for the purpose of establishing records.
8. Examination by CHEVROLET retailers as per the list in this booklet of the vehicle shows that any of the conditions stipulated in the OM with regard to use and maintenance have been violated.
9. A vehicle, which has been run on adulterated fuel or lubricant or fuels lubricants other than those, specified by General Motors India Pvt. Ltd.

Scope and Limits:

1. This emission warranty is in addition to the product warranty for the vehicle as per the scope and

172 Service & Warranty

limit described in the OM and all conditions described therein will apply, in addition to those exclusively stipulated in this warranty.

2. The emission warranty covers only compliance with the emission standard as specified in sub rule (2) of Rule 115 of CMVR. It does not cover any other performance of these parts or routine test and consequent maintenance or adjustments to establish compliance to the in-use emission standard as applicable to the state, in which the vehicle is registered and is in use.

ANNEXURE-I

Definitions:

1. **Vehicle** : The Motor Vehicle approved for sale within India under the provisions of Central Motor Vehicle Rules, 1989 or any subsequent amendment or substitution thereof.
2. **Owner's Manual (OM)** : A document given to the customer at the time of sale of the vehicle giving guidelines on use and maintenance of the vehicle including the terms and conditions of Warranty.
3. **Maintenance** : Maintenance as per the schedule provided in the Owner's Manual by General Motors India Pvt. Ltd. including inspection, verification check, adjustment and replacement, if necessary.
4. **Service Booklet** : The scheduled service record book in Owner's Manual, which is required to be filled by CHEVROLET retailer at the time of service.
5. **Abnormal Use** : The situations when the vehicle is put to use other than that intended by General Motors India Pvt. Ltd. such as racing, overloading or use of adulterated fuel or fuel not recommended by General Motors India Pvt. Ltd.
6. **Manufacturing Defect** : Means deficiency or deviation from normal production tolerance in design, material, or workmanship in a device or system which affects any parameter, performance, or component belonging to emission control system.
7. **Product Warranty** : The manufacturer warranty as provided by General Motors India Pvt. Ltd., which covers failure of various parts and systems as per the Owner's Manual. 3 years/1,00,000 kms, whichever is earlier.
8. **Emission Warranty** : Warranty for emission performance of the vehicle as determined by sub-rule (2) of rule no 115 of the Central Motor Vehicles Rules, 1989.
9. **Authorized Service Centers** : Any service facilities authorised by General Motors India Pvt. Ltd. to perform warranty repairs. This shall include all of CHEVROLET retailers that are recognised for service of subject vehicles or any other service center duly authorised by General Motors India Pvt. Ltd.
10. **Warrantable Condition** : Warrantable condition means any condition of a vehicle, which triggers the responsibility of General Motors India Pvt. Ltd. to take corrective action within the framework of emission Warranty. This however shall not include any statutory or regulatory fines or penalties.
11. **Warranted Parts** : Those components, listed as per Annexure–II.

ANNEXURE-II

List of Components Covered under Emission Warranty

S.No.	Part name
1	Catalytic Converter***
2	Exhaust manifold gasket
3	Electronic Control Module
4	Mass Air Flow Sensor (Diesel)
5	Accelerator Pedal Position Sensor (Diesel)
6	Air Temp. Sensor
7	Coolant Temperature Sensor
8	Injectors
9	Fuel Pressure Regulator Valve (Diesel)
10	Exhaust Gas Re-circulation Valve
11	Fuel Pump
12	High Pressure Pump (Diesel)

*** Catalytic Converter is covered only for emission related failures as provided under the warranty statement. Replacements if any shall not be applicable for breakage and noise problems.

Note : All the above mentioned parts are covered only if the car fails to meet the prescribed Emission norms. Any other performance problems shall be treated as not relevant to the Emission warranty.

SERVICE NETWORK

CHEVROLET SALES INDIA SALES AND SERVICE NETWORK

North zone.....	176
West zone	181
South zone	185
East zone	190
International	193

- ★ Indicates Retailer (Sales and Service)
 - Indicates Chevrolet Authorised Service Center
- Authorised Service Center (ASC) are authorised to carry out Periodic Maintenance (Free/Paid, Minor Running Repair) Only.

NORTH ZONE

STATE - DELHI

★ **Auto Vikas Sales & Service Pvt. Ltd.**

Showroom & Workshop :

12-A, Shivaji Marg, Najafgarh Road,
New Delhi - 110 015

Tel.: 011 - 42070707, 25451004

Fax: 011 - 25451004, 25119026

Showroom & Workshop 2 :

J-10, Rajapuri, Palam, Matiala Road,
Opp. Sector-5, Dwaraka

Tel.: 011- 45595959

Showroom 3 :

Majesty Mall, Plot No. 2, Road No. 43,
Guru Harkishan Marg, Pitampura,
Delhi - 110 034

Tel.: 011 - 42787878

Showroom 4 :

34 Ring Road, Lagpat Nagar - IV
New Delhi - 110 024

Tel.: 011 - 46808090

Workshop 3 :

G-14, Udyog Nagar, Rohtak Road,
Peeragarhi, Delhi - 110 041

Tel.: 011 - 42010101

Workshop 4 :

B-239, Okhla Industrial Area Phase-I
New Delhi - 110 020

Tel.: 011 - 40808080

○ **Car Care**

Workshop :

Near Ispat Bhawan,
Lodhi Road, New Delhi - 110 003

Tel.: 011 - 2437874

★ **Metro Motors Pvt. Ltd.**

Showroom & Workshop :

Bawa Potteries Industrial Complex,
Aruna Asaf Ali Marg, Vasant Kunj - 110 070
Tel.: 011 - 41761717 / 46156666

Showroom & Workshop :

A-2/6, Safdarganj Enclave,
Africa Avenue, New Delhi - 110 029

Tel.: 011 - 46146666 / 75

★ **Regent Automobiles Ltd.**

Showroom :

B-1/F-1, Mohan Co-operative Indl. Estate,
Near Haldirams, Mathura Road,
New Delhi - 110 044

Tel.: 011 - 41678390-95

Fax: 011 - 26959589 / 776

Workshop :

D-12, Okhla Industrial Area,
Phase-I, New Delhi - 110 020
Tel.: 011 - 26812600 / 89 / 90 / 91

Fax: 011 - 26813383

★ **Shiva Motors**

Showroom :

85, Patparganj Industrial Area,
Patparganj, Delhi - 110 092

Tel.: 011 - 42444188

Telefax: 011 - 42444177

★ **Triumph Motors**

Showroom 1 :

E-13/29, Ground Floor,
Harsha Bhawan, Connaught Circus,
New Delhi - 110 001

Tel.: 011 - 41536071-74

Fax: 011 - 41536077

Showroom 2 :

B-72/4, 1st Floor, Wazipur Industrial Area,
New Delhi - 110 052

Tel.: 011 - 42475580-83, 47000211 - 12

Fax: 011 - 42475584

Workshop :

C-13, Plot No. 65, SMA Industrial Area,
Opp. Jahangir Puri, Azadpur,
New Delhi - 110 033
Tel.: 011 - 27693508 - 10

○ **Vaibhav**

Workshop :

A-Block, Community Centre,
Near to District Centre (Janakpuri),
Vikasपुरi, New Delhi - 110 018
Mob.: 9810048946

STATE - HARYANA

AMBALA

★ **Dynamic Motors**

Showroom & Workshop :

Near Ajit Petrol Pump, Baldevnagar,
Ambala - Chandigarh Highway, Ambala City
Tel.: 0171 - 2542900, 2545900

★ **Obero Motors Pvt. Ltd.**

Showroom :

Ramgarh, Near Central Jail Bridge, Chandigarh Road,
Baldev Nagar, Ambala City - 134 003

Tel.: 0171 - 2543010

Fax: 0171 - 2543510

Workshop :

Barwala, Naraingarh Road, Ambala City - 134 003
Tel.: 0171 - 2678010

Faridabad

★ **Regent Automobiles Ltd.**

Showroom :

14/3, Mathura Road, Faridabad - 121 003, Haryana
Tel.: 0129 - 4088530 / 31

Fax: 0129 - 2252304

Workshop :

14/5, Main Mathura Road, Faridabad - 121 003
Tel.: 0129 - 2252151-55, 4261200

- ★ **GURGAON**
Gentech Tooling Pvt. Ltd.
Showroom 1:
 Shop No. 1, ABW Tower,
 IFFCO Chowk, Gurgaon - 122 002
 Tel.: 0124 - 4638888
 Fax: 0124 - 4038877
- Showroom & Workshop :**
 Plot No. 66, IDC, Opp. Sector - 14
 Mehrauli - Gurgaon Road, Gurgaon - 122 001
 Tel.: 0124 - 4638751 - 54
 Fax: 0124 - 4638700
- ★ **Apex Auto**
Showroom :
 Plot No. 245, Block - 44, Ward - 5,
 Rajeev Nagar Palika, Opp. to ICICI Bank,
 Sector -14, Gurgaon, Haryana
 Tel.: 0124 - 4002000, 5082000
 Fax: 0124 - 5010925
- Showroom & Workshop :**
 Plot No. - 31, Sector - 18,
 Industrial Estate, Gurgaon - 122 015
 Tel.: 0124 - 5014000
- ★ **Orix Auto Infrastructure Services Ltd.**
Workshop :
 7B, Sector - 18, Maruti Industrial Area,
 Gurgaon - 122 015
 Tel.: 0124 - 3014700 / 701 / 719
 Fax: 0124 - 3014702
- Yamuna Nagar**
 ★ **Obero Motors**
Showroom & Workshop :
 Aggarsain Chowk, Near Gupta Palace,
 Jagadhri - 135 003
 Telefax: 01732 - 212030
- KURUKSHETRA**
 ★ **VPS Speciality Papers**
Showroom & Workshop :
 Plot No.145 &146, Industrial Area,
 Sector 2, Kurukshetra - 136 118
 Telefax: 01744 - 231050

- ★ **HISSAR**
Vibhushan Automobiles Pvt. Ltd.
Showroom & Workshop :
 Opp. Vidyut Nagar, Delhi Road, Hissar - 125 001
 Tel.: 0166 - 222224-5
- ★ **KARNAL**
Aryaman Motors
Showroom & Workshop :
 117/6, K.M. Milestone, Near Hotel New
 World, G. T. Road, Karnal - 132 001
 Tel.: 0184 - 2220011
 TeleFax: 0184 - 2220025
- ★ **PANIPAT**
Aryaman Motors
Showroom & Workshop :
 Opp. Yamuna Enclave, GT Road, Panipat - 132103
 Tel.: 0180 - 3253004
- ★ **PANCHKULA**
RSA Motors
Showroom & Workshop :
 Plot No. 68, Industrial Area,
 Phase-I, Panchkula - 134 109
 Tel.: 0172 - 5040000
 Fax: 0172 - 5054001
- ★ **ROHTAK**
Badhwar Automobiles Pvt Ltd.
Showroom & Workshop :
 Sonapat Road, Rohtak - 124 001
 Telefax: 0126 - 256666
- ★ **REWARI**
Vardhman Automobiles Pvt. Ltd.
Showroom & Workshop :
 Opp. Gurudwara, Jhajhar Road, Rewari - 123 401
 Tel.: 01274 - 250440 / 251188
 Fax: 01274 - 255960
- ★ **SONIPAT**
Malwa Motors
Showroom & Workshop :
 NH-1, 31 Km Stone, G.T. Road, Kundli,
 Sonapat - 131 001, Haryana
 Tel.: 0130 - 2219385 / 86
 Fax: 0130 - 2219384

- ★ **SIRSA**
Padam Motors Pvt. Ltd.
Showroom & Workshop :
 Hisar Road, Opp Traffic Police Post, Sirsa - 125055
 Tel.: 01666 - 244445
 Fax: 01666 - 244442

STATE - HIMACHAL PRADESH

- ★ **KANGRA**
Jaishree Motors
Showroom & Workshop :
 N.H. 20, V.P.O. Kachhiari
 Tehsil & Dist. Kangra - 176 001
 Telefax: 01892 - 260600 - 01
- ★ **MANDI**
Ram Hari Motors Pvt. Ltd.
Showroom & Workshop :
 Rani Ki Bain, Gutkar, Mandi - 175 021
 Tel.: 01905 - 225692
 Fax: 01905 - 221691
- ★ **SIMLA**
Rajvir Motors
Showroom & Workshop :
 Bypass Road, Parasdass Garden, Simla - 171 001
 Tel.: 0177 - 2674284 - 6
 Fax: 0177 - 2674287
- ★ **SOLAN**
Rajvir Motors
Showroom & Workshop :
 Kalka Shimla Road, Near Mehta Market,
 Kumarhatti, Solan, Himachal Pradesh - 173 229
 Telefax: 01792 - 266338

STATE - PUNJAB

- ★ **AMRITSAR**
S V Motors
Showroom :
 Near Amritsar Gate, GT Road,
 Amritsar - 143001
 Tel.: 0183 - 2700102
 Fax: 0183 - 2700101

178 Service Network

Workshop :

16 A, Court Road, Near Ravi Gas Agency,
Amritsar - 143001
Tel.: 0183 - 5066651

BHATINDA

★ **Padam Motors**

Showroom & Workshop :
Goniana Road, 8th Mile Stone,
NH-10, Bhatinda - 151 005
Tel.: 0164 - 27601111 / 9216350205
Telefax: 0164 - 2760153

CHANDIGARH

★ **RSA Motors**

Showroom & Workshop :
Plot No.5, Industrial Area
Phase-I, Chandigarh - 160 001
Tel.: 0172 - 3919199, 5033333
Fax: 0172 - 2658541

○ **National Service Centre**

Workshop :
Behind Neelam Theatre,
Sector - 17E, Chandigarh - 160017

★ **Padam Motors Pvt. Ltd.**

Showroom:
182/2, Industrial Area, Phase 1, Chandigarh - 160002
Tel. : 0172 - 5212900

Workshop

185, Industrial Area, Phase 1, Chandigarh -160002
Tel. : 0172 - 5212999

HOSHIARPUR

★ **Bedi Automobiles**

Showroom & Workshop:
Piplawala, Jalandhar Road, Hoshiarpur - 146 022
Tel.: 01882 - 329696
Fax: 01882 - 253763

JALANDHAR

★ **Aakriti World**

Showroom :
Ground Floor, Vasal Tower, Police Lines,
Opp. President Hotel, Jalandhar - 144001
Telefax: 0181 - 5003333

Workshop :

1746 Ladowali Road, Near BSF Chowk ,
Jalandhar - 144001
Tel.: 0181 - 5057777

LUDHIANA

★ **Padam Motors**

Showroom & Workshop :
Khasra No. 279/3,
G.T. Road, Dhandari Kalan, Ludhiana
Tel.: 0161 - 2510014
Telefax: 0161 - 2510015

★ **Omni Wheels Pvt. Ltd.**

Showroom & Workshop :
Plot No 73, New Kuldeep Nagar,
Basti Jodhewal Chowk, Ludhiana - 141 007
Tel.: 161 - 5055900

MALOUT/ROPAR

★ **Padam Motors**

Showroom :
Chandigarh Road, Nangal Chowk, Ropar - 140 001
Telefax: 01881 - 500099

MOGA

★ **Padam Motors**

Showroom & Workshop :
Near Majestic Resorts, Ferozepur Road,
Moga - 142 001
Tel.: 01636 - 225755

PATIALA

★ **Padam Motors**

Showroom & Workshop :
Main Patiala - Rajpura Road,
Caspa Resort, Bahadurgarh, Patiala - 147 001
Mob.: 9217100905 - 9
Fax: 0175 - 2663828

PATHANKOT

★ **Kashmir Automobile Pvt. Ltd.**

Showroom & Workshop :
Simbel Chowk, Dalhousie Road,
Pathankot - 145 001
Tel.: 0186 - 2257022 / 23 / 24

SANGRUR

★ **Padam Motors**

Showroom & Workshop :
College Road, Opp. Kamal Palace,
Sangrur - 148 001
Mob.: 9216350134, 9216911461

STATE - RAJASTHAN

ALWAR

★ **Triumph Motors**

Showroom & Workshop :
Old Delhi Road, Near Jhankar Hotel,
Alwar - 301 001
Telefax: 0144 - 2373333 / 2372666

AJMER

★ **Relan Motors Pvt. Ltd.**

Showroom :
Near Railway Hospital,
Beawer Road, Ajmer
Tel.: 0145 - 2461266, 9214444222
Fax: 0145 - 2611159

Workshop :

NH-8, Parbatpura Bypass, Ajmer
Tel.: 0145 - 2461266
Fax: 0145 - 2611159

BIKANER

★ **Sunehri Cars**

Showroom & Workshop :
Plot No. 15, Transport Nagar,
NH-15, Ganganagar Road, Bikaner - 334 001
Tel. : 0151 - 2250164
Mob.: 09414580691

BHILWARA

★ **Relan Motors Pvt. Ltd.**

Showroom & Workshop :
Near Sukhradia Circlce, Ajmer Road,
Bhilwara - 311 001
Mob.: 9251057300
Tel.: 01482 - 265266

★ **JAIPUR**
Triumph Motors
Showroom & Workshop :
 G-109A, Sitapura Industrial Area, Jaipur - 302 004
 Tel.: 0141 - 5122333, 5113636, 5143737,
 5122797, 5122798, 5143636
 Fax: 0141 - 5122552

Showroom 2:
 Corporate Tower, A-1, Jawahar Lal Marg,
 Jaipur - 302015
 Tel.: 141 - 4057575
 Fax: 141 - 4057500

Showroom 3:
 C7D, Sawai Jai Singh Highway,
 Bani Park, Jaipur - 302016
 Tel.: 0141 - 4122222
 Fax: 0141 - 4122233

Workshop :
 E-12B, Vishwakarma Ind Area,
 Road No.- 01, Jaipur - 302013
 Tel.: 0141 - 4255500

★ **Baid Motors**
Showroom:
 1 A, & 28A, Karoli Bagh, Near Gujar Ki Thadi,
 Near Gopal Pura Bye Pass, Jaipur - 302019
 Tel.: 0141 - 3088888
 Fax: 0141 - 3088889

Workshop :
 30, Sushilpura, Shyam Nagar,
 Ajmer Road, Jaipur - 302018
 Tel.: 0141 - 3088888, 09983324366

Workshop :
 Baid Garden, Near Heera Pura Power Station,
 Ajmer Road, Jaipur
 Mob.: 09829973356

★ **JODHPUR**
Atharva Motors Pvt. Ltd.
Showroom :
 27/27A, Light Industrial Area,
 Near Shastri Circle, ITI Road, Jodhpur - 342 005
 Tel.: 0291 - 5120316
 Fax: 0291 - 5120319

Workshop :
 E-711, Mia Bsn, IInd Phase,
 Behind Krishna Dharam Kanta,
 Jodhpur - 342 005
 Tel.: 0291 - 5120810
 Fax: 0291 - 2950992

★ **KOTA**
Triumph Motors
Showroom & Workshop :
 E - 137C, Road No. 5,
 Indraprastha Industrial Area, Kota
 Tel.: 0744 - 3204881 - 84
 Fax: 0744 - 2433137

★ **SIKAR**
Triumph Motors
Showroom & Workshop :
 Near Circuit House, NH-11,
 Jaipur Sikar Road, Sikar - 332001
 Tel.: 01572 - 324948
 Fax: 01572 - 245971

★ **SRI GANGANAGAR**
Sunehri Cars
Showroom & Workshop :
 6th Km Stone, Surat Garh Road,
 NH-15, Sri Ganganagar
 Telefax: 0154 - 2496200

★ **UDAIPUR**
Atharva Motors Pvt. Ltd.
Showroom & Workshop :
 A-83, Mewar Industrial Area, Madri, NH-8,
 Ahmedabad Bye Pass, Udaipur - 313 002
 Tel.: 0294 - 2490126, 127
 Fax: 0294 - 2490108

STATE - UTTAR PRADESH

★ **ALLAHABAD**
Eldee Motors
Showroom :
 Eldee Enclave, 2, S.P. Marg,
 Civil Lines, Allahabad - 211 001
 Tel.: 0532 - 2560743, 44
 Telefax: 0532 - 2560742

Workshop :
 Kanodia Mill Compound,
 1, Luker Ganj, Allahabad - 211 001
 Tel.: 0532 - 2616368, 3099966

★ **ALIGARH**
Technocrat Vehicles Pvt. Ltd.
Showroom & Workshop :
 Khair Bypass Road, Aligarh - 202 001
 Mob.: 9760094180 / 9760094181

★ **AGRA**
Kalyan Auto Sales
Showroom & Workshop :
 Opp. Bhagwati Dhaba, Near New Sabji Mandi,
 Sikandra, Agra - 282 007
 Tel.: 0562 - 2640460 / 62 / 63
 Fax: 0562 - 2640461

★ **BAREILLY**
Analysis Motors
Showroom & Workshop :
 7 K.M. Stone, Opp. GITI,
 Rampur Road, C.B. Ganj, Bareilly - 243 001
 Tel.: 0581 - 2480012, 2480097, 3092878
 Mob.: 9258071051/42/46/43

★ **FAIZABAD**
Megha Auto Dealer (I) Pvt. Ltd.
Showroom :
 Lucknow Bypass Road, Sahadatganj, Faizabad
 Mob.: 09839099210

★ **GORAKHPUR**
United Motors
Showroom :
 7, Park Road, Golgarh, Gorakhpur - 273 001
 Tel.: 0551 - 2201667, 2336876
 Fax: 0551 - 2338299

Workshop :
 Charphatak Road, Mohaddipur, Gorakhpur - 273 001
 Tel.: 0551 - 2200109

180 Service Network

★ GHAZIABAD

- ★ **Shiva Motors**
Showroom & Workshop :
28/3/5, Site - IV, Industrial Area,
Sahibabad, Ghaziabad
Tel.: 0120 - 4130240 , 42, 46
Fax: 0120 - 2950991-93

★ KANPUR

- ★ **Cross Road Auto Pvt. Ltd.**
Showroom :
40, Government Industrial Estate,
Opp. Sindh Colony, Fazal Ganj, Kanpur - 208 012
Tel.: 0512 - 2221265 / 2221276 / 2221279
Fax: 0512 - 2221287

Workshop :

C-15A, Panki Industrial Area,
Site-1, Kanpur - 208 012
Tel.: 0512 - 2691293, 2691377

Workshop 1 :

122/236, A-1 & C-1, Fazalganj,
Near Sangam Talkies, Kanpur - 208012
Mob.: 8009461111

★ Romi Motors Pvt. Ltd.

Showroom :
14/63, Civil Lines, Kanpur - 208 001
Tel.: 0512 - 3224703

Workshop :

120/164 (4), Lajpat Nagar, Kanpur - 208 012
Tel.: 0512 - 3224701 / 3224702

★ LUCKNOW

- ★ **Megha Auto (I) Pvt. Ltd.**
Showroom & Workshop :
Mishipur Depot, Near Sanatan Cold
Storage, Kursi Road, Lucknow - 226 026
Tel.: 0522 - 2890631

Showroom & Workshop 2 :

10/CP/5, Ring Road, Vikasnagar,
Opp Jagrani Hospital, Lucknow - 226 020
Tel.: 0522 - 4057999 / 4007977 / 2330180
Fax: 0522 - 4015504

★ MATHURA

- ★ **Kalyan Auto Sales**
Showroom & Workshop :
NH-2, Agra-Matura Road, Mathura

★ MEERUT

- ★ **Vardajyoti Automobiles Pvt. Ltd.**
Showroom & Workshop :
Madhuban Cinema Bldg., Madhuban Colony,
Baghpath Road, Meerut - 250 002
Tel.: 0121 - 2510111
Fax: 0121 - 2523811

★ MORADABAD

- ★ **Vardhajyoti Automobiles Pvt. Ltd.**
Showroom & Workshop :
Opposite Radhakrishna Mandir,
Delhi Road, Moradabad
Mob.: 09927066611

★ MIRZAPUR

- ★ **Saraswati Industries**
Showroom & Workshop :
Pili Kothi, Station Road, Mirzapur - 231001
Tel.: 05442 - 223923

★ NOIDA

- ★ **Shiva Motors**
Showroom 1:
Center Stage Mall, Sector 18, Noida
Tel.: 0120 - 4247418
Fax: 0120 - 2517160

Showroom 2:

G-24, Sector 11, Noida - 210301
Tel.: 0120 - 3920150 / 52

Workshop :

C-80/81A, Sector - 8, Noida
Tel.: 0120 - 4247400 - 16

★ SAHARANPUR

- ★ **DPM Autosales**
Showroom & Workshop :
Ambala Road, Near P&T Training Centre,
Saharanpur
Mob.: 9634091119

★ VARANASI

- ★ **Eldee Motors**
Showroom & Workshop :
38/46 E, rehman Nivas, Mehmoorganj, Varanasi
Tel.: 0542-2560743 / 44
Fax: 0542 - 2560743

STATE - UTTARAKHAND

★ ALMORA

- ★ **Analysis Motors**
Showroom :
Shyam Complex, Lower Mall Road,
Kholta, Almora - 263 601
Mob.: 9720773001

★ DEHRADUN

- ★ **DPM Autosales**
Showroom & Workshop :
Mohabewala Industrial Area,
Saharanpur Road, Dehradun
Tel.: 0135 - 2642051 / 52 / 53
Fax: 0135 - 2642054

★ HALDWANI

- ★ **Analysis Motors**
Showroom:
Bareilly Road, Moti Nagar Crossing, Haldwani
Mob.: 976800094

Workshop :

7.5km Stone, Gora padav,
Bareilly Road, Haldwani - 263 641
Tel.: 05946 - 232050

STATE - JAMMU & KASHMIR

★ JAMMU

- ★ **K. C. Motors**
Showroom & Workshop :
NH-1, Bypass Road, Jammu - 180 004
Tel.: 0191 - 2465769 / 59
Fax: 0191 - 2476660

★ SRINAGAR

- ★ **K. C. Motors**
Showroom & Workshop :
By Pass Road, Hyderpora, Srinagar - 190 014
Tel.: 0194 - 2443188

WEST ZONE

STATE - GOA

- ★ **VASCO-DA-GAMA**
Subrai Motors Pvt. Ltd.
Showroom & Workshop :
 F L Gomes Road, Vasco-Da-Gama,
 Goa - 403 802
 Tel.: 0832 - 2517421 / 22
 Fax: 0832 - 2513924

STATE - GUJARAT

- ★ **AHMEDABAD**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 Near JCB Service Station, S.G. Highway,
 Sarkhej, Ahmedabad - 380 015
 Tel.: 079 - 2474346
 Fax: 079 - 30045100

Showroom 2 :
 A/8,9,10,11,12,13 & 14,
 Radhe Shopping Mall, Khokhra,
 Maninagar, Ahmedabad
 Tel.: 079 - 32941862 / 32440235

Workshop 2:
 Opp. Amraivadi Post Office,
 Near Hatkeswar Circle,
 Maninagar, Ahmedabad - 380 026
 Tel.: 079 - 30486501 / 02 /03

- **ANAND**
Shree Gopinathji Agencies
Workshop :
 Survey No. 570 - A/2, Near Indira Statue,
 Lambhavel Road, Anand - 388 001
 Tel.: 02692 - 247979 / 247878

- ★ **BARDOLI**
Empire Motors
Showroom & Workshop :
 Near Tulsi Hotel, Opp. CNG pump,
 Surat - Bardoli Road, Bardoli,
 Distt. Surat, Bardoli
 Tel.: 02622 - 225454

- ★ **BHARUCH**
Shri Gopinathji Agencies
Showroom & Workshop:
 Beside K.U & Company Petrol Pump,
 NH-8, Village Vadadala, Bharuch - 392 015
 Tel.: 02642 - 654245 / 291303
 Telefax: 02642 - 231584

- **DAMAN**
Desai Automobiles
Showroom :
 Shop No. 12-101/C,
 Below Income Tax Office, Daman

- ★ **BHAVNAGAR**
V Raj Motors
Showroom & Workshop :
 Plot No. 12, Near Press Quarter,
 Opp. Maruti Showroom, Bhavnagar-Rajkot
 Road, Chitra, Bhavnagar - 364 003
 Tel.: 0218 - 2444590 - 2444445

- **GANDHIDHAM**
Cargo Motors
Showroom & Workshop :
 NH-8A, Kandla Port Road,
 Gandhidham - 370 201
 Tel.: 02833 - 654370 / 9825611692

- ★ **GODHRA**
Shree Gopinathji Agencies
Showroom & Workshop :
 Moonlight Cinema Compound,
 Vavdi, Godhra - 389 001
 Tel.: 2672 - 645828 / 265270

- ★ **HIMMATNAGAR**
Gallops Motors Pvt. Ltd.
Showroom :
 Motipura Circle, Himmatnagar - 383 001
 Tel.: 02772 - 229525 / 229524

- ★ **JAM NAGAR**
Gallops Motors Pvt. Ltd.
Showroom :
 Jamnagar - Rajkot highway, Hapa,
 Opp. Tata IB Motors, Jamnagar
 Tel.: 0288 - 3216060

Workshop :
 Khambhalia road,
 Near Vishal International,
 Jamnagar - 320 120
 Tel.: 0288 - 3216161

- ★ **MEHSANA**
Gallops Motors Pvt. Ltd.
Showroom & Workshop:
 Opp. Wide Angle, Nagalpur Highway,
 Mehsana
 Tel.: 02762 - 241010
 Fax: 02762 - 245151

- ★ **NAVSARI**
Empire Motors Pvt. Ltd.
Showroom & Workshop :
 National Highway No. 8, Grid Char Rasta,
 Near Kabilpore, Navsari - 396 445
 Tel.: 02637 - 236161 / 291071
 Mob.: 9879993000

- ★ **RAJKOT**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 Surve No. 219/220, Opp. Parin furniture,
 Next to Jay Ganesh, AT & PO,
 Kotharia Gondal Highway,
 Rajkot - 360 001
 Tel.: 0281 - 3205151 / 2370006 / 8 / 9 / 10

- ★ **SURAT**
Empire Motors Pvt. Ltd.
Showroom & Workshop :
 Opp. Goverdhanath Temple,
 Surat Dumas Road, Surat - 395 007
 Tel : 0261 - 2721000 / 1100 / 1200
 Fax: 0261 - 3091121

- ★ **Nanavati Motors**
Showroom & Workshop :
 Mahavir Nagar, Puna Kuombharia Road,
 Puna Char Rasta, Opp. City Plaza Complex,
 Surat - 395 010, Gujrat
 Tel.: 0261 - 2640233 / 34
 Fax: 0261 - 2647771

182 Service Network

★ **SUNDER NAGAR**
Gallops Motors Pvt. Ltd.
Showroom & Workshop :
 GIDC, Annapurna, Dhandra, Surendranagar

★ **VAPI**
Desai Automobiles
Showroom & Workshop :
 At & Po : Balitha, Near Woodland Hotel,
 National Highway No. 8,
 Taluka Pardi, Vapi, Valsad - 395 015
 Tel.: 0260 - 5531783, 2400250 / 51
 Fax: 0260 - 2426525

★ **VADODARA**
Shri GopinathJi Agencies
Showroom & Workshop:
 Opp. Gujarat Elec. Board Sub Station,
 (Near Prakuti Resort), Chhani,
 Baroda - 390002
 Tel.: 0265 - 2761105 / 06

Showroom & Workshop 2:
 R. S. No. 7, Opp. Atladra Railway Station,
 Atladra, Vadodara - 390 012
 Tel.: 0265 - 2681050, 1060, 0187
 Fax: 0265 - 2354984

Showroom & Workshop 3:
 3/A, Sahajanand Industrial Estate,
 Munjimahuda, Akota, Vadodara - 390 020
 Tel.: 0265 - 2681010 / 2681020
 Fax: 0265 - 2681050 / 2681060

STATE - MADHYA PRADESH

★ **BHOPAL**
Super Cars Ltd.
Showroom & Workshop :
 Plot No. 21 Sector G,
 Govindpura Industrial Area,
 J.K. Road, Bhopal - 462 021
 Tel.: 0755 - 4259998, 4202666
 Fax: 0755 - 2586305

★ **Varenayam Motors**
Showroom & Workshop :
 189, Jinsi Road, Bhopal - 462008
 Tel.: 0755 - 2579919
 Fax: 0755 - 2579918

★ **CHHINDWARA**
Sunshine Motors
Showroom & Workshop :
 College Road, LalbaghChhindwara- 480001
 Tel.: 07162244193 / 244194

★ **GWALIOR**
Sumedha Vehicles Pvt. Ltd.
Showroom & Workshop :
 Opp. Jhansi Road Police Station,
 Jhansi Road, Gwalior - 474 009
 Tel.: 0751 - 2422067, 32918656
 Fax: 0751 - 2348024

★ **INDORE**
Super Cars Ltd.
Showroom :
 Saket Tower - 3A, Ratlam Kothi,
 Near Geeta Bhavan Square,
 AB Road, Indore - 452 001
 Tel.: 0731 - 4700053, 54
 Telefax: 0731 - 4700052

Workshop :
 49, United Compound,
 lasudiya Mori, Dewas Naka, Indore.
 Tel.: 0731 - 470055, 56, 57
 Fax: 0731 - 470054

★ **JABALPUR**
Oriental Motors
Showroom & Workshop :
 Near Padwar Kala, Katangee Bye Pass Road,
 Jabalpur - 482 002
 Tel.: 0761 - 4027000 / 1 / 2
 Fax: 0761 - 4027011

Showroom 2:
 1179/1180, Mohit Heights,
 Home Science College Road,
 Napier Town, Jabalpur - 482 001
 Tel.: 0761 - 4010002, 4010003, 482001

STATE - MAHARASHTRA

★ **AURANGABAD**
Sohamm Motors Pvt. Ltd.
Showroom & Workshop :
 Plot No. 2 & 3, N-2, Mukundwadi, Airport Road,
 Aurangabad - 431 003
 Tel.: 0240 - 6603769, 6503769
 Fax: 0240 - 2489410

Workshop 2:
 Plot No. 28 & 29,
 MIDC Chikalthana, Aurangabad
 Tel.: 0240 - 2489411 / 2474342 / 3 / 4 / 5 / 6

★ **AHMEDNAGAR**
Saideep Cars Pvt. Ltd.
Showroom & Workshop :
 Survey No. 55/1B/2/1, Nagar Manmad
 Road, Ahmednagar - 414 111
 Tel.: 0241 - 2779227 / 2779228
 Fax : 0241 - 2779226

★ **DHULE**
Jitendra Wheels Pvt. Ltd.
Showroom & Workshop :
 P-62, Behind Hotel Manas, MIDC Avdhan,
 Dhule - 424 001
 Tel.: 02562 - 281222 / 232.

★ **JALGAON**
Soham Motors Pvt. Ltd.
Showroom & Workshop :
 Auto Nagar, Jalgaon - Bhusawal Road, Jalgaon
 Tel.: 0257-2238051

★ **KOLHAPUR**
Unique Automobiles
Showroom & Workshop :
 122/1, Pulachi Shirol, Opp. Sangli Phata,
 Kolhapur - 416 005
 Tel.: 0231 - 2461518 / 2461519

Showroom 2 :
 Ayodhya Park, Opp. Sangam Talkies, Kolhapur
 Tel.: 0231 - 2535515 / 2535415

★ **MUMBAI**
Ashtavinayak Auto Pvt. Ltd.
Showroom :
 D Mall, Off Veera Desai Road, Andheri (West),
 Mumbai - 400053
 Tel.: 022 - 66488888
 Fax: 022 - 66488880

Workshop 1:
 Plot No. 67, Naik Brass & Iron Works
 Charkop Industrial Estate, Kandivali (West),
 Mumbai - 400067
 Tel.: 022 - 28673171 / 28673175

Workshop 2:
 Ram Mandir Road, Somani Gram,
 Next to Central Warehouse Corporation,
 Oshiwara, Goregaon (West), Mumbai - 400051
 Tel.: 022 - 26769456 / 99112

★ **AVK Automart Pvt. Ltd.**
Showroom 1 :
 Poonam Heights, Near Goregaon Flyover,
 S.V. Road, Goregaon (West), Mumbai - 400 062
 Tel.: 022 - 67088888
 Fax: 022 - 67088880

Showroom 2:
 Shop No. 8-12, Girishma Garden, Vasai,
 Thane Dist., Mumbai - 401208
 Tel. : 95250 - 3219888 / 444

Workshop 1:
 Fida Hussain Industrial Estate,
 Near Samrat Hotel, Pandurang Wadi Road,
 Mira Road (West), Mumbai - 401104
 Tel.: 022 - 28453178 / 28455507

★ **National Garage Ltd.**
Showroom & Workshop :
 11, Bhulabhai Desai Road,
 Mahalaxmi, Mumbai - 400 026
 Tel.: 022 - 23516766 / 67 / 68 / 23513293
 23513929, 23522719 / 2563 / 0288
 Fax: 022 - 23524648

★ **Nikhil Automobiles Pvt. Ltd.**
Showroom & Workshop 1 :
 A 70, TTC Industry Area, Thane Belapur Road,
 Kharghar, Near ICI Color Company,
 Khoparkaine West, Navi Mumbai - 400709
 Tel.: 022 - 27780801 / 40708888
 Fax: 022 - 40708899

Showroom 2 :
 264-265, Vaswani Chambers,
 Opp. Old Passport Office,
 Pravhadevi, Mumbai - 400025
 Tel.: 022 - 434594444, 24221711-12
 Fax: 022 - 24222713

Workshop 2:
 c/o Bharat Tiles & Marbles Ltd.,
 Jaibhimnagar, Dharukhana Road, Reay Road (East),
 Near Sujala Hotel, Mumbai-400010
 Tel.: 022 - 64560303 / 23774514
 Fax: 022 - 23774505

Workshop:
 Plot No. D - 238 -A, TTC Industrial Area,
 MIDC Shiravane, Nerul, Navi Mumbai - 400706

★ **KSM Auto Works India Pvt. Ltd.**
Showroom:
 Everest Chambers, Marol Naka, (Near Star TV)
 Andheri Kurla Rd, Andheri (East), Mumbai - 400059
 Tel.: 022 - 61333111
 Fax : 022 - 61333131

Workshop:
 11, Cama Industrial Estate, Goregaon (E),
 Mumbai - 400063
 Tel.: 022 - 61333777

○ **MULTIPLASTICS**
ORIX Auto
Workshop:
 Plot No.94, Marol Co-op.Industrial estate, Andheri (E)
 022 - 4962444 ,4965818

★ **Gian Motors**
Showroom:
 Om - Trimuthi Towers, Sion Trombay Road,
 Chunabhatti, Mumbai - 400022
 Tel.: 022 - 2405 4056 / 57
 Fax. 022 - 2405 5365

Workshop :
 Gowala Compound, LBS Road,
 Opp. Fauziya Hospital, Kurla (W), Mumbai - 400070
 Tel.: 9664496644
 Fax: 022 - 2504 2611

NASIK
★ **Jitendra Wheels Pvt. Ltd.**
Showroom & Workshop :
 B-88, Arihant Plaza, MIDC, Ambad,
 Next to Hotel Taj, Mumbai - Agra Highway,
 Nasik - 422 010
 Tel.: 0253 - 2384432 / 632 / 832
 Fax: 0253 - 2384532

NAGPUR
★ **Star Motors**
Showroom & Workshop :
 44 / 4, Wahajara, Kamptee Road,
 NH - 7 Nagpur - 440 026
 Tel.: 0712 - 6507836, 6507837
 Fax: 0712 - 2632429

NANDED
★ **Bafna Automotives**
Showroom & Workshop :
 Gut No. 235, Pimpalgaon (Mahadeo),
 Nanded - Akola Road, Nanded - 431 607
 Tel.: 02462 - 274069 / 652099

PUNE
★ **Pashankar Auto Wheels Pvt. Ltd.**
Showroom & Workshop I:
 S.N. 45/1, 10/1, Katraj - Dehuroad Bypass Highway,
 Baner, Pune - 411 015
 Tel.: 020 - 66210000 / 27293777 / 888 / 999
 Fax: 020 - 66210099 / 25657755

184 Service Network

Showroom 2 :

The FORUM, Survey No.62/2B,
Plot No.9, Pune Satara Road, Pune - 411 009
Tel.: 020 - 24225113 / 4
Fax: 020 - 24225112

Showroom 3 :

Plot No: G-187, Block G, Thermax Chowk,
MIDC, Chinchwad, Pune - 411 019
Tel.: 020 - 66354747
Fax: 020 - 66354700

Workshop 2 :

21/1, Kashinath Patil Nagar,
Dhankawadi, Pune Satara Road,
Near Akshay Veg, Pune - 411 043
Tel.: 020 - 24361205 / 06 / 07

★ **Singh Cycle & Motor Co.**

Showroom :

S. No. 38/4, Krishna Complex,
Hadapsar Bypass Road, Near Radisson Hotel,
Kharadi, Pune - 411 014
Tel.: 020 - 32407006 / 32670974

Workshop :

Reality Warehousing Pvt. Ltd.,
Gate no. 2323/1, Pune Nagar,
Wagholi, Pune - 411 014
Tel.: 020 - 46609999

SATARA

★ **Unique Automobiles**

Showroom & Workshop :

Mutha Electronics, 41
Mutha Colony Comp, Satara - 415 001
Mob.: 09763727219 / 9763127266

SOLAPUR

★ **Gandhi Wheels**

Showroom :

163/1, Railway Line, Solapur - 413 001
Tel.: 0217 - 2629400

Workshop :

C/o Sunshine Motors, 85 Industrial Estate,
Hotgi Road, Solapur
Tel.: 0217 - 2735831

THANE

★ **SC Auto Corporation**

Showroom:

Modi House, Opp. to LIC Building,
Naupada, Eastern Express Highway,
Thane (West), Thane - 400 602
Tel.: 022 - 67610000

Workshop :

Pioneer Estate Corporation, 133-134, Pokhran Road
No.2, Opp. Oswal Park, Thane (West) - 400601
Tel.: 022 - 66040000

STATE - CHATTISGARH

RAIPUR

★ **Vardhman Motors**

Showroom & Workshop :

9/1, Mahoba Bazar, GE Road, NH-6,
Kumhari Dist - Durg, Raipur - 492 001
Tel. : 07821 - 247070 / 73 / 76

Showroom 2 :

V Plaza, Ring Road,
Near Panchmeri Naka,
Priyadarshini Nagar,
Raipur - 492 001

SOUTH ZONE

STATE - ANDAMAN & NICOBAR

- ★ **PORTBLAIR**
Group Engineers
Showroom:
 Prem Nagar Junction, (sy No 1394/1),
 Haddo Post Port Blair - 744102
 03192 - 230301
 03192 - 242901
- Workshop :**
 Opp Womens Working Hostel, Dollygunj,
 Port Blair, Junglighat Post, Portblair - 744103
 03192 - 253044 / 253011

STATE - ANDHRA PRADESH

- ★ **ANANTPUR**
Dheeraj Motors
Showroom & Workshop :
 Servey No. 239/2C & 241/1C,
 Kakkapali Gram Panchayat,
 Opp. Sakshi News Paper Office,
 Anantapur - 515001
- ★ **GUNTUR**
Fusion Motors
Showroom & Workshop :
 Plot No. 296 & 297, Opp. Sarvani Diesel
 Enginnering, Autonagar Main Road,
 Autonagar, Guntur - 522001
 Tel.: 0863 - 6454545
- ★ **HYDERABAD**
Kun Automobiles (P) Ltd.
Showroom 1:
 House No. 1-3-1045, Viceroy Hotel Lane,
 Kawadiguda Road, Hyderabad - 500 080
 Tel.: 040 - 27532385 - 89
 Fax: 040 - 27532384

Showroom & Workshop 2 :
 Plot No. 74, Snehapuri Colony,
 Near Andhra Bank, Nagole Main Road,
 Nagole, Hyderabad - 500 035
 Tel.: 040 - 24220013, 44886666
 Fax: 040 - 24220313

Showroom 3 :
 Plot No.3 & 4, Ravi Colony, Main Road,
 Kondapur, Hyderabad - 500084
 Tel.: 040 - 45469999 / 89/ 79 / 69
 Fax: 040 - 45469959

Workshop 3 :
 1-8-670, Azamabad, RTC 'X' Road,
 Hyderabad - 500 020
 Tel.: 040 - 27668678 / 27668761
 Fax: 040 - 27668632

Workshop 4 :
 Plot No.37, Survey No.45,
 Vignan Junior College Road, Kundapur,
 Hyderabad -500081
 Tel.: 40 - 31906699

- ★ **Orange Auto Pvt. Ltd.**
Showroom 1 :
 6-3-249/3, Abhinandan Towers,
 Road No. 1, Banjara Hills,
 Hyderabad - 500 034
 Tel.: 040 - 66515555
 Fax: 040 - 66469999

Workshop 1 :
 B-45/46, Industrial Estate,
 Near Andhra Bank Sanatanagar,
 Hyderabad - 500 018
 Tel.: 040 - 55265555

Showroom & Workshop 2 :
 16-2-705/1/1, Malakpet,
 Opp. Srukupa Market
 Hyderabad - 500 036
 Tel.: 040 - 66815555
 Fax: 040 - 66179999

- ★ **KARIMNAGAR**
Kun Automobiles (P) Ltd.
Showroom & Workshop :
 M.No.8-6-128-131 and M.No.8-6-126/4,
 Kothi Rampur, Hyderabad Highway Road,
 Karim Nagar
 Tel.: 0878 - 2276633 / 97042 77444
 Fax: 0878 - 2276633

- ★ **KURNOOL**
Dheeraj Motors
Showroom :
 Survey No. 133/1a & 131/1, NH-7,
 Nera Eenadu Press Office,
 Kurnool - 518 004
 Tel.: 08518 - 253777
 Fax: 08518 - 251777

- ★ **NELLORE**
Indivar Motors
Showroom & Workshop :
 Plot No. 28, Door No. 26/2/1777,
 Wood Complex, Vedayapalem,
 Nellore - 524 004
 Tel.: 0861 - 2338117 / 2339117

- ★ **RAJAHMUNDRY**
Orange Auto Pvt. Ltd.
Showroom & Workshop :
 D. No. 82-10-2, Venkateswara Nagar,
 Near Lalacheruvu, Near ONGC Complex,
 Rajahmundry - 533103
 Tel.: 0883 - 6575555 / 6580888

- ★ **TIRUPATHI**
Indivar Motors
Showroom & Workshop :
 D.No. 11-37/1, Near Cotton Mill Gate,
 Renigunta Road, Tirupathi - 517 501
 Tel.: 0877 - 6456117 / 2239117
 Fax: 0877 - 2239114

- ★ **VISHAKAPATNAM**
Orange Auto Pvt. Ltd.
Showroom 1 :
 No. 5,6,7,8,9,10 & 11,
 D. No. 4-46-12, G.K. Mansiom,
 Pedawaltier, Vishakapatnam - 530 017
 Tel.: 0891 - 2572222, 4444
 Fax: 0891 - 6645555
- Showroom 2 :**
 Shop No. 1, Maurya Chambers,
 Murli Nagar, NH-5,
 Vishakhapatnam - 530 008
 Tel.: 0891 - 2702222
- Workshop :**
 A-4, Unit Industrial Estate,
 V.B.C. Industries, Viskahapatnam - 530 007
 Mob.: 9985101234
- ★ **VIJAYWADA**
Fusion Motors
Showroom :
 Fusion Towers, 36-12-2, Opposite to Siddhartha
 Public School, Moghul Rajapuram,
 Vijayawada - 520010
 Tel.: 0866-6645555 / 9603123666
 Fax: 0866 - 6645592
- Workshop :**
 Opposite to Fusion Towers, 36-12-2,
 Near Siddhartha Public School, Moghul
 Rajapuram, Vijayawada - 520010
 Tel.: 0866-6645593 / 94 / 9603123777
- ★ **WARANGAL**
Kun Automobiles (P) Ltd.
Showroom :
 Door No. 15-2-4-1-1 & 15-2-4
 Mulugu Cross, Warangal - 506 007
 Tel.: 0870 - 6452216 / 2421933
 Fax: 0870 - 2421955
- Workshop :**
 H. No. 23-6-132, Hunter Road,
 Opp. Citizens Club, Warangal.
 Tel.: 0870 - 2523377 / 88 / 99

STATE - KARNATAKA

- ★ **BANGALORE**
Frontline Automobiles
Workshop :
 # 36/2 - A, Pattangere Main Road,
 Next to R.R. Nagar RTO, Mysore Road,
 Bangalore - 560 059
 Tel.: 080 - 28603884 / 28605550
- ★ **Sundaram Motors**
Showroom & Workshop :
 P. B. No. 5358, 107 Kasturba Road,
 Bangalore - 560 001
 Tel.: 080 - 22210327-337 / 22129631-632
 Fax: 080 - 22217934
- Workshop 2 :**
 10 / 1a Hoodi Industrial Area, Ahitefield Road,
 Mahadevpura Post, Bangalore - 560048
 Tel.: 080 - 28542081
- ★ **Kropex India Ltd.**
Showroom & Workshop :
 49/1, Singasandara, Hosur Main Road,
 Bangalore - 560 068
 Tel.: 080 - 43574357 / 9663388830
 Fax: 080 - 43574353
- ★ **Trident Automobiles Pvt. Ltd.**
Showroom 1:
 No. 122/1, C. Shankar Reddy Layout,
 Kalyan Nagar, Outer Ring Road,
 Bangalore - 560 043
 Tel.: 080 - 43430300
- Showroom 2 :**
 No 300/a - 70, 10th Main, 36th Cross,
 5th Block, Jay Nagar, Bangalore - 560041
 Tel.: 080 - 42542999
- Workshop :**
 141 Part - I, 6 B Main Road, HRBR Layout,
 2nd Block, Kalyan Nagar, Outer Ring Road,
 Bangalore - 43
 Tel.: 80 - 43430500

- ★ **BELGAUM**
Bellad Enterprises Pvt. Ltd.
Showroom & Workshop :
 Shri Krishna Weaving Mill Compound,
 Venguaral Road, Vijaya Nagar,
 Belgaum - 591 108
 Tel.: 0831 - 2449556, 557
 Fax: 0831 - 2472209
- ★ **BELLARY**
Bellad Enterprises Pvt. Ltd.
Showroom & Workshop :
 Near Bellary Rolling Mills,
 Anantpur Road, Bellary - 583 101
 Tel.: 08392 - 261234 / 5
 Fax: 08392 - 261235
- ★ **GULBARGA**
VKG Motor World
Showroom & Workshop :
 Plot 1&2, Survey No116/2, Behind Mahendrakar
 Complex, Kapnoor Humnabad Road
 Gulbarga - 585104
 Tel. : 08472 - 224555
 Fax: 08472 - 258019
- ★ **HUBLI**
Bellad Enterprises Pvt. Ltd.
Showroom & Workshop :
 Opp. NGEF, Rayapura, Dharwad,
 P. B. Road, Hubli - 580 025
 Tel.: 0836 - 2218338 / 39
 Telefax: 0836 - 2218337
- ★ **MANGALORE**
Frontline Automobiles
Showroom & Workshop :
 NH-17, Kullur,
 Mangalore - 575 013
 Tel.: 0824 - 2453091 / 2453162
 Telefax: 0824 - 2459391

MYSORE

- ★ **Trident Automobiles Pvt. Ltd.**
Showroom & Workshop :
 No. 201 / 1 & 2, Hunsur Road,
 Hinkal Village, Mysore - 570 017
 Tel.: 0821 - 4000006
 Fax: 0821 - 4241899

Workshop :

No -1D, Hinkal Village, Mercara Road
 Mysore - 570 017
 Tel.: 821 - 4000006

SHIMOGA

- ★ **Frontline Automobiles**
Showroom & Workshop :
 Shankar Mutth Road, Shimoga - 577 201
 Tel.: 08182 - 229099
 Fax: 08182 - 229098

UDUPI

- ★ **Frontline Automobiles**
Showroom :
 Shekinah Manor, D. No. 10-47-A1,
 Near Laxmi Venkatesh Temple, NH-17,
 Ambagilu, Puttur, Santhekatte Post, Udupi - 576 105
 Tel.: 0820 - 2581999
 Fax: 0820 - 2583801

Workshop :

NH-17, Behind IOCL Fuel Station,
 Katapady, Udupi - 574 105

STATE - KERALA**ALLEPPEY**

- ★ **Geeyam Motors Pvt. Ltd.**
Showroom :
 Koorayil Annex,
 Opp. Bhattathiripurayidom,
 Near MCH Junction, Alappuzha, Alleppey - 688 001
 Tel.: 0477 - 2238501

CALICUT

- ★ **German Motors**
Showroom & Workshop :
 118-A, Chungam Junction,
 West Hill, Calicut - 673 005
 Tel.: 0495 - 2383680 / 81 / 2383770 / 71
 Fax: 0495 - 2381909

COCHIN

- ★ **Geeyem Motors Pvt. Ltd.**
Showroom & Workshop :
 11/336, NH-47 Bye Pass, Nettor P.O.,
 Ernakulam, Cochin - 682 040
 Tel.: 0484 - 2703245 - 49
 Fax: 0484 - 2703244

Showroom 2 :

33/2440B, Geetanjali Junction, NH Bypass
 Chakkarakarambu, Cochin - 682 032
 Tel.: 0484 - 2343146

CHALAKKUDY

- ★ **Geeyem Motors Pvt. Ltd.**
Showroom :
 IX/461A, B, Panampilly College, NH-47, Potta,
 Chalakkudy - 680722
 Tel.: 0484 - 2705125, 2705123

KANJRAPALLI

- ★ **Geeyem Motors Pvt. Ltd.**
Showroom :
 Nr. A K J M School, K K Road,
 Kanjirappally (Kottayam Dt.)

KANNUR

- ★ **German Motors**
Showroom & Workshop :
 BP6-14A, Valapattanam, Kannur - 670 010
 Tel.: 0497 - 2774466-67, 3057200
 Fax: 0497 - 3057200

KASARGOD

- ★ **German Motors**
Showroom & Workshop :
 15/89B, Citizen Nagar, Chengala,
 Kasargod - 671 123
 Tel.: 04994 - 302200 - 10
 Fax: 04994 - 302211

KAYAKULAM

- ★ **Geeyam Motors Pvt. Ltd.**
Showroom & Workshop :
 NH-47, Near MSM College,
 Kayakulam - 690 502
 Telefax: 0479 - 2446650

KODANGULUR

- ★ **Geeyem Motors Pvt. Ltd.**
Showroom :
 XII/ 121.122, Opp. Medicare Hospital,
 Kottapuram PO, TKS PuramKodungalur - 680667
 Tel.: 0480 - 2803561 / 62

KOTAYYAM

- ★ **Geeyam Motors Pvt. Ltd.**
Showroom & Workshop :
 Karithas Junction, Thellakom P.O.,
 Kotayyam - 686 016
 Tel.: 0481 - 2792203
 Fax: 0481 - 2792383

KOLLAM

- ★ **Deedi Motors**
Showroom :
 Post Office Junction, Pallimukku
 Kollam - 691 010
 Tel.: 0474 - 3257777 / 2725959
 Fax: 0474 - 2725900

Workshop :

Cantonment, North Nagar, Pullikada
 Kollam - 691 001
 Tel.: 0474 - 2750010 / 11

MUVATTUPUZHA

- ★ **Geeyam Motors Pvt. Ltd.**
Showroom :
 Mackar Plaza, EEC Market Road, PNB Junction,
 Muvattupuzha - 686673
 Tel.: 0485 - 606600

Workshop :

902/903, Opp. Mackar Plaza,
 EEC Market Road, PNB Junction,
 Muvattupuzha - 686 673
 Tel.: 0485 - 2835272 / 73
 Fax: 0485 - 2832554

- ★ **PERINTHALMANNA**
German Motors
Showroom & Workshop :
 AP-IV 664F, Opp. ITC, Tirukad,
 Perinthalmanna - 679 531
 Tel.: 04933 - 325060, 237000, 239878
 Telefax: 04933 - 2737000
- ★ **PALAKKAD**
Geeyam Motors
Showroom & Workshop :
 Door No. 8/1198, NH Bypass Road,
 Chandra Nagar, Palakkad - 678 007
 Tel.: 0491 - 2504133
 Fax: 0491 - 2504143
- ★ **PATHANAMTHITTA**
Deedi Motors Pvt. Ltd.
Showroom & Workshop :
 Kumbazhethu Buildings,
 Churulicode P.O., Kozhencherry Road,
 Pathanamthitta - 689 645
 Tel.: 0468 - 2272079, 2272080
 Fax: 0468 - 2272078
- ★ **THIRUVALLA**
Deedi Motors Pvt. Ltd.
Showroom :
 No. 54/2, Kurusumoottil Buildings,
 M C Road, Mazhuvangad, Thiruvalla - 689101
 Tel.: 0469 - 2740800
- ★ **THRISSUR**
Geeyam Motors Pvt. Ltd.
Showroom & Workshop :
 14/3-A1, Guruvayoor Road Puzhakkal,
 Ayyanthole P.O., Thrissur - 680 003
 Tel.: 0487 - 2388945-46, 2388851-52
 Fax: 0487 - 2388851
- ★ **TRIVANDRUM**
Deedi Motors Pvt. Ltd.
Showroom / Workshop :
 Erumalathopu, N.H. Bye pass Road
 Venpalvattom, Anayara
 P.O., Trivandrum - 695 029
 Tel.: 0471 - 2556006, 3257777
 Fax: 0471 - 2551020

STATE - PONDICHERY

- ★ **PONDICHERY**
Aakash Automobiles
Showroom & Workshop :
 No. 1, Sounderrajan, 100 ft. Road,
 Sounder Rajan Nagar, Mudaliarpet,
 Pondicherry - 605 004
 Tel.: 0413 - 4200440

STATE - TAMIL NADU

- ★ **CHENNAI**
Sundaram Motors
Showroom & Workshop :
 180, Anna salai Road,
 Chennai - 600 006
 Tel.: 044 - 28579202 / 09
- ★ **KLN Motors Agencies Pvt. Ltd.**
Showroom 1:
 Old No. 861, New No. 232,
 Poonamallee High Road, Kilpauk,
 Chennai - 600 010
 Tel: 044 - 23452934 / 35
 Fax : 044 - 3452936
- Workshop 1 :**
 Shop No. 50, SIDCO Industrial Area,
 Ambattur, Chennai - 600 058
 Tel.: 044 - 23452930 - 33
- Showroom & Workshop 2 :**
 No:8-NP,Developed Plot,
 Guindy Industrial Estate, Ekkattuthangal,
 Near Kasi Theatre, Chennai - 600097
 Tel.: 044-23458948 / 23458949
 23458941 / 8942
- ★ **COIMBATORE**
Annamalaji Agencies (P) Ltd.
Showroom :
 252, Mettupalayam Road, Coimbatore - 641 043
 Tel.: 0422 - 2435555 / 2432999
 Fax: 0422 - 2446151

Workshop :
 249A, Mettupalayam Bye Pass Road,
 Coimbatore-641043
 Tel.: 0422 - 2433444

- ★ **ERODE**
Pressana Automobile
Showroom & Workshop :
 No.1, Chinnakadu Thottam,
 Veerapampalayam, Dhindal P.O., Erode - 638 012
 Tel.: 0424 - 2276046 / 47
 Fax : 0424 - 2276048

- ★ **HOSUR**
Thrive Cars
Showroom & Workshop :
 2, Rajappa Mudaliar Building,
 NH-7, Krishnagiri, Bangalore Bypass Road, Hosur
 Tel.: 04344 - 644588

Workshop 2:
 2/2, 1E, Balaji Nagar, Rayakottai Road,
 Opp. to LUK India, Hosur - 635109
 Tel.: 04344 - 291033

- ★ **MADURAI**
ARAS Motors (P) Ltd.
Showroom :
 35/1, Dindigul National Highway,
 Near A. R. C. Parcel Service, Villangudi,
 Madurai - 625 018.
 Tel.: 0452 - 2669617, 3091917
 Fax: 0452 - 2669618

Workshop :
 Plot No : 64 & 68, National Highway No :7,
 Opp Arokya Milk Processing Unit,
 Nagari, Madurai - 625221
 Tel.: 0452 - 2463612 / 13 / 14

- ★ **NAGERCOIL**
AR.A.S. Motors (P) Ltd.
Showroom & Workshop:
 2/86, Tirunelveli Main road,
 Ozhuginasery, Nagercoil - 629001
 Tel: 04652 - 644664 (Showroom)
 04652 - 272443 (Workshop)

★ **NAMAKAL****Thrive Cars****Showroom :**

5/58, Salem Main Road, Namakal
Tel.: 04286 - 275603

★ **SALEM****Thrive Cars****Showroom & Workshop :**

1116, Salem Chennai Highway Road,
Near Holy Cross, Hr. Sec. School,
Ammamet, Salem - 636 014
Tel.: 0427 - 2242603
Fax: 0427 - 2242604

TRICHY★ **Jayaraj Karz****Showroom & Workshop :**

Madurai Main Road, Panjapur,
Trichy - 620 012
Tel.: 0431 - 2906420
Fax: 0431 - 2202187

THIRUNELVELLI★ **A.R.A.S. Motors (P) Ltd.****Showroom & Workshop :**

1183/3, National Highway Jothipuram,
Konganthanparai, Thirunelveli - 627 007
Tel.: 0462 - 2551070, 3269638
Fax: 0462 - 2554111

TIRUPUR★ **Annamalai Agencies Pvt. Ltd.****Showroom :**

ERP Layout, Thottipalayam village,
Chikkanaicken Arts, College Road,
Tirupur - 641 602
Tel.: 0421 - 2234555

Workshop :

No. 17/1, Angeripalayam Road,
Teachers Colony, 1st Street,
Thottipalayam Village, Tirupur - 641 602
Mob.: 9994433164

THANJAVUR○ **Jayaraj Karz****Showroom & Workshop :**

Pudukottai Bye – Pass Road, Thanjavur
Tel.: 0452 - 2668759

VELLORE★ **Sundaram Motors****Showroom & Workshop :**

RS No. 210 / 1 & 211 / 1B
Bangalore Road, Konavattam, Vellore - 632 013
Tel.: 044 - 28579218, 28579201

EAST ZONE

STATE - ARUNACHHAL PRADESH

- ★ **ITANAGAR**
Sango Motors
Showroom & Workshop :
 NH-52A, 6th KM, Near Shiv Mandir,
 Between Nahalagun and Naharlagun,
 Naharlagun, Itanagar - 791 110
 Tel.: 0360 - 2245853 / 2001166
 Fax: 0360 - 2001167

STATE - ASSAM

- ★ **BONGAIGAON**
Raj N Dibyani Automobiles
Showroom & Workshop :
 Near Lower Assam Hospital, Chapaguri Road,
 North Bongaigaon, Bongaigaon
 Tel.: 03664 - 231890
- ★ **DIBRUGARH**
Pashupati Traders
Showroom & Workshop :
 P. N. Road, Chiring Chapori, Dibrugarh - 786 001
 Tel.: 0373 - 2323281
 Telefax: 0373 - 2323296
- ★ **GUWAHATI**
Radiant Motors Pvt. Ltd.
Showroom & Workshop :
 NH-37, Beltola Lakhra Road,
 Nalapara, Sarusajai, Guwahati - 781 028
 Tel.: 0361 - 2740439, 2740453
 Fax: 0361 - 2541617
- ★ **JORHAT**
Radiant Motors Pvt. Ltd.
Showroom & Workshop :
 NH 37, Pulibor, A.T. Road, Opp. Pulibor
 Police State, Jorhat - 785 006
 Tel.: 0376 - 2372151
 Telefax: 0376 - 2370129

- ★ **SHIBSAGAR**
Pashupati Traders
Showroom & Workshop :
 KPM Chariati, Shivasagar, Shivasagar - 785640
 Tel. : 03772 - 220082

- ★ **SILCHAR**
Smart Motors Pvt. Ltd.
Showroom & Workshop :
 NH-54, Ramnagar, Silchar - 788008
 Tel. : 03842 - 266567/268204

STATE - BIHAR

- ★ **BEGUSARAI**
Pandey Motors Pvt. Ltd.
Workshop :
 N.H. 31, Sushil Nagar,
 Near Reliance Petrol Pump, Begusarai

- ★ **MUZAFARPUR**
Pandey Motors Pvt. Ltd.
Showroom & Workshop :
 Mithila Body Builders, NH-18,
 Bhagwanpur, Muzafarpur - 842 001
 Tel.: 0621 - 2252762

- ★ **PATNA**
Pandey Motors Pvt. Ltd.
Showroom :
 Pandey Plaza, Exhibition Road,
 Patna - 800 001
 Tel.: 0612 - 2205195, 3955491
 Fax: 0612 - 2205196

Workshop :
 Kankarbagh, Bhootnath Road,
 Patna - 800 020
 Tel.: 0612 - 3958708

STATE - JHARKHAND

- ★ **BOKARO**
Power Motors
Showroom & Workshop :
 N-1, City Centre, Sector - 4,
 Bokaro Steel City, Bokaro - 827004
 Tel. : 0654 2- 233555 / 232977
 Fax : 06542 - 232988

- ★ **DHANBAD**
Black Diamond Techo Pvt. Ltd.
Showroom :
 Plot No. 2324, Near Vishal Mega Mart,
 Saraidhela, Dhanbad - 828 127
 Tel.: 0326 - 2224886

Workshop :
 Mazumdar Car Scanning Centre, Bhuipore,
 K G Ashram, Dhanbad - 828 127

- ★ **JAMSHEDPUR**
Narbheram Motors Pvt. Ltd.
Showroom & Workshop :
 M-4, Phase-VI, Adityapur Industrial Area,
 P.O. Gamaria, Jamshedpur - 832 108
 Tel.: 0657 - 3293612 / 3297763
 Telefax: 0657 - 2407806

- ★ **RANCHI**
Rahul Automobiles Pvt. Ltd.
Showroom & Workshop 1 :
 Opp. Zakir Hussain Park, Circular Road,
 Near Raj Bhavan, Ranchi - 834 001
 Tel.: 0651 - 2207202-03, 3298436

Showroom & Workshop 2 :
 Near Reliance Petrol Pump,
 Kamre Ratu Road, Ranchi - 834 001
 Tel.: 0651 - 2511558 / 564

STATE - ORISSA

- ★ **BHUBANESHWAR**
Venus Auto Works Pvt. Ltd.
Showroom & Workshop :
 A/62, Nayapall, NH-5, Bhubaneswar - 751 006
 Tel.: 0674 - 2565393 (Showroom)
 Tel.: 0674 - 2564440 (Workshop)
 Telefax: 0674 - 2564858
- ★ **Super sales Automobiles Pvt. Ltd.**
Showroom & Workshop :
 Plot No-644/2148, NH-5, Pahal,
 Bhubneswar, Dist-khurda - 752101
 Tel.: 0674 - 2463913 / 2463914
- ★ **CUTTACK**
Super Sales Automobiles Pvt. Ltd.
Showroom & Workshop :
 Rudrapur, NH - 5, Pratap Nagri,
 Cuttack - 753 011
 Tel.: 0671 - 2686878
 Fax: 0671 - 2686889
- ★ **SAMBALPUR**
Bharat Motors
Showroom & Workshop :
 9, Industrial Estate, New Central School,
 Bariapali, Sambalpur - 768 004
 Tel.: 0663 - 2402683, 2405286
 Fax: 0663 - 2585894

STATE - WEST BENGAL

- ★ **ASANSOL**
Shaila Autotech
Showroom :
 B.B. College More, Ushagram,
 Asansol - 713 303
 Telefax: 0341 - 2275476 / 77
- Workshop :**
 NH-2, Chanda More, Asansol - 713 339
 Tel.: 0341 - 2343618

HOWRAH

- ★ **Priti Motor Udyog (P) LTD**
Showroom & Workshop :
 112 Salkia School Road, Howrah - 711 106
 Tel.: 033 - 26751916 / 18
 Fax : 033 - 26751917

JAIGAON

- **Balaji Motors**
Workshop :
 Near Durga Hyundai,
 Daragaon, Jaigaon - 736 182
 Tel.: 03566 - 265501

KOLKATA

- ★ **India Automobiles Ltd.**
Showroom :
 12, Government Place East,
 Kolkata - 700 069
 Tel.: 033 - 22131100, 215839
 Fax : 033 - 22208077

Workshop :

2, Justice Chandra Madhav Road,
 Kolkata - 700 020
 Tel.: 033 - 2454 5566 / 2454 5577

- ★ **Speed Auto Tech Pvt. Ltd.,**
Showroom :
 "The Meridian", Kazi Nazrul Islam Sarani
 (VIP Road), Kolkata - 700 059
 Tel.: 033- 40150800
 Fax: 033-40150824

Workshop :

241/2B, APC Road, Opp. Khanna Cinema,
 Kolkata - 700 004
 Tel.: 033-40150700 / 25551370

- ★ **Dulichand Motors Pvt. Ltd.**
Showroom :
 "Shrachi Towers", 686 Anandapur,
 E.M. Bypass, Near Ruby Hospital,
 Kolkata - 700 107
 Tel.: 033 - 24431801 - 02, 24431797
 Fax: 033 - 22263299

Workshop :

5/51, Jagatipota, Ahalya Nagar,
 Opp. Jagatipota Kisan Market,
 Kolkatta - 700 099
 Tel.: 033 - 24264260 / 24264214

- **Longia Motors Pvt. Ltd.**
Workshop 1 :
 15, Sahanagar Road,
 (Near Rashbehari Avenue Crossing),
 Kolkatta - 700 141
 Tel.: 033 - 24630454

Workshop 2 :

Rampur Budge, Mahesh Tal,
 24 Paragnas, Kolkata - 700 141
 Tel.: 033 - 24010630 / 31
 Fax: 033 - 24010630

SILIGURI

- ★ **Kaysons Automotive Pvt. Ltd.**
Showroom & Workshop :
 IIIrd Mile, Checkpost,
 Opp. New Eastern Bypass Road,
 Sevoke Road, Siliguri - 734 401.
 Tel.: 0353 - 2544533 - 35
 Fax: 0353 - 2544456

STATE - MANIPUR**IMPHAL**

- ★ **Rajpri Enterprise**
Showroom & Workshop :
 Chigmeirong Mamang Leikai,
 Imphal East, Imphal - 795 001
 Tel.: 0385 - 2421183

STATE - NAGALAND**DIMAPUR**

- ★ **Urban Station**
Showroom & Workshop :
 NSC Petrol Pump, NH-39,
 6th Mile, Kohima Road, Nagaland - 707112
 Tel.: 03862 - 240640, 240994
- AGARTALA**
- ★ **Sri Krishna Automobiles**

192 Service Network

STATE - TRIPURA

Showroom & Workshop :

Plot No. 4612 & 4615,
Shanihani, Airport Road,
Agartala - 799 009
Telefax: 0381 - 2341510

STATE - MEGHALAYA

SHILLONG

- ★ **DH Royal Cars**

Showroom & Workshop :

Parkview, Fire Brigade,
Shillong - 793 014
Tel.: 0364 - 2520481, 2520477

STATE - SIKKIM

GANGTOK

- ★ **GEN X Motors**

Showroom :

5th Mile, Jhordhara, Tadong,
Gangtok - 737 102
Tel.: 03592 - 202515
Fax : 03592 - 203171

Workshop :

C/o Snow Lion Automobiles,
6th Mile, Tadong, Gangtok - 737 102
Tel.: 03592 - 202515

STATE - MIZORAM

AIZAWL

- ★ **Highland**

Showroom & Workshop :

A-L Road, Zemabawk, Aizawl - 796017
Tel. : 0389 - 2351916

INTERNATIONAL

NEPAL

- ★ **Vijaya Motors Pvt. Ltd.**
Showroom & Workshop :
 Naxal, Bhagwati Bahal Marg - 1,
 P.O. Box No. 5062, Kathmandu, Nepal
 Tel.: 00-97-1-4-4414625, 4-4433205
 Fax: 00-97-1-4-4433294

Showroom 2 :

United Traders Syndicate (P) Ltd.,
 Sinamangal Tinkunhe, P.O. Box No. 233,
 Kathmandu, Nepal

BANGLADESH

- ★ **Khansons Automobiles Ltd.**
Showroom & Workshop :
 Sena Kalyan Bhaban (10th floor),
 195, Motijheel C/A, Dhaka, Bangladesh
 Tel.: 088-02-9552337 / 9551100 / 9552368
 Fax: 088-02 9564883

SRI LANKA

- ★ **Mag City Motor Company Pvt. Ltd.**
Showroom & Workshop :
 No. 320A, Darley Road,
 Colombo - 10, Sri Lanka
 Tel.: 0094777410407

BHUTAN

- ★ **Global Traders**
Showroom :
 Lkahlilham, Changgankha,
 Thimphu, Bhutan

Workshop :

Post Box No. 1037, Olarongcchu,
 Thimphu, Bhutan



General Motors India Pvt. Ltd.

All information, illustrations and specifications contained in this Owner's Manual are based on the latest production information available at the time of publication. The right is reserved to make changes at any time without notice.

Regd. Office : Chandrapura Industrial Estate, Halol - 389 351.

Dist. Panchmahals, Gujarat, India. Phone : 91 2676 221000

Customer Assistance Center : Plot No. 15, Echelon Institutional Area,

Sector 32, Gurgaon - 122 001, Haryana, India. Tel. : 91 124 3080000

Works : A-16, MIDC Talegaon Industrial Area (Phase-II),

Near Floriculture Park, Talegaon Navlakh Umbhre Village Road, Tehsil-Maval,

Pune - 410 507, Maharashtra, India. Tel: 91 2114 663939

24 Hr. Helpline at 30308080

Part No.:28283043

Revision No. 02

Revision Date

11/2011/2,500